








AMERICAN WOODCRAFTERS
1060E.SPRINGFIELD RD
HIGH POINT,NC 27263
(336)861-0003








ASSEMBLY INSTRUCTIONS

ITEM NO: B2-305-26F/ B2-305-30F

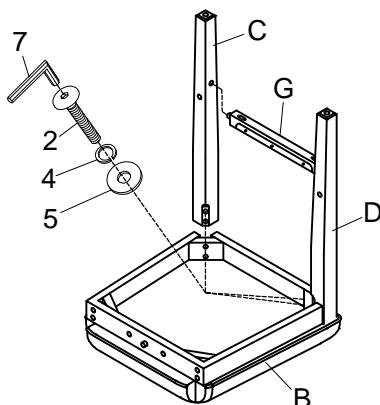
Don't tighten any bolts until all bolts on a step have been started!

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the HARDWARE LIST below.

NO.	PARTS LIST	PARTSNO	Q'TY
A	 Stool back	B2-305-26F P1 B2-305-30F P1	1
B	 Linen Fabric Seat	B2-305-26F P2	1
C	 Left Leg	B2-305-26F P3 B2-305-30F P3	1
D	 Right Leg	B2-305-26F P4 B2-305-30F P4	1
E	 Left Stretcher	B2-305-26F P5	1
F	 Right Stretcher	B2-305-26F P6	1
G	 Front Stretcher	B2-305-26F P7	1

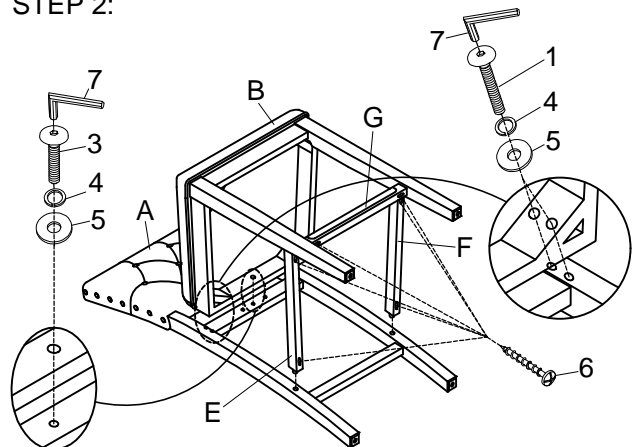
NO.	HARDWARE LIST	PARTSNO	Q'TY
1	 1/4"*3"	B2-305-26F P8	4
2	 1/4"*2"		4
3	 1/4"*1-1/2"		1
4	 1/4"		9
5	 1/4"*19mm		9
6	 8*38mmL		6
7	 Allen Wrench		1

STEP 1:



1. Loosely attach the left leg(C) and Right leg(D) to the Linen Fabric Seat(B), using Bolts(7+2+4+5) to tighten, as shown.

STEP 2:



1. Loosely attach the Linen Fabric Seat (B) to the Stool Back(A), using Bolts(7+3+4+5) and Bolts(7+1+4+5) to tighten, as shown.
2. Attach the Front/Back stretcher(G) and Right/left stretcher(E/F) to the legs, using Screw(6) and a philhps head screwdriver to tighten, as shown.

STEP 3:

1. Right side up the stool.
2. It's complete for using.

Caution: 1. All bolts must be tightened mandatorily in each step.
2. It is also recommended to periodically check bolts and re-tighten as needed. "

If you find that your furniture has a missing or damaged part, contact the dealer from which you purchased this product, they will be happy to assist you. Thank you for making American Woodcrafters a part of your home.

