




AMERICAN WOODCRAFTERS
1060E.SPRINGFIELD RD
HIGH POINT,NC 27263
(336)861-0003







ASSEMBLY INSTRUCTIONS

ITEM NO:B2-240-26F/B2-240-30F


Don't tighten any Bolts until all Bolts on a step have been started

Thank you for purchasing this quality product.Be sure to check all packing material carefully for small parts,which may have come loose inside the carton during shipment.Identify and count all parts and compare with the **HARDWARE LIST** below.

NO.	PARTS LIST		PARTS NO.	Q'TY
A		Linen fabric seat	B2-240-26F P1	1
B		Left leg	B2-240-26F P2 B2-240-30F P2	1
C		Right leg	B2-240-26F P3 B2-240-30F P3	1
D		Back leg	B2-240-26F P4 B2-240-30F P4	2
E		Front stretcher	B2-240-26F P5	1
F		Back stretcher	B2-240-26F P6	1


NO.	PARTS LIST		PARTS NO.	Q'TY
1		1/4"*2"	B2-240-26FP7	8
2		1/4"*1-1/2"		2
3		#8*1-1/2"		4
4		1/4"		10
5		1/4"*19mm		10
6		Allen wrench		1

STEP 1

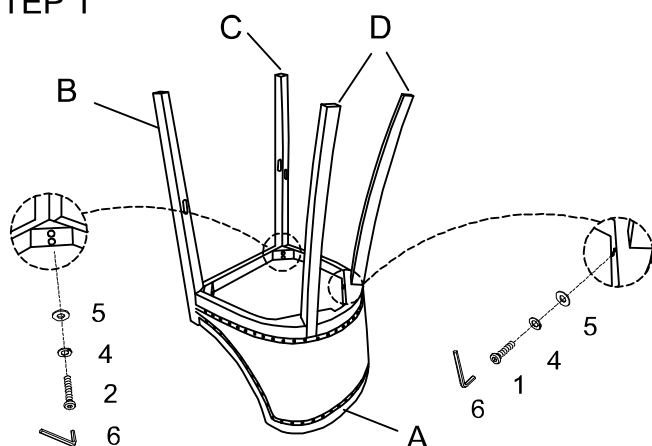


- 1.Loosely attach the Left leg(B)and Right leg(C) to the Linen fabric seat (A) , using Bolts (1+4+5) to tighten ,as shown.
- 2.Loosely the attach the two (D)to the Linen fabric seat (A) using Bolts (1+4+5) to tighten ,as shown.

STEP 2

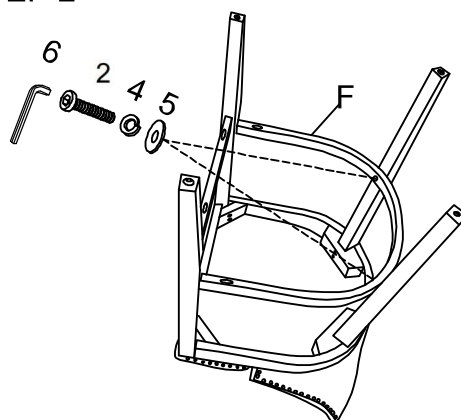


- 1.Loosely attach the Back Stretcher (F) to the Back leg(D),using Bolts (2+4+5) to tighten,as shown.

STEP 3

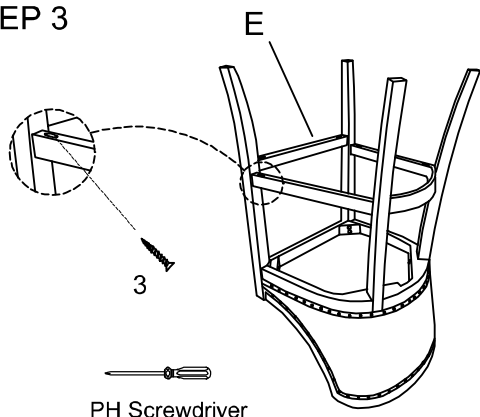

- 1.Loosely attach the Front stretcher(E) to the Left(B) and Right Left(C),using Screw(3) to tighten,as shown.

STEP 4

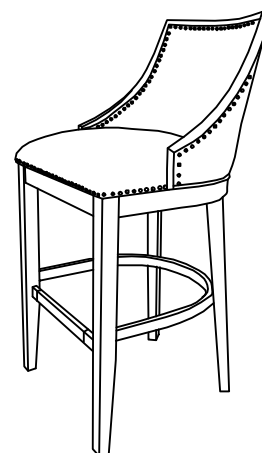

- 1.It's complete for using.

Thank you for purchasing furniture from American Woodcrafters .If you have any issue,such as missing hardware,please contact the dealer from which you made your purchase .They will be happy to help.Thank you for making American Woodcrafters part of your home.