

## 3LT VANITY LIGHT ASSEMBLY/INSTALLATION INSTRUCTIONS

*Please read carefully and save these instructions, as you may need them at a later date.*

### CAUTION

**WARNING:** Risk of Fire. Min 75°C supply conductors. Consult a qualified electrician to ensure correct installation.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

### TOOLS REQUIRED

Phillips screwdriver.


## ASSEMBLY AND INSTALLATION

**Turn off the power at fuse or circuit breaker.**

1. Gently take all parts out of the package, lay them on a smooth surface, unscrew the BALL NUTS and the FIXTURE SCREWS. Attach the CROSS BAR to the JUNCTION BOX using JUNCTION BOX SCREWS.
2. Make wire connections with WIRE CONNECTORS:  
A - Connect the black wire from Fixture to the black supply wire.  
B - Connect the white wire from Fixture to the white supply wire.  
C - Attach the fixture ground wire to the CROSS BAR with the green GROUND SCREW. Then connect it to the supply ground wire with a WIRE CONNECTOR. Carefully tuck wires back into the JUNCTION BOX.
3. Attach the FIXTURE to the CROSS BAR through SCREW HOLES as shown, and secure it with BALL NUTS.
4. Place GLASS TRIM over GLASS SHADE, then place GLASS into SOCKET and secure with SOCKET RING.
5. Install BULB(not included). See relamping label at socket area or packaging for maximum allowed wattage.

**Turn on the power at fuse or circuit breaker.**


## ASSEMBLY AND INSTALLATION (CONT.)

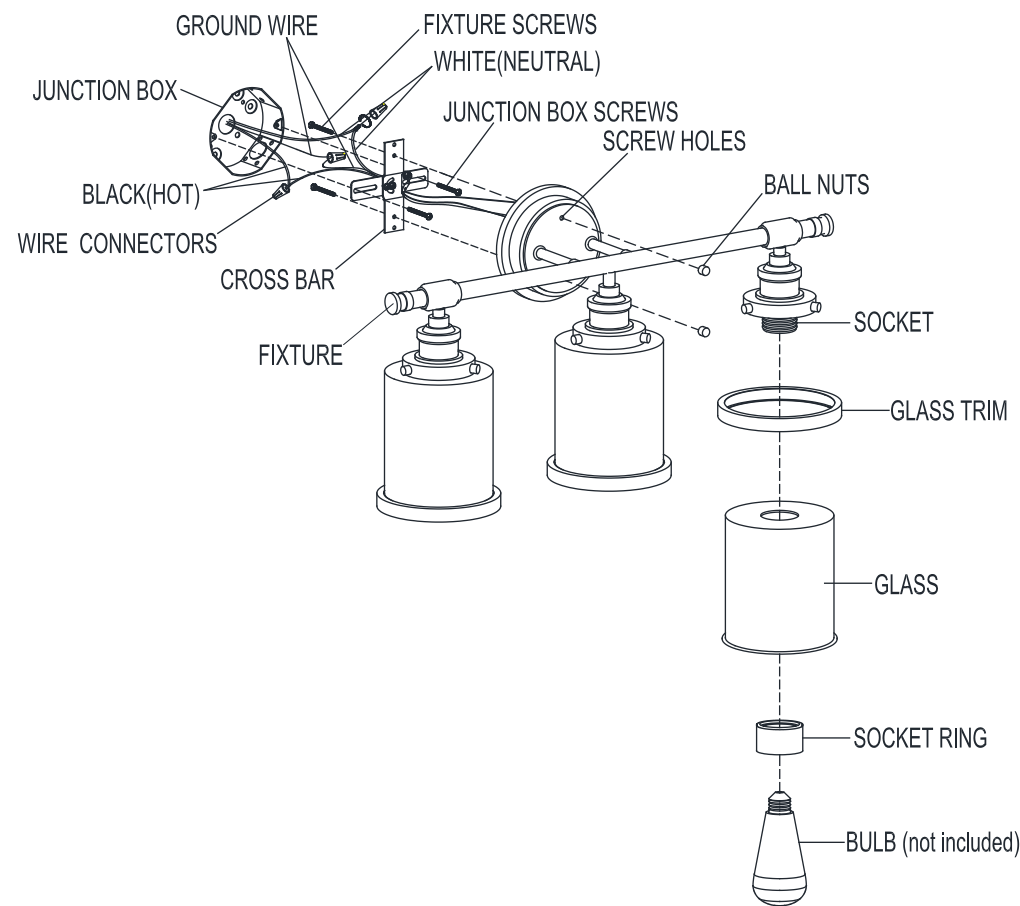

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN.**


## ASSEMBLY AND INSTALLATION

1. Place the MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Determine if there is a stud behind the marked hole locations.
  - 2a. If there is a stud behind the marked hole locations, skip to step 5.
  - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 3.
3. Using a 5/16" DRILL BIT, drill holes at the marked hole locations.
4. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
5. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
6. Attach the ROBE HOOK to the MOUNTING PLATE by hooking the SLOT onto the top edge of the MOUNTING PLATE and holding it flush against the wall.
7. Finish attaching by inserting and tightening the SET SCREW as shown.

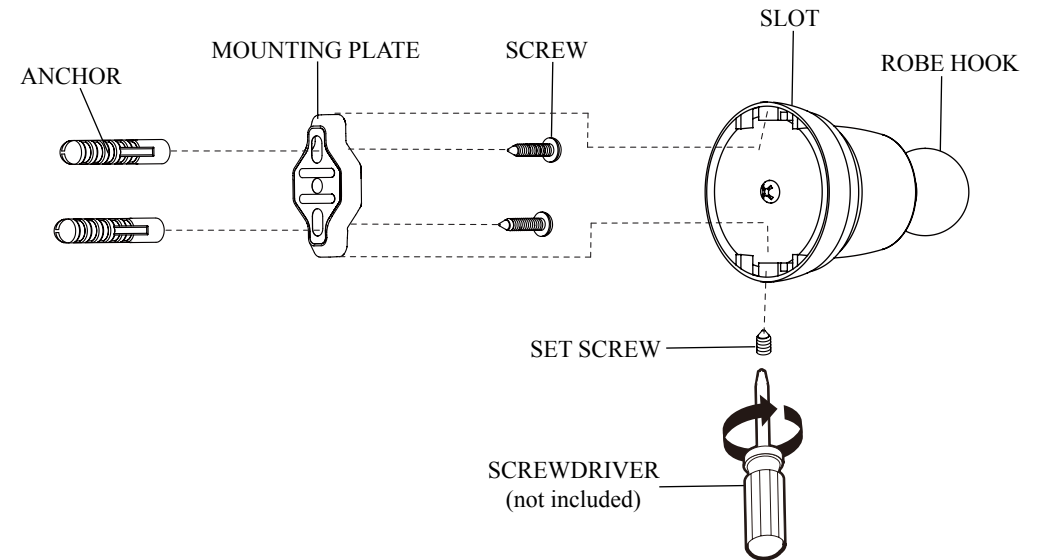

## ASSEMBLY AND INSTALLATION


1. Place the MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Determine if there is a stud behind the marked hole locations.
  - 2a. If there is a stud behind the marked hole locations, skip to step 5.
  - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 3.
3. Using a 5/16" DRILL BIT, drill holes at the marked hole locations.
4. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
5. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
6. Attach the TISSUE HOLDER to the MOUNTING PLATE by hooking the SLOT onto the top edge of the MOUNTING PLATE and holding it flush against the wall.
7. Finish attaching by inserting and tightening the SET SCREW-A as shown.
8. Orient the TISSUE HOLDER hook in the desired position, and tighten SET SCREW-B.

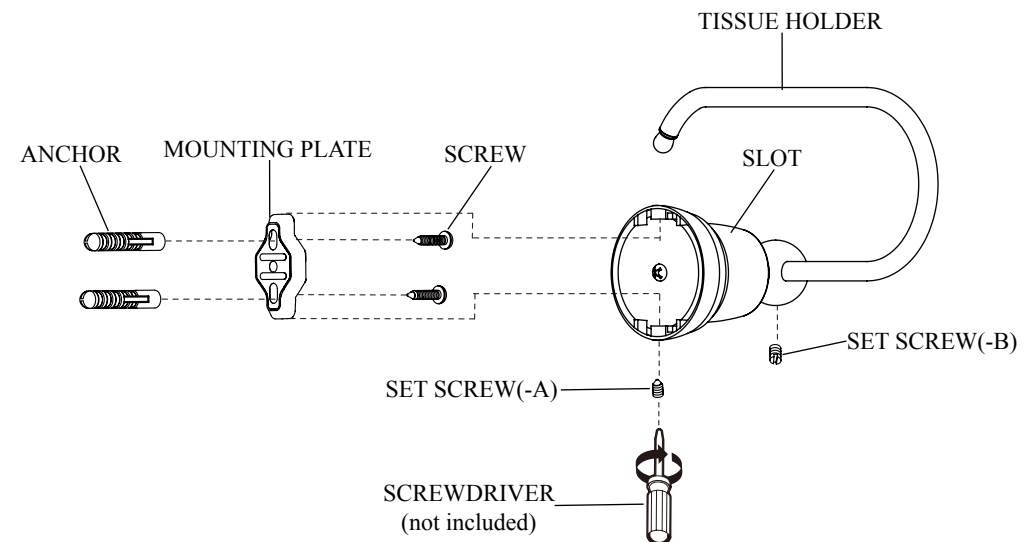

## ASSEMBLY AND INSTALLATION

1. Place the MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Determine if there is a stud behind the marked hole locations.
  - 2a. If there is a stud behind the marked hole locations, skip to step 5.
  - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 3.
3. Using a 5/16" DRILL BIT, drill holes at the marked hole locations.
4. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
5. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
6. Attach the TOWEL RING to the MOUNTING PLATE by hooking the SLOT onto the top edge of the MOUNTING PLATE and holding it flush against the wall.
7. Finish attaching by inserting and tightening the SET SCREW as shown.

## ASSEMBLY AND INSTALLATION (CONT.)

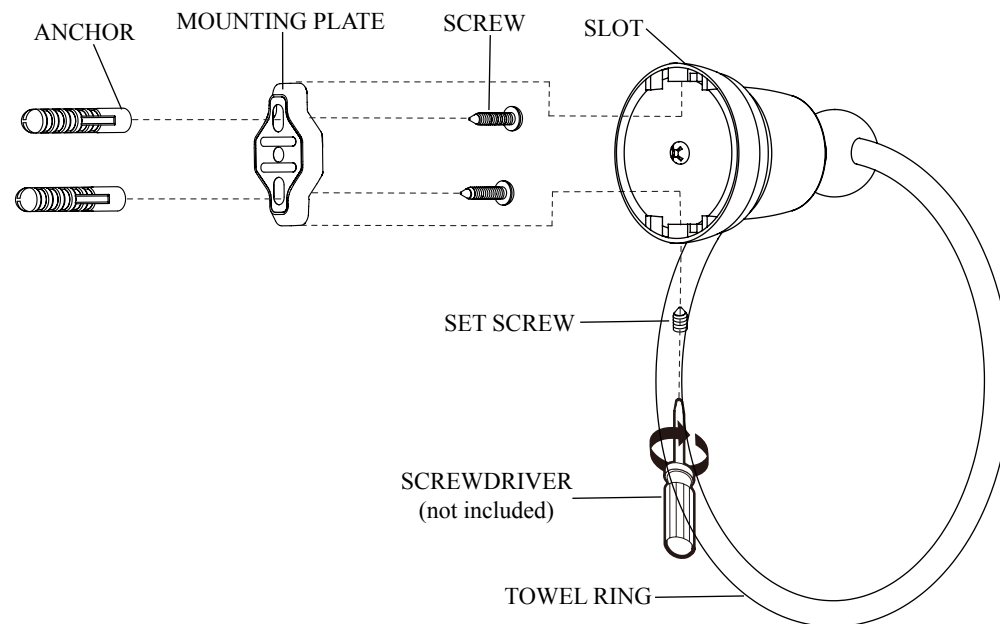

## ASSEMBLY AND INSTALLATION

1. Place a MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Using a TAPE MEASURE and a LEVEL, measure 24" to the center of the second MOUNTING PLATE and mark. Place the MOUNTING PLATE on the wall, lining up the center mark, and mark the centers for the top and bottom holes. Repeat for the other MOUNTING PLATE.
3. Determine if there is a stud behind the marked hole locations.
  - 2a. If there is a stud behind the marked hole locations, skip to step 6.
  - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 4.
4. Using a 5/16" DRILL BIT, drill holes at the top and bottom marked hole locations.
5. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
6. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
7. Attach the TOWEL BAR to the MOUNTING PLATES by hooking the SLOT onto the top edge of the MOUNTING PLATES and holding it flush against the wall.
8. Finish attaching by inserting and tightening the SET SCREWS as shown.

## ASSEMBLY AND INSTALLATION (CONT.)

