


# 97053 Twin Headboard


## Assembly Instructions

WII-0720


### 1 Parts List

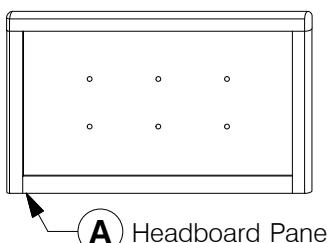

**A** Headboard Panel **x 1**

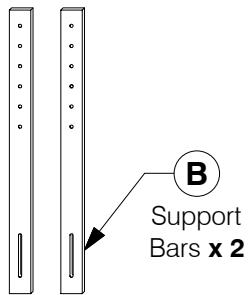

**B**  
Support  
Bars **x 2**

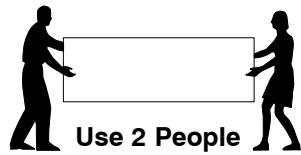

Use 2 People



**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Hardware List



**1** M6 x 35mm JCB  
**x 10**



**2** Spring Washer  
**x 10**





**3** Flat Washer  
**x 10**





**4** Allen Key  
**x 1**

### 3 Assemble the Support Bars (B) to the Headboard Panel.

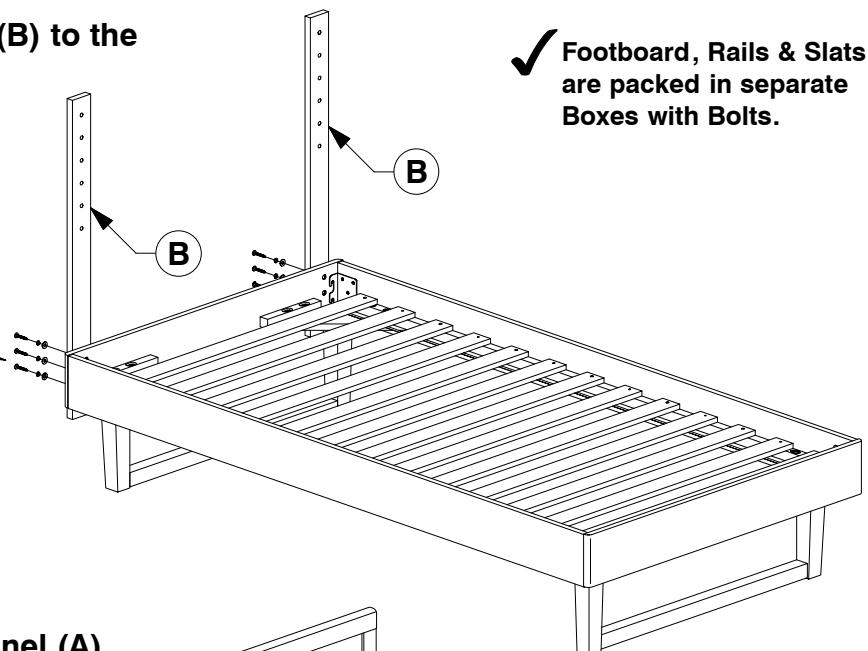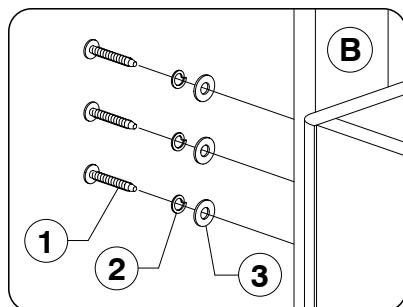

### 4 Assemble the Headboard Panel (A) to the Support Bars (B).

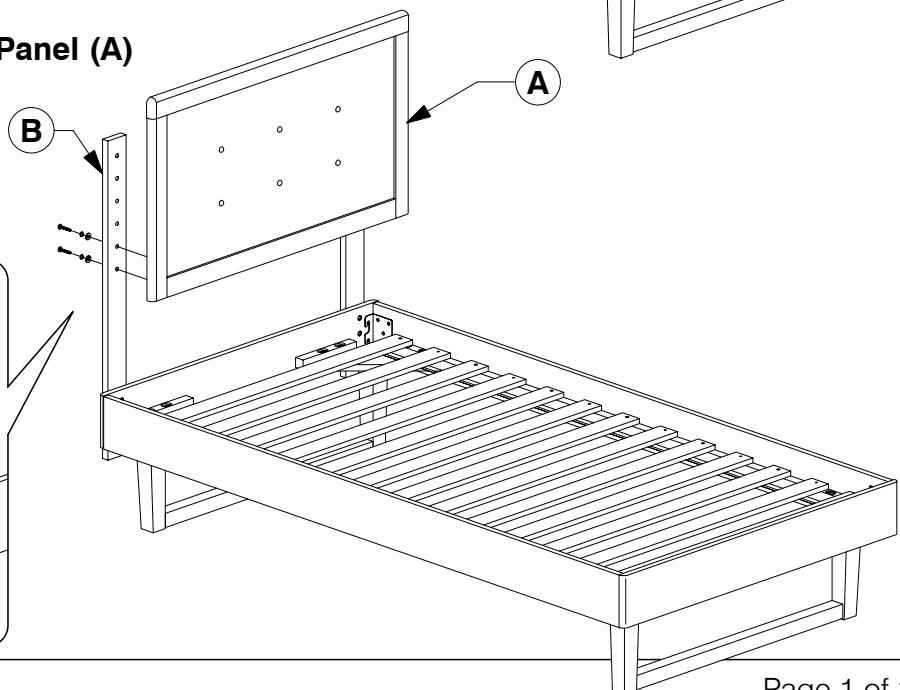
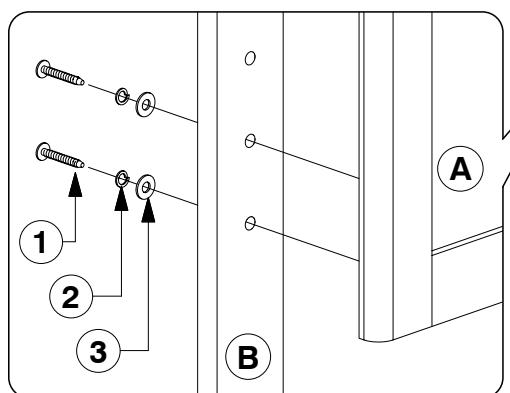


# 97151 Twin Bed

## Assembly Instructions


WII-0720

### 1 Assembled View

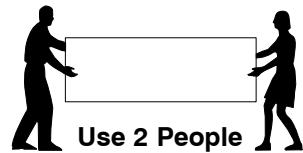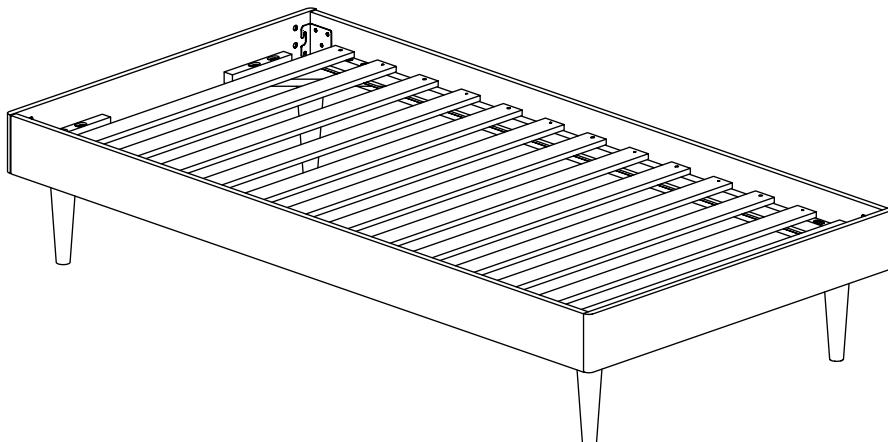

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts List

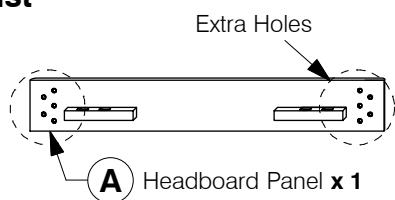

**A** Headboard Panel **x 1**




**D**  
Post  
**x 4**




**E**  
Support Panel  
**x 4**



**B** Footboard Panel **x 1**

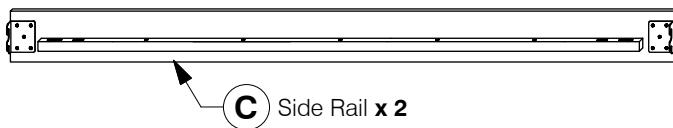

**C** Side Rail **x 2**

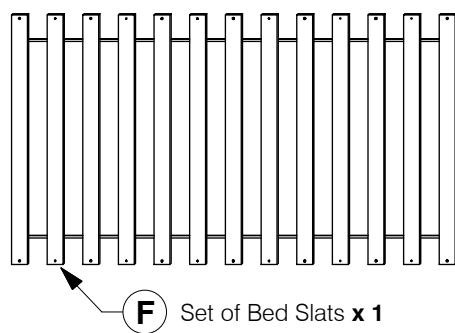

**F** Set of Bed Slats **x 1**

### 3 Hardware List




**1** M6 x  
50mm JCB  
**x 16**



**2** M6 x  
40mm JCB  
**x 14**



**3** M6 x  
20mm JCB  
**x 8**




**4** M8 x  
50mm JCB  
**x 8**



**5** Spring  
Washer  
**x 24**



**6** Flat Washer  
**x 24**



**7** Wood Screw  
(M4 x 32mm) **x 12**



**8** M4 Allen Key  
**x 1**



**9** M5 Allen Key  
**x 1**


# 97151 Twin Bed

## Assembly Instructions

WII-0720


**4** Fit the Post (D) to the Support Panel (E).

x4

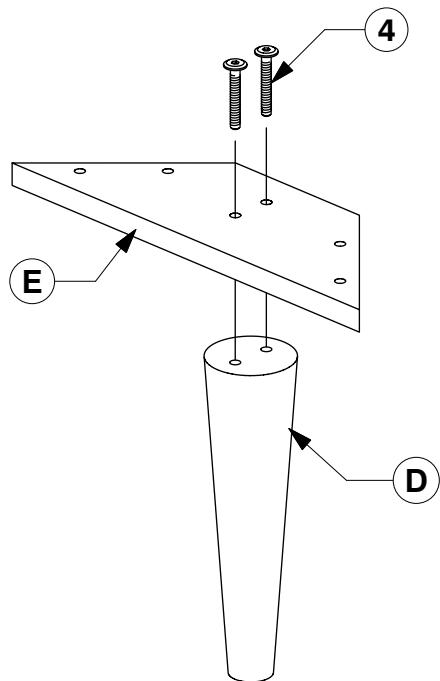

**5** Bolt the Post & Support Panel (D & E) to the Side Rail (C).

x2

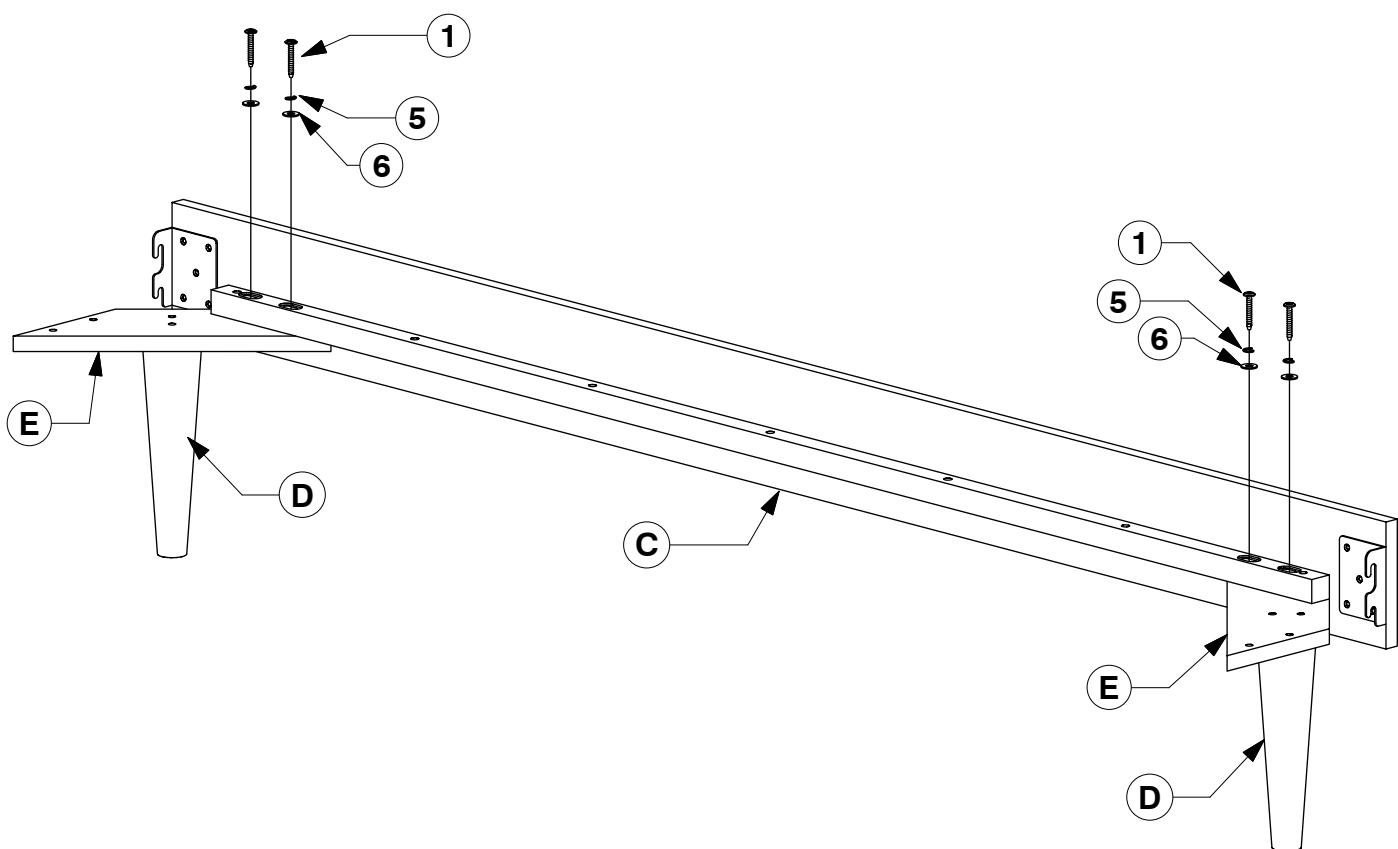


# 97151 Twin Bed


## Assembly Instructions

WII-0720

**6** Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

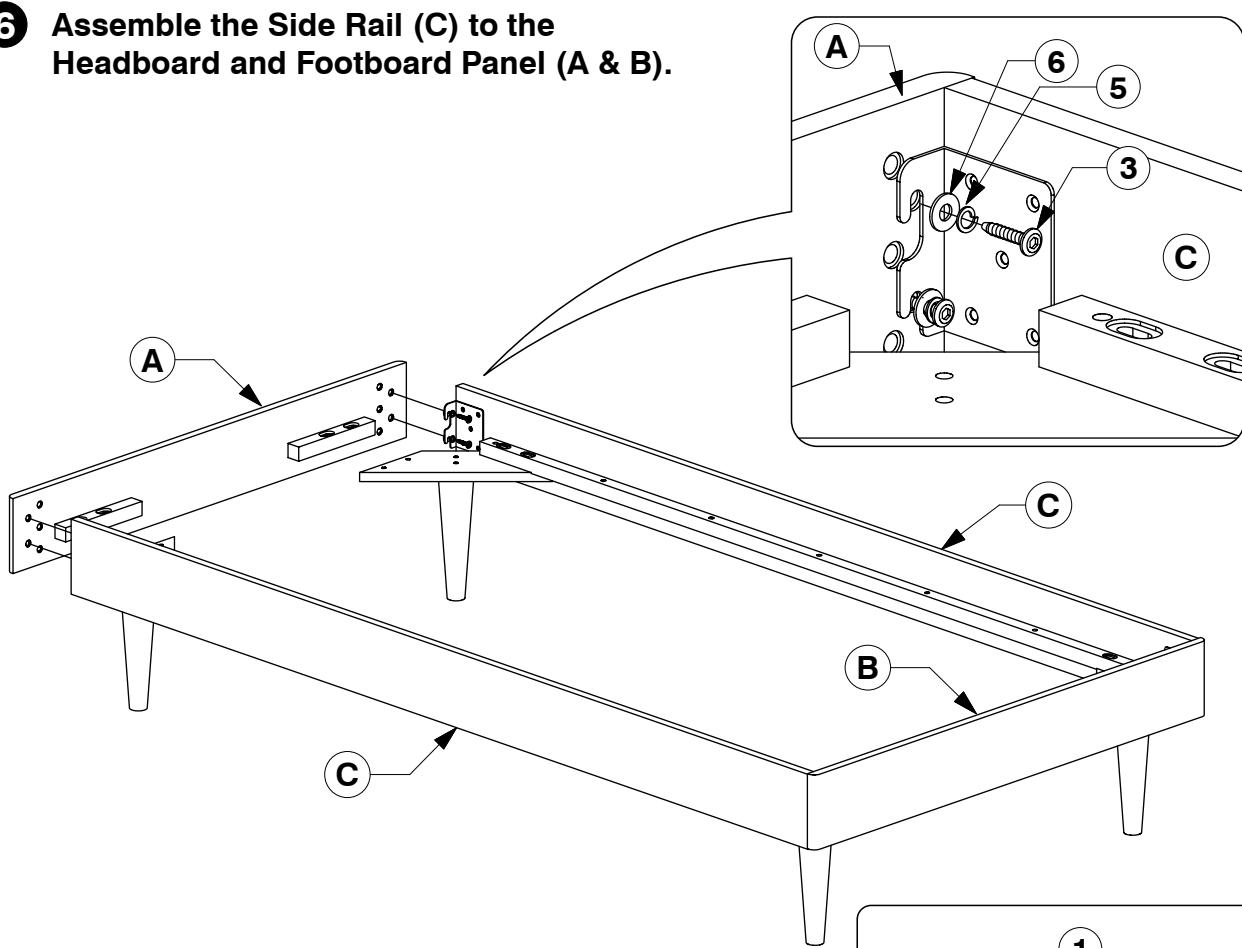

**7** Bolt the assembled Support Panel (E) to the Headboard and Footboard Panel (A & B).

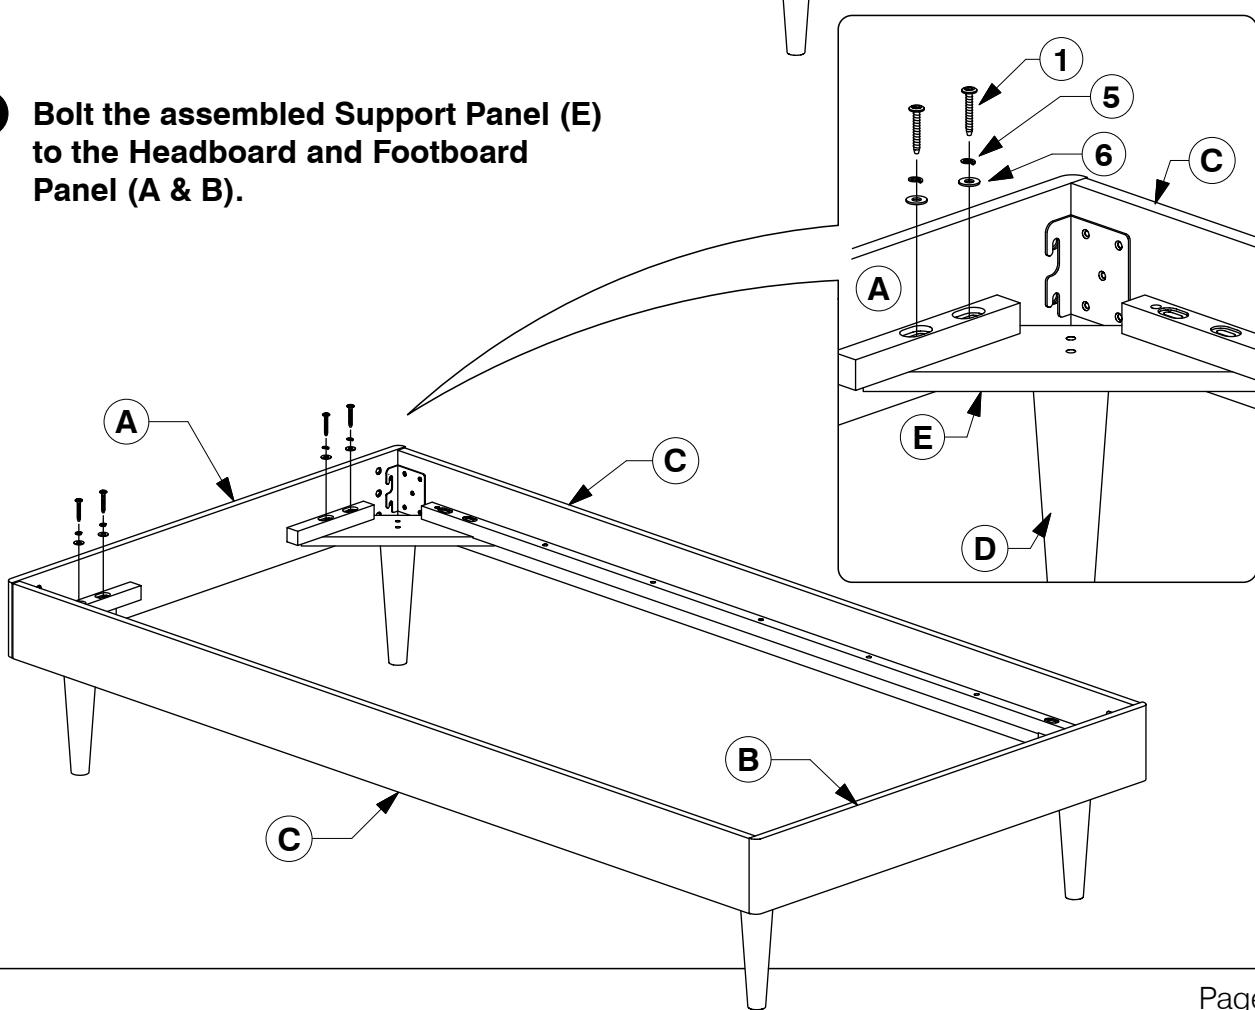


# 97151 Twin Bed

## Assembly Instructions

WII-0720

- 8 Bolt the Bed Slats (F) to the Side Rail (C).

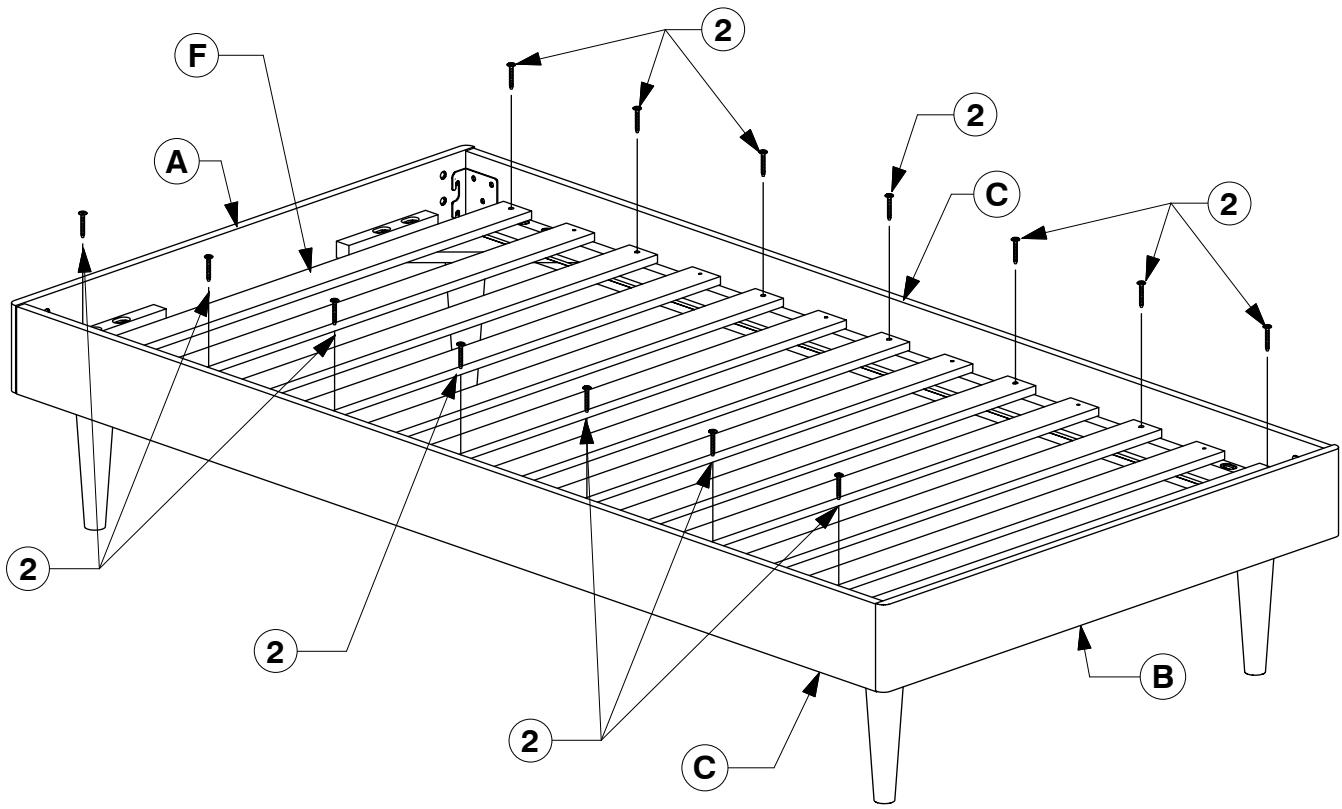

- 9 Screw the Bed Slats (F) to the Side Rail (C).

