



FARMHOUSE BENCH

Model # 2006638

Owner's Manual & Assembly Instructions

MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive
Pittsburg, KS 66762
800-856-4445



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

*Installation services are only available
to U.S. customers.

average 2 person assembly time



assembly time may vary based on skill level

Before you begin

**FOR QUICK &
EASY ASSEMBLY**
FIND 3D INSTRUCTIONS
FOR THIS PRODUCT IN

BILT.


DOWNLOAD THE FREE APP



For the most up to date assembly manual,
to register your set, or to order replacement parts please visit
www.backyarddiscovery.com

**SAVE THIS ASSEMBLY MANUAL FOR FUTURE REFERENCE IN THE EVENT THAT
YOU NEED TO ORDER REPLACEMENT PARTS.**

Para obtener instrucciones en español, visite www.backyarddiscovery.com

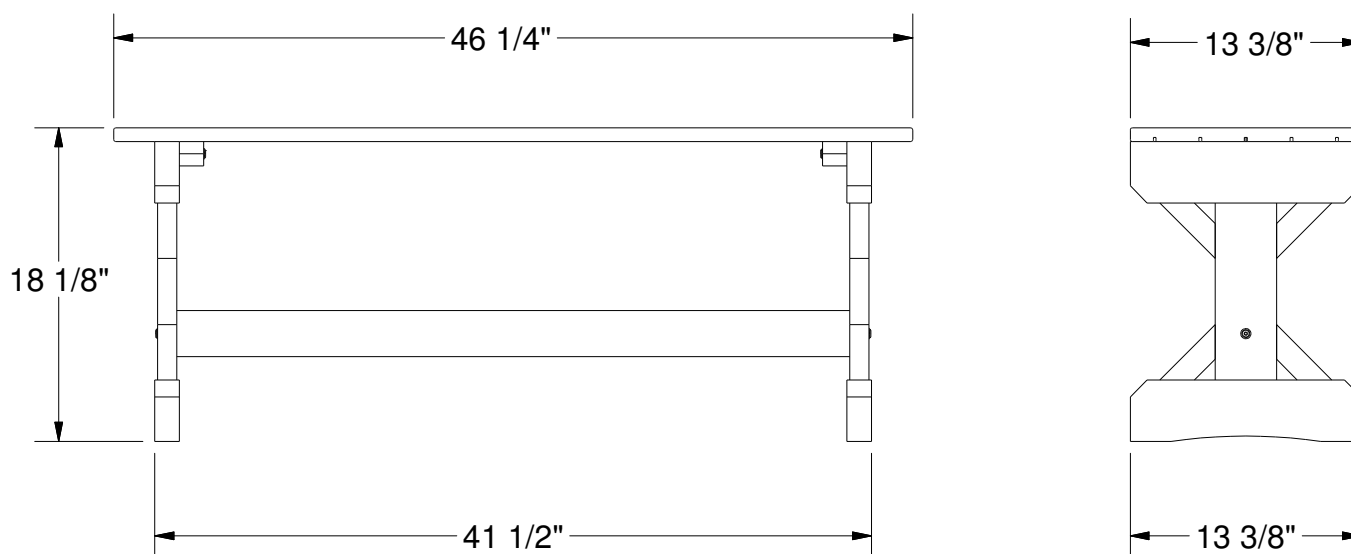

NOTE:
NOT TO EXCEED 600 LBS

Important Assembly Notes

- 1) While assembling unit, take time before and after each phase to make sure unit is level. If unit is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to ensure the unit is square.
- 2) Pay close attention to the **ITEMS NEEDED FOR EACH PHASE**. They can be a valuable aid when sorting your wood and hardware. Assembly will be made easier if items are sorted by phase.
- 3) Pay close attention to make sure you are using the correct hardware in the correct phases. Using incorrect hardware may result in improper assembly.
- 4) Whenever a cross dowel is inserted in each end of support brace, use the cross dowel tool to align the cross dowel with the flathead cap screw.
- 5) Read the steps of each phase thoroughly. The written steps may include important information not shown in the illustrations.

ASSEMBLY INSTRUCTION

HARDWARE:

H100842 | **FLATHEAD SOCKET CAP SCREW**
(6) | M6 x 60

H100841 | **WASHER FLAT**
(6) | 6x15

H100817 | **WOOD DOWEL**
(4) | 8mm x 30mm


H100822 | **CROSS DOWEL**
(2) | M6 THREADS

WOOD:


UP1 | **BENCH UPRIGHT - W2A02645**
(2) | 1 7/16"x13 3/8"x17 3/8" (36x340x440)

H1 | **BRACE - W4L12788**
(1) | 1"x2 5/8"x39" (24x68x990)


BP1 | **BENCH PANEL - W2A02646**
(1) | 2 1/4"x13 3/8"x46 1/4" (56x340x1175)

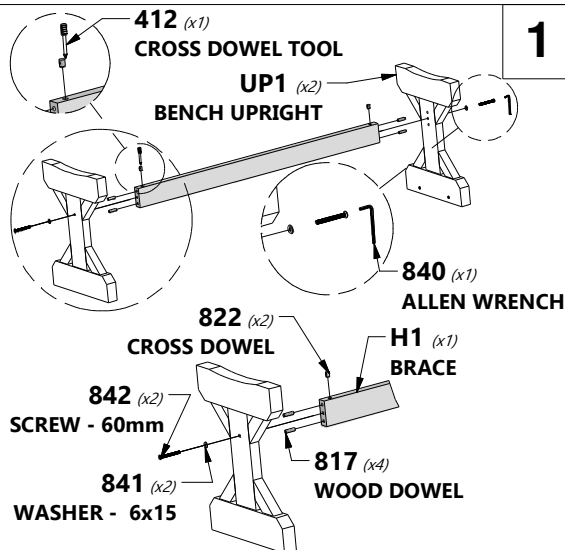


1

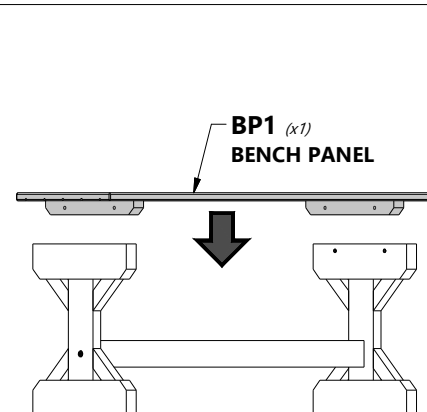

2

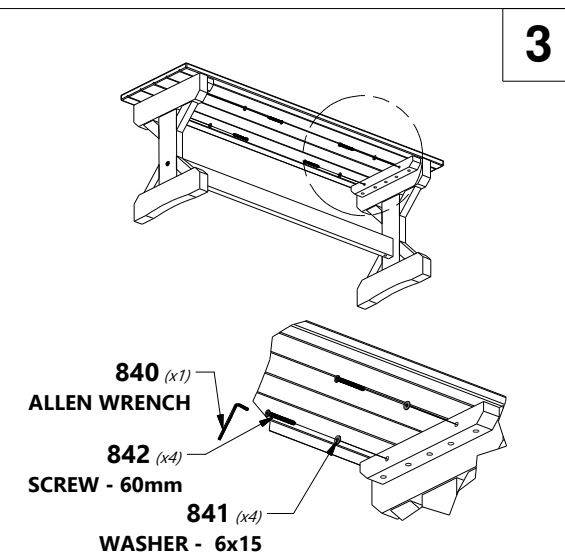

3

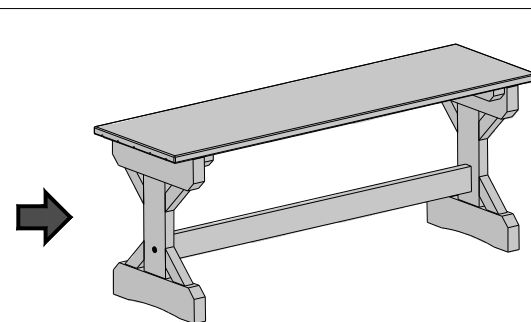

TOOLS:

A6P00412 | **CROSS DOWEL TOOL**
(1)

H100840 | **ALLEN WRENCH**
(1) | 5/32