



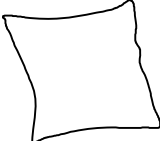




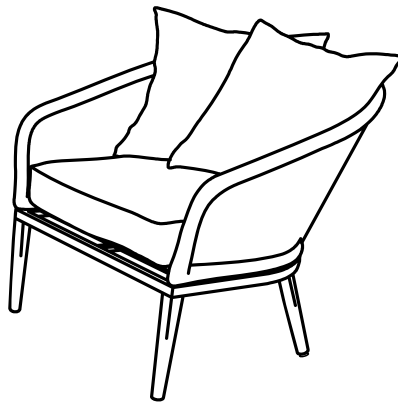


Arm Chair
CO7331



PART LIST

A		B		C		D	
Back Panel 2 PCS		Seat Panel 2 PCS		Seat Cushion 2 PCS		Back Cushion 4 PCS	

HARDWARE LIST


#1		#2		#3	
M6*40mm		M6mm		M6mm	
Bolt 6 PCS (Extra 1)		Flat Washer 6 PCS (Extra 1)		Allen Wrench 1 PC	

Step 1. Lay back panel (part A) down on a soft flat surface, such as carpet, as shown below.

Attach seat panel (part B) to back panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

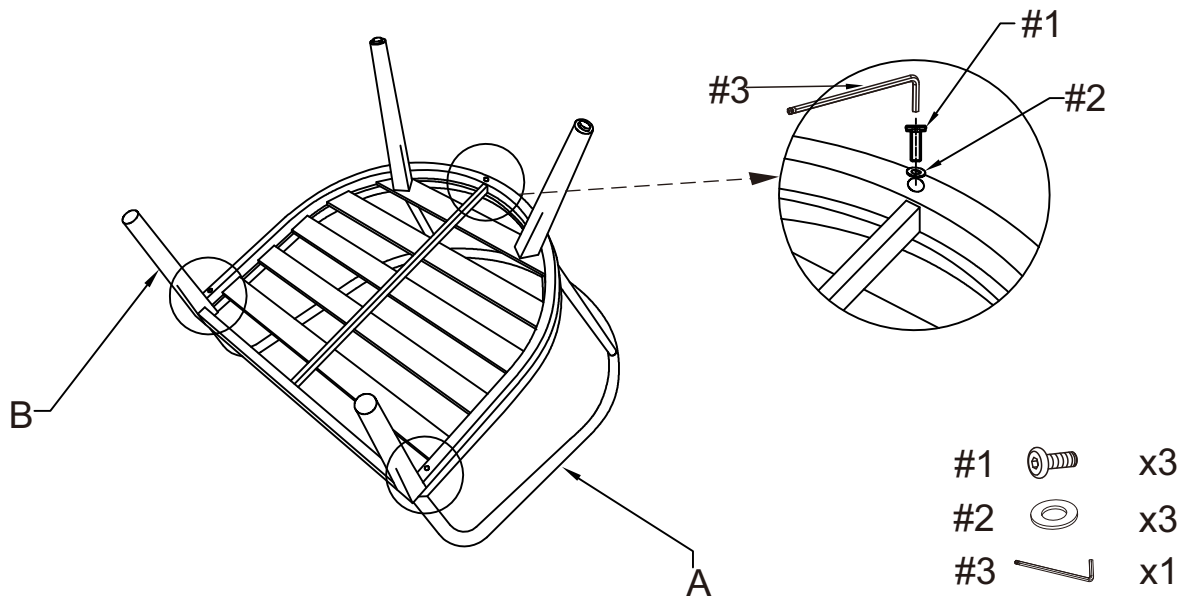

Step 2. Carefully turn unit upright. Place seat cushion (part C) and back cushions (part D) as shown below. Repeat steps 1-2 to assemble remaining chair.

