
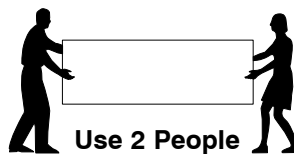


# 9001 2 Drawer Nightstand


## Assembly Instructions

WI-1220

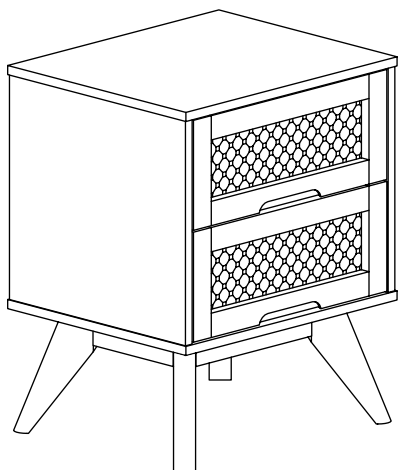


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 1 Parts List

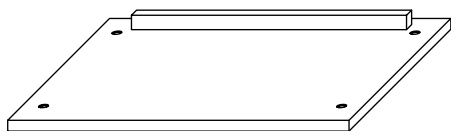


**A** Top Panel x 1




**D** Back Panel x 1

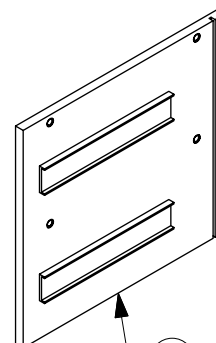


**F** Side Panel (Left Hand) x 1

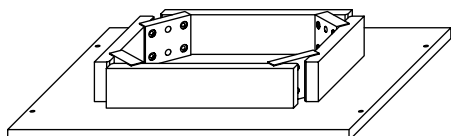


**B** Bottom Panel x 1




**E** Post x 4

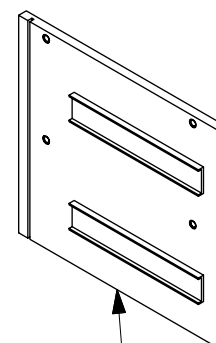


**G** Side Panel (Right Hand) x 1




**C** Support Bar x 2

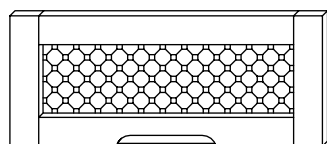


**H** Drawer Face x 2




**J** Drawer Back x 2



**K** Drawer Side (Left Hand) x 2



**L** Drawer Side (Right Hand) x 2













**M** Drawer Bottom x 2

# 9001 2 Drawer Nightstand

## Assembly Instructions


WI-1220

### 2 Hardware List


- |   |   |   |   |   |
|---|---|---|---|---|
|  |  |  |  |  |
| <b>1</b> M6 x 15mm JCB <b>x 16</b>  | <b>2</b> M6 x 60mm JCB <b>x 8</b>   | <b>3</b> M4 x 25mm Wood Screw <b>x 16</b>   | <b>4</b> M4 x 20mm Wood Screw <b>x 4</b>  | <b>5</b> M4 x 16mm Wood Screw <b>x 6</b>  |
|  |  |  |  |  |
| <b>6</b> CSK Cap Wood Screw (M6 x 50mm) <b>x 4</b>                                | <b>7</b> Spring Washer <b>x 8</b>   | <b>8</b> Flat Washer <b>x 8</b>   | <b>9</b> 'L' Bracket (5005-3) <b>x 8</b>  | <b>10</b> Allen Key <b>x 1</b>  |

### 3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).


x2

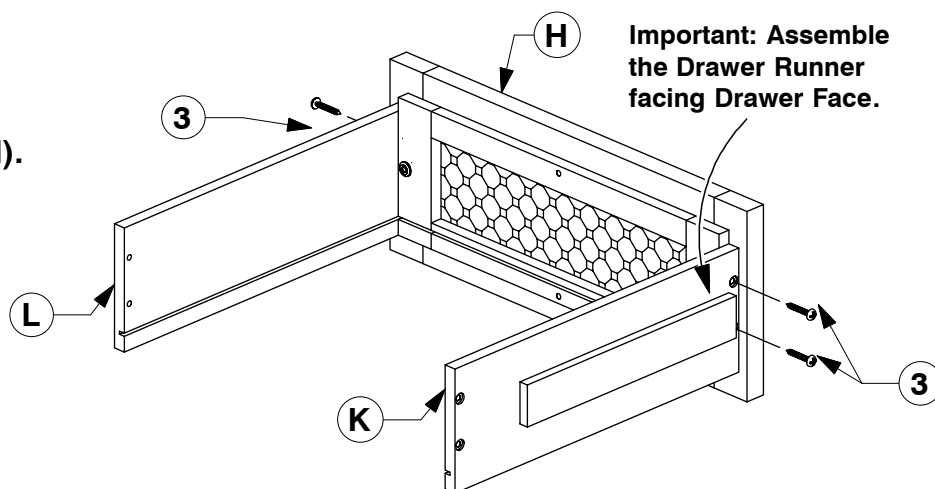

### 4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

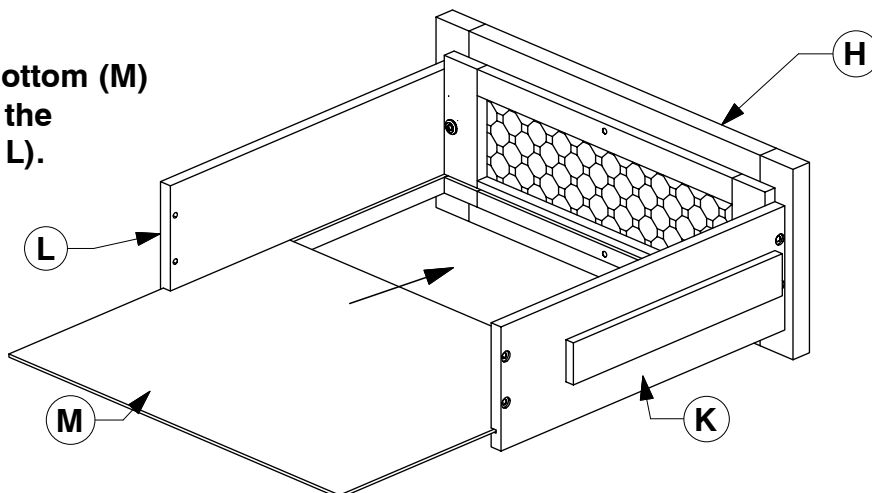

### 5 Assemble the Drawer Back (J) to the Drawer Sides (K & L).

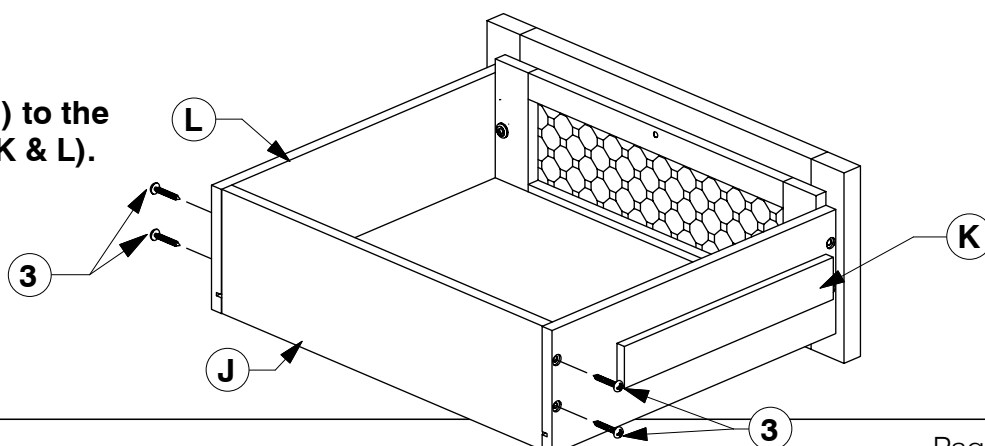


# 9001 2 Drawer Nightstand


## Assembly Instructions

WI-1220

### 6 Fit the 'L' Bracket to the Side Panel (F & G).

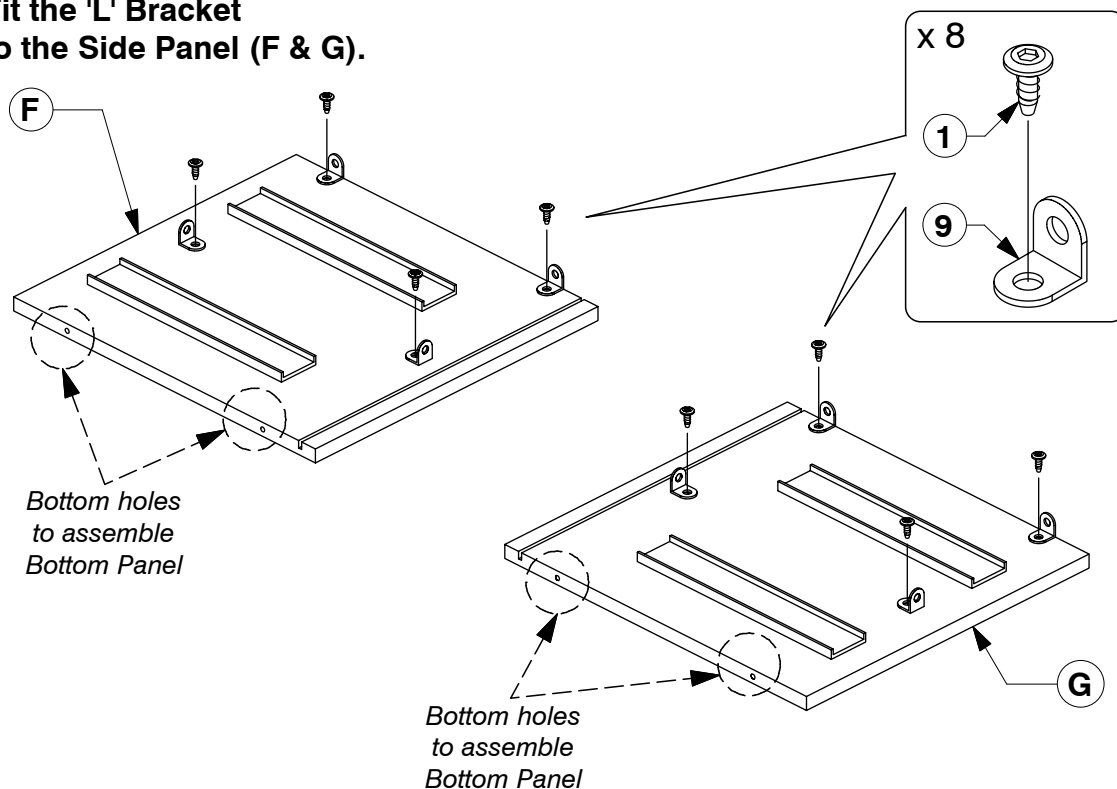

### 7 Assembled the Side Panel (F & G) to the Top Panel (A).

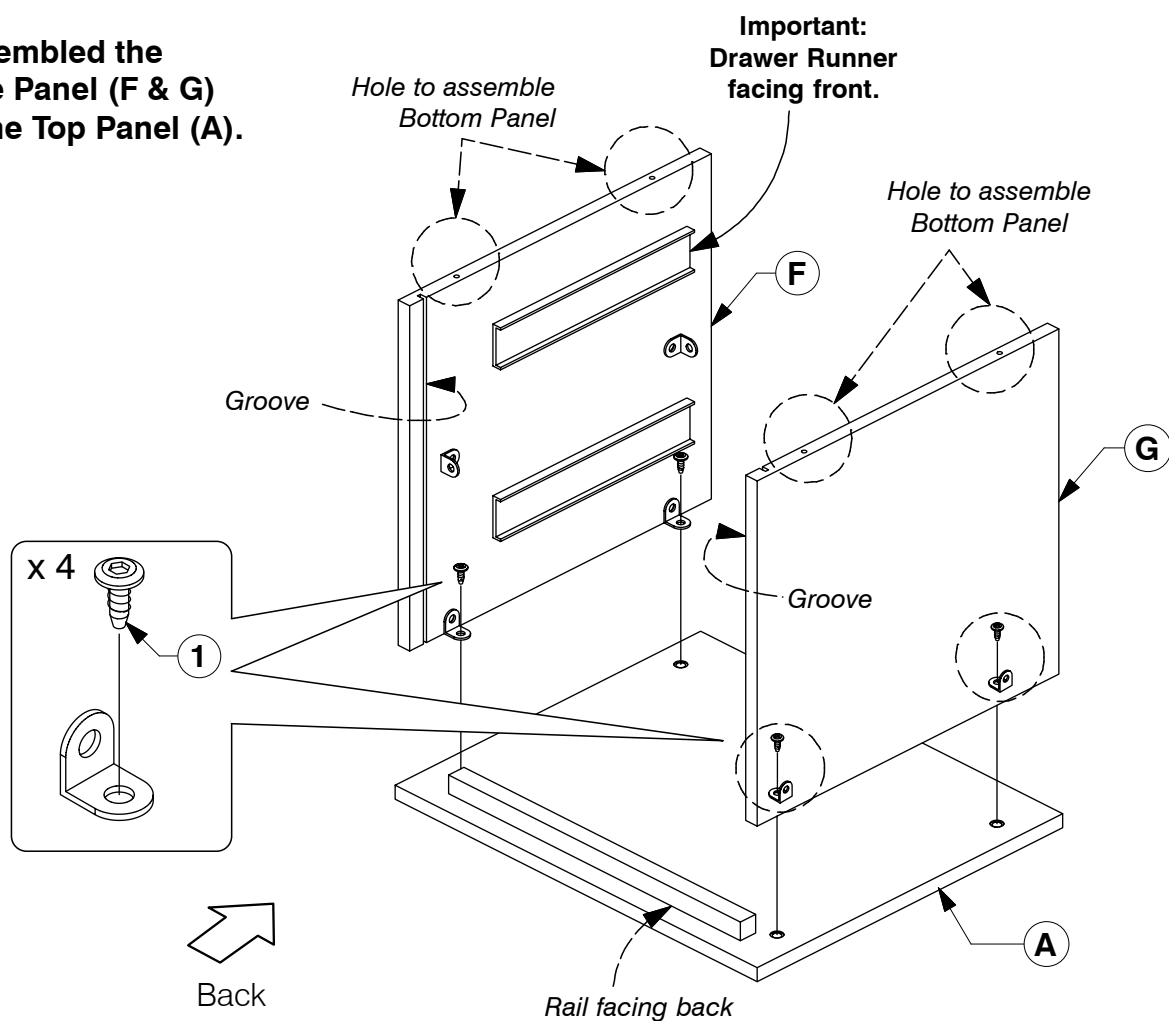


# 9001 2 Drawer Nightstand


## Assembly Instructions

WI-1220

- 8** Fit the Support Bar (C) to the Side Panel (F & G).

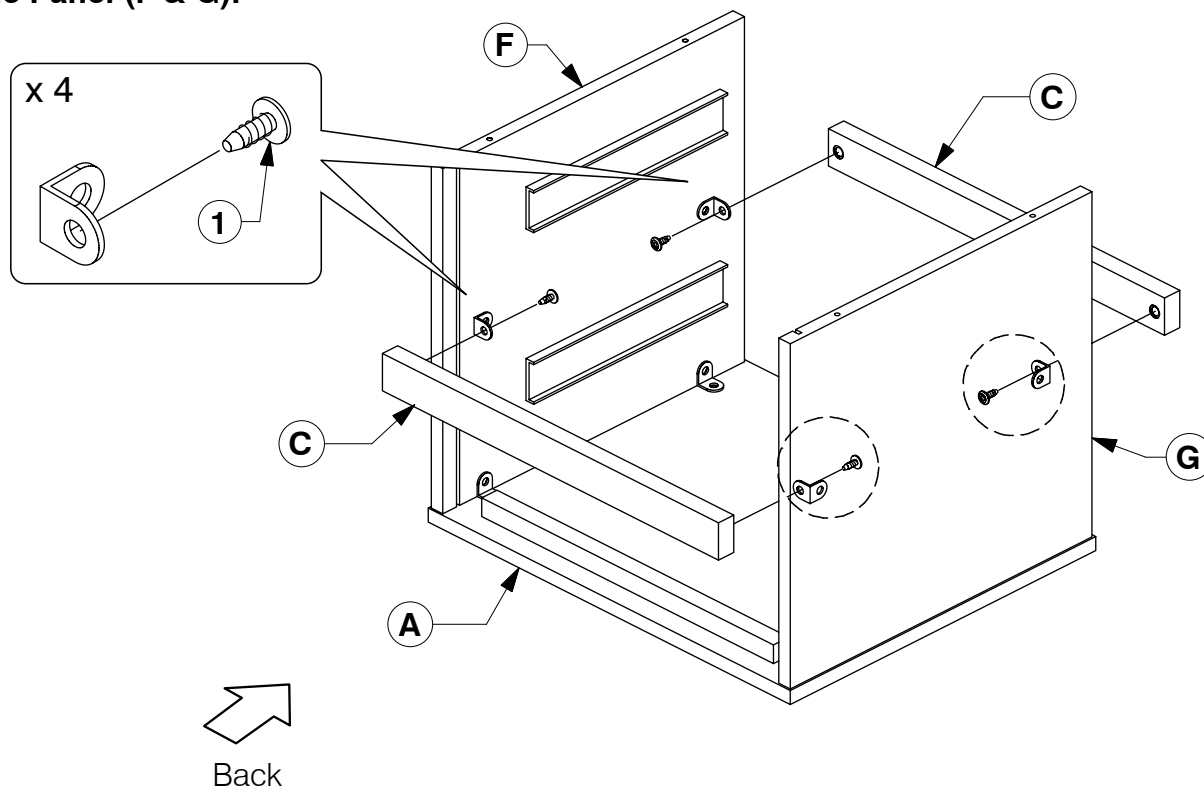

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

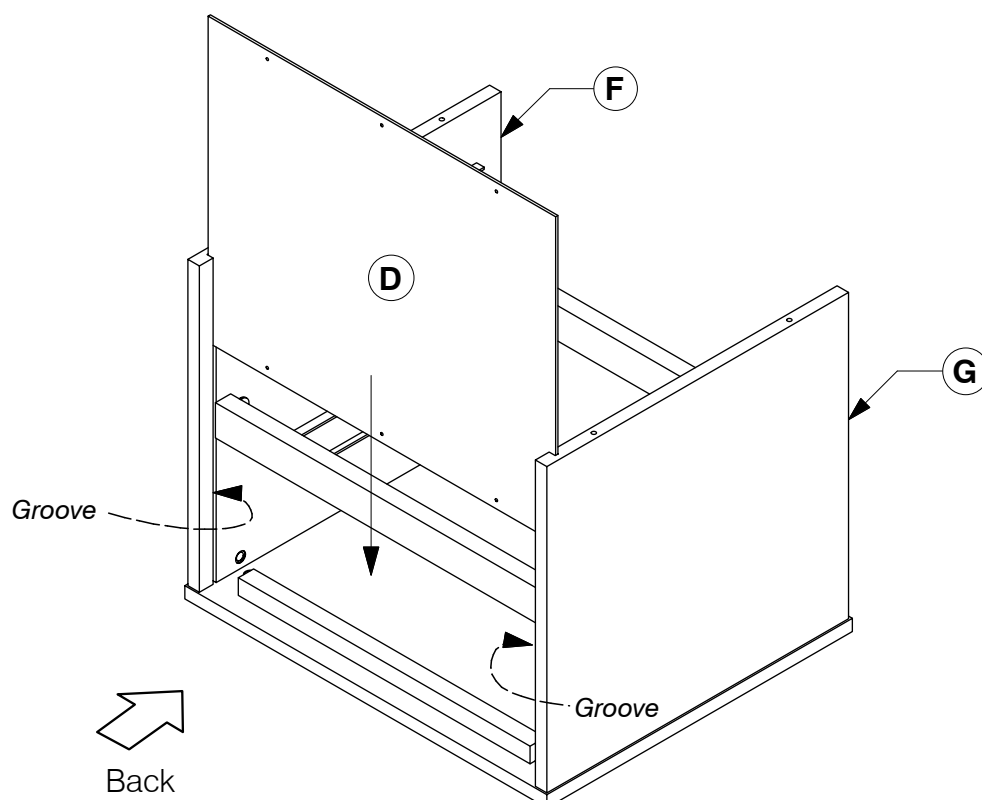


# 9001 2 Drawer Nightstand

## Assembly Instructions


WI-1220

- 10** Fit the Bottom Panel (B) to the Bottom of the Side Panel (F & G).

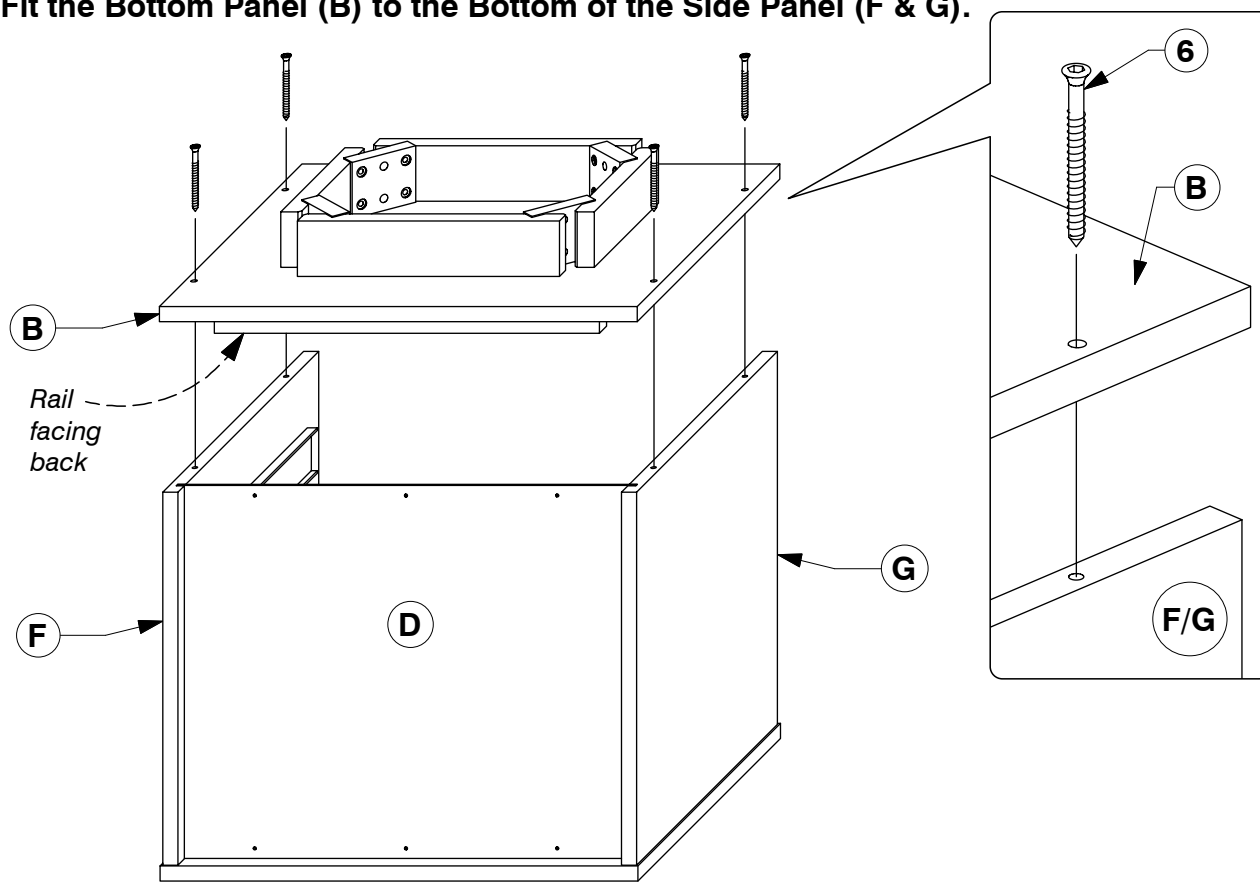

Back

- 11** Use screws to tighten the Back Panel (D) to the back of the frame.

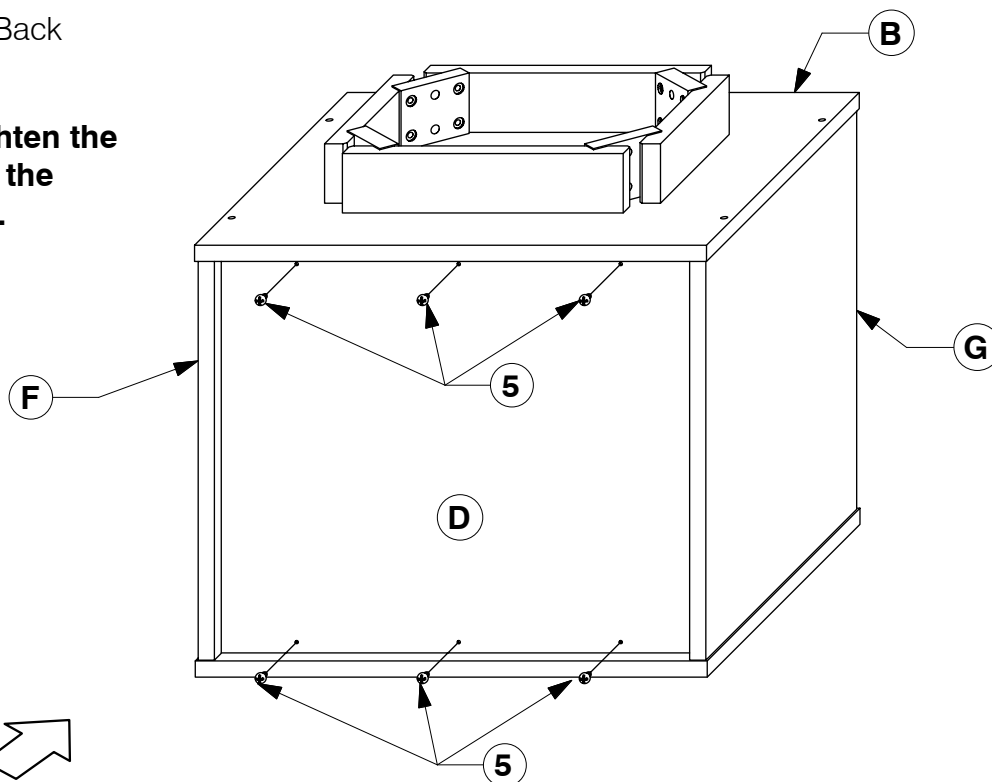


Back

# 9001 2 Drawer Nightstand

## Assembly Instructions


WI-1220

### 12 Fit the Post (E) to the Bottom Panel (B).

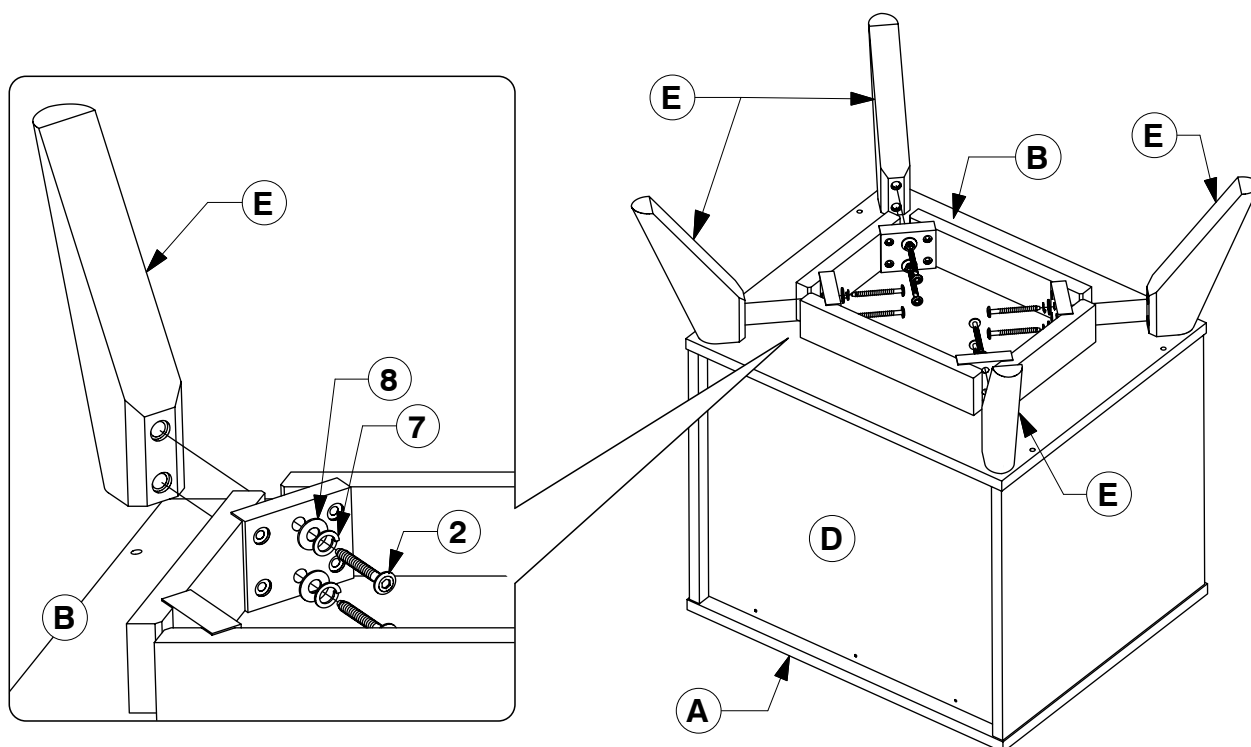

### 13 Fit and adjust the Drawer Face (H).

\* NOTE: Before fitting the Wood Screws.  
Loosen the JCBs on the Drawer Face if  
the face needs alignment.

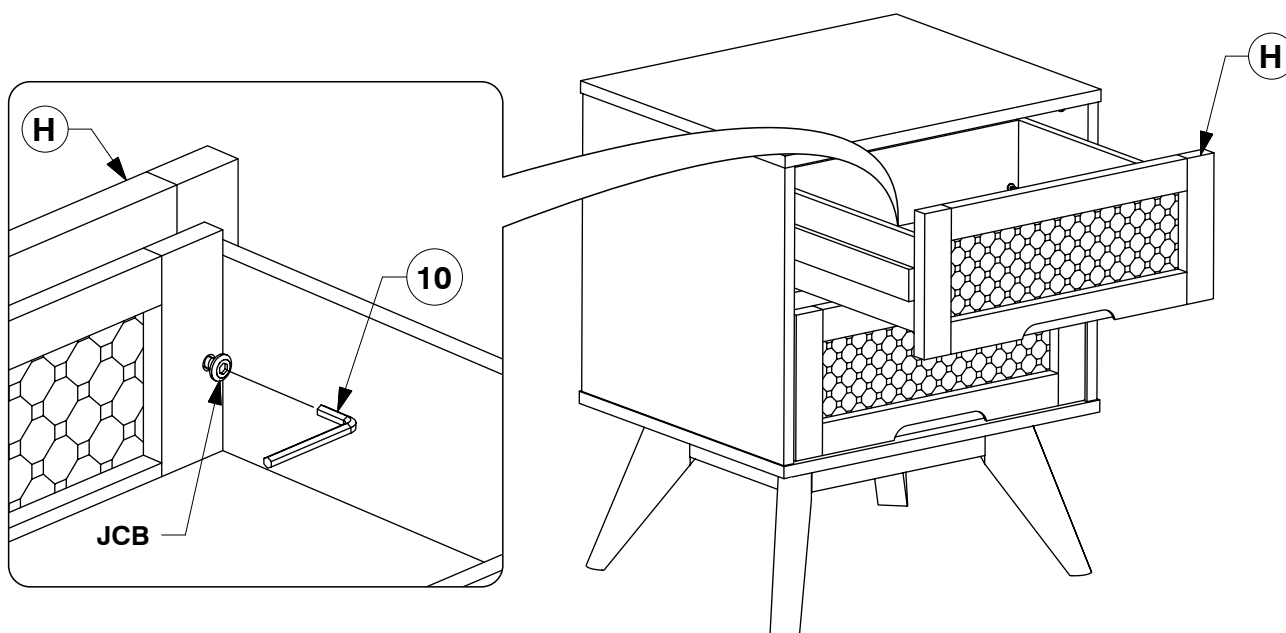

# 9001 2 Drawer Nightstand

## Assembly Instructions

WI-1220

- 14** After the Drawer Faces (H) are aligned, secure with wood screws.

