


Decorative Mirror

Tools Required

- Hammer
- Drill
- Phillips head screwdriver
- Level

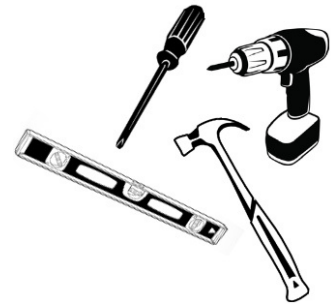

Hardware Required

- Wall anchors
- Screws


Step 1

Inspect frame and mirror for any damages or manufacturer defects

Step 2

Locate all hardware. Installed on the back of the mirror, there should be:


- 2 D-rings parallel to each other on the Cheyenne Mirrors
- 2 D-rings parallel to each other on the vertical side of the Highland Mirror, 2 D-rings parallel to each other on the horizontal side of the Highland Mirror

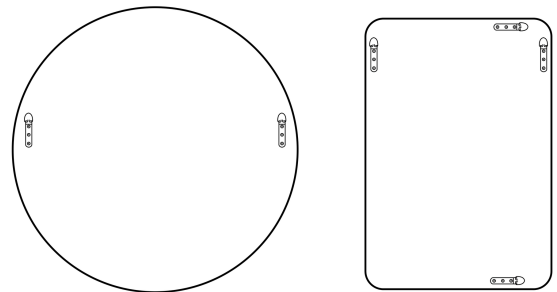

Step 3

For best results, always install frame into one or more wall studs. When a stud is not available, use wall anchors.

Install anchor(s) or screws at the desired height, matching up with the D-rings pre-installed on the mirror. Use a level to ensure the mirror is hung straight.

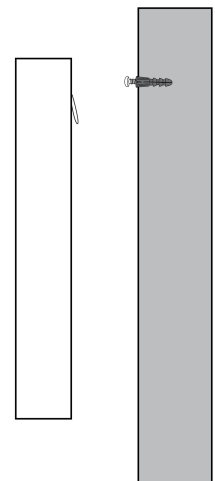


Step 4

Holding the mirror carefully, hook the D-rings on the back of the mirror over where the screws are in the wall. If the D-rings are not screwed in enough, the mirror may not be flush with the wall. If this happens, use a drill to adjust the screws.

Step 5

Now that your mirror is adjusted you can fully rest the mirror onto the screws using the D-rings. Use your level to ensure that the mirror is straight.

When everything is centered and good to go, you can step back and enjoy your newly-hung mirror!

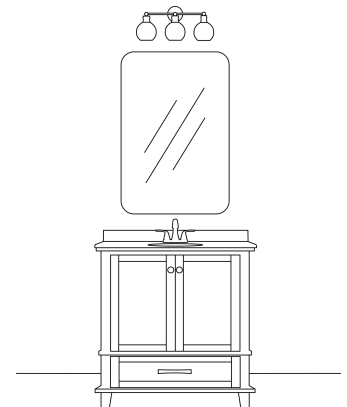

Show off your new space!

Upload your Before & After transformation at www.framemymirror.com/photocontest