

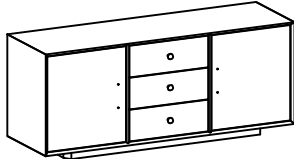






CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	DRAWER		1 X
B	LEG		4 X
HW1	Handle	 160mm	2 X
HW2	Hex Socket Bolt	 5/16"-18 x 2-1/4"	8 X
HW3	Phillips Bolt	 5/32"*20mm	4 X
HW4	Allen Key	 M4	1 X
HW5	Anti-Tip Hardware		2 X

SAFAVIEH

C O U T U R E

Model# SFV2115

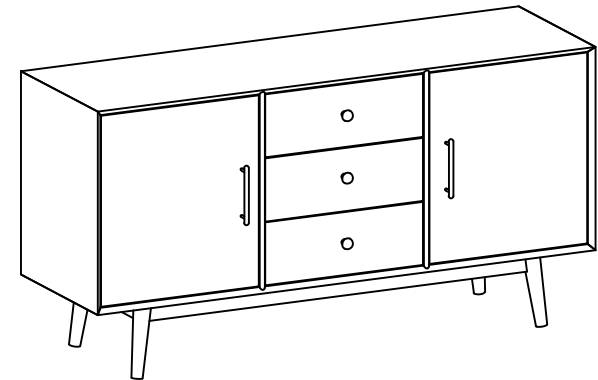Product Dimensions:58"W*18"D*27"H



Weight Capacity : 40 lbs on top of the product
25 lbs on shelf

Warning : Do not stand on the product

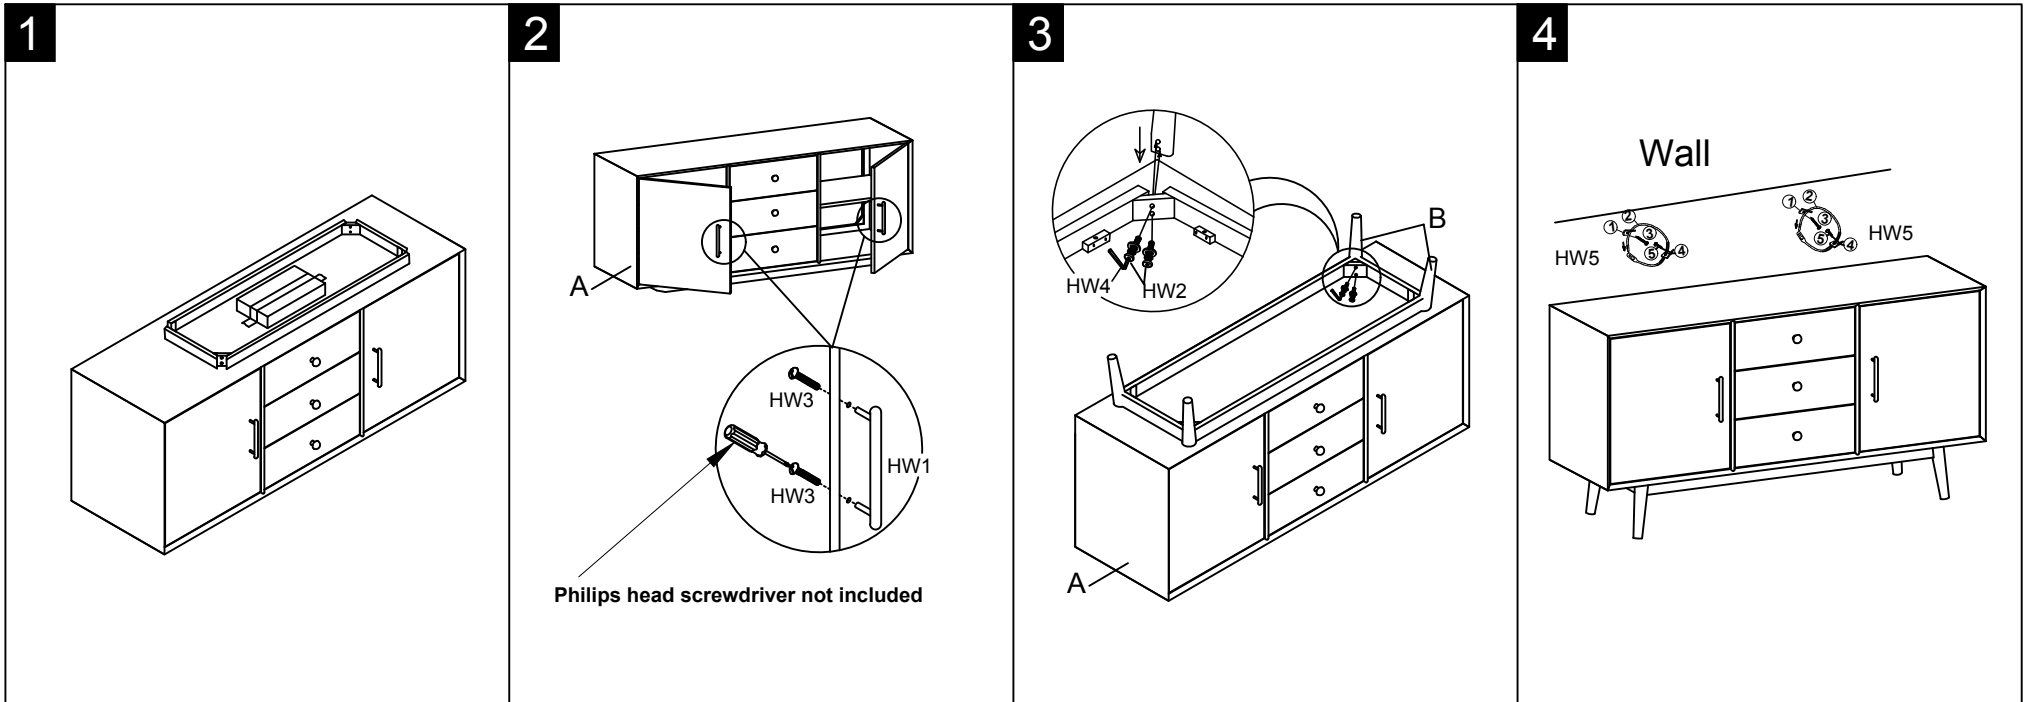
Warning : Do not over torque bolts.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)



Notice :

SET OF HANDLES, 4*LEGS and
HARDWARE BAG AT THE
BOTTOM OF THIS PRODUCT.

Step 1

Open 2*doors, installed the
2*Handles (HW1) on the inside of
2*Doors respectively by using a
Phillips head screwdriver (not
included) to lock with 4*Phillips Bolt
(HW3).

P.S. How to remove and install the
drawer knob, please see another
assembly instruction.

Step 2

Attach 4*Legs (B) in the
corresponding position on the
underneath of Drawer (A) by
using Allen key (HW4) to lock
with 8*Hex Socket Bolt (HW2),
As picture.

Step 3

Straighten up the assembled
product. Following the installation
instructions of anti-tipping (HW5) to
fix the product in the wall by 2
straps. Assembly is completed.