CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
15	Stool/Table side frame	B	2X
16	Stool/Table front &rear frame		2X
17	Stool top frame	\Diamond	1X
18	Stool cushion		1X
19	Table top frame	\Diamond	1X
20	Table glass		1X
Α	Allen bolt(M6x25 mm)	~	40X
С	Plastic feet		8X
D	Flat washer	0	24X
Е	Allen key		1X



Weight Capacity: 275 Lbs (single seat)

550 Lbs (towperson seat)

Warning: Do not stand on chair

Warning: Do not over torque bolts/screws








Model# PAT7509 - 2/2 Product Dimensions:

51.96"x26.77"x25.98" H (Bench) 26.77"x26.77"x25.98" H (Corner) 26.77"x26.77"x13.97" H (Table) 26.77"x26.77"x13.97" H (Stool)

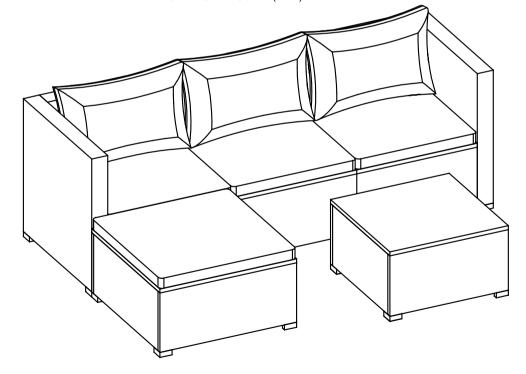

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
15	Stool side frame	B	2X
16	Stool front & rear frame		2X
17	Stool top frame	\Diamond	1X
18	Stool cushion		1X
Α	Allen bolt(M6x25 mm)		20X
С	Plastic feet		4X
D	Flat washer	0	12X
E	Allen key		1X



Weight Capacity: 275 Lbs (single seat)

550 Lbs (towperson seat)


Warning: Do not stand on stool

Warning: Do not over torque bolts/screws







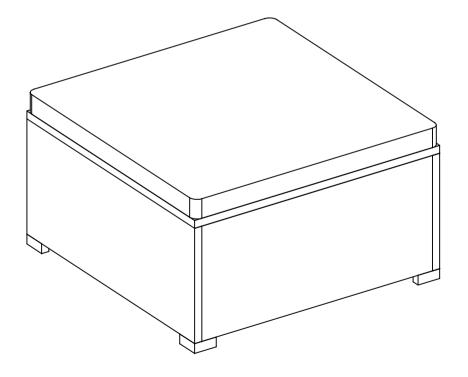


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key

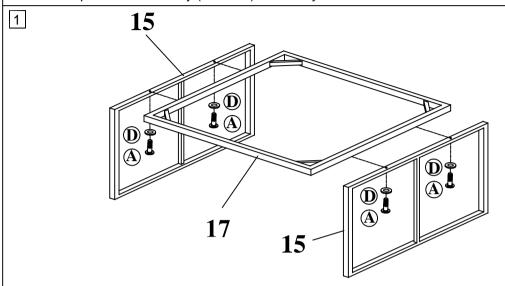


Step 1 Connect Stool Side Frame (15) & Stool Top Frame (17) & tighten Bolt (A) with Allen key (E)

Step 2 Connect part from Step 1 & Stool Front & Rear Frame (16) tighten Bolt (A) with Allen key (E)

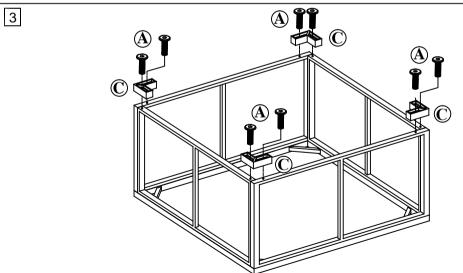

Step 3
Connect part from Step 2 & Plastic Feet (C) tighten Bolt (A) with Allen key (E)

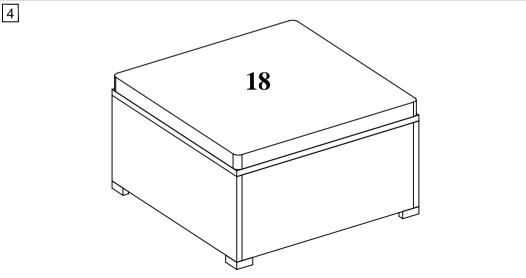

Step 4 Puton Stool Cushion (18) to complete Stool