

Lot NO.:MX-NO.2

## Bedside Cupboard Installation Manual

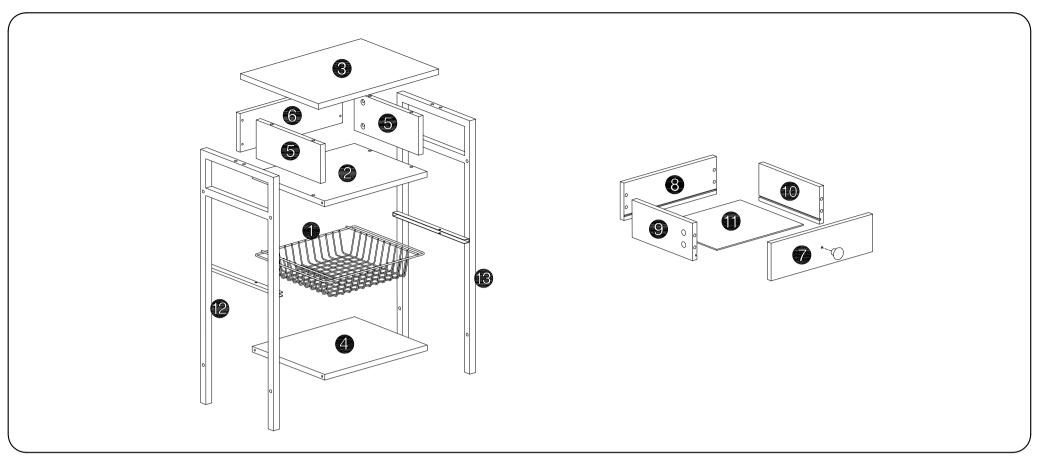

Screws & Tolls

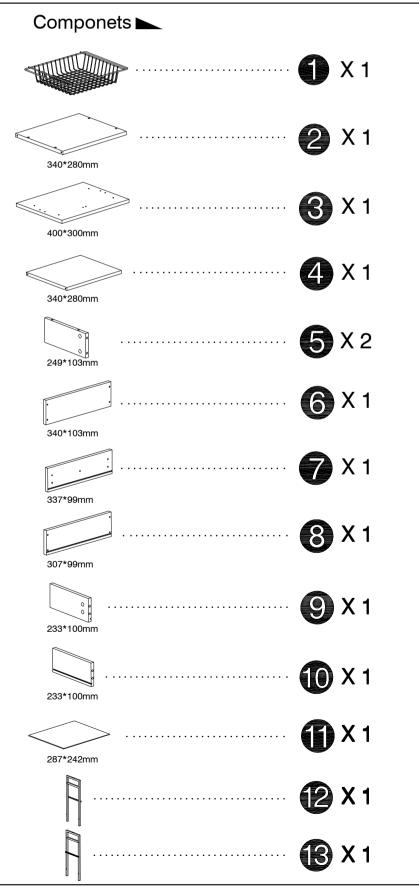

Check all the components & screws before assembly. Do not install in case part is missing. contact us to get. Send email with your question to support@vecelo.com.we will resend


within 24 hours.

A	12.7. M		X 8
В	(55)	<i>∞</i> 8*30mm	X 8
С	<b>©</b>	⊘7*48mm	X 12
D	9	M6*28mm	X 4
Е	Days.		X 2
F			X 1
G			X 4
Н			X 1
I	<b>D</b> animin	M4*18mm	Х3
J		M4	X 2
K		4mm	X 1

## We believes you will absolutely love your new item. But if for some reason you want to return, please contact us directly before you decide to return your product. Our customer service organization can answer most concerns and assist you with any questions you may have about your new item, please email us first at: support@vecelo.com. The item must be return within 30 days or delivery for a full refund. The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories. Trouble shooting: Missing parts Other issues Send email with your question to

Missing parts	Other issues	
Ţ		_
Send email with your question to	Send email with	your questic
support@vecelo.com	support@vecelo.com	
		_
Resend within 24 hours	Respond wi	thin 24 hou
Ţ		
Issue resolved	Issue r	esolved

We control manufacturing and distribution ourselves, ensure the quality.

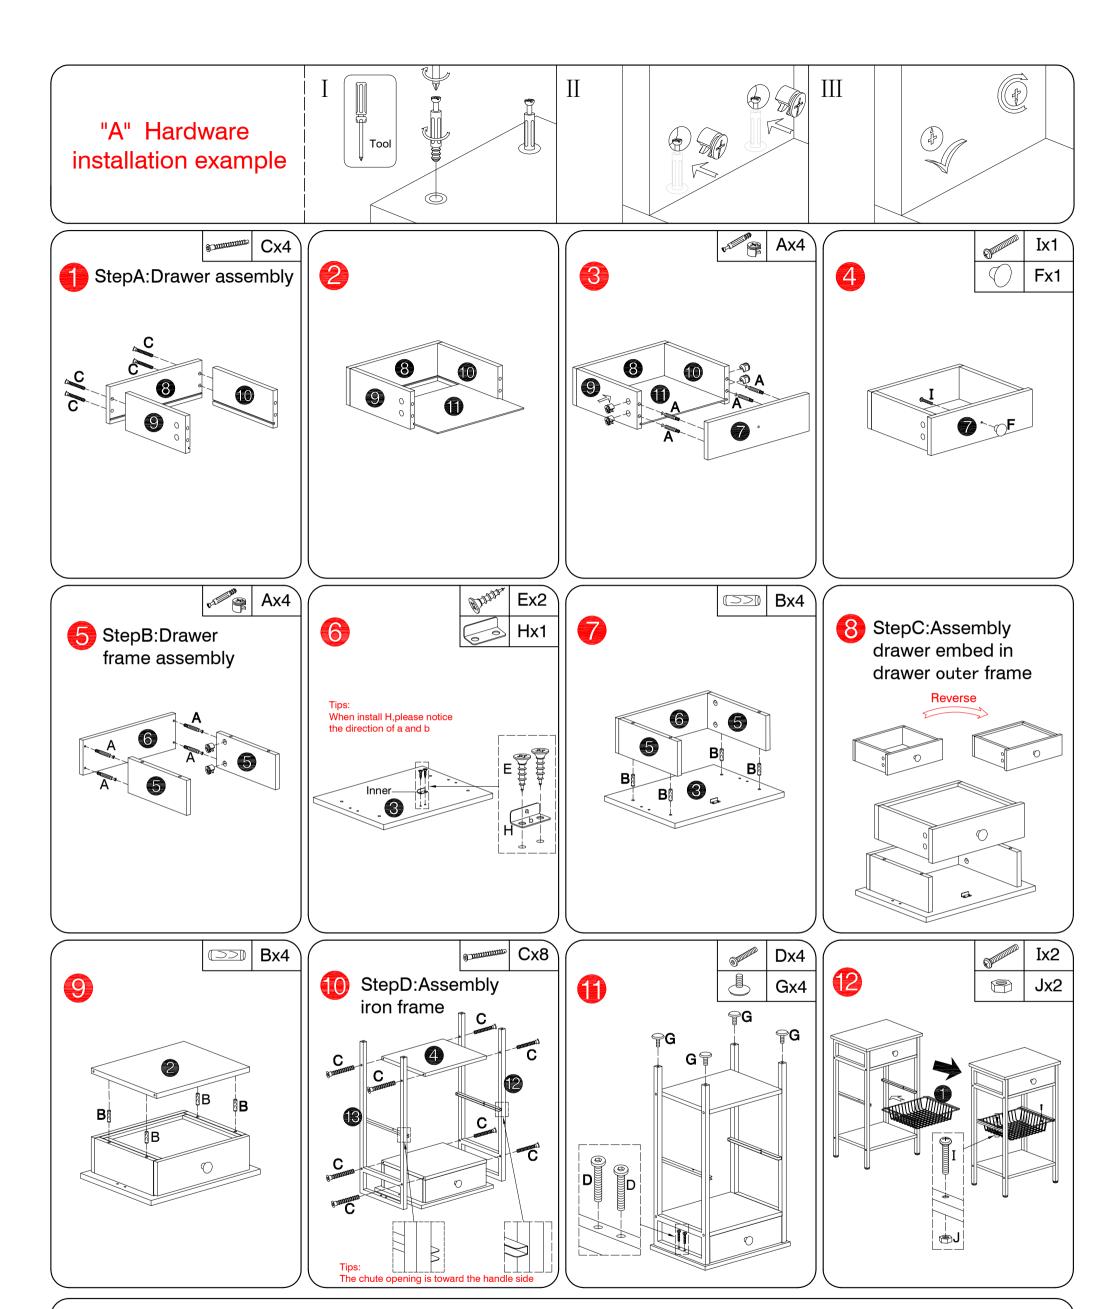

## How to find us?

**Customer Service** 

Email:support@vecelo.com Website:www.vecelo.com