

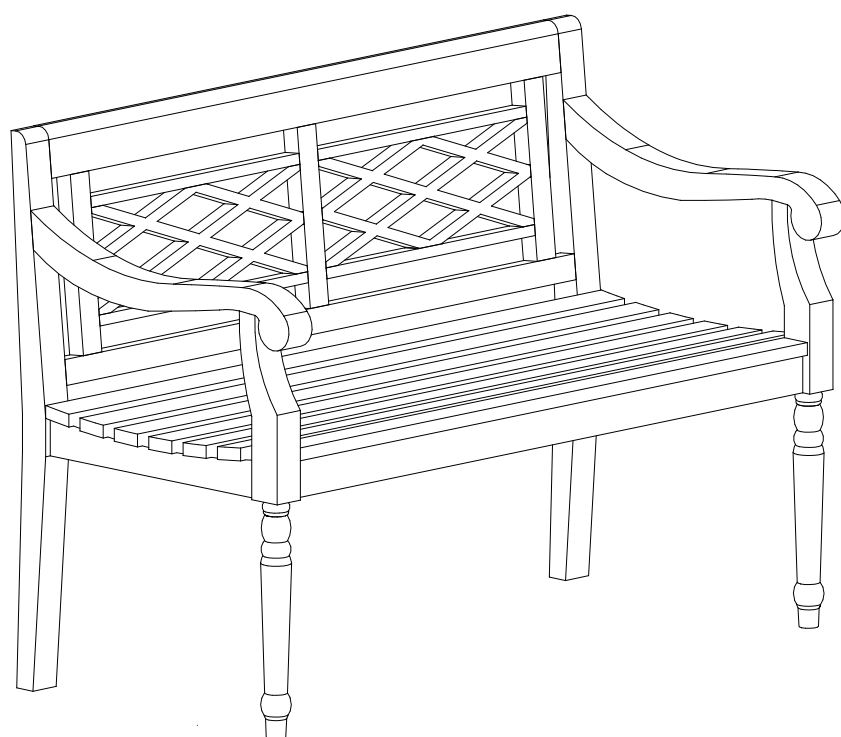


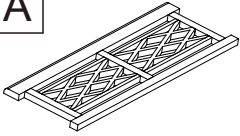


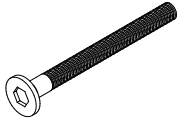
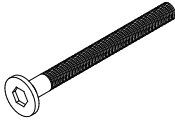
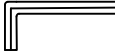
Bench
CO7381

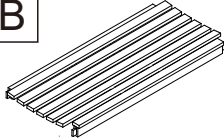


PART LIST

<div data-bbox="150 152 188 197">#A</div> 	<div data-bbox="410 152 448 197">#B</div> 	<div data-bbox="675 152 713 197">#C</div> 
<div data-bbox="204 331 336 398">Backrest 1 PC</div>	<div data-bbox="454 331 616 398">Seat Panel 1 PC</div>	<div data-bbox="750 331 847 398">Leg 2 PCS</div>

HARDWARE LIST

<div data-bbox="143 573 188 618">#1</div>  <div data-bbox="215 788 322 817">M6 X 50</div>	<div data-bbox="403 573 448 618">#2</div>  <div data-bbox="480 788 585 817">M6 X 40</div>	<div data-bbox="668 573 713 618">#3</div> 
<div data-bbox="151 864 383 943">Long Bolt 8 PCS (Extra 1)</div>	<div data-bbox="410 864 641 943">Short Bolt 4 PCS (Extra 1)</div>	<div data-bbox="699 864 895 943">Allen Wrench 1 PC</div>

Step 1. Lay down leg (part C) on a flat, soft surface, such as carpet. Insert backrest (part A) and seat panel (part B) to connecting holes in leg (part C). Attach leg (part C) to assembled unit (parts A & B) using short bolts (part #2) and allen wrench (part #3) on both sides.

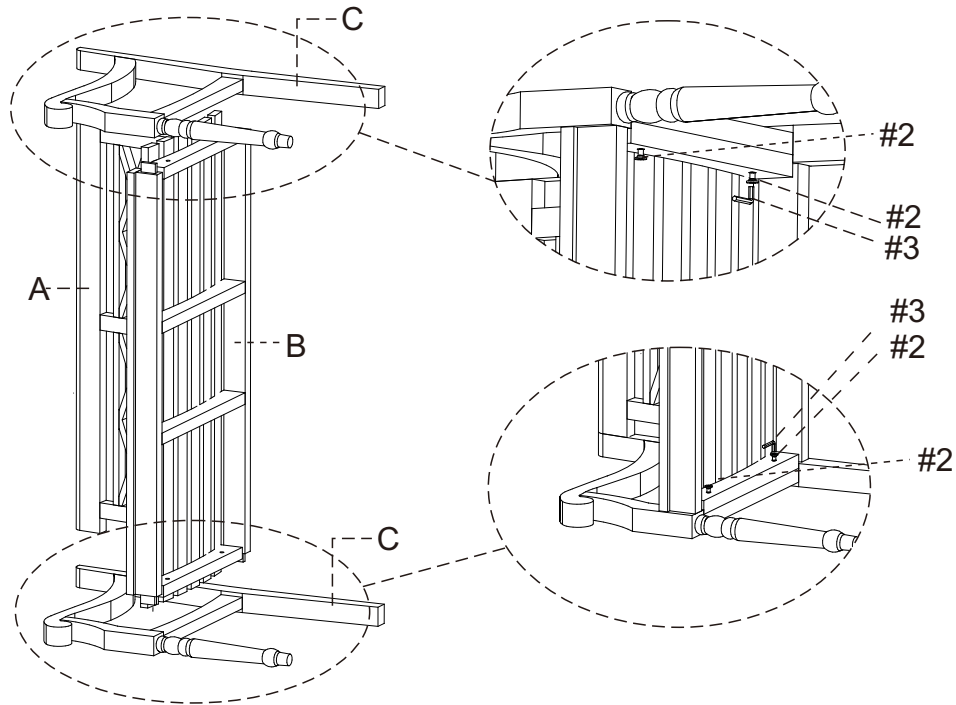


#2  x 4

#3  x 1

Step 2. Carefully turn unit upright. Tighten long bolts (part #1) to assembled unit (parts A & B) using allen wrench (part #3).

Note: Please do not overtighten the bolts.

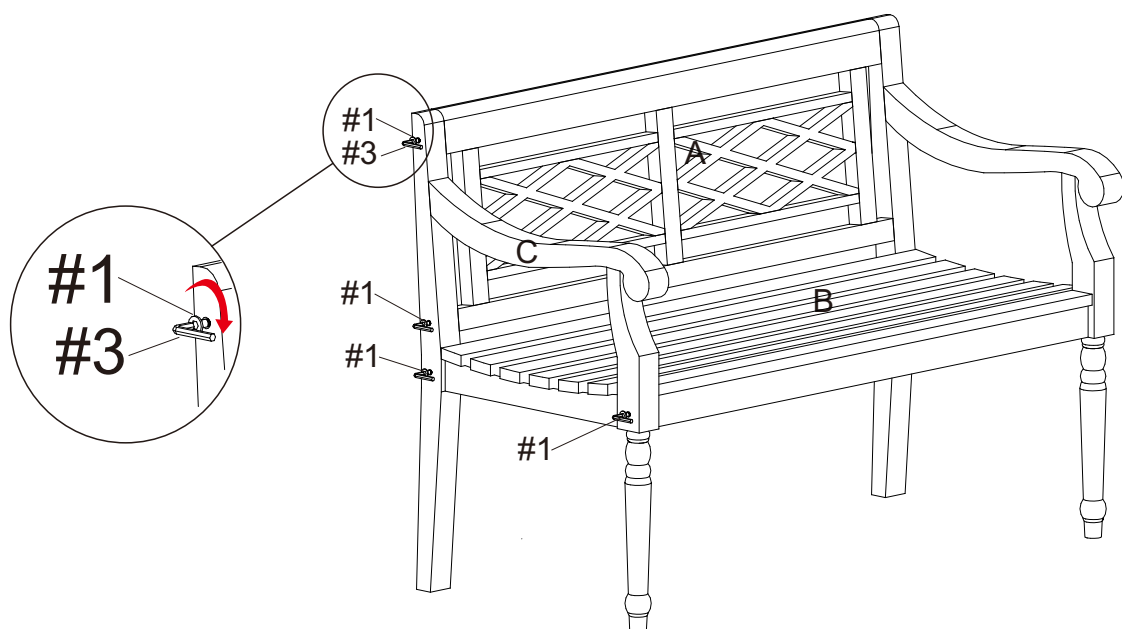

#1  x 8

#3  x 1