


**ASSEMBLY INSTRUCTION**  
**ITEM NO.: 192Y1638F-1**  
**FULL BED**


**PART LIST:**

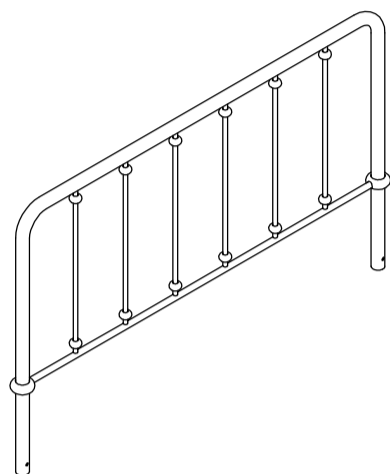


**A: Headboard**  
**x 1pc**




**B: Headboard support legs**  
**x 2pcs**

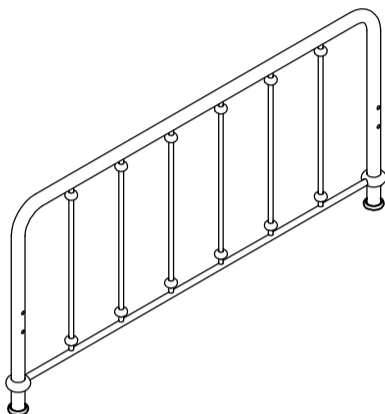


**C: Footboard**  
**x 1pc**

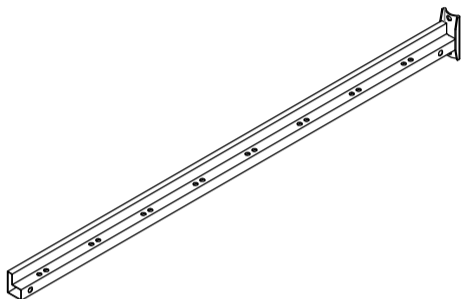


**D: Rail Section (1)**  
**x 2pcs**

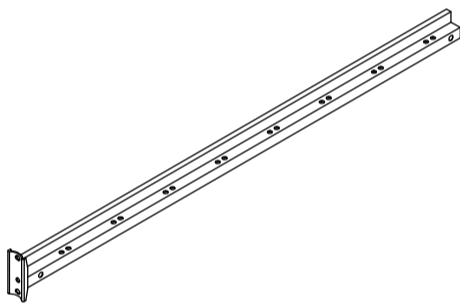


**E: Rail Section (2)**  
**x 2pcs**

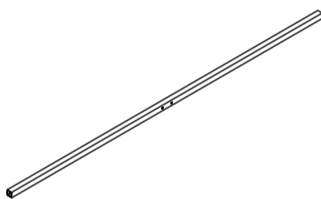


**F: Front/Rear Support Bar**  
**x 2pcs**

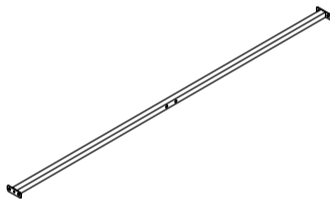


**G: Center Support Bar**  
**x 1pc**

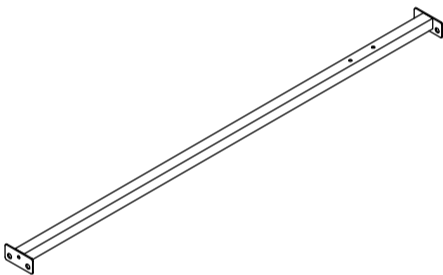


**H: Front Center Rail**  
**x 1pc**

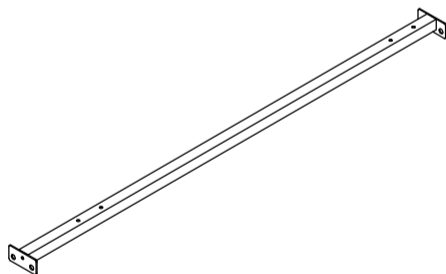


**I: Rear Center Rail**  
**x 1pc**



**J: Rail Support Legs**  
**x 2pcs**



**L: Center support Legs**  
**x 3pcs**

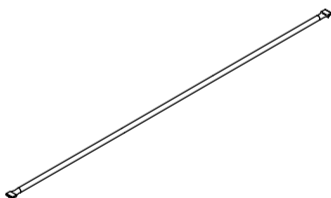


**M: Slat with Connectors**  
**x 16pcs**


**HARDWARE LIST:**




**1: Bolt 1/4\*46mm**  
**x 8pcs**



**2: Bolt 1/4\*36mm**  
**x 2pcs**




**3: Bolt 1/4\*16mm**  
**x 24pcs**



**4: Nut**  
**x 6pcs**




**5: Allen Key**  
**x 1pc**

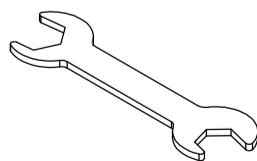


**6: Wrench**  
**x 1pc**

Note: Please do not tighten all bolts until the bed is assembled completely.


STEP 1

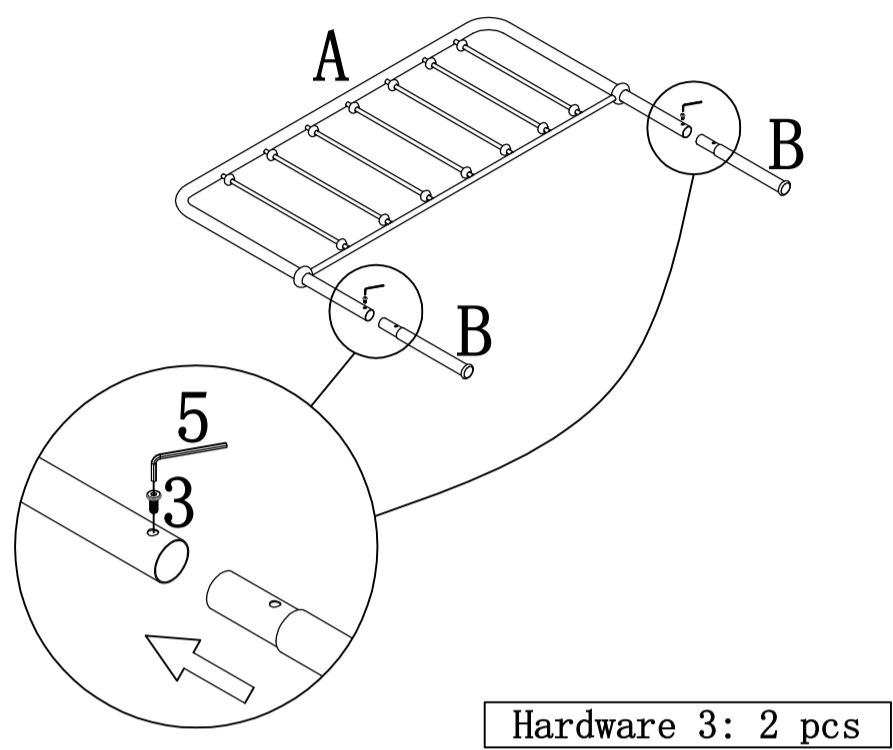


STEP 2

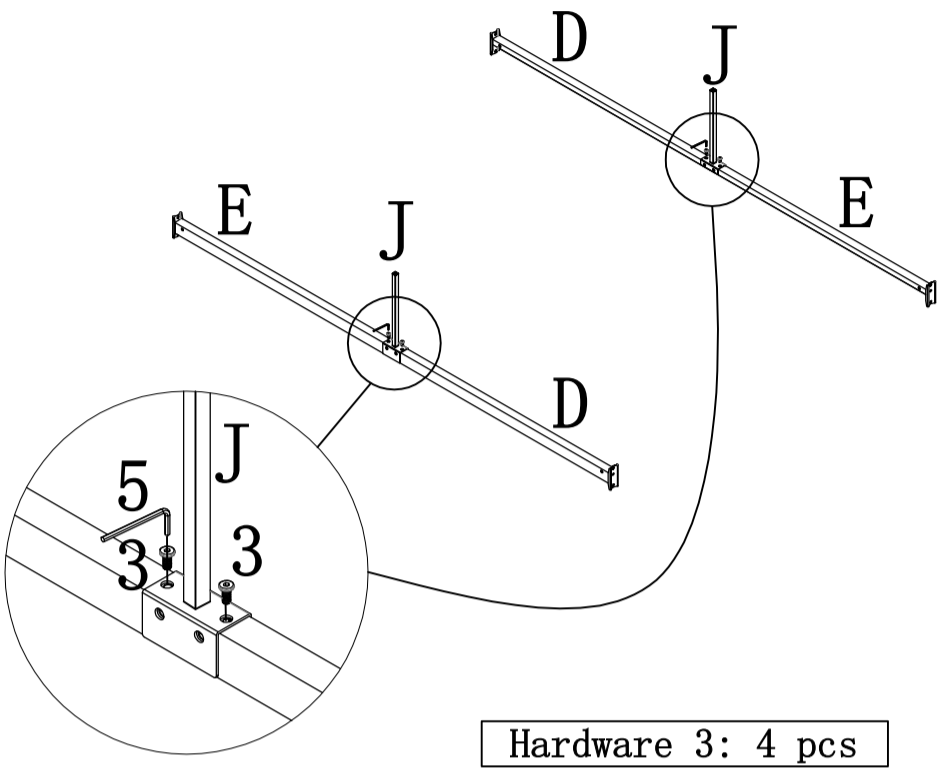


STEP 3

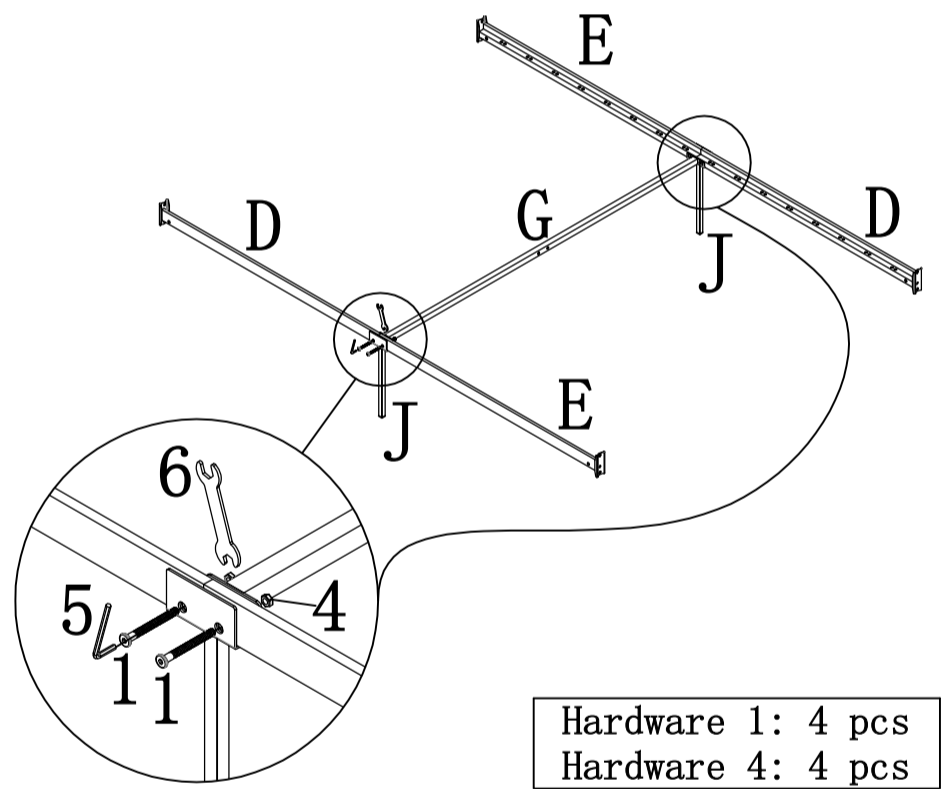


STEP 4

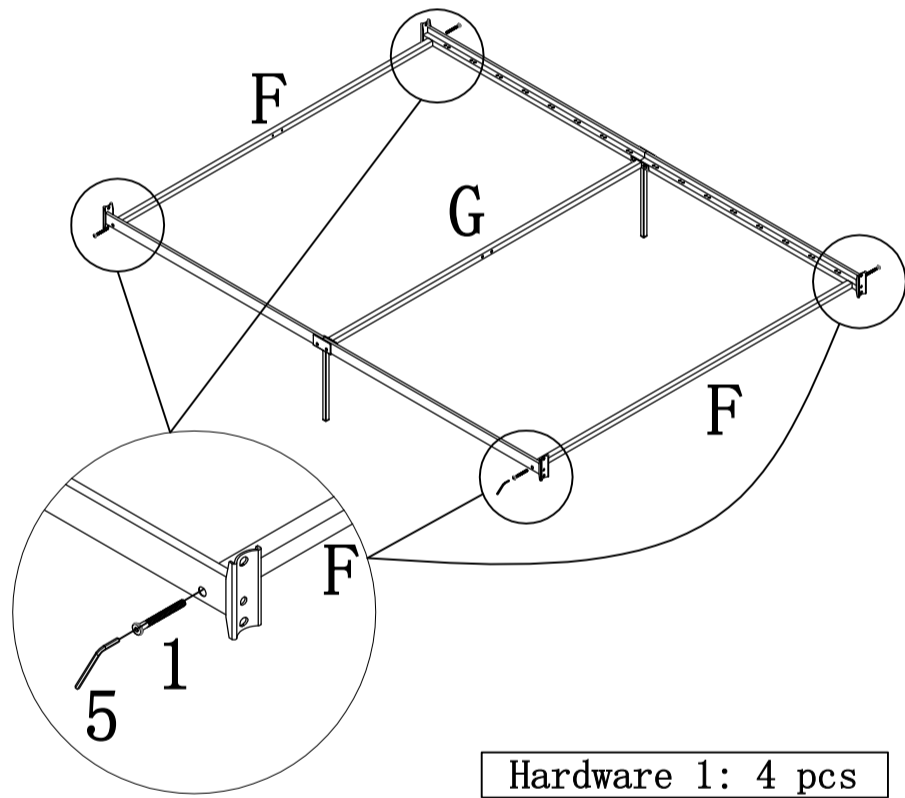

STEP 5

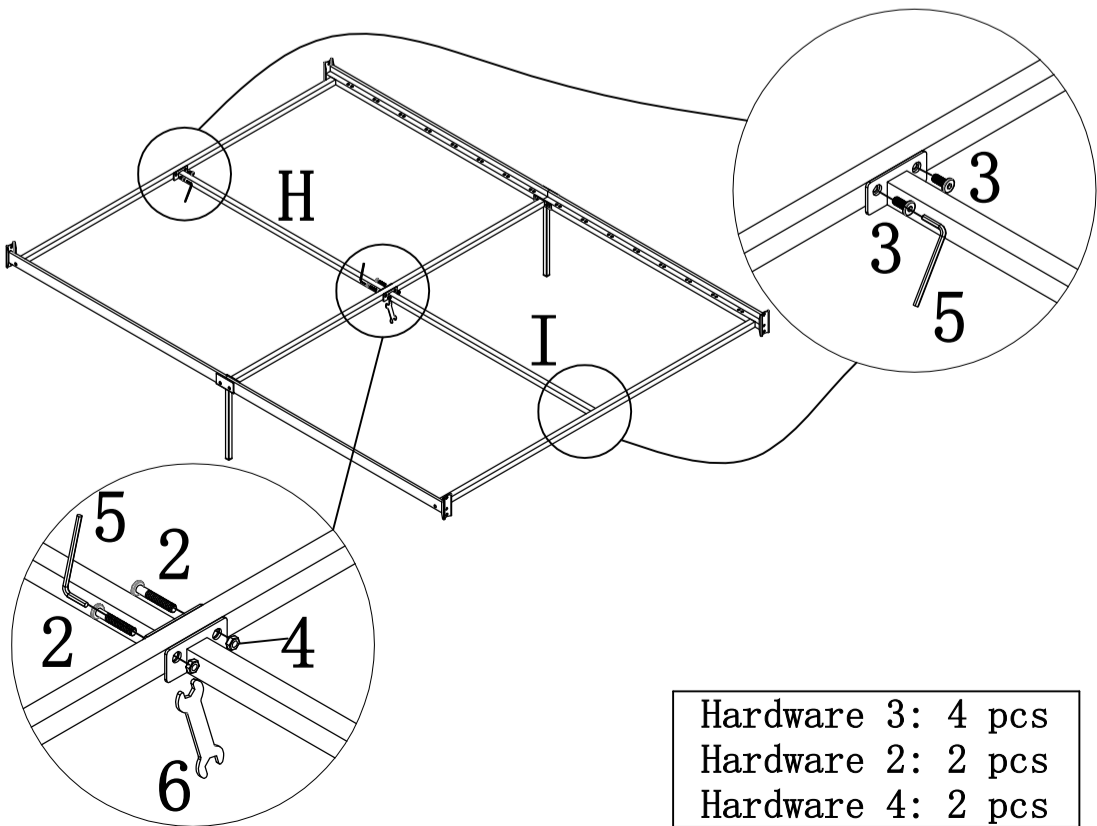


STEP 6

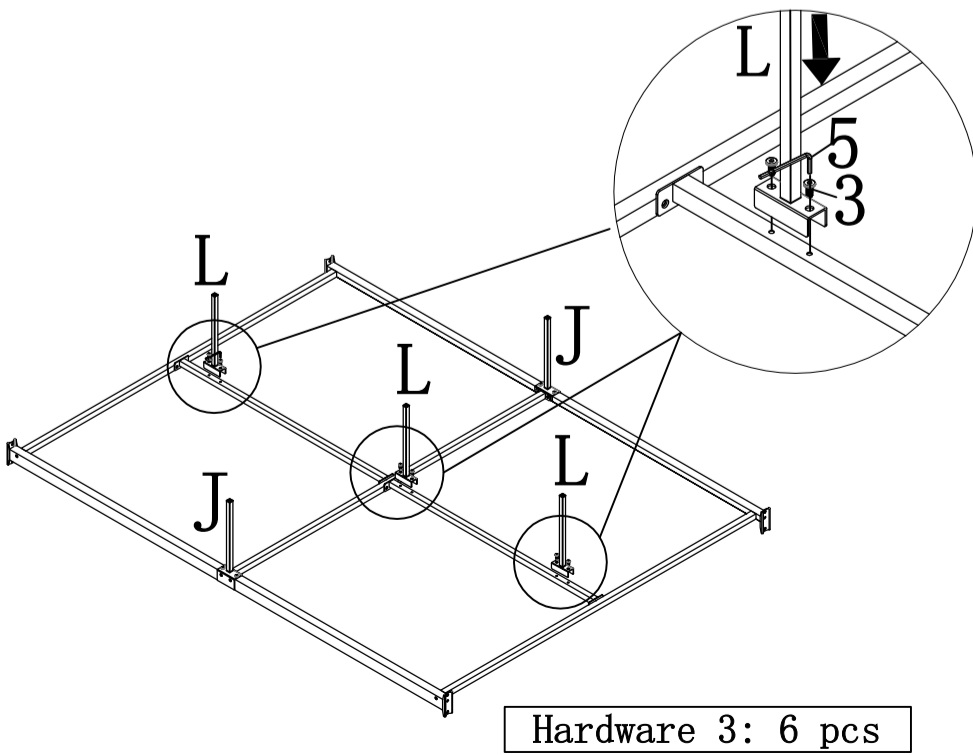


Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 7


STEP 8

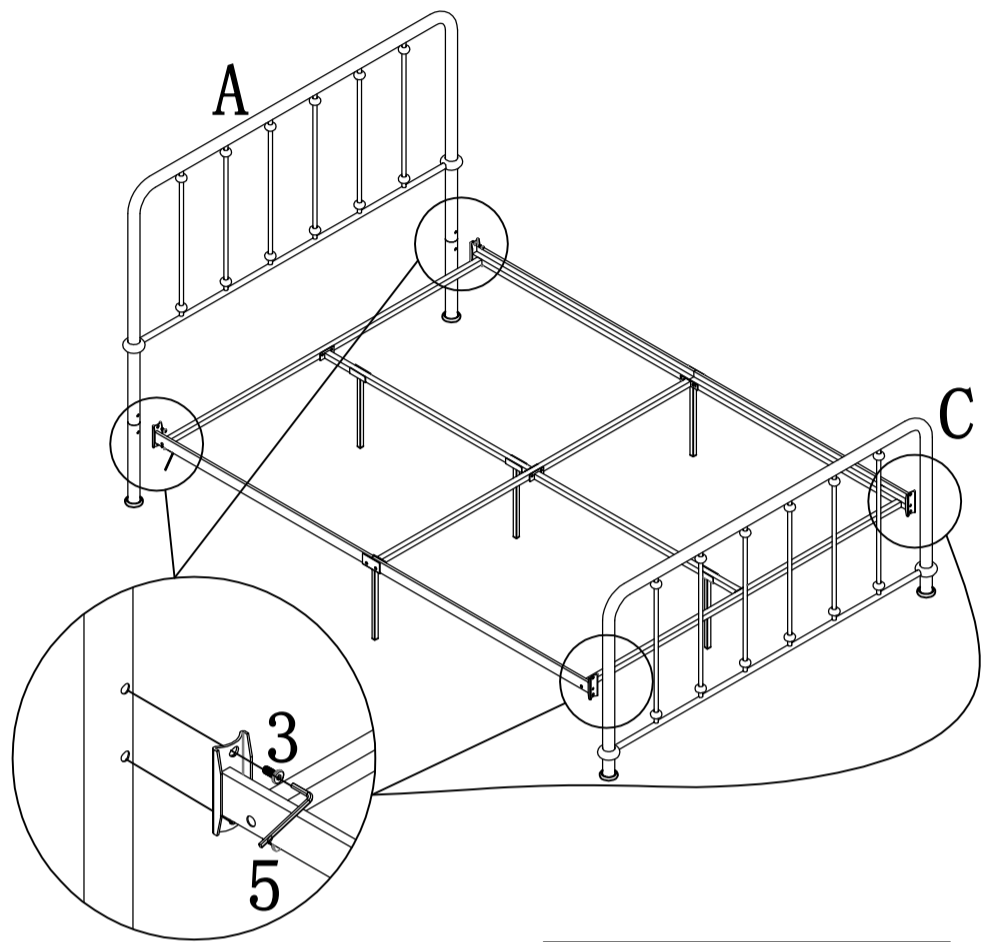


Hardware 3: 8 pcs

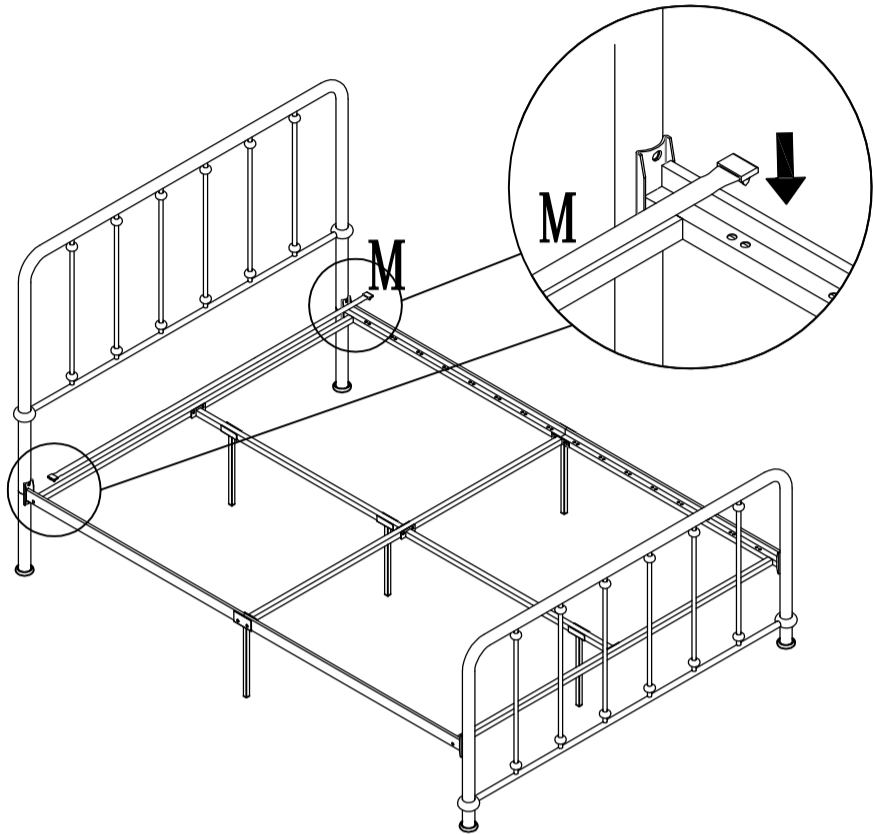

COMPLETED

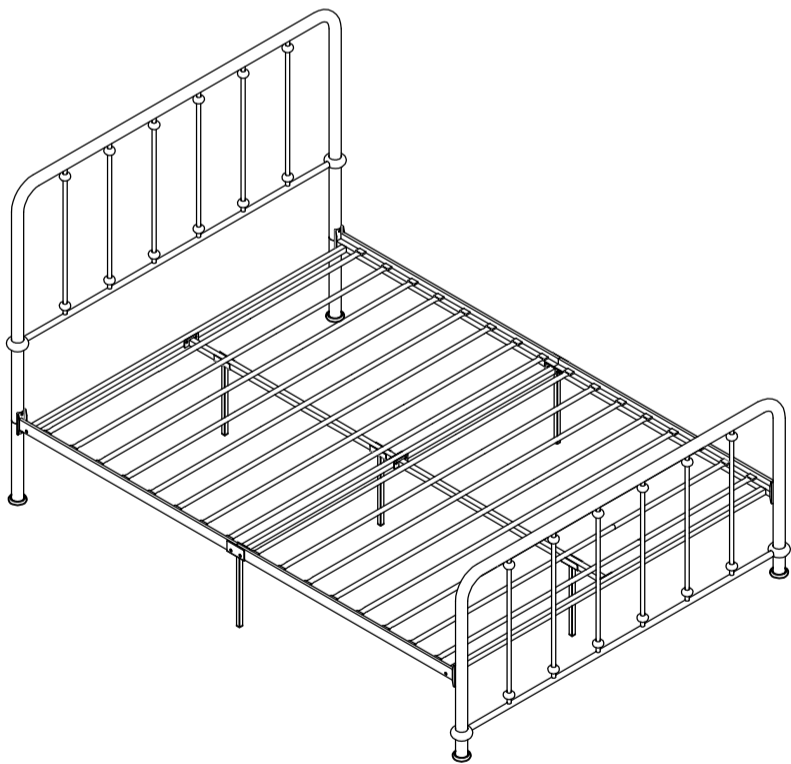

 For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/ scratches and discoloration.