



**ASSEMBLY INSTRUCTION**  
**ITEM NO.: 192Y1638T-1**  
**TWIN BED**


**PART LIST:**

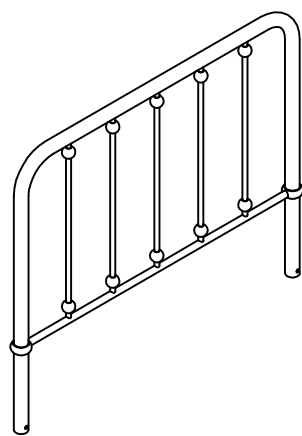


**A: Headboard**  
**x 1pc**




**B: Headboard support legs**  
**x 2pcs**

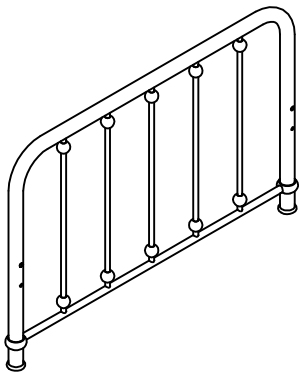


**C: Footboard**  
**x 1pc**

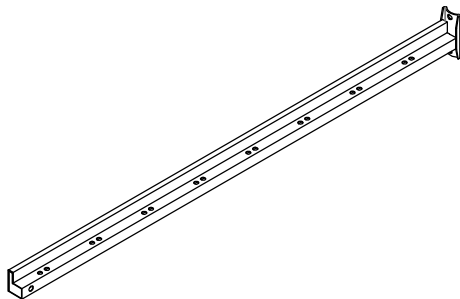


**D: Rail Section (1)**  
**x 2pcs**

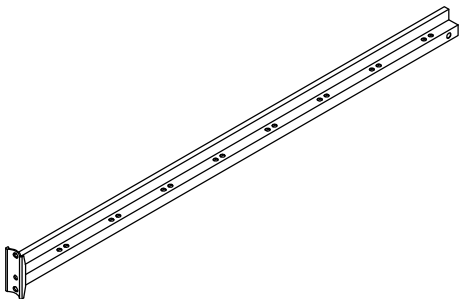


**E: Rail Section (2)**  
**x 2pcs**

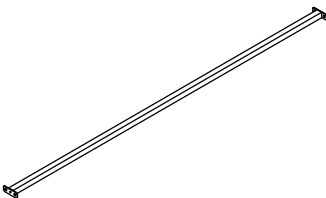

**G: Center Support Bar**  
**x 1pc**




**J: Rail Support Legs**  
**x 2pcs**

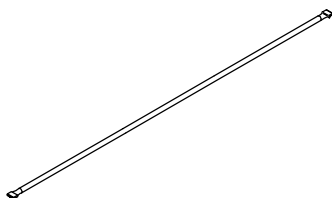


**M: Slat with Connectors**  
**x 16pcs**


**HARDWARE LIST:**



**1: Bolt 1/4\*46mm**  
**x 4pcs**




**2: Bolt 1/4\*16mm**  
**x 14pcs**



**3: Nut**  
**x 4pcs**




**4: Allen Key**  
**x 1pc**

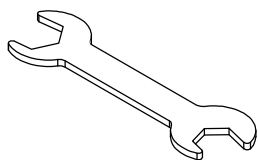

**5: Wrench**  
**x 1pc**


Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 1

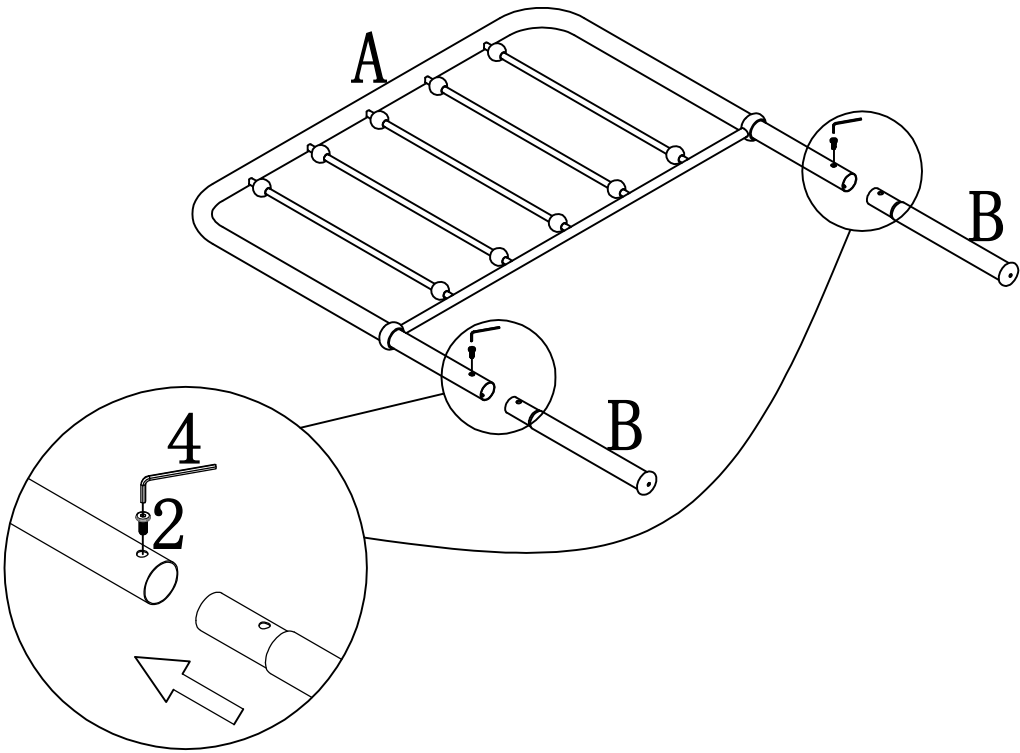


Hardware 3: 2 pcs

STEP 2

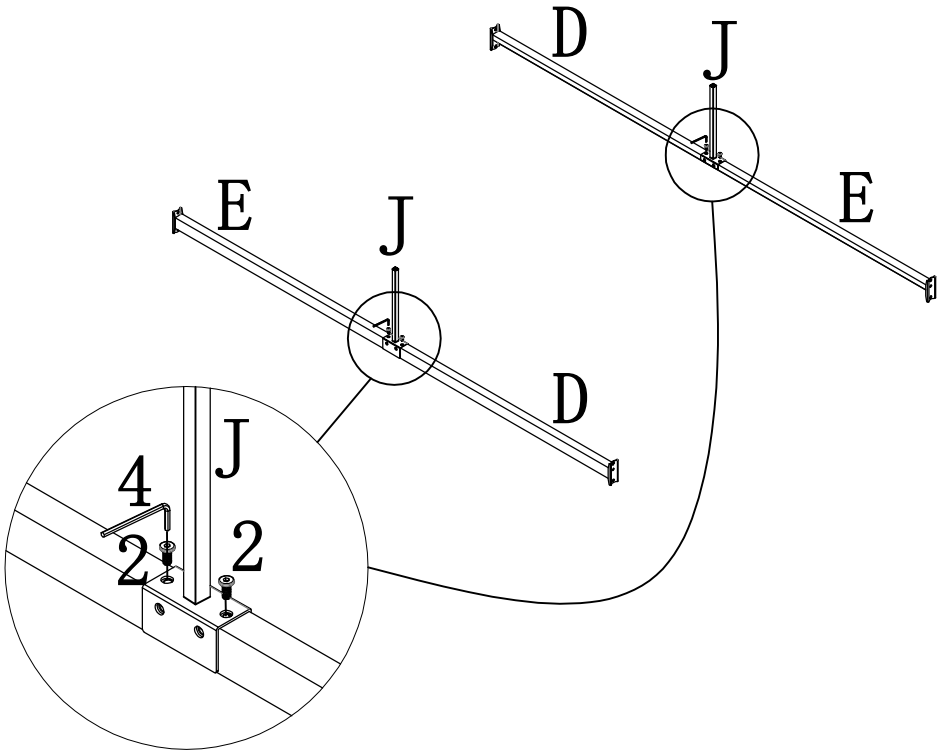


Hardware 3: 4 pcs

STEP 3

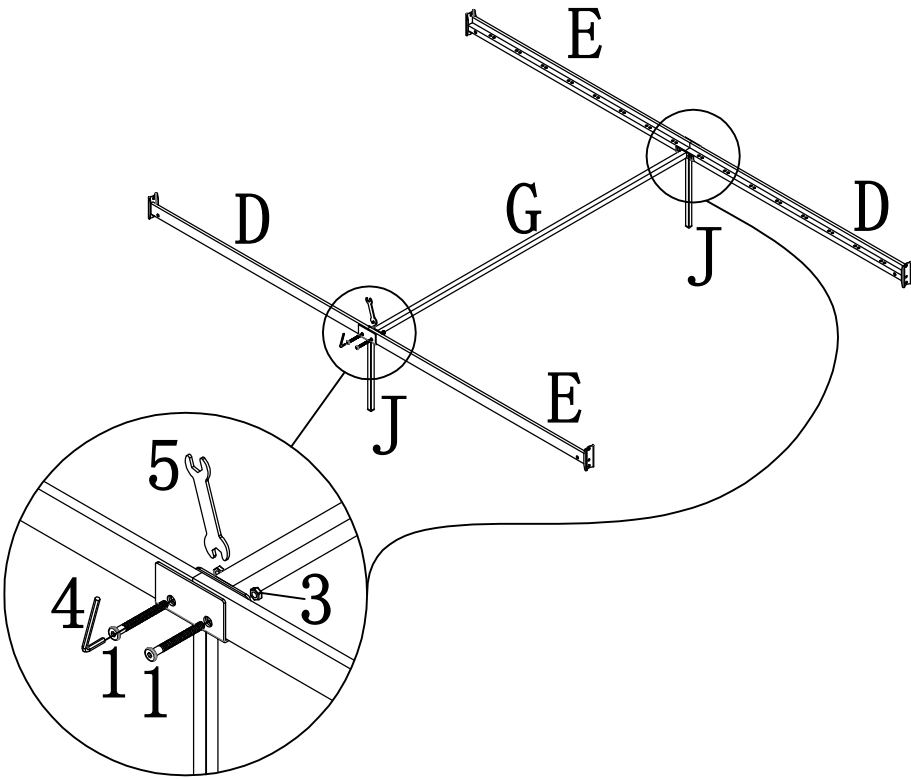

Hardware 1: 4 pcs  
Hardware 3: 4 pcs

STEP 4


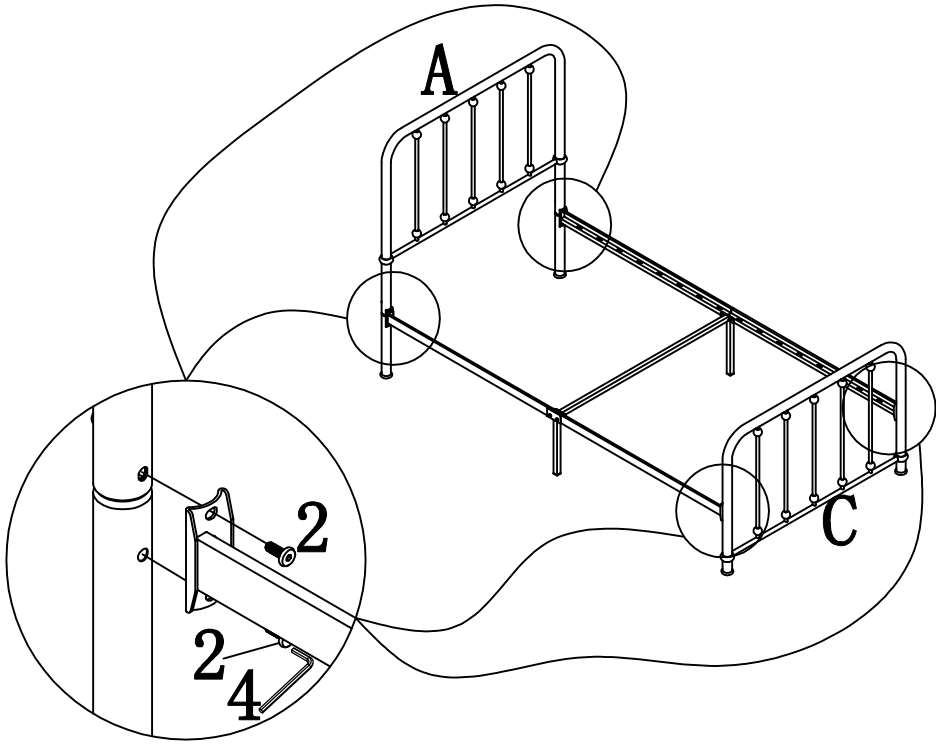


Hardware 2: 8 pcs

Note: Please do not tighten all bolts until the bed is assembled completely.

## STEP 5

## COMPLETED

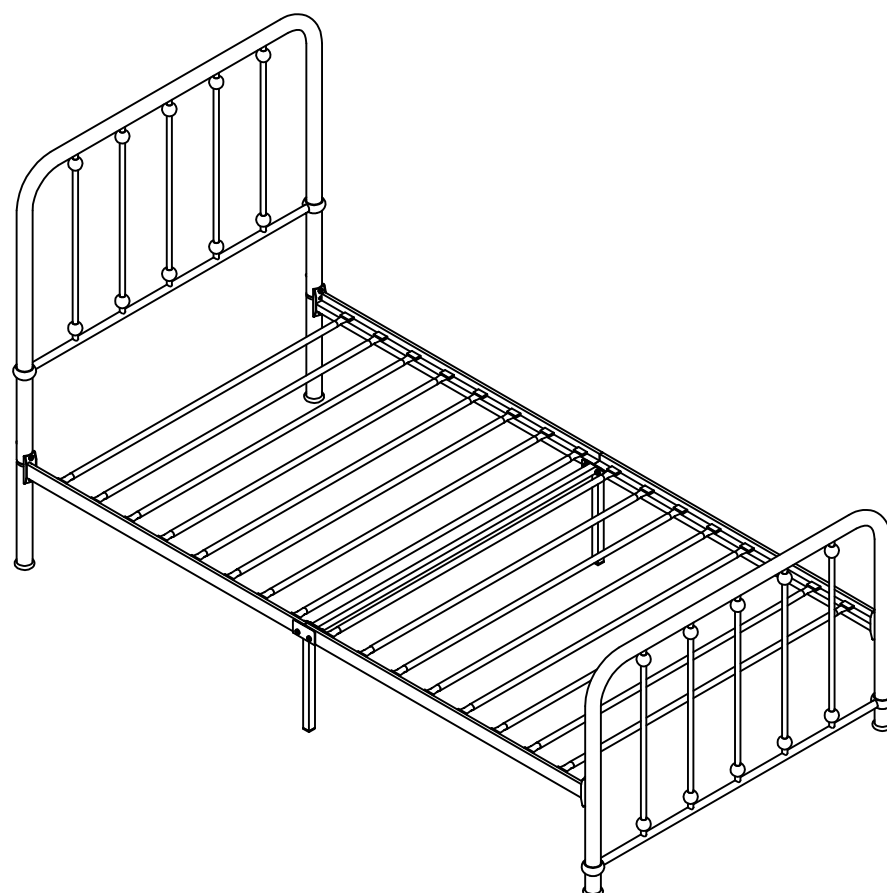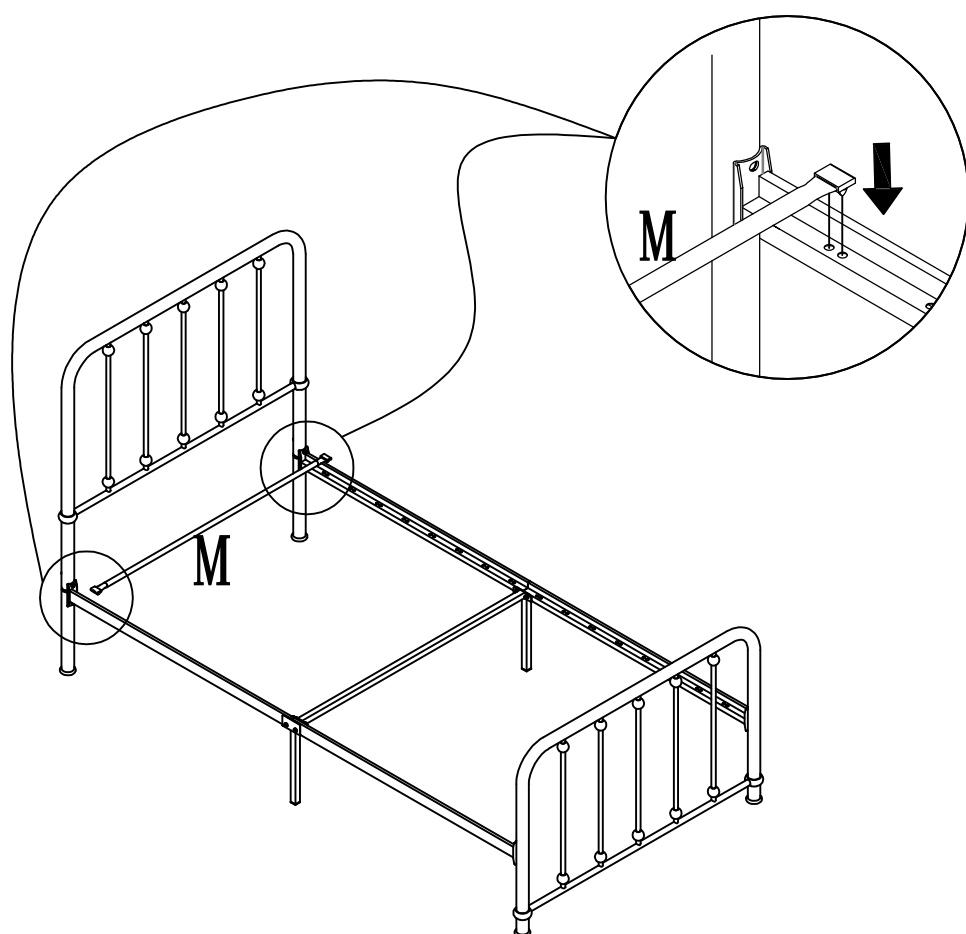

For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.