

# **User's Manual**



# **INSTALLATION INSTRUCTIONS**

# **Installation Manual**








#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.













#### IAPMO RESEARCH AND TESTING, INC.















#### INSTALLATION STEPS


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




1. According to the basic size of the embedded box, use a special tool to open the main hole on the solid wall. The depth of the hole is shown in the figure. It should be considered that the distance between the surface of the wall after the final treatment and the bottom of the hole is between 2.55" and 2.95".

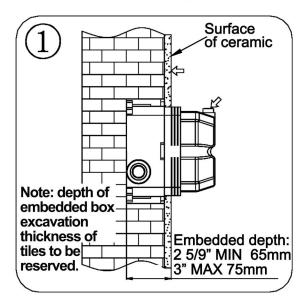


3. As shown in the figure, the inlet and outlet pipes should be embedded well, pay attention to the up and down, left and right directions on the embedded box.

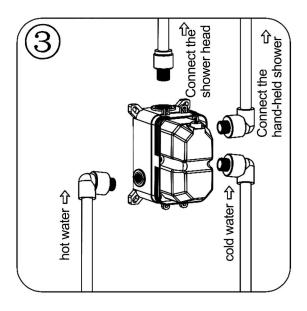


Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.



2. Reference reserved size 7.48X5.31"

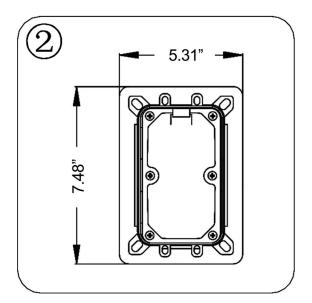


4. Open the water source to test whether the right and left water inlet pipes are tightly connected without leakage, and adjust the inlet pipes after the test is completed. The flow switch is in the open state to test whether the upper mixed outlet pipe is tightly connected without leakage, at the same time, the water retention function is fixed on the solid wall with self-tapping screws according to the embedded box.

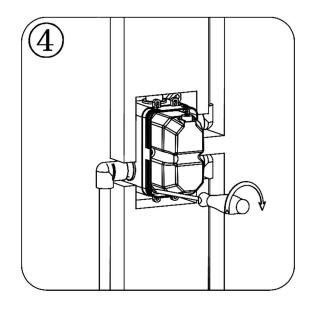


# **INSTALLATION STEPS**


5. As shown in the figure, after the installation of the embedded box, it is necessary to make sure that the mercury is in the center of the level. If it is tilted, it will affect the installation effect of the panel.

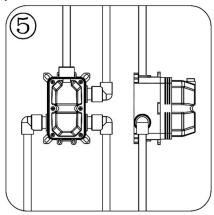


7. As shown in the figure, the leakage embedded box shall be removed, and the subsequent installation of control valve can be carried out after the wall room is laid

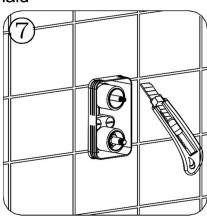


8. The notch of the upper hand wheel shall be inserted straight to the bottom, and the screw and hand wheel button shall be tightened; The lower hand wheel button is facing up, and the whole hand wheel is pressed to the end. When you hear the sound, you can finish it.

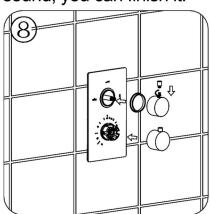


6. Once again,make sure that the pipe connection is correct and there is no leakage in the water test. After the other embedded components of the shower are installed, the embedded box and the pipeline are sealed and fixed with fillers. At this point, the installation of the solid wall embedded box is completed, and the installation cover of the level meter is removed.

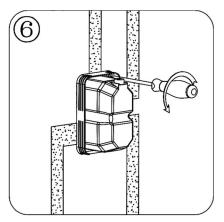

9. Install shower arm and shower head (wrap the PTFE tape on the thread).

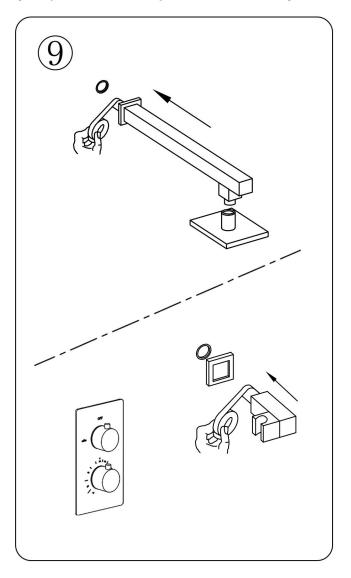

# **INSTALLATION DIMENSION**

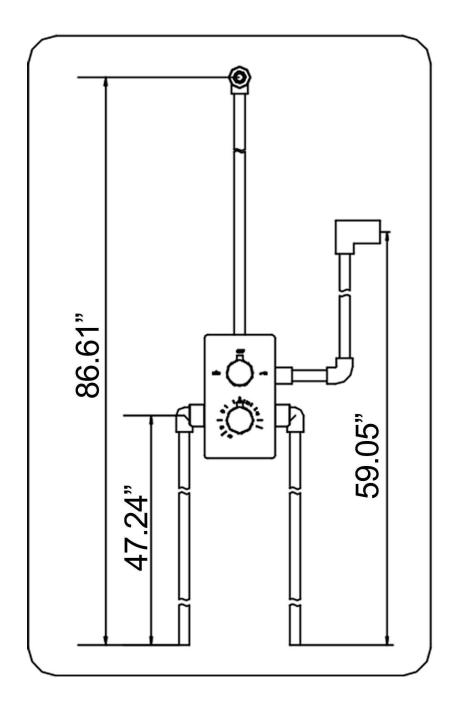

The picture is for reference only, you can install it according to your own requirements.

#### **CLEANING CARE**

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show,

The bubbler can be unscrewed, rinsed with water, and then installed back in place.





