

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)

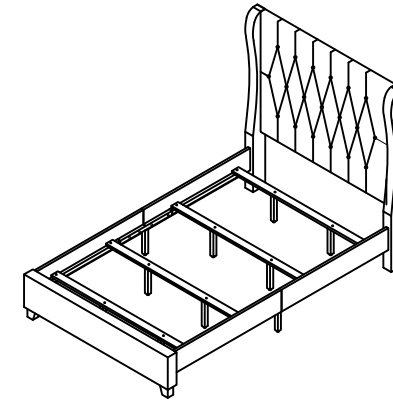
CARE AND MAINTENANCE

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH FURNITURE

Model# FOX6213-F

Product Dimensions: 82.25"W*59.5"D*55.5"H














Weight capacity : 550lbs







WARNING : DO NOT STAND ON THE BED

WARNING : DO NOT OVER TORQUE BOLTS

Part List and Hardware List

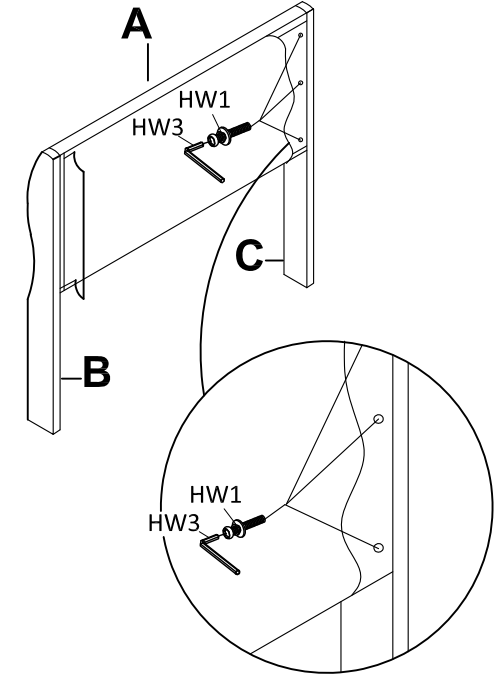
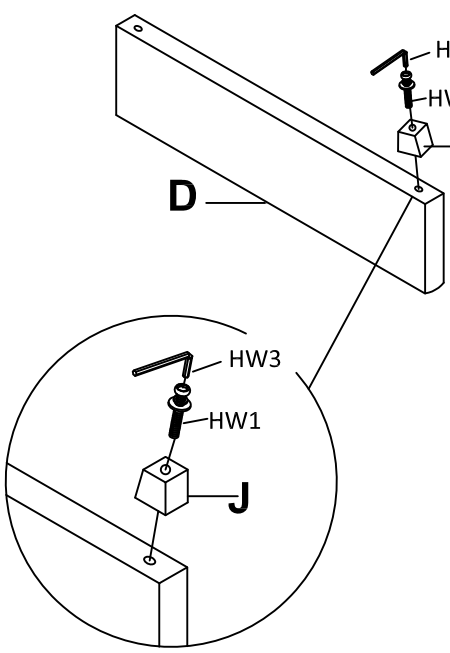
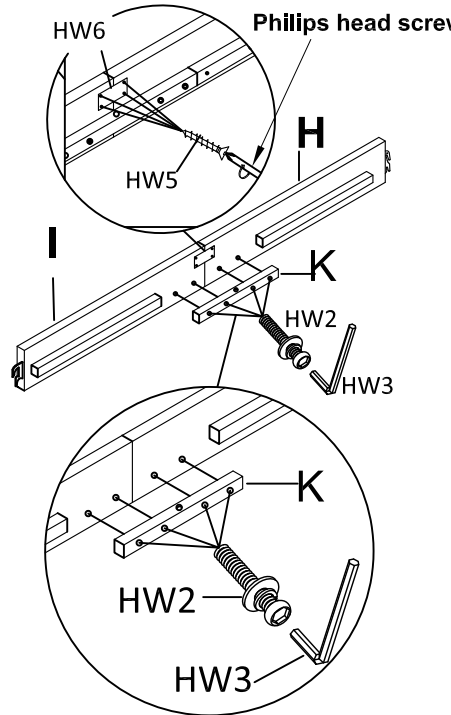
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	HEADBOARD		1X
B	R-POST		1X
C	L-POST		1X
D	FOOTBOARD		1X
E	SUPPORT LEGS OF SLATS		8X
F	SUPPORT LEGS OF RAILS		2X

PIECE	DESCRIPTION	PICTURE	QUANTITY
G	SLAT		4X
H	L-RAIL		2X
I	R-RAIL		2X
J	WOOD LEG		2X
K	WOOD BAR		2X

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Hex Socket Bolt	 5/16"-18*2.5"	8X
HW2	Hex Socket Bolt	 1/4"-20*2"	10X
HW3	Allen Key	 4mm	1X
HW4	Screw	 Ø8*30mm	8X
HW5	Screw	 Ø8*15mm	8X
HW6	Metal Plate	 50*33*1mm	2X

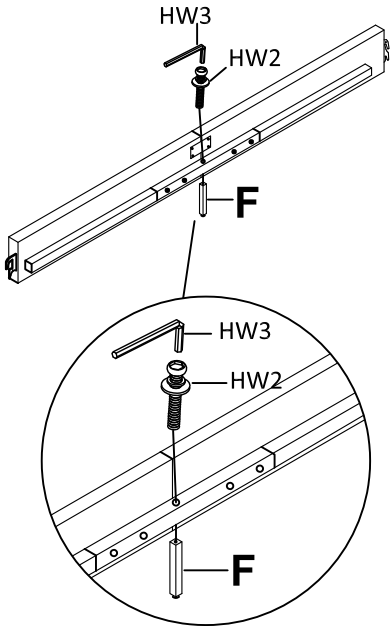
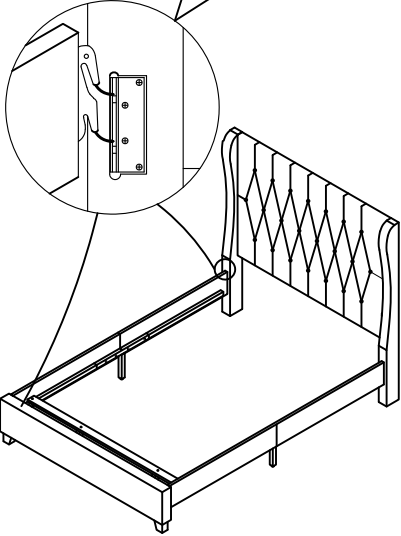
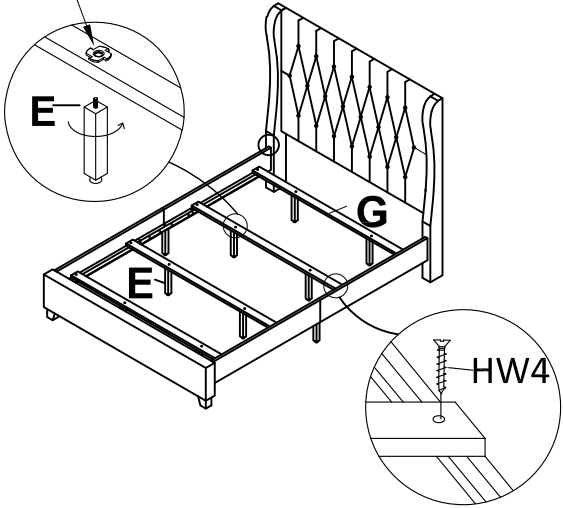
PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

<div data-bbox="114 367 779 1145"><div data-bbox="114 367 181 430">1</div></div>	<div data-bbox="779 367 1444 1145"><div data-bbox="779 367 846 430">2</div></div>	<div data-bbox="1444 367 2119 1145"><div data-bbox="1444 367 1512 430">3</div></div>
<div data-bbox="114 1145 779 1520"><p>Step 1 Attach L/R posts "B" & "C" to headboard "A" by using Allen key (HW3) to lock with Hex socket bolts (HW1).</p></div>	<div data-bbox="779 1145 1444 1520"><p>Step 2 Attach wood legs "J" with footboard "D". Using Allen key (HW3) to lock with Hex socket bolts (HW1).</p></div>	<div data-bbox="1444 1145 2119 1520"><p>Step 3 Attach wood bar "K" to the 2 rails "H" & "I". Using Allen key (HW3) to lock with Hex socket bolts (HW2). Lock the both side rails (H & I) (front & rear of rail) tight and alignment with metal plate (HW6) by using 8x screws (HW5)</p></div>

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

<div data-bbox="114 368 181 429">4</div> 	<div data-bbox="781 368 848 429">5</div> <div data-bbox="943 416 1335 512">Important: For correct assembly please ensure the double hooks are latched properly.</div> 	<div data-bbox="1447 368 1514 429">6</div> <div data-bbox="1563 408 1991 528">Important: Make sure the SCREW NUT on wood slat (G) is FACING UP when doing assembly with support leg (E)</div> 
<p>Step 4 Attach support legs "F" to wood bar "K". Using Allen key (HW3) to lock with Hex socket bolts (HW2).</p>	<p>Step 5 Attach 2 rails to the L/R posts & the footboard assembled with legs.</p>	<p>Step 6 Attach 2 support legs (E) to each slat (G). Lock the slats tight with wood bar (both inside of rails) by using 8x screws (HW4). Assembly is now complete.</p>