NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

 * This item should be assembled on a soft surface to prevent scratching the finish during
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present.
- Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.

CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Top panel		1X
В	Support panel left		1X
С	Support panel right		1X
D	Side panel		2X
Е	Front/back panel		2X
F	Base panel		1X
G	Lifter Left	I	1X
Н	Lifter Right	I	2X
I	Bar front		1X
J	Bar back		1X
K	Spring		2X



Model# FOX2234A

Product Dimensions: 47.2"W x 23.6"D x 13.4"H

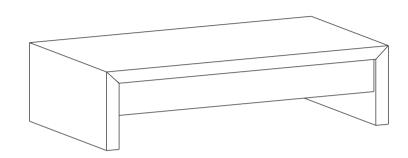

↑WARNING ↑

Weight Capacity: 55 lbs.


Warning:Do not stand on Table.
Warning:Do not over torque bolts.


PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Cambolt	\{\}	30X
HW2	Camlock		30X
HW3	Dowel		8X
HW4	Fix hook left	62	1X
HW5	Fix hook right	8	1X
HW6	Bolt M6 x 20 mm	(i) MIMIMA	4X
HW7	Bolt M6 x 12 mm	(a)	20X
HW8	Metal washer		2X
HW9	Pin		4X
HW10	Allen Key		1X

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.


 * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

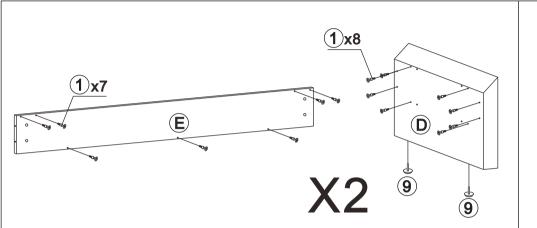

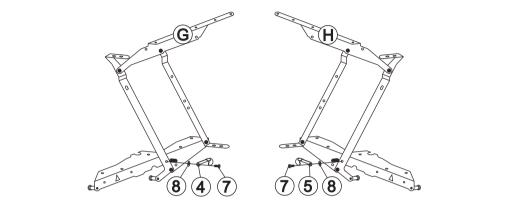


STEP1: Insert HW(1) in pre-drilled holes of part(D),(E). Attach HW(9) at the end of part (D), as picture.


STEP2: Attach HW(4),HW(8) to part(G) using HW(7), Attach HW(5),HW(8) to part(H) using HW(7).

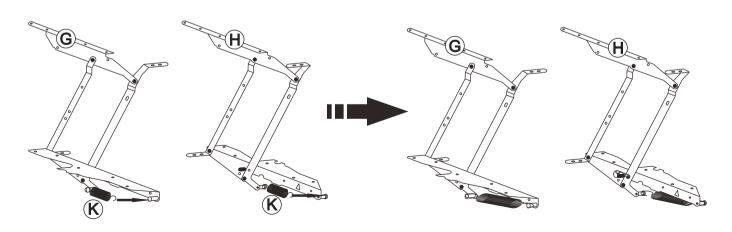


STEP3: Attach part(\mathbf{K}) to (\mathbf{G}),(\mathbf{H}), as picture.




STEP4: Insert HW③ in pre-drilled holes of part **B**, **C**.

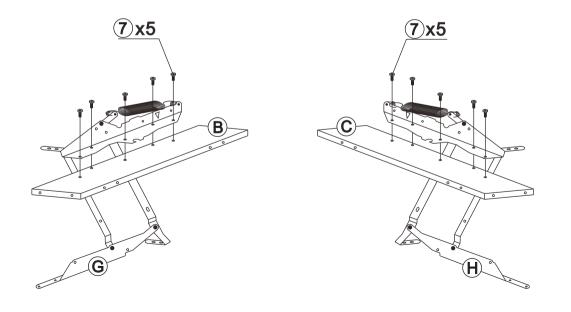


STEP5: Attach part B to G using Hw7, Attach part C to H using HW7.

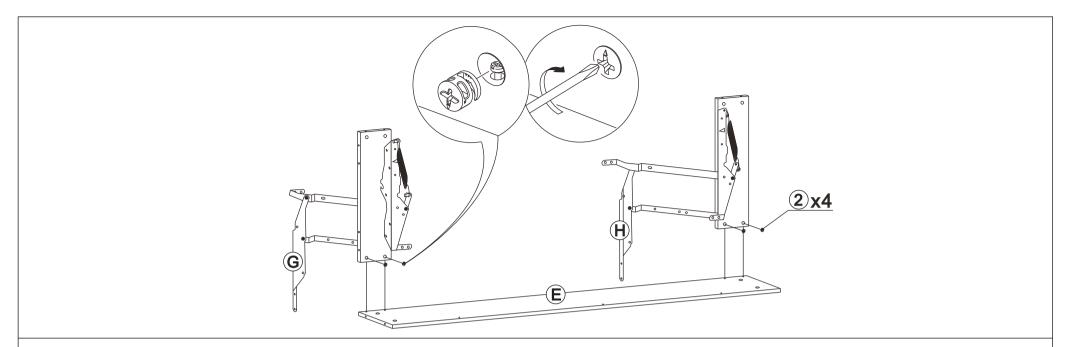


STEP6: Put HW② in pre-drilled holes of part®, ©. Attach part® to ®, ©, and tighten HW②.

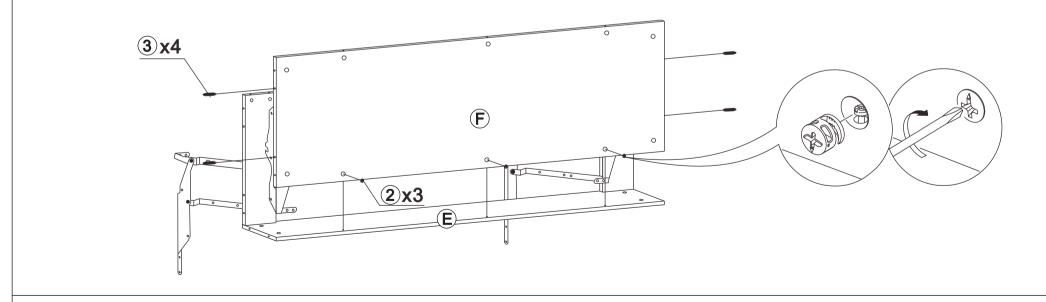


STEP7: Put HW② in pre-drilled holes of part⑤, Attach part⑥ to⑥, and tighten Hw②, Insert HW③ in pre-drilled holes of part⑥.

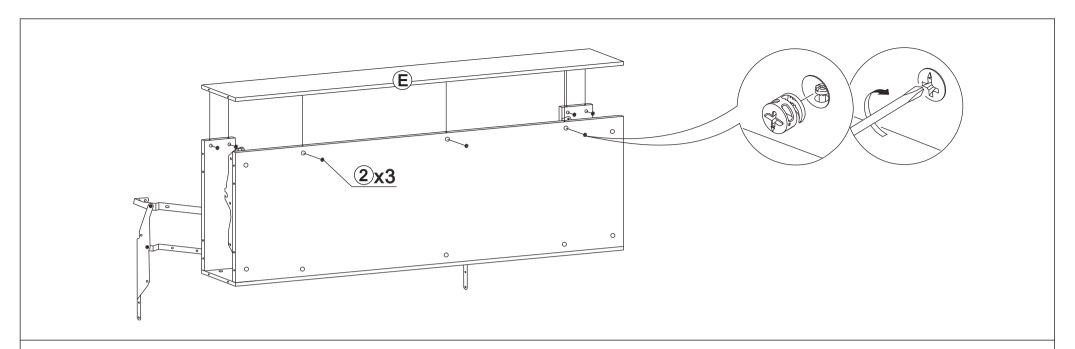


STEP8: Put HW② in pre-drilled holes of part⑤, Attach part⑥ to⑥, and tighten HW②.

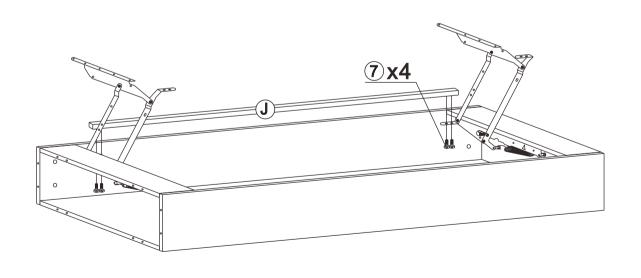


STEP9: Attach part ① to ⑥, ④ using HW⑦.

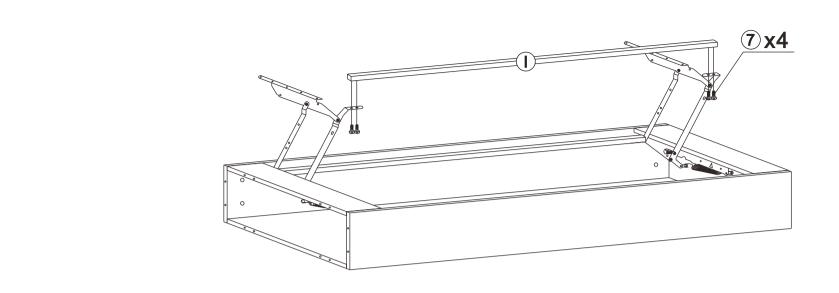


STEP10: Attach part ① to ⑤, ④ using HW ⑦.

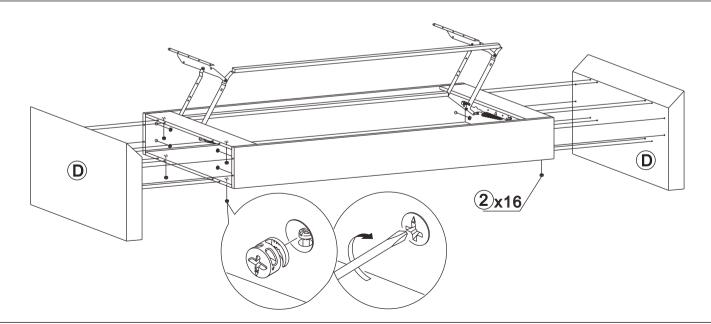


STEP11: Put HW② in pre-drilled holes of part ③, ②, ⑤, ⑥, ⑥, as picture, Attach part ① to the unit, and tighten HW②.

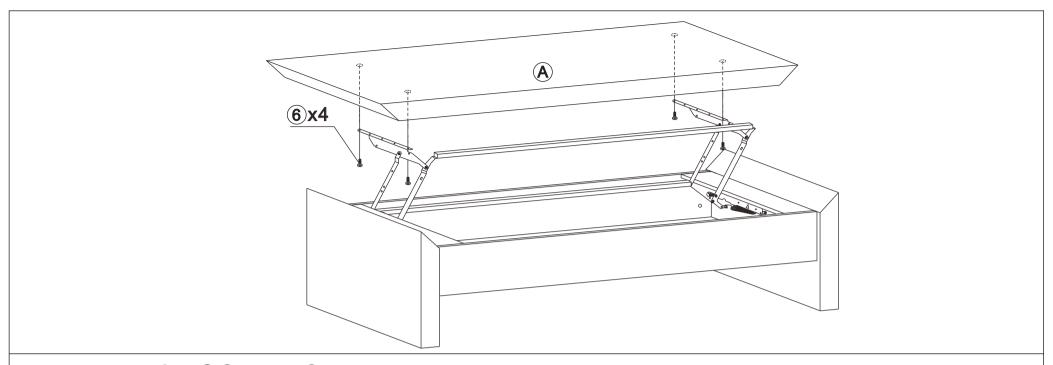

STEP12: Attach part **(A)** to **(G)**, **(H)** using HW **(6)**.

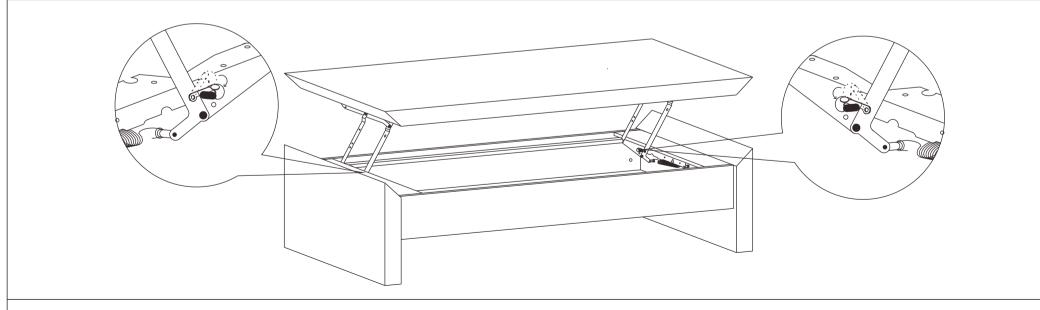

 $\textbf{STEP13:} \ \mathsf{Make} \ \mathsf{HW} \textcircled{4}, \mathsf{HW} \textcircled{5} \ \mathsf{to} \ \mathsf{be} \ \mathsf{locked}.$

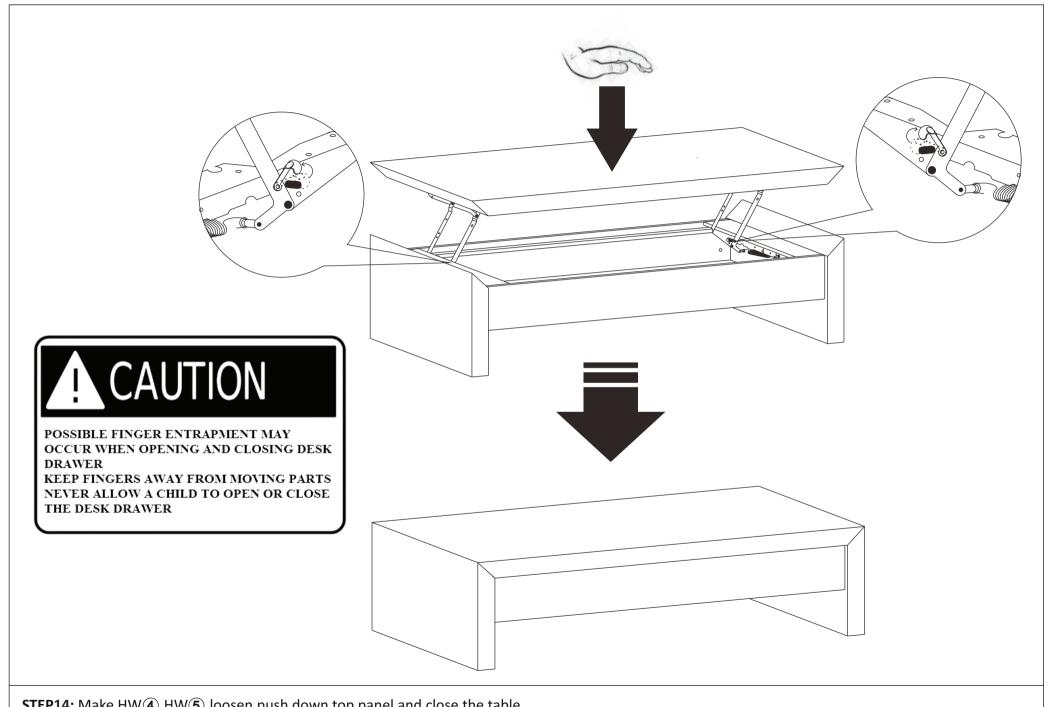

STEP14: Make HW(4),HW(5) loosen,push down top panel and close the table.