

CARE AND MAINTENANCE

*Remove surface stains in time. For small stains, gently spot clean the surface with a damp, clean cloth. For spills, gently soak up any liquid from the surface using a dry absorbent cloth. Be careful not to add too much pressure, as not to push the moisture further into the leather.

*When cleaning stainless steel surface, it is necessary to be careful not to scratch the surface. Avoid the use of bleaching ingredients and abrasive detergents, steel wire balls, grinding tools, etc. Rinse the surface with clean water at the end of the washing to remove the washing liquid.

*Test the cleaning method on a hidden area before using them over the entire area. If the upholstery fabric requires more extensive cleaning, we recommend calling in professional upholstery cleaners.

*Furniture should not come into contact with direct sunlight or sources of heat as the color of the surface may fade.

NOTICE








*Please make sure that you have all parts indicated before you begin assembly of this item.

*This item should be assembled on a soft surface to prevent scratching the finished product during assembly.

*This item may require periodic tightening.

*Do not tighten bolts until completely assembled.

Part List and Hardware List


Piece	Description	Picture	Quantity
A	SEAT		1X
B	FRONT LEG-1		1X
C	FRONT LEG-2		1X
D	BACK LEG-1		1X
E	BACK LEG-2		1X
HW1	SOCKET SCREW M6x1x25mm		12X
HW2	ALLEN WRENCH		1X

SAFAVIEH COUTURE

Model# KNT7069

Product Dimensions: 27.36"W*28.35"D*31.89"H

Weight Capacity: 275 LBS

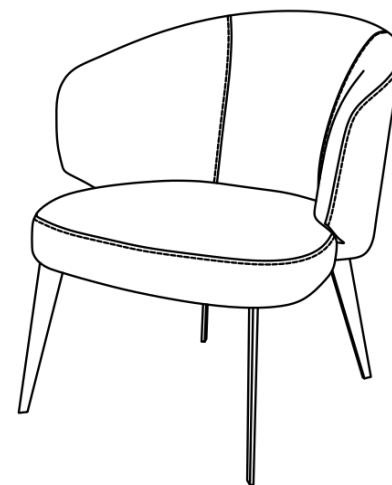

WARNING: DO NOT STAND ON THE CHAIR !


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly(included): Allen Wrench.

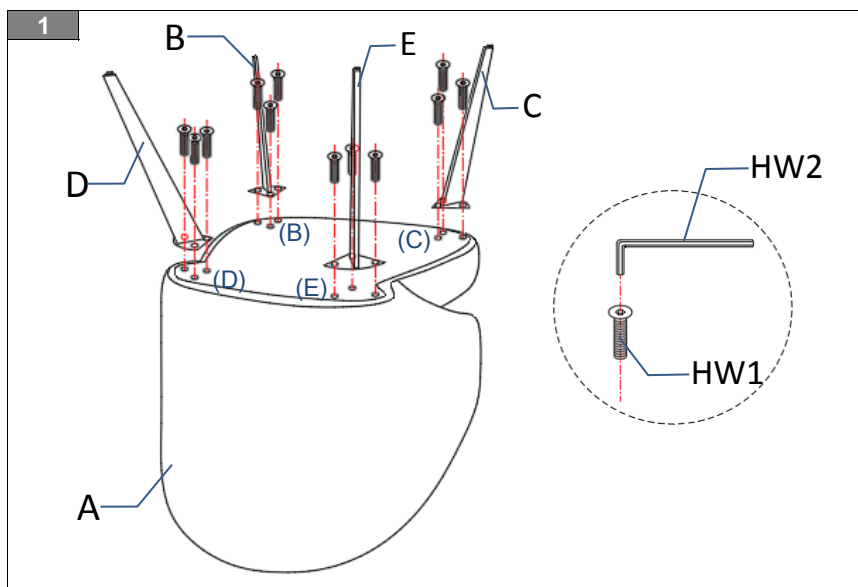

Step 1

Turn the Seat (A) over right-side down carefully. Screw the Leg B(C/D/E) to the embedded nut B(C/D/E) on the seat(A) using the Socket Screw (HW1), with the Allen Wrench (HW2) provided. Make sure all screws are fully tightened.

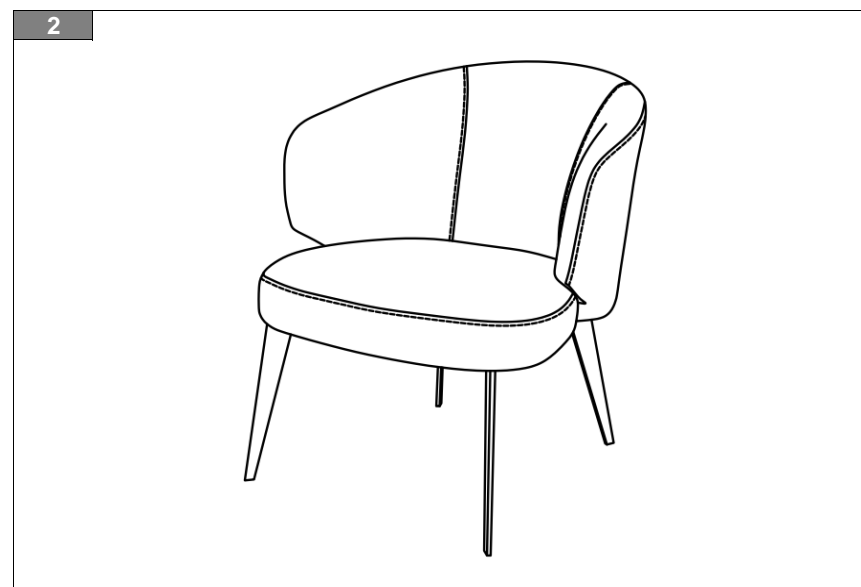

Step 2

Turn the chair over right-side up. Make sure the chair is secure.