


# SAFAVIEH LIGHTING

## Assembly Instruction

**CAUTION:** Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

**ITEM#:LIT4488A**

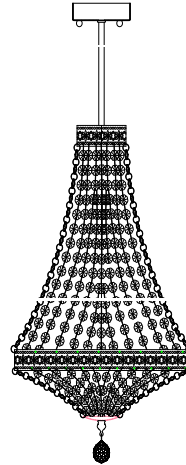

## Care and Cleaning




To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent)to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Wire Nut		3X	F	Shade		1X
B	Mounting Plate		1X	G	Socket Assembly		1X
C	Mounting Screw		2X	H	Socket Ring		1X
D	Canopy Assembly		1X	I	Bulb		1X
E	Canopy Nut		2X				


# Installation

## Step 1

Unpack all parts from cartons carefully.


Insert the top threaded portion of the Socket Assembly(G) into the center hole of the upper spider of the Shade(F). Insert the socket through the center hole of the lower spider of the Shade(F) and fix it by turning the Socket Ring(H) clockwise.

Insert the fixture wires through the tube under the Canopy Assembly(D), fix the canopy by turning the tube clockwise till tight.

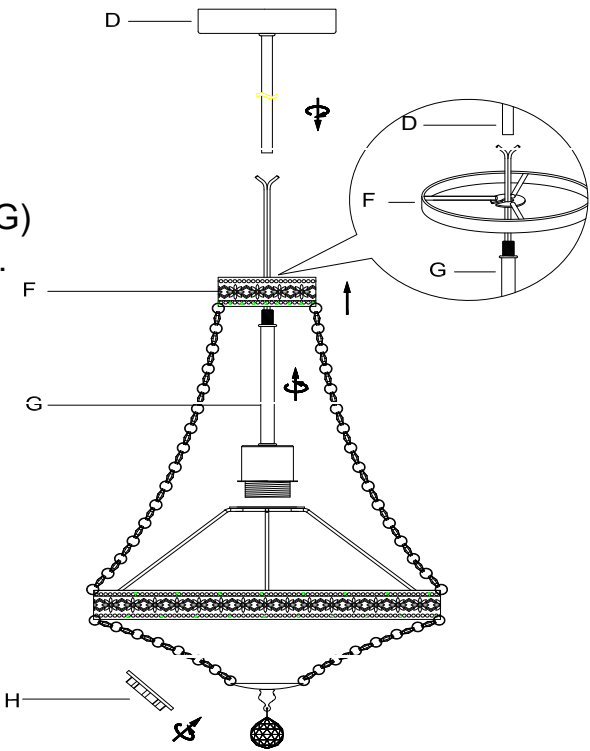


## Step 2

Separate the Mounting Plate(B) from the Canopy Assembly(D) by removing the Canopy Nut(F) anti-clockwise.

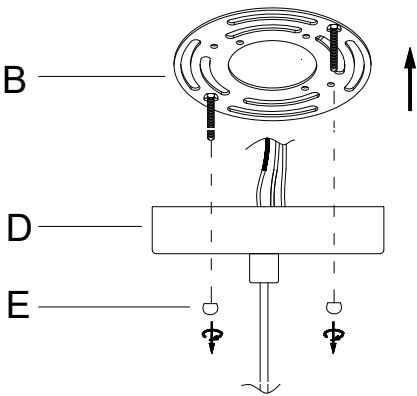

## Step 3 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor



\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)



#### Grounding Instructions:


- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

## Step 4

Fix the Mounting Plate(B) to the junction box with Mounting Screw (C).

Attach the Canopy Assembly(D) to the junction box and fix it by turning the Canopy Nut (E) clockwise.

Insert the bulb (I) into the Socket.

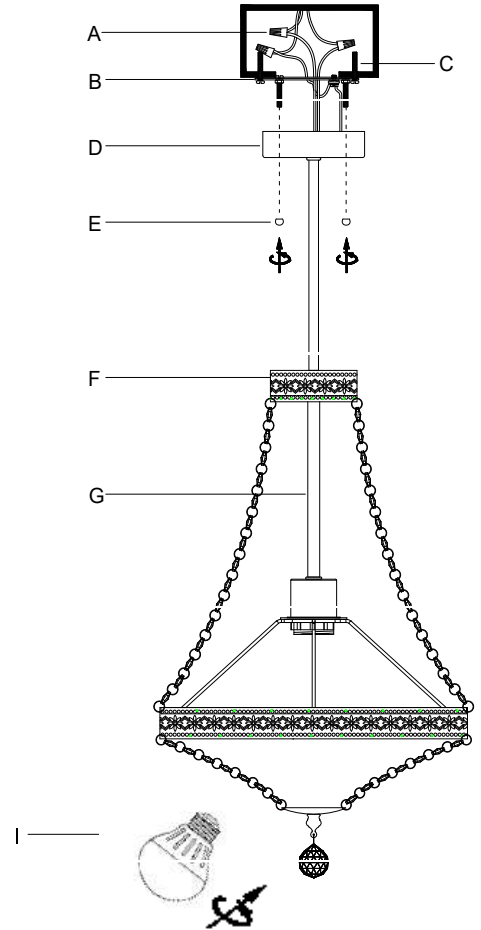

**PLEASE USE TYPE "A" BULB MAX 60-WATT OR CFL MAX 13 WATT OR LED BULB MAX 9-WATT THERE IS 1\*9W LED BULB IN THE BOX.**

## Step 4

Consult a qualified electrician to ensure correct branch circuit conductor

ENJOY YOUR LAMP