

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

















PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Allen key (included), Phillips screwdriver (not included)

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List










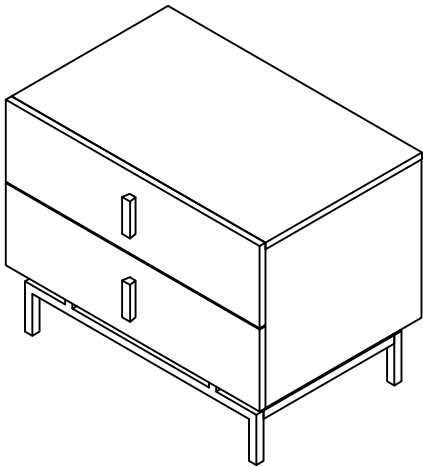

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT PANEL		1X
C	RIGHT PANEL		1X
D	BASE ASSEMBLY		1X
E	BACK PANEL		1X
F	LEG FRAME		2X
G	LEG STRETCHER		2X
H	DRAWER FRONT		2X
I	DRAWER LEFT		2X
J	DRAWER RIGHT		2X
K	DRAWER BACK		2X
L	DRAWER BASE		2X
HW1	BOLT 6 x 1 x 40 MM		10X
HW2	BOLT 6 x 1 x 15 MM		4X
HW3	ROUND HEAD SCREW 3 x 1 x 13 MM		3X
HW4	FLAT HEAD SCREW 3 x 1 x 32 MM		16X



Model# FOX4225
Product Dimensions: 27 1/2"W x 17 5/8"D x 21 5/8"H






WARNING
WEIGHT CAPACITY: TOP: 50 LBS; DRAWER: 15 LBS
WARNING: DO NOT STAND ON THE CABINET
WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW5	FLAT HEAD SCREW 3 x 1 x 19 MM		8X
HW6	FLAT HEAD SCREW 3 x 1 x 16 MM		6X
HW7	CAMBOLT		6X
HW8	CAMLOCK		6X
HW9	MACHINE SCREW 4 x 0.7 x 25 MM		4X
HW10	HANDLE		2X
HW11	DOWEL		8X
HW12	WEDGE		6X
HW13	SPRING WASHER		14X
HW14	FLAT WASHER		10X
HW15	ALLEN KEY		1X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Allen key (included), Phillips screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

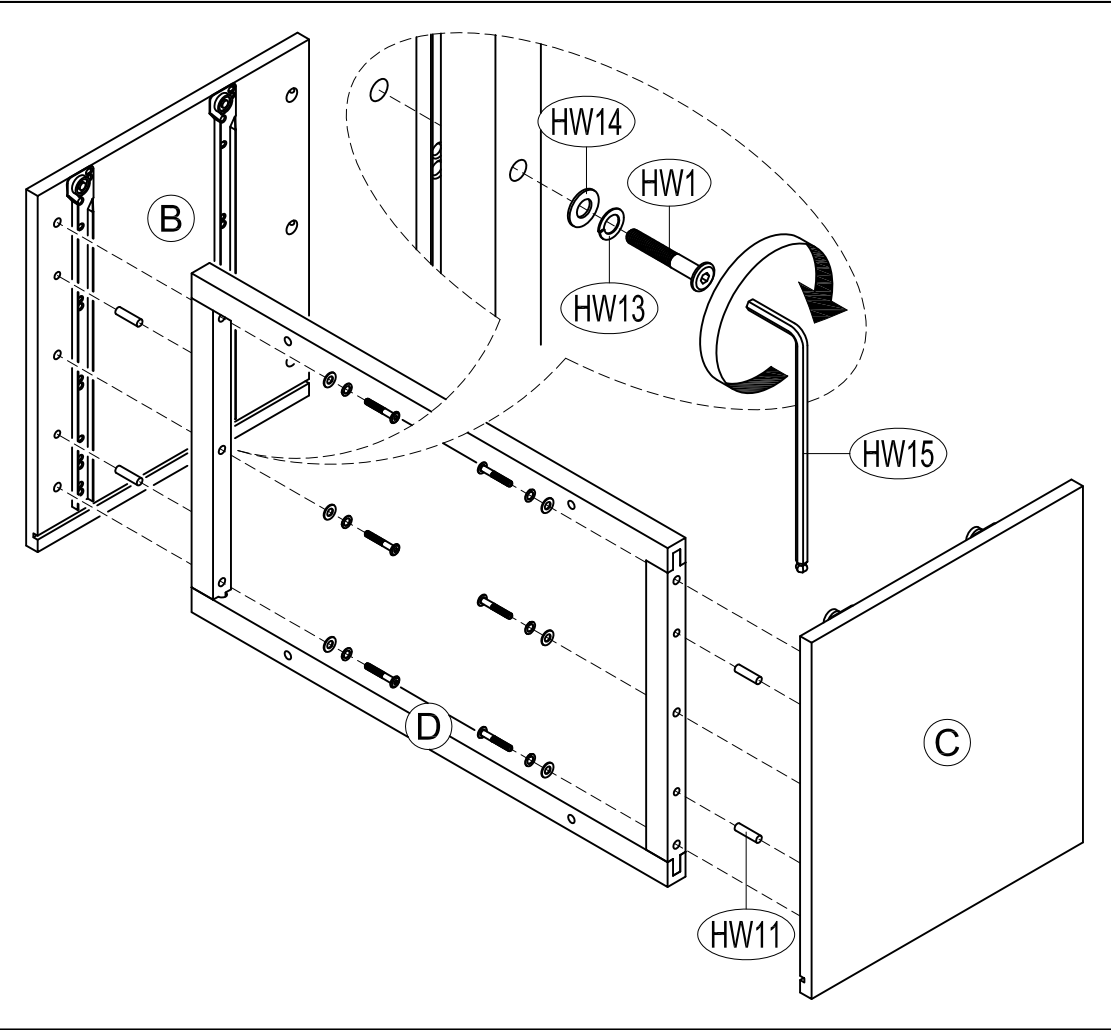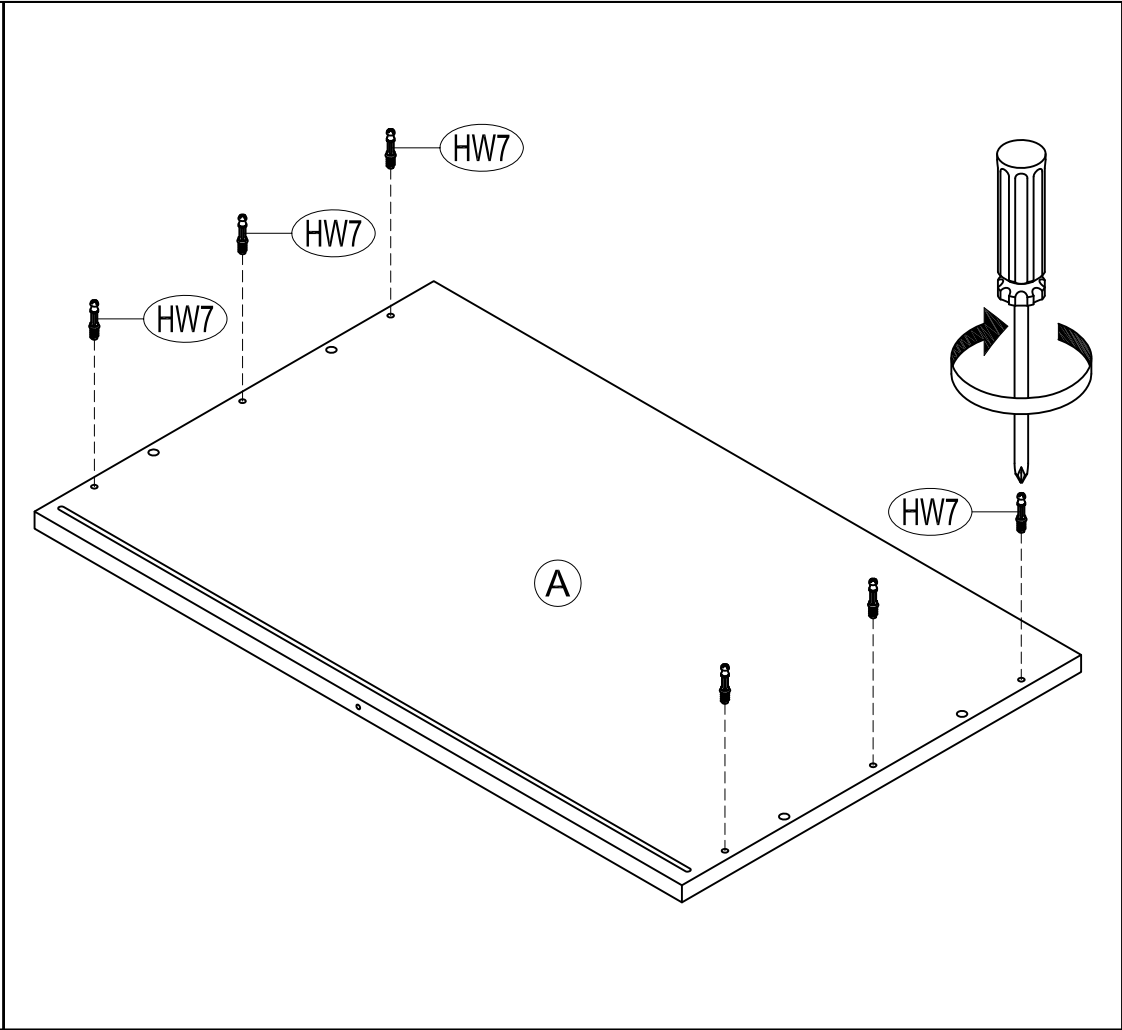
	
<p>STEP 1 ATTACH LEFT AND RIGHT PANELS (B AND C) TO BASE ASSEMBLY (D) USING BOLTS 40 MM (HW1), SPRING AND FLAT WASHERS (HW13 AND HW14) AND DOWELS (HW11). TIGHTEN BOLTS USING ALLEN KEY (HW15).</p>	<p>STEP 2 ATTACH CAMBOLTS (HW7) TO TOP PANEL (A).</p>

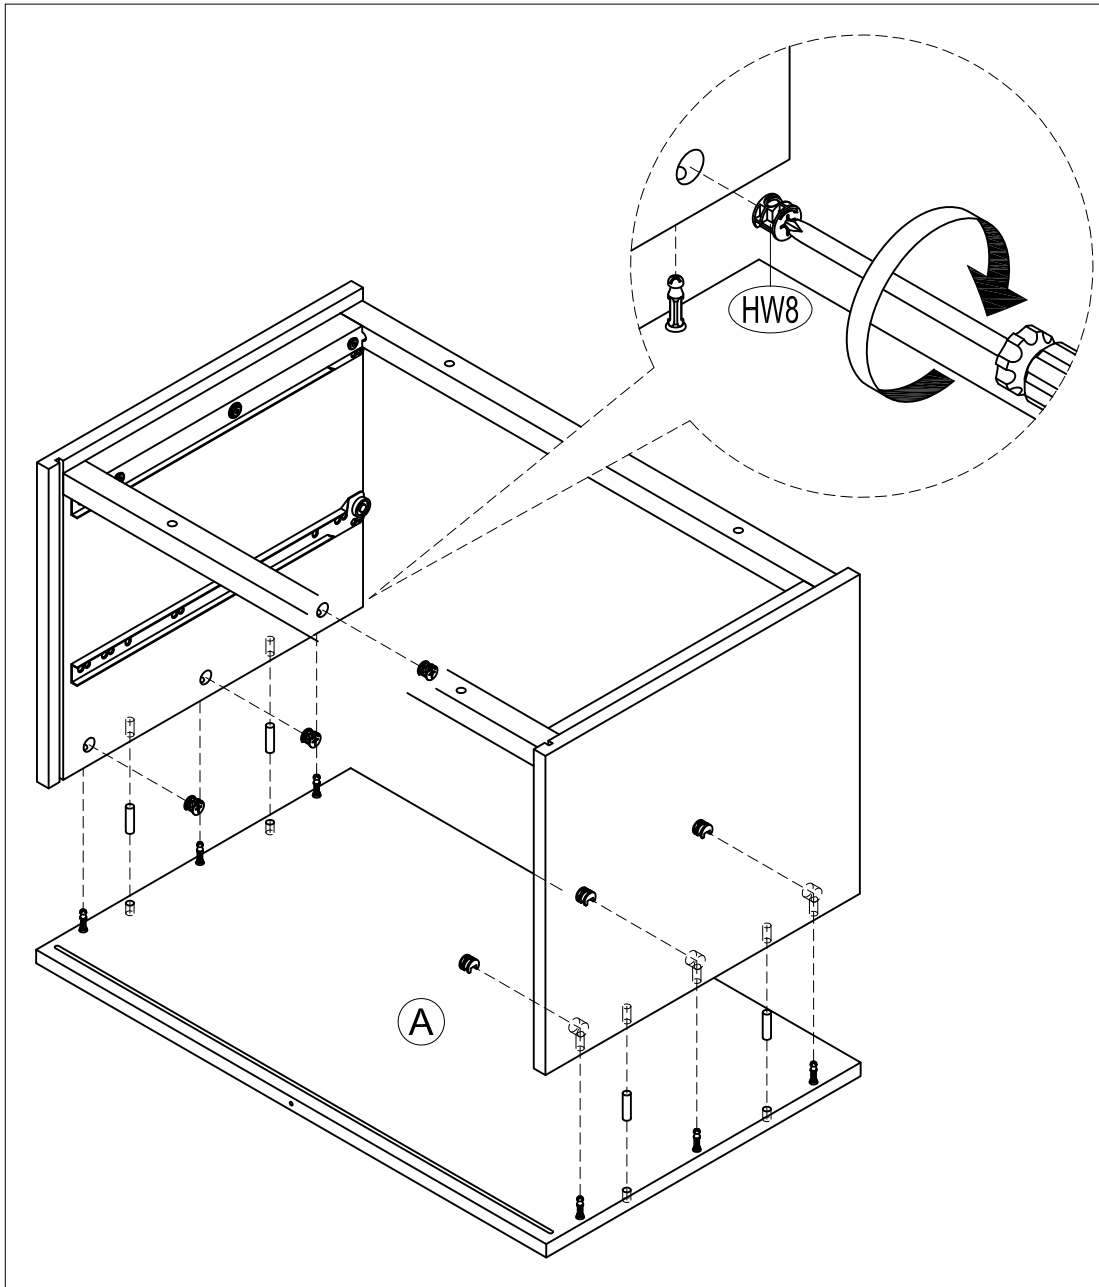


STEP 3 ATTACH UNIT TO TOP PANEL (A) USING CAM LOCKS (HW8).

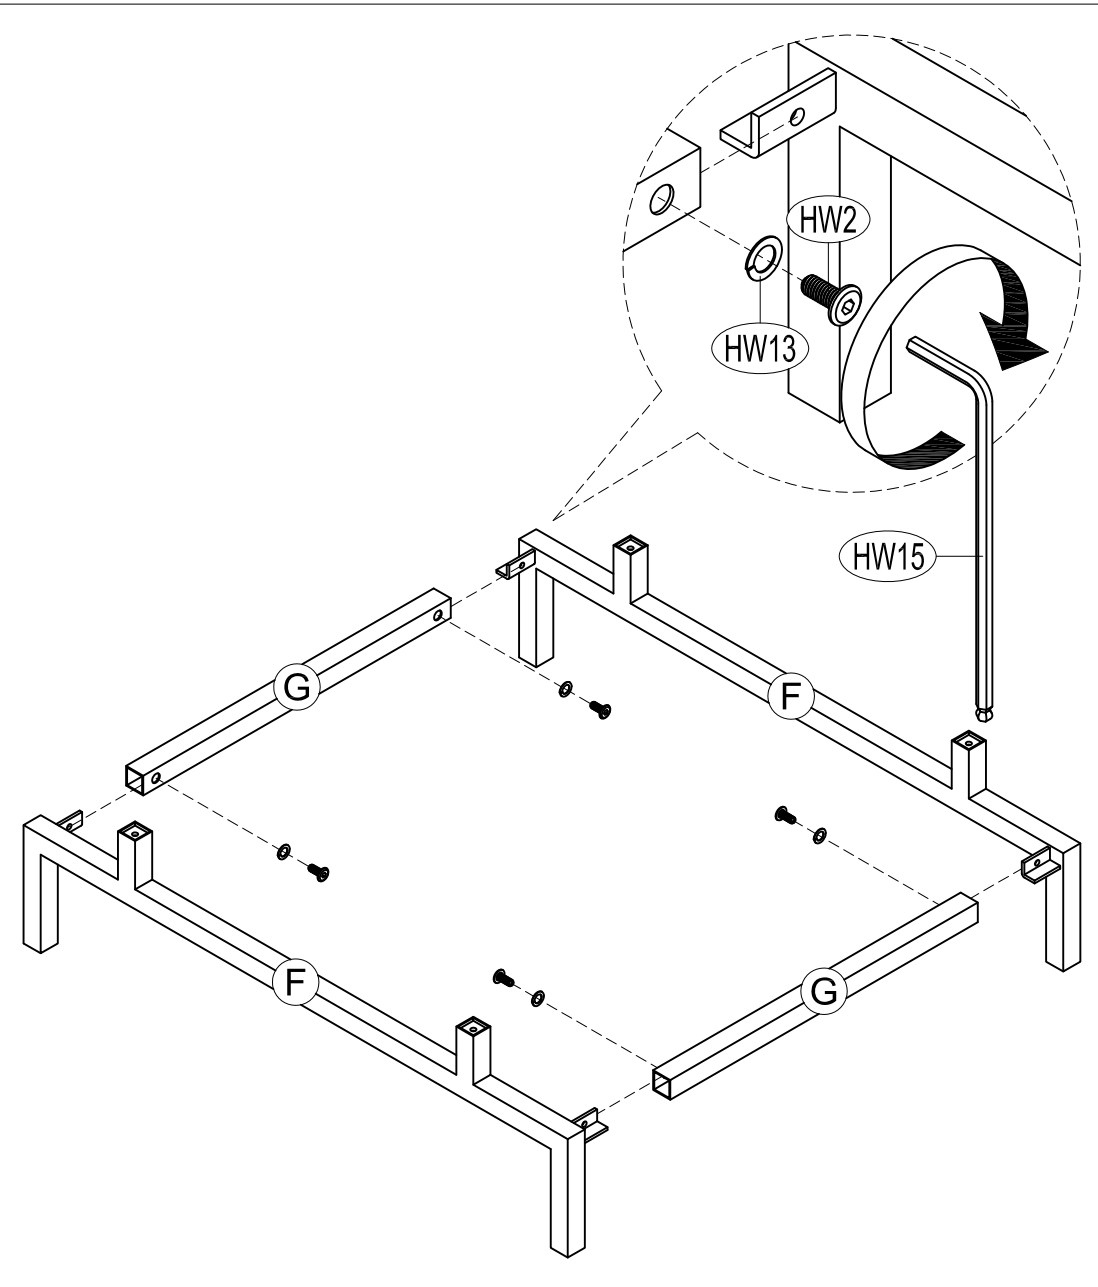


STEP 4 ATTACH LEG STRETCHERS (G) TO LEG FRAMES (F) USING BOLTS 15 MM (HW2) AND SPRING WASHERS (HW13). TIGHTEN BOLTS ONLY HALFWAY THIS TIME USING ALLEN KEY (HW15).

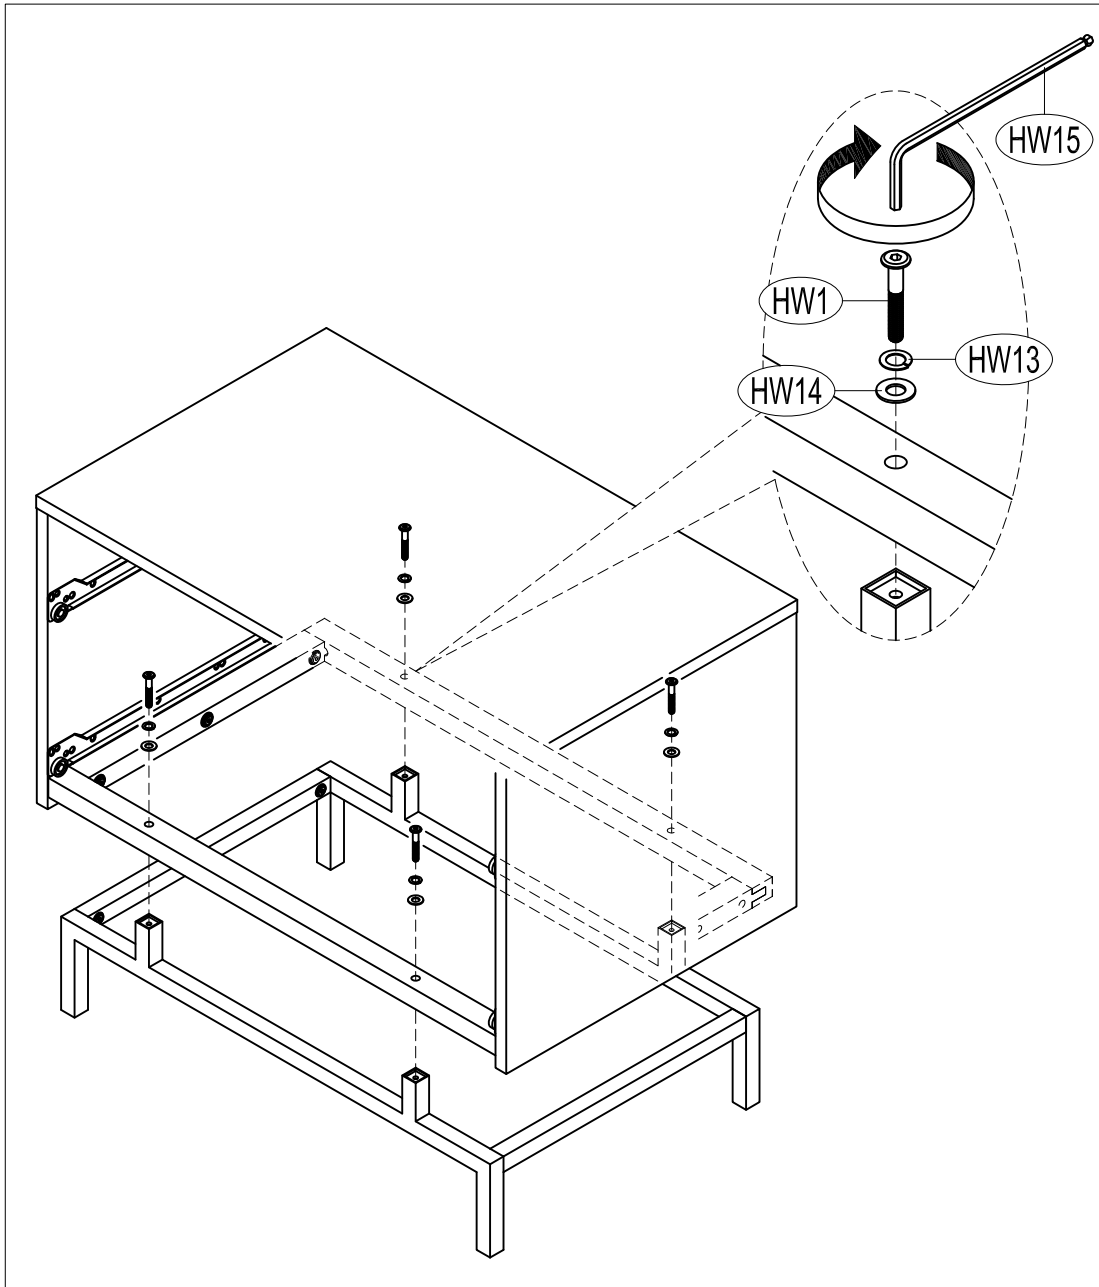


STEP 5 ATTACH UNIT FROM STEP 3 TO UNIT FROM STEP 4 USING BOLTS 40 MM (HW1), SPRING AND FLAT WASHERS (HW13 AND HW14). TIGHTEN BOLTS USING ALLEN KEY (HW15).

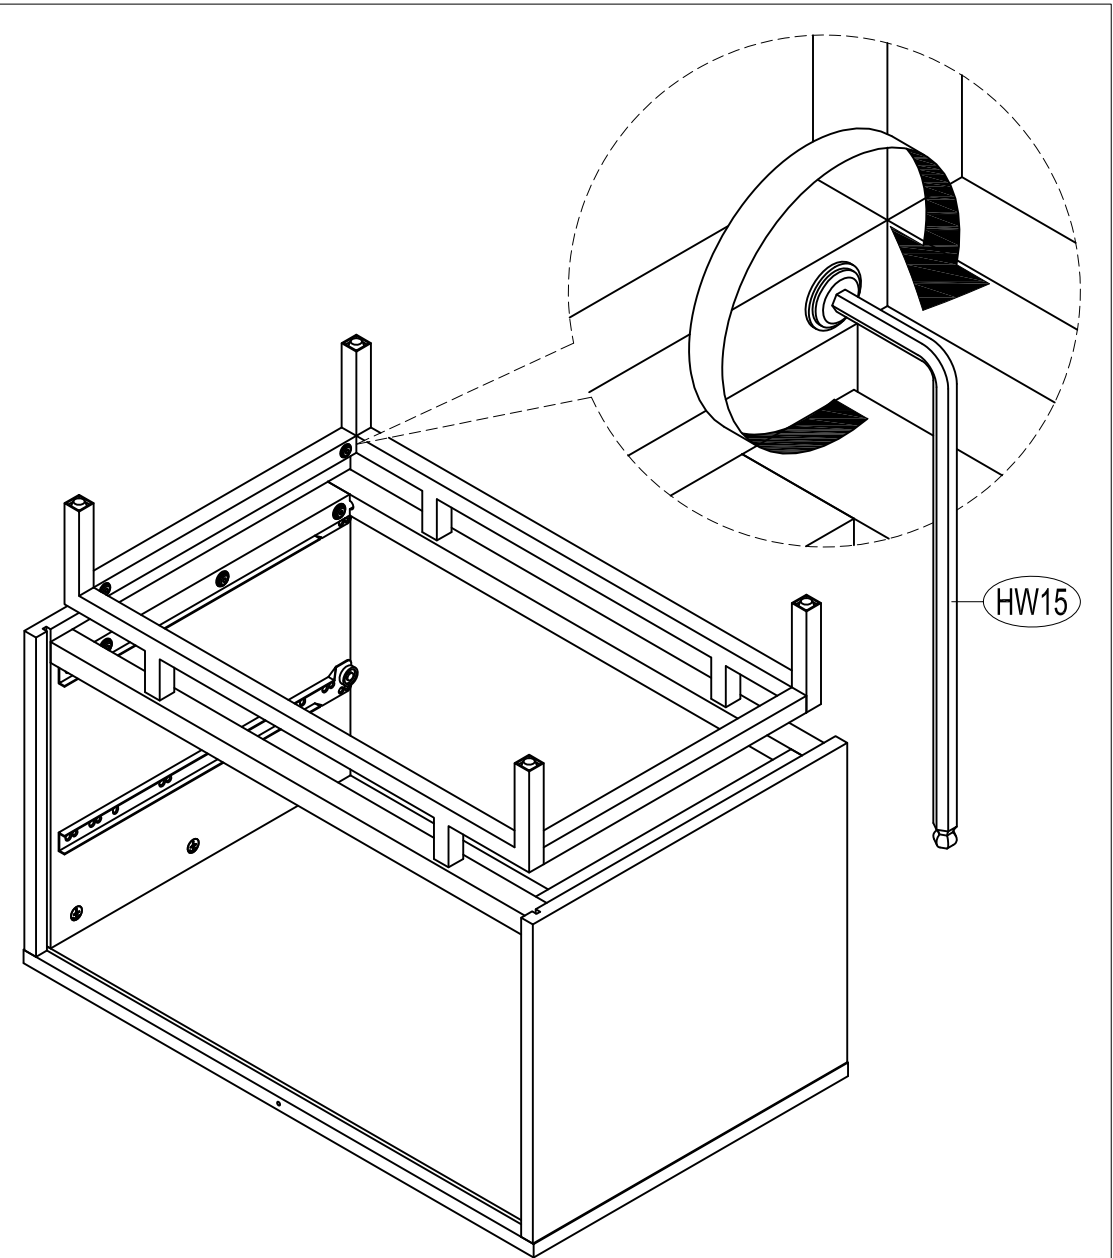


STEP 6 TIGHTEN BOLTS FROM STEP 4 USING ALLEN KEY (HW15).

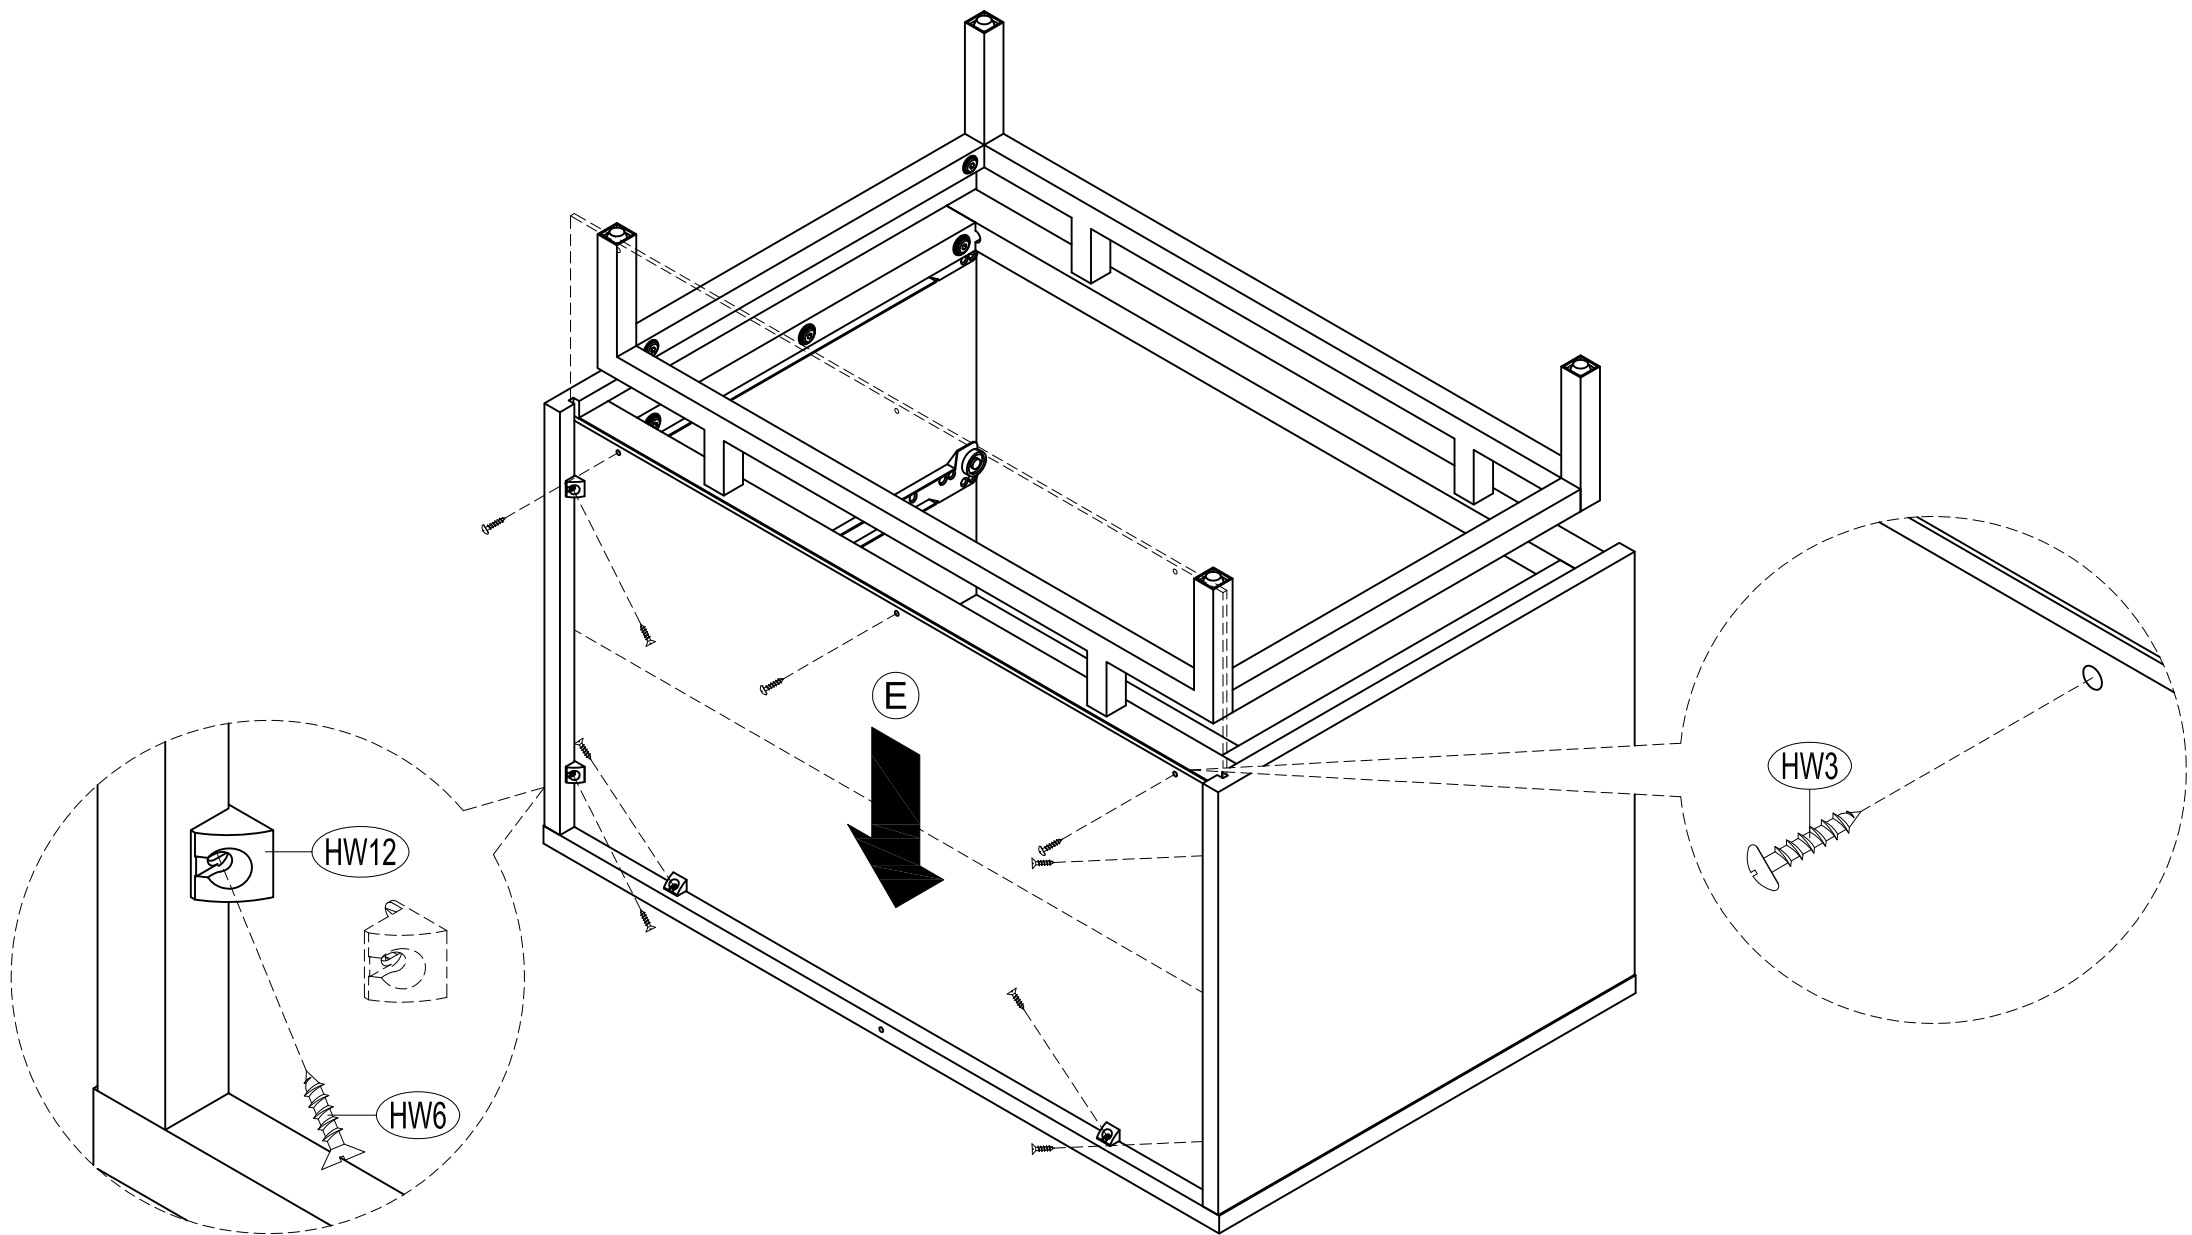


STEP 7 SLIDE BACK PANEL (E) INTO THE GROOVE OF UNIT. LOCK BACK PANEL (E) POSITION USING ROUND HEAD SCREWS 13 MM (HW3), FLAT HEAD SCREWS 16 MM (HW6) AND WEDGES (HW12).

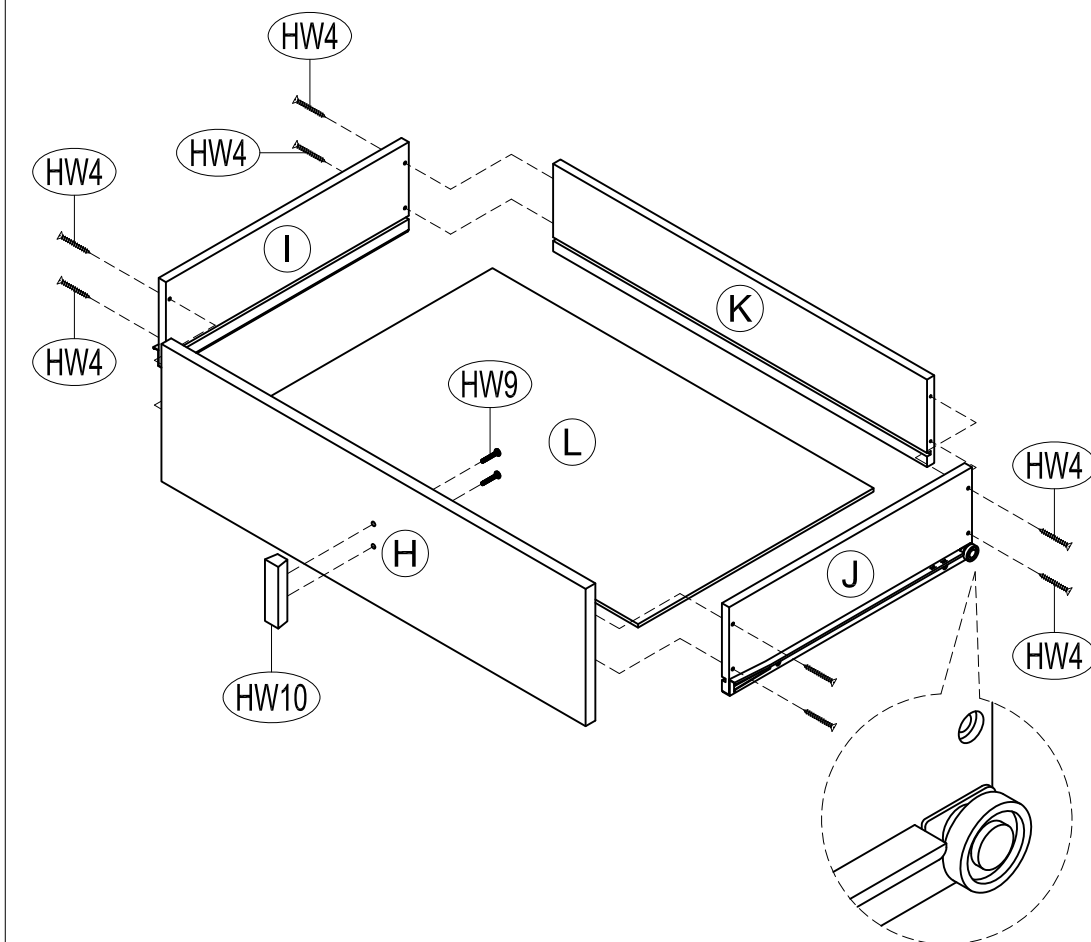


STEP 8 ATTACH HANDLE (HW10) TO DRAWER FRONT (H) USING HANDLE BOLTS (HW9). ATTACH DRAWER LEFT AND RIGHT (I AND J) TO DRAWER BACK (K) USING 1 1/4" FLAT HEAD SCREWS (HW4). SLIDE DRAWER BASE (L) INTO THE GROOVE. ATTACH DRAWER FRONT (H) TO DRAWER LEFT AND RIGHT (I AND J) USING 1 1/4" FLAT HEAD SCREWS (HW4).

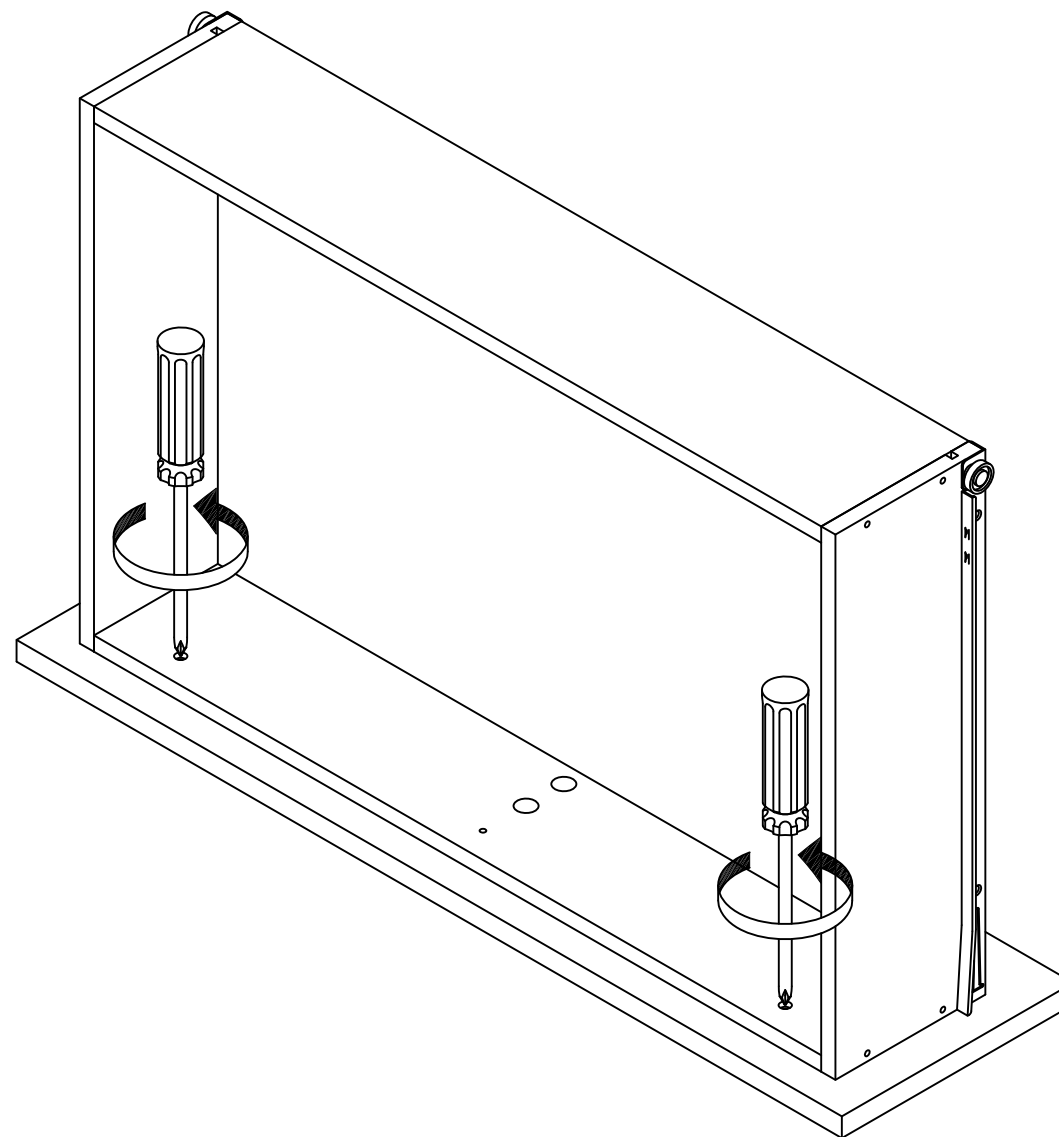


STEP 9 LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONT (H).

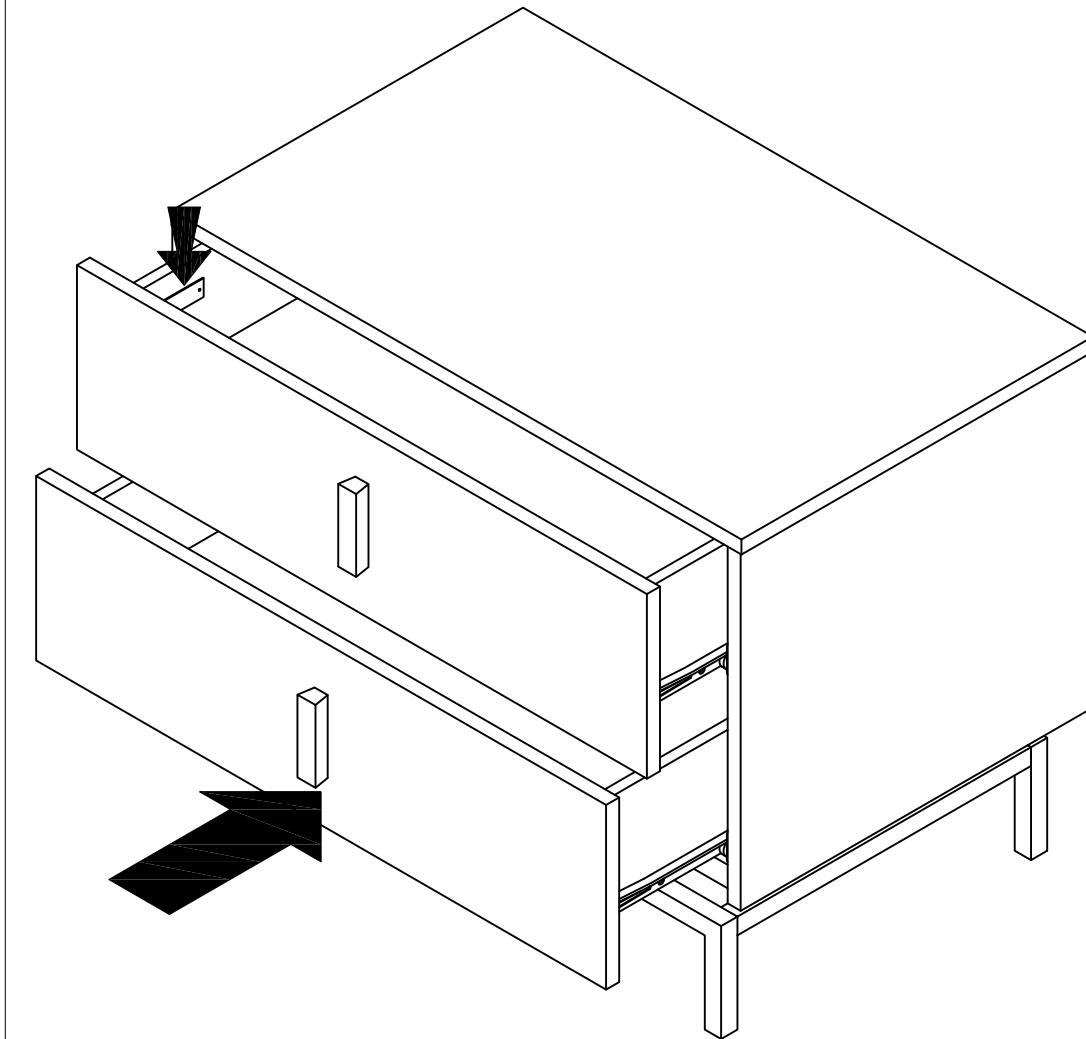


STEP 10 INSERT THE DRAWERS INTO THE UNIT.

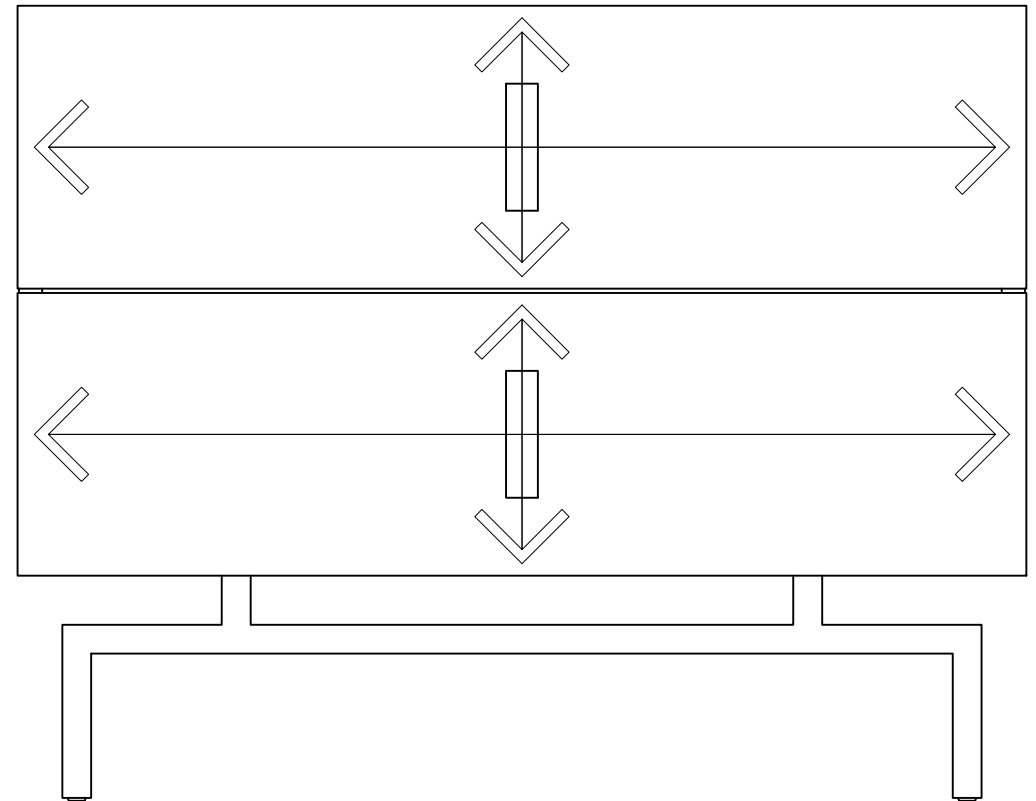



STEP 11 ADJUST THE DRAWER FRONTS LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.

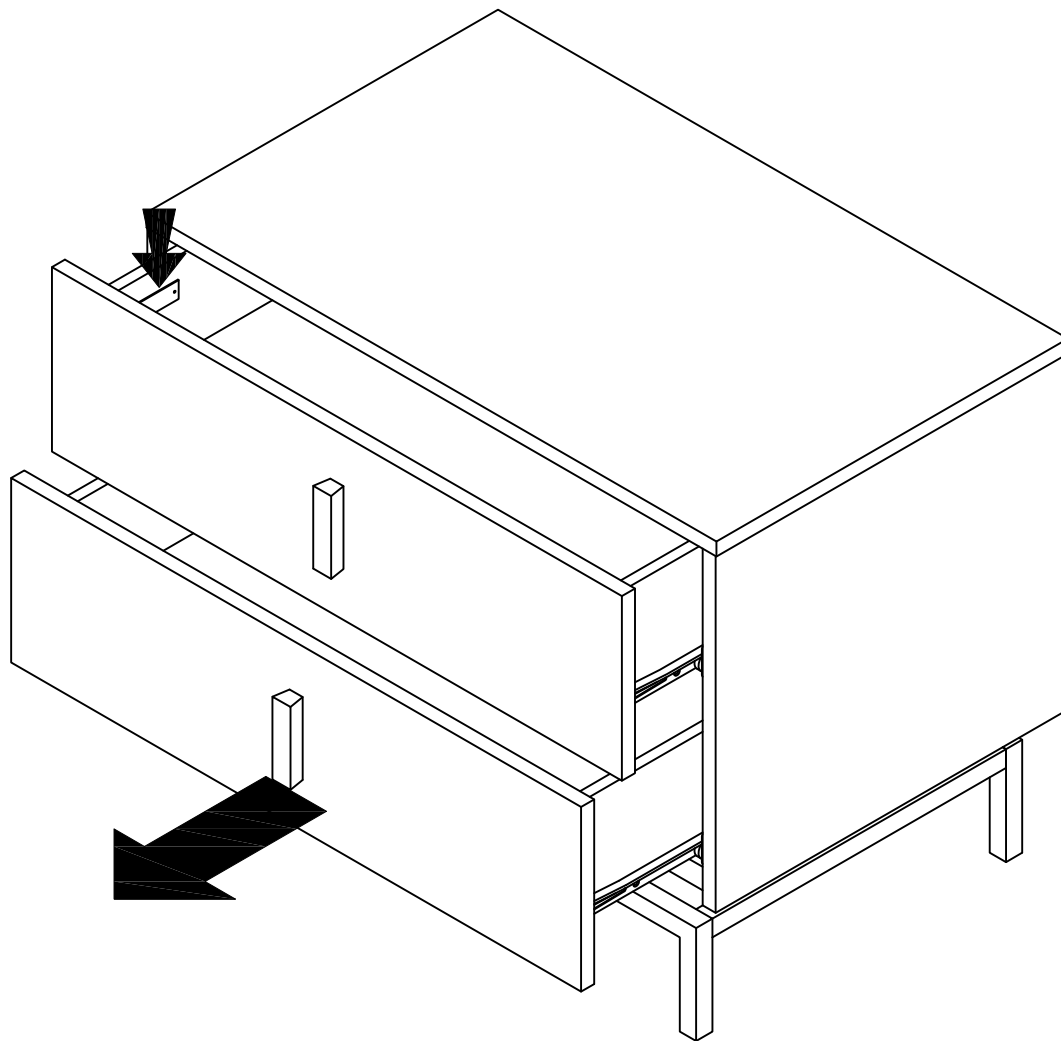

STEP 12 PULL OUT THE DRAWER OPEN SLOWLY.

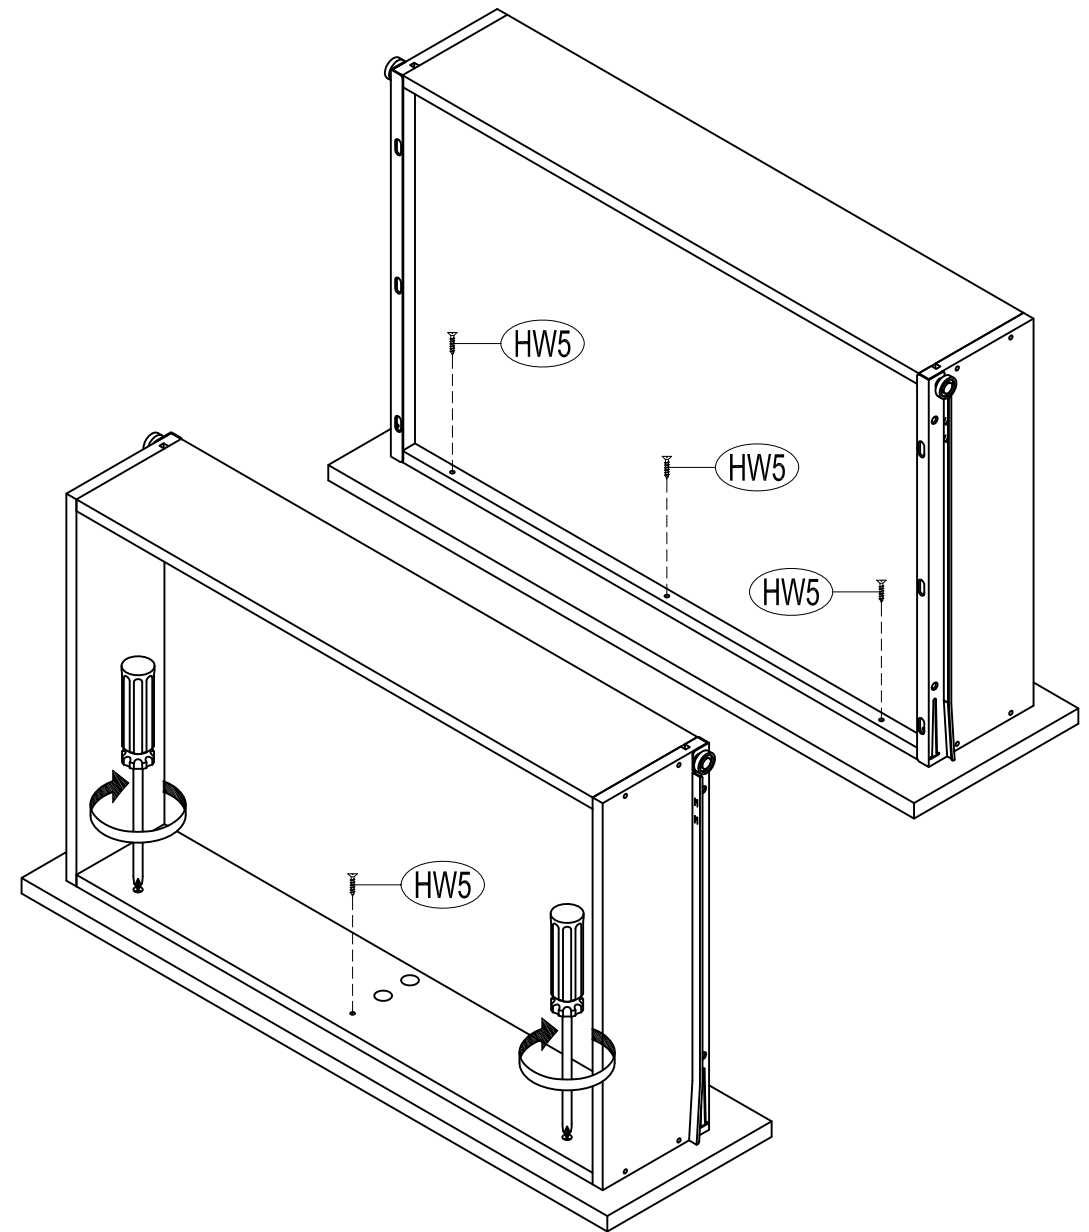

STEP 13 MAKE SURE THE FRONT PANELS DOES NOT MOVE; RE-TIGHTEN THE SCREWS FROM STEP 9 AND LOCK THE DRAWER FRONT PANELS INTO POSITION WITH FLAT HEAD SCREWS 19 MM (HW5).

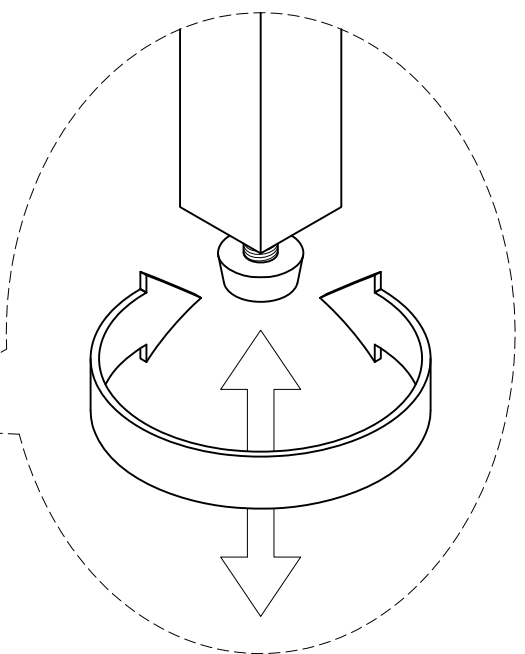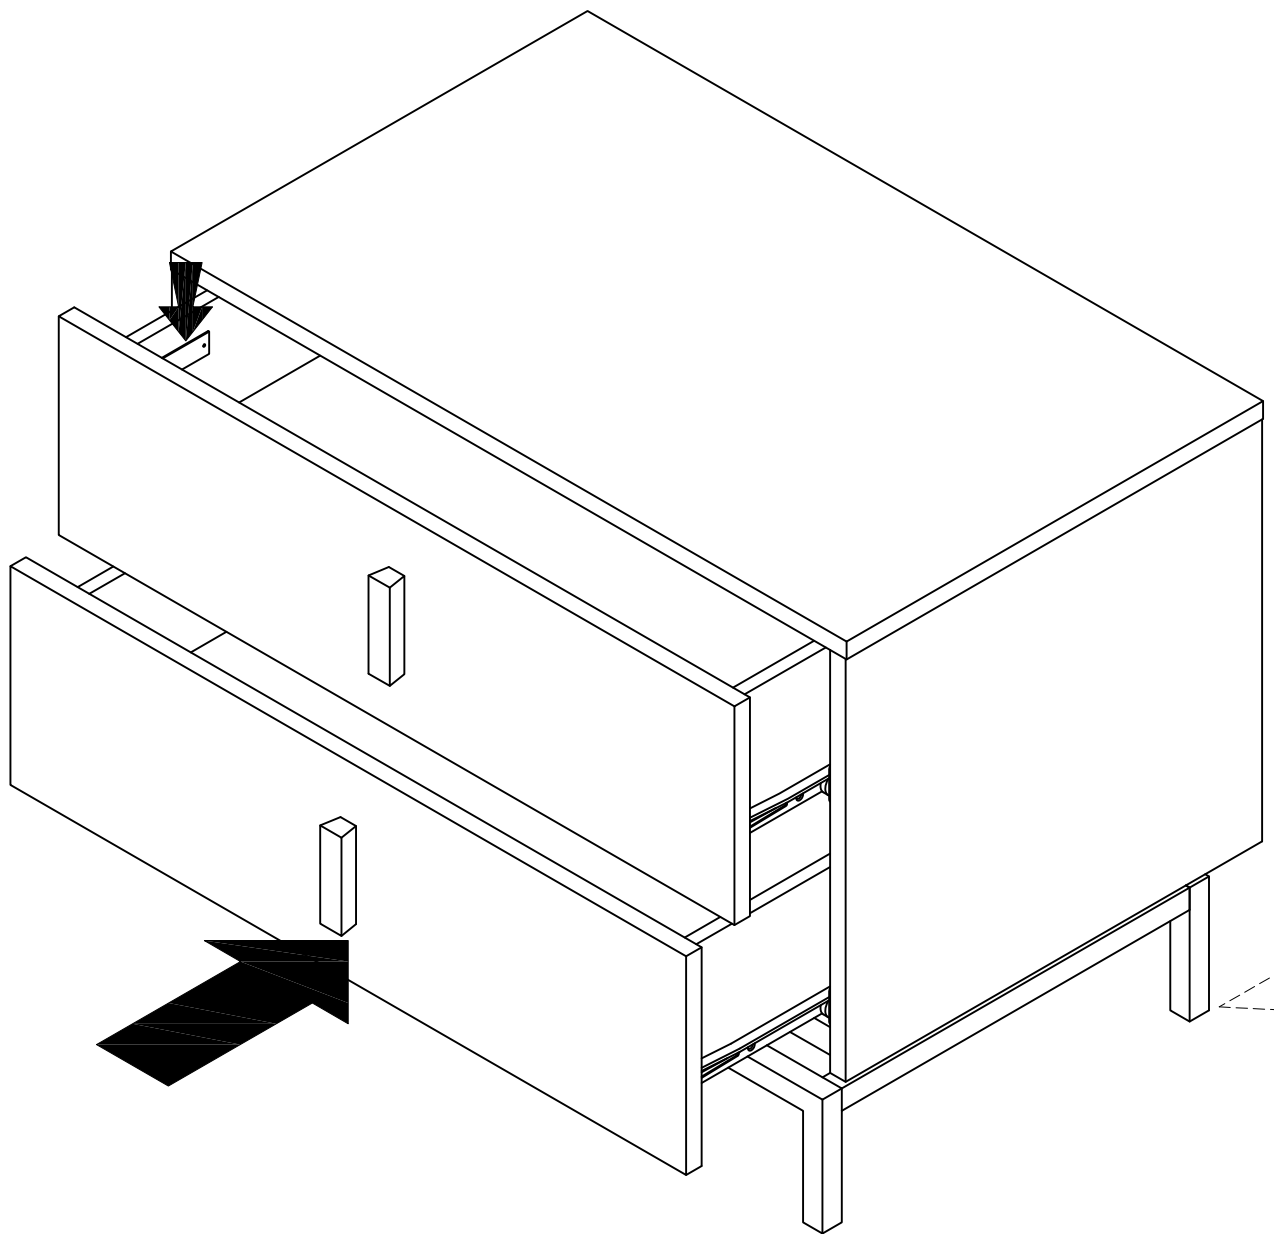

STEP 14 INSERT THE DRAWER INTO THE UNIT. ADJUST THE ADJUSTER BOLT THAT HAS ALREADY ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.