


















## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening




## Part List and Hardware List

| Piece | Description           | Picture   | Quantity |
|-------|-----------------------|---|----------|
| A     | HEADBOARD             |    | 1X       |
| B     | HEADBOARD LEGS        |    | 2X       |
| C     | FOOTBOARD             |    | 1X       |
| D     | SUPPORT LEGS OF SLATS |    | 6X       |
| E     | SUPPORT LEGS OF RAILS |    | 2X       |
| F     | SLATS                 |    | 3X       |
| G     | L & R RAIL 1          |    | 2X       |
| H     | L & R RAIL 2          |  | 2X       |
| I     | BOLT 8 X 50           |  | 6X       |
| J     | BOLT 8 X 60           |  | 4X       |
| K     | WASHER M8             |  | 10X      |
| L     | RING M8               |  | 10X      |
| M     | ALLEN KEY             |  | 1X       |
| N     | SCREW 6 X 1"          |  | 8X       |
| O     | SCREW 6 X 1 1/2"      |  | 4X       |
| P     | METAL PLATE           |  | 2X       |
| Q     | WRENCH                |  | 1X       |



Model # BED8001-F

Product Dimensions : 58.86"W x 86.61"D x 53.15"H

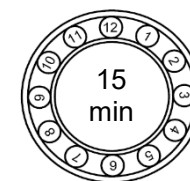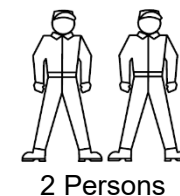

Weight capacity : 550lbs  
WARNING : DO NOT STAND ON THE BED


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated assembly time : 15 minutes.

Tools required for assembly : Wrench (included) & screw driver (not included)

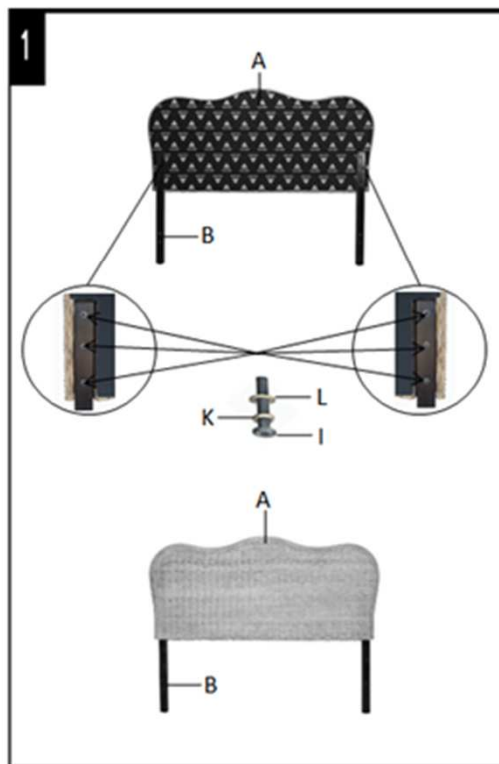


### Step 1

Attach headboard legs "B" to headboard "A" by using Allen key (M) to lock with bolts "I".

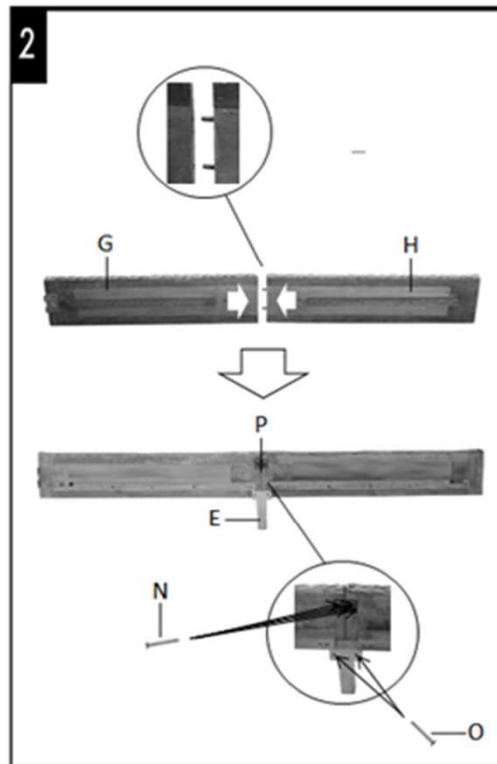

### Step 2

Join 2 parts of side rails.  
Lock the both side rails "G" & "H" (front and rear of rail) tight and alignment with metal plate (P) by using 8x screws (N).  
Attach support legs "E" to side rails and lock by 4x screws (O).

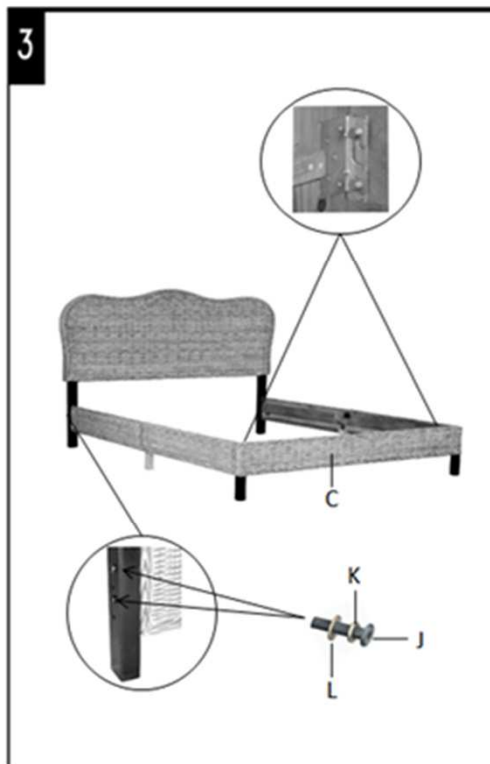

### Step 3

Attach 2 side rails to the headboard legs by using Allen key (M) to lock with bolts "J".  
Attach 2 side rails to the footboard "C".  
Important :  
For correct assembly please ensure the double hooks are latched properly



### Step 4

Attach 2 support legs "D" to each slat "F" and put to its places.