



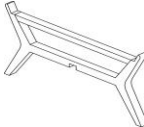





## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

## NOTICE


- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	CEMENT TOP		1X
B	WOODEN LEG		1X
C	WOODEN LEG		1X
H2	WASHER M6x12		1X
H3	WASHER M8x16		2X
H4	BOLT M6x30		1X
H5	BOLT M8x45		2X
H6	ALLEN KEY		1X

Model#VNN1013A

Product Dimensions:D 33.46 x H 18.11 inches

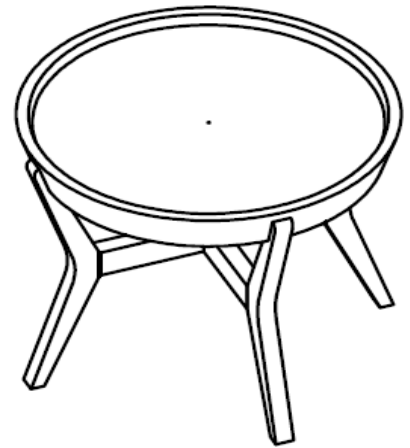


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

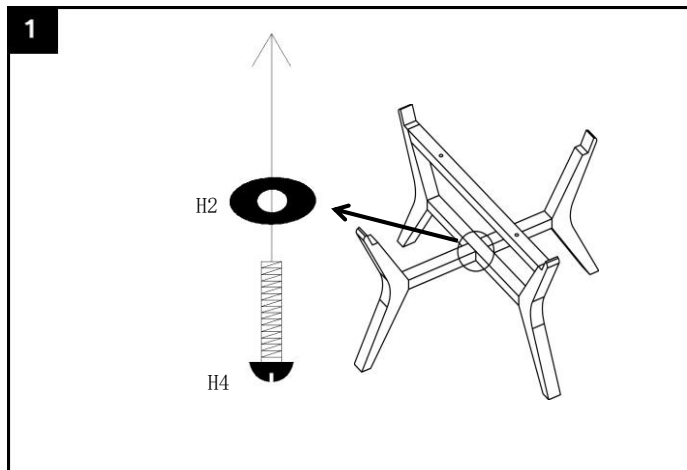

### Step 1

The hardware needed to connect the leg (B) to the leg (C) are a cross bolts (H3) and a washer (H2). please do not tighten

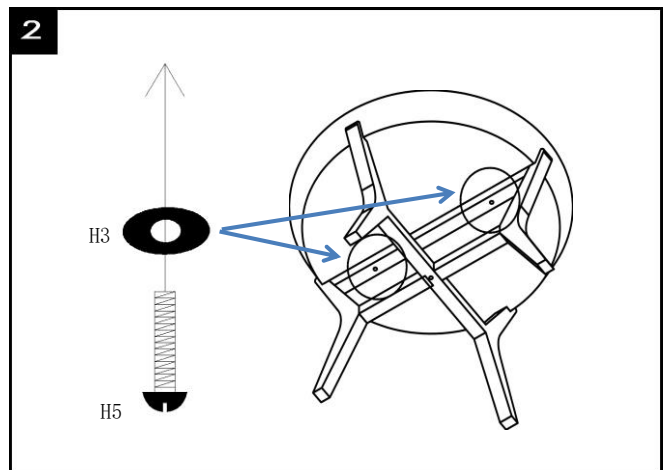

### Step 2

Connect the wood leg to the concrete. Use bolts (H5) and washer (H3). Please do not tighten the bolts !