


# ASSEMBLY INSTRUCTION

SKU CODE: (WF286874-WF286875-WF286876)

**This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team**

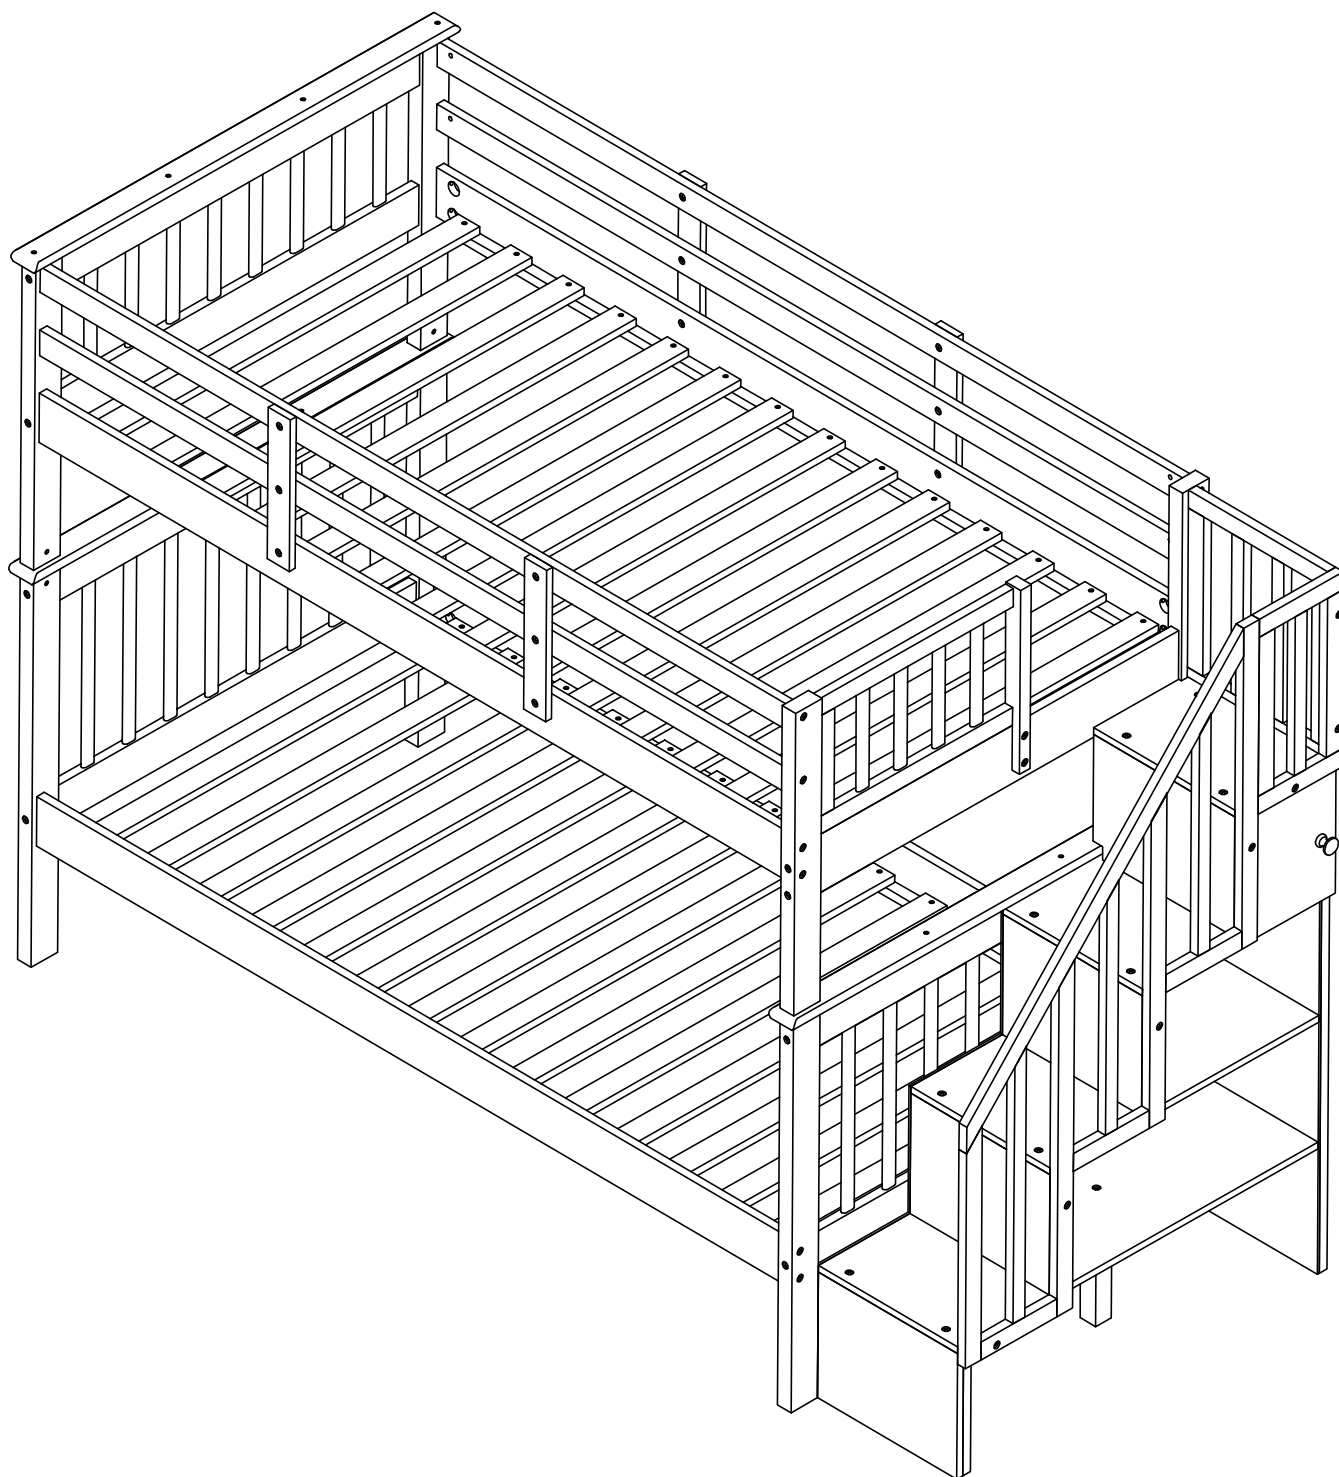

# **! SAFETY WARNINGS !**

1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk

## **Upper bed**


<b>Bed Type</b>	<b>Length</b>	<b>Width</b>	<b>Thickness</b>
<i>Twin Standard</i>	<i>74" - 75"</i>	<i>38 1/2"</i>	<i>6" max</i>

## **Lower bed**





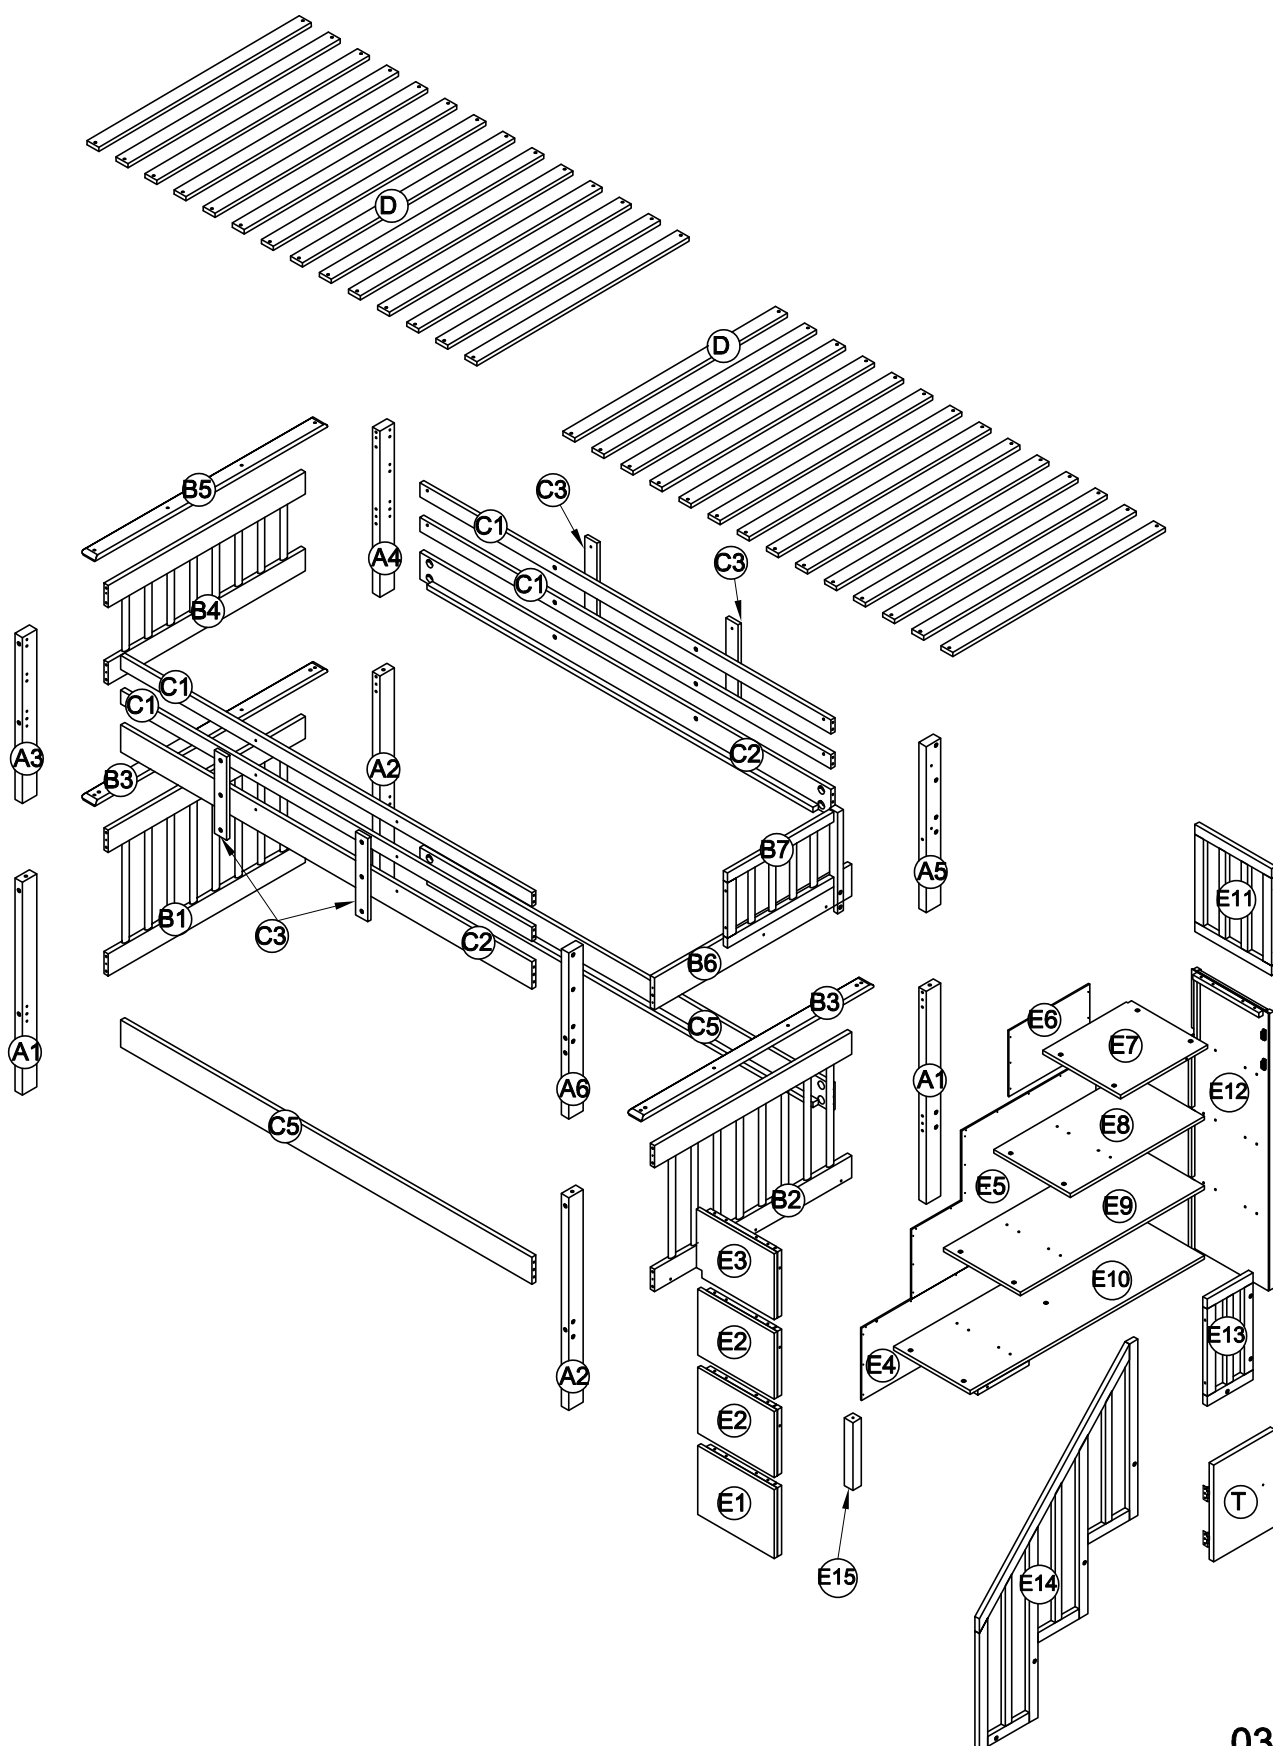






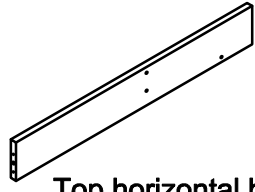
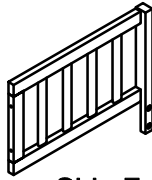
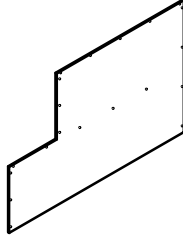




<b>Bed Type</b>	<b>Length</b>	<b>Width</b>	<b>Thickness</b>
<i>Twin Standard</i>	<i>74" - 75"</i>	<i>38 1/2"</i>	<i>8" max</i>

2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE CITY OF INDUSTRY, CA, 91748) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunkAlways use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part
11. Use of a night light may provide added safety precaution for a child using the upper bunk..
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes
15. Keep these instruction for future reference
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.




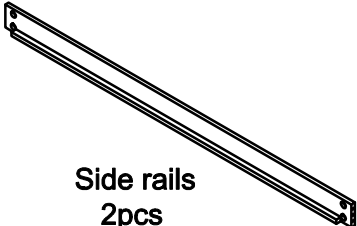
# ASSEMBLY INSTRUCTION








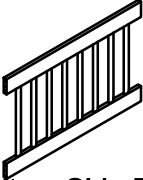
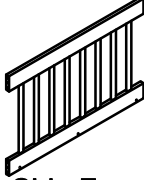
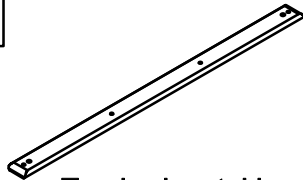
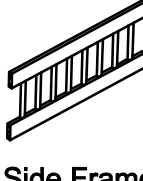



# Part List & Hardware List (Box 1-WF286874)

<b>A1</b>  Bottom legs 2 pcs	<b>A2</b>  Bottom legs 2 pcs	<b>A3</b>  Upper leg 1 pc
<b>A4</b>  Upper leg 1 pc	<b>A5</b>  Upper leg 1 pc	<b>A6</b>  Upper leg 1 pc
<b>B1</b>  Bottom Side Frame(Left) 1 pc	<b>B2</b>  Bottom Side Frame(Right) 1 pc	<b>B3</b>  Top horizontal bar 2pcs
<b>B4</b>  Upper Side Frame(Left) 1 pc	<b>B5</b>  Top horizontal bar 1pcs	<b>B6</b>  Top horizontal bar
<b>B7</b>  Upper Side Frame 1pc	<b>E5</b>  Side panel 1pc	<b>E11</b>  Back Frame 1pc
<b>E13</b>  Side Frame 1pc	<b>E14</b>  Side Frame 1pc	<b>T</b>  Door 1pc

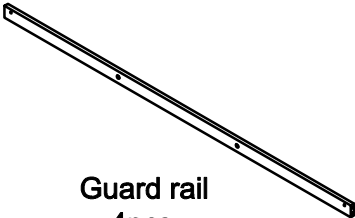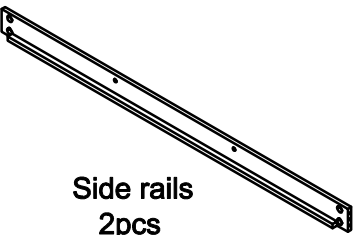





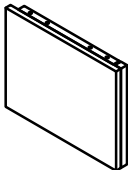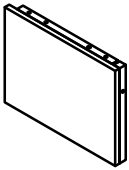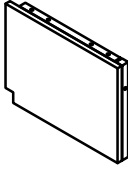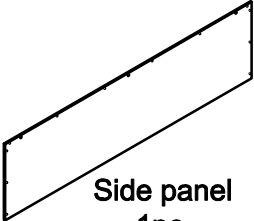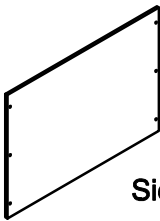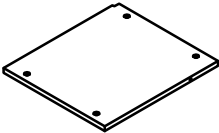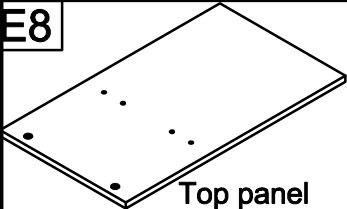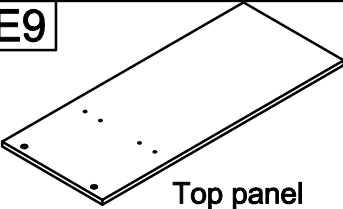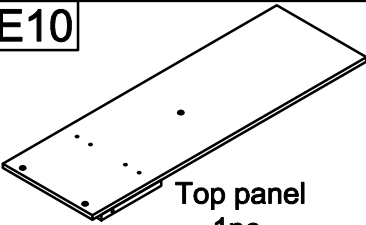

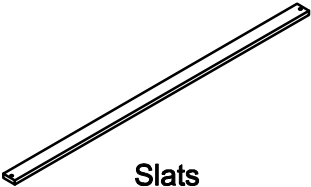









Part List(WF286875)


C1	 <p>Guard rail 4pcs</p>	C2	 <p>Side rails 2pcs</p>	C3	 <p>Vertical Guard rails 4pcs</p>
C5	 <p>Side rails 2pcs</p>				

Part List(WF286876)

<div>E1</div> <div></div> <div>Front panel 1 pc</div>	<div>E2</div> <div></div> <div>Front panels 2pcs</div>	<div>E3</div> <div></div> <div>Front panel 1pc</div>
<div>E4</div> <div></div> <div>Side panel 1pc</div>	<div>E6</div> <div></div> <div>Side panel 1pc</div>	<div>E7</div> <div></div> <div>Top panel 1pc</div>
<div>E8</div> <div></div> <div>Top panel 1pc</div>	<div>E9</div> <div></div> <div>Top panel 1pc</div>	<div>E10</div> <div></div> <div>Top panel 1pc</div>
<div>E12</div> <div></div> <div>Back Frame 1pc</div>	<div>E15</div> <div></div> <div>Support Bar 1pc</div>	<div>D</div> <div></div> <div>Slats 28 pcs</div>

# Hardware List

1	 Screws 1/4" x100 16pcs	2	 Ø10 x 40 mm Wood dowel 42pcs	3	 M4 x 30 mm Wood Screws 68pcs
4	 Ø1/4" x 80 mm Hex-Head bolts 24pcs	6	 Allen Key 1pc	7	 Screws 1/4" x50 2pcs
9	 Ø1/4" x 25 mm Hex-Head bolts 37pcs	10	 Ø1/4" x 15 mm Canopy head though- 14pcs	11	 Ø1/4" x 50 mm Hex-Head bolts 2pcs
12	 Ø1/4" x 13 mm Horizontal-Hole bolts 24pcs	13	 Ø12 x 110 mm Wood dowel 4pcs	14	 Ø8 x 25 mm Wood dowel 22pcs
15	 M6 x 15 mm Wood Screws 33pcs	16	 Screws 1/4" x60 4pcs	17	 Ø1/4" x 35 mm Hex-Head bolts 9pcs
18	 M3 x 12 mm Wood Screws 6pcs	19	 Ø1/6" x 25 mm Hex-Head bolts 1pc	20	 Handle Wood 1pc




Assembly Tools Required (Not Included)




07/23

## STEP 1: Following below illustration Assembly Bottom bed's Headboard.

Using hardware #1 and dowel #2 connect A1 and A2 legs with B1 Frame.

Look at detail view for more detail

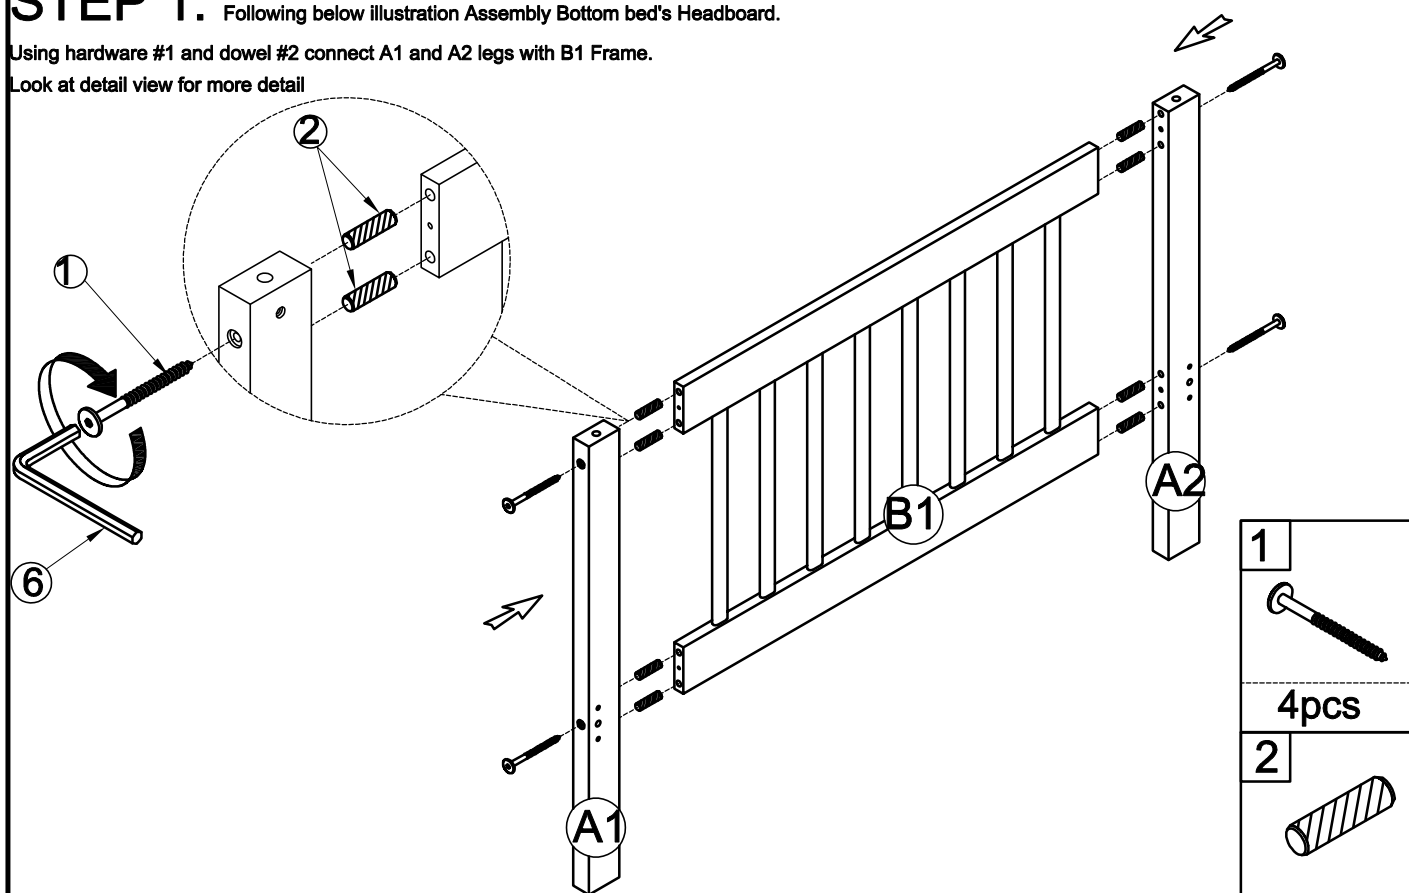


1	
4pcs	
2	
8pcs	
3	
4pcs	

## STEP 2: Following below illustration Assembly Bottom bed's Headboard.

Using hardware #3 connect Frame(completed on step 1) with B3 to complete LEFT side of Bottom Bed.

Look at detail view for more detail

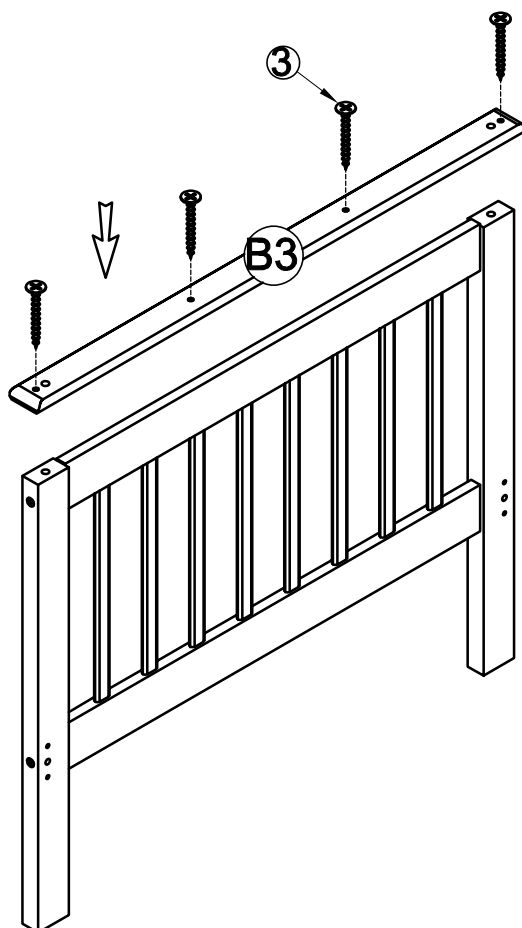




## STEP 3: Following below illustration Assembly Bottom bed's Footboard.

Using hardware #1 and dowel #2 connect A1 and A2 legs with B2 Frame.

Look at detail view for more detail

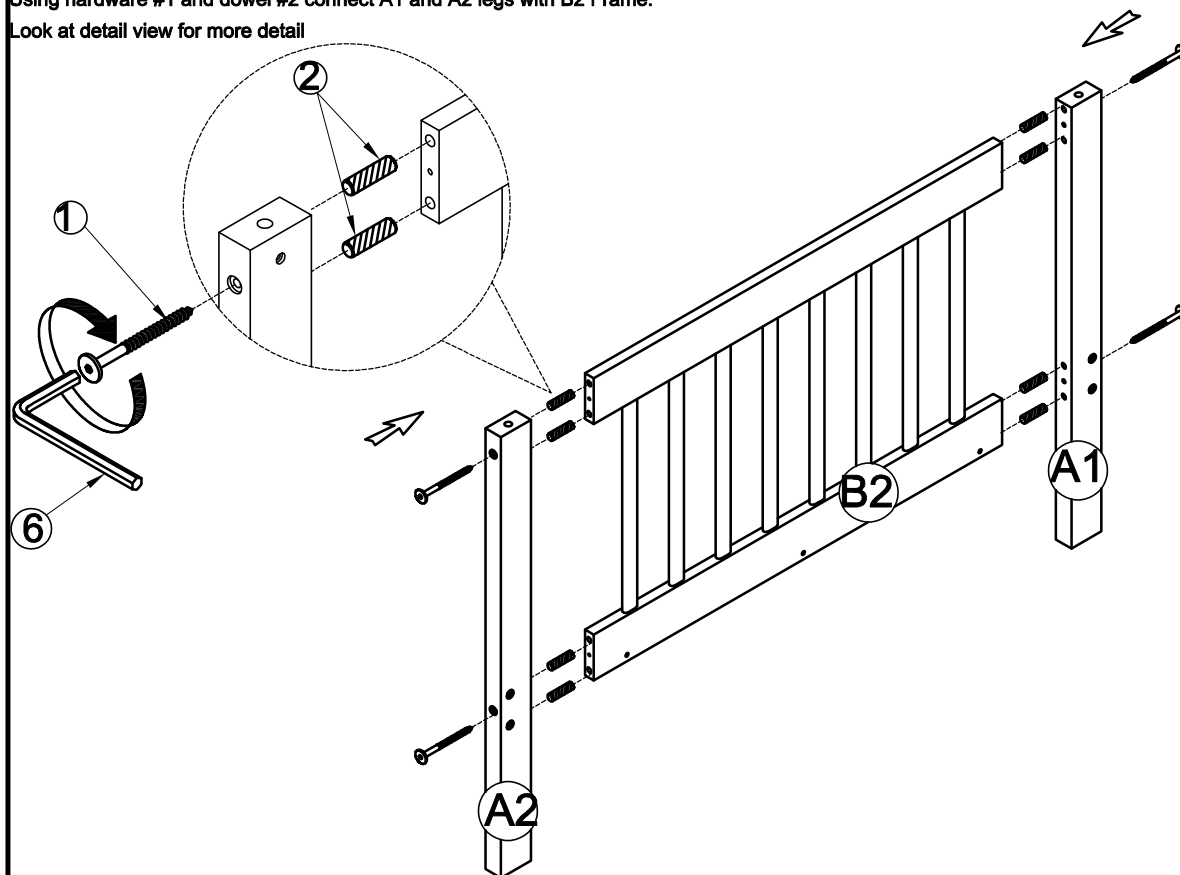


1	
4pcs	
2	
8pcs	
3	
4pcs	

## STEP 4: Following below illustration Assembly Bottom bed's Headboard.




Using hardware #3 connect Frame(completed on step 3) with B3 to complete RIGHT side of Bottom Bed.


Look at detail view for more detail

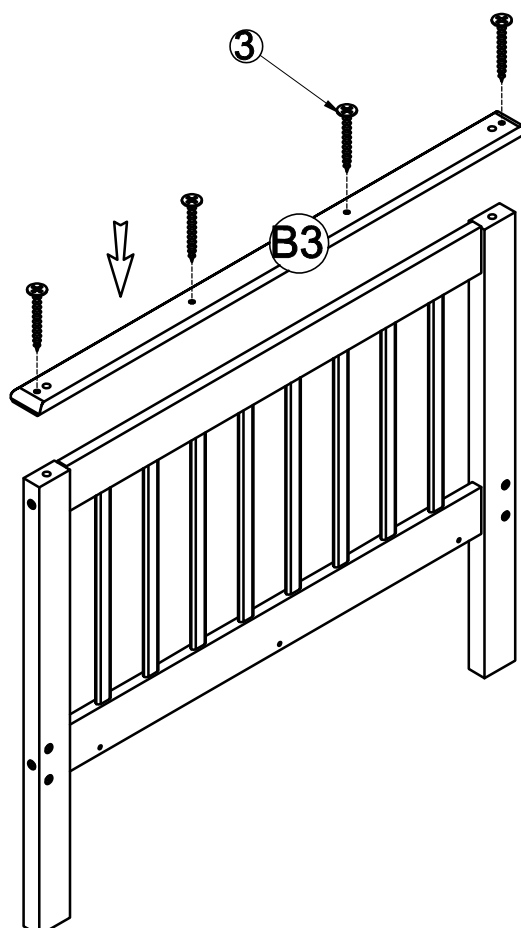

## STEP 5: Following below illustration Using hardware #4,#12 and dowel #2

follow detail view to Assembly Bottom bed's Headboard(Completed on step 2) and Footboard(Completed on step 4) with siderail C5(x2).Look at detail view for more detail

12		4		2	
8pcs		8pcs		4pcs	

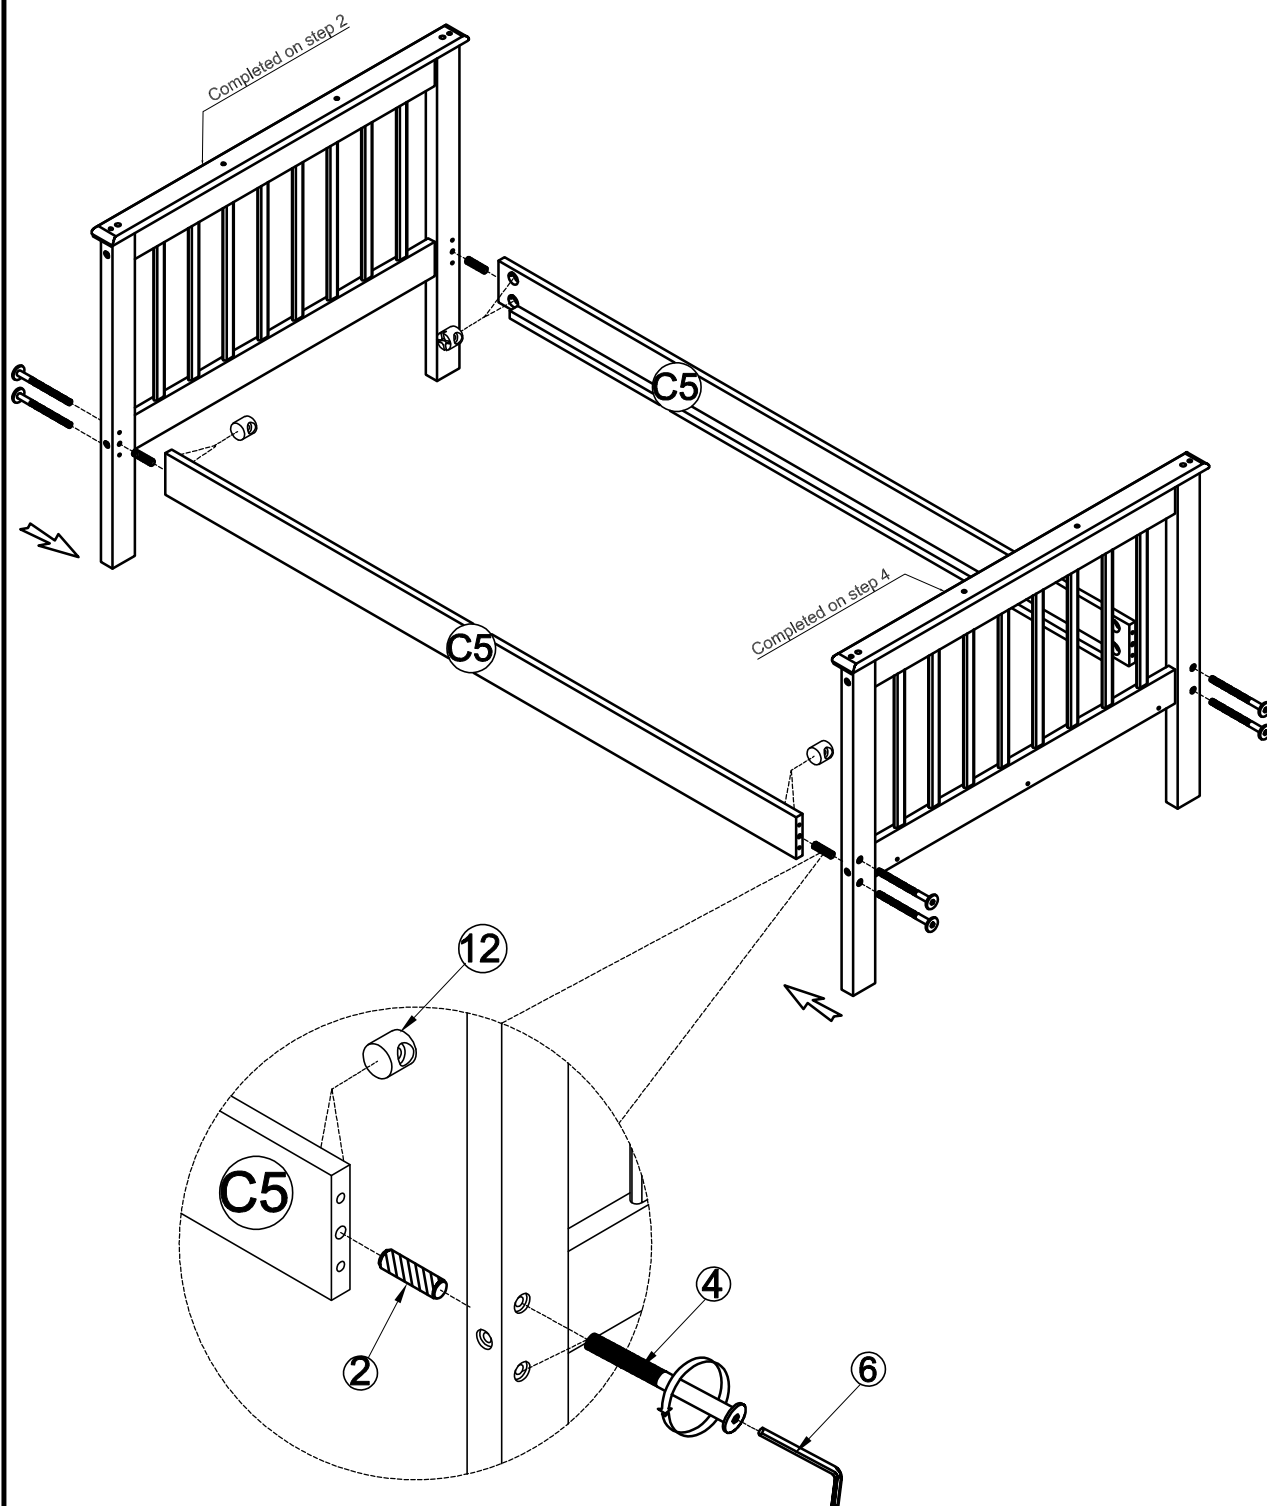

## STEP 6: Following below illustration:


-Screw 14 slats D with Side Rail C5 by using hardware #3.

-Look at detail view for more detail

3




28pcs

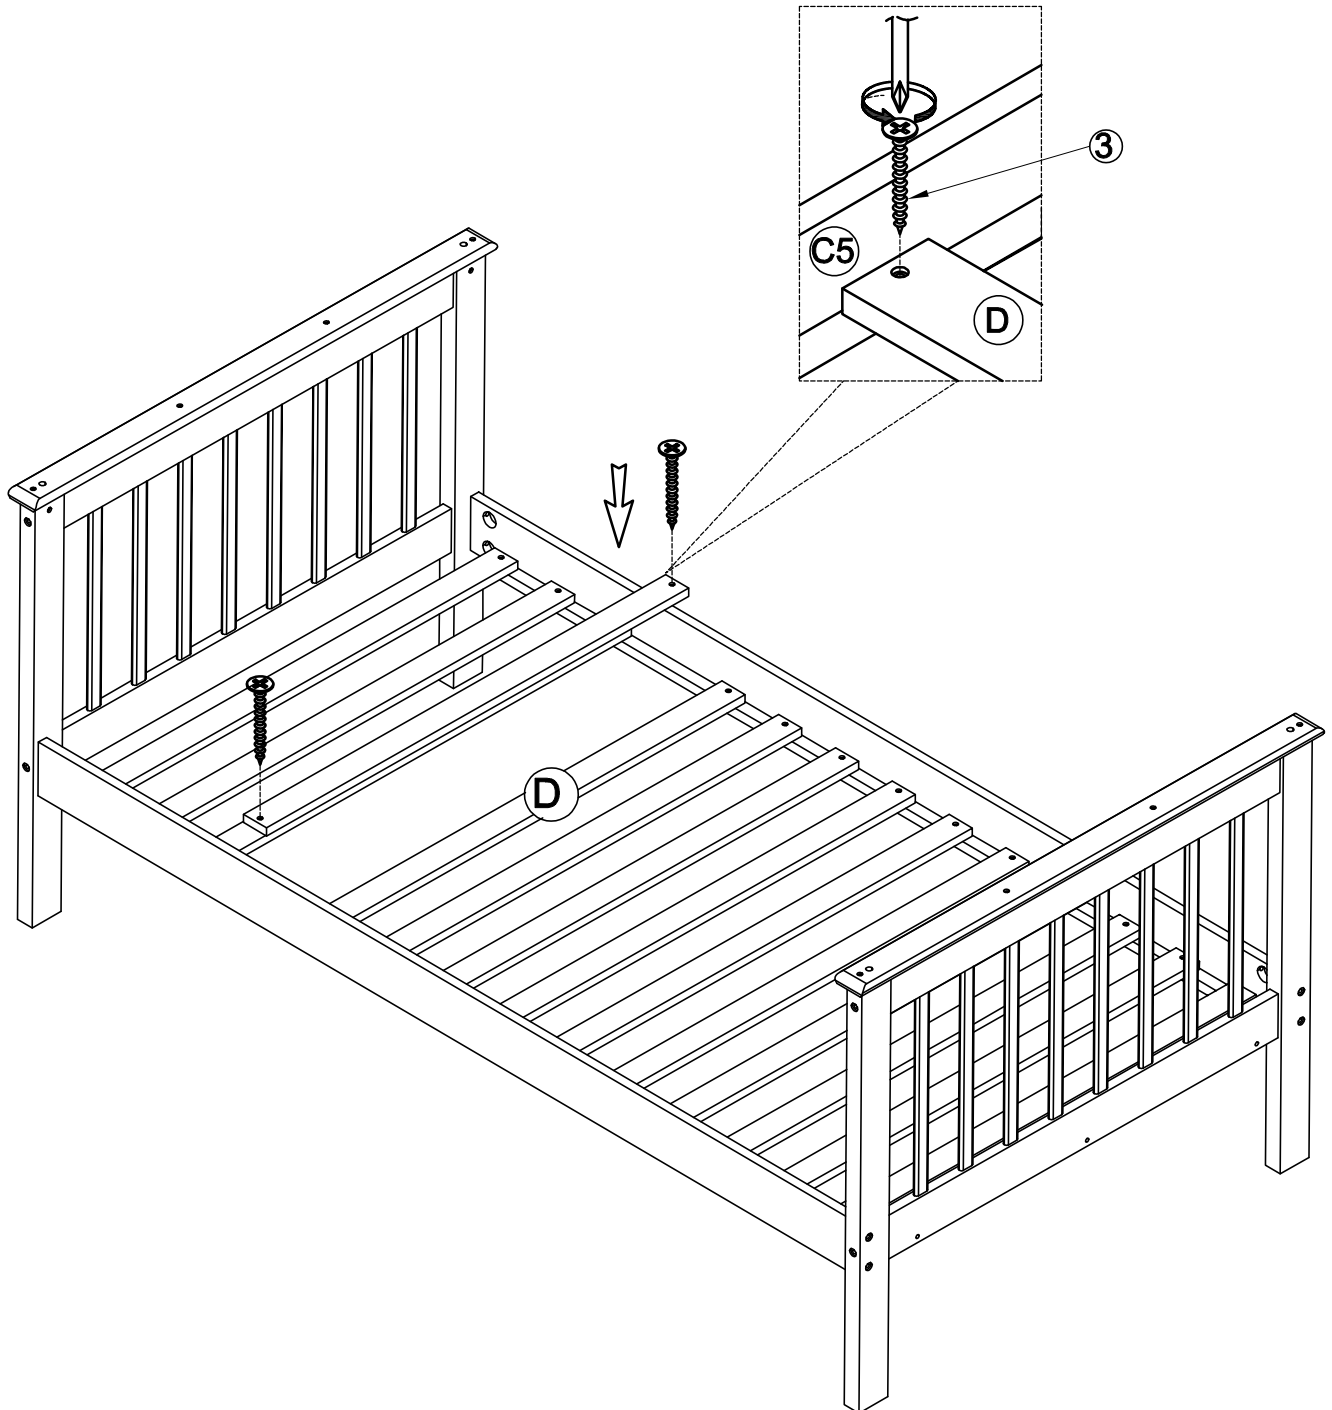

## STEP 7: Following below illustration Assembly Upper bed's Headboard.

Using hardware #1 and dowel #2 connect A3 and A4 legs with B4 Frame.

Look at detail view for more detail

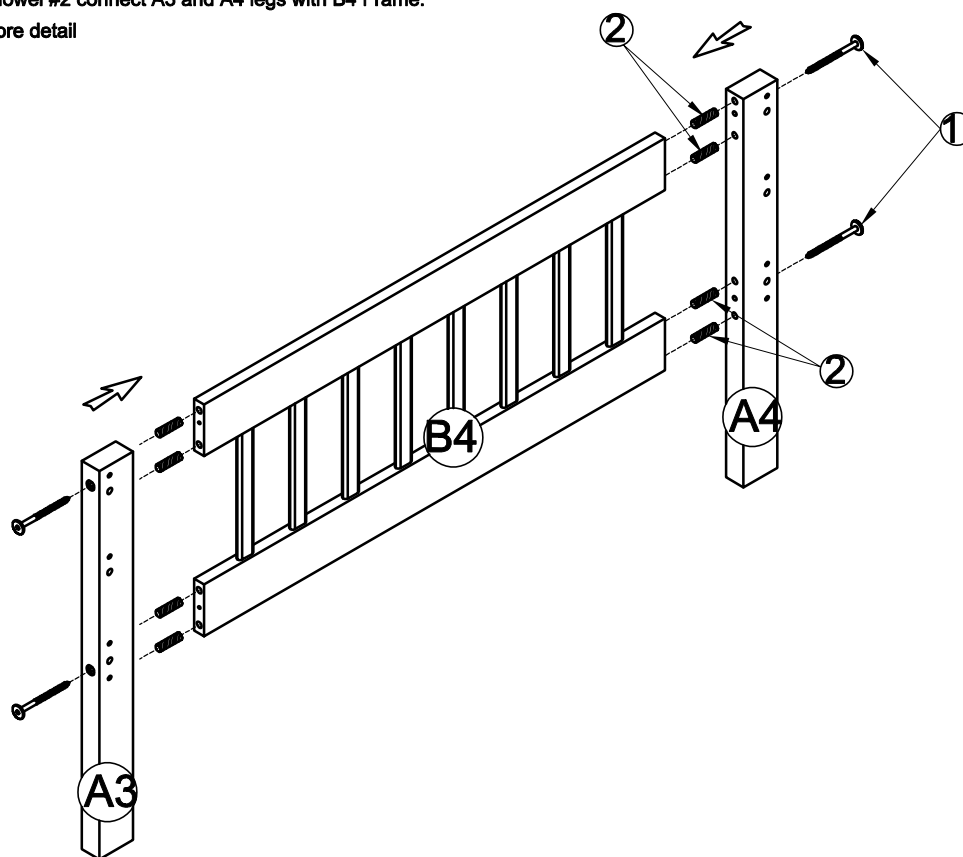


1



4pcs

2




8pcs

## STEP 8: Following below illustration Assembly Upper bed's Headboard.

Using hardware #3 connect Frame(completed on step 7) with B5 Woodbar

Look at detail view for more detail

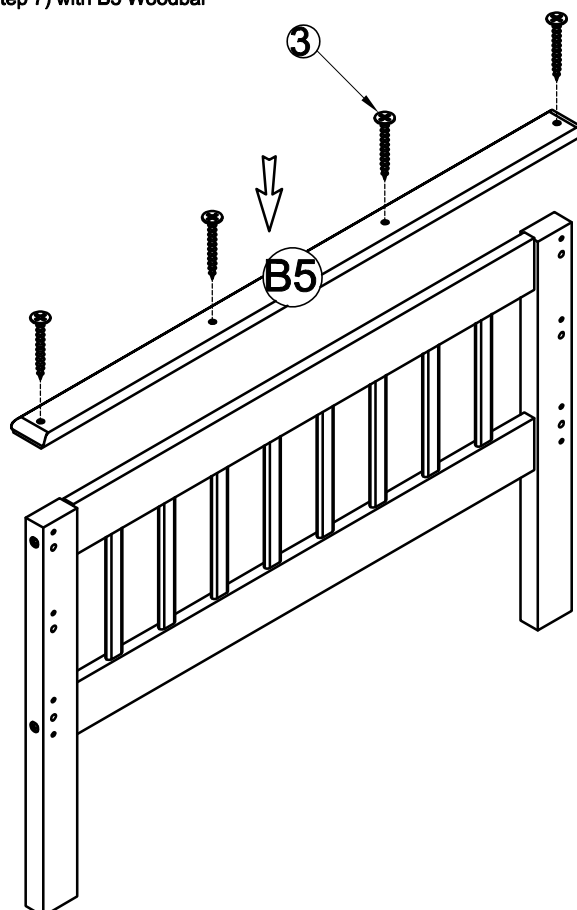


3



4pcs

## STEP 9: Following below illustration Assembly Upper bed's Footboard.

Using hardware #9,#10 connect B7 Frame with B6 Woodbar  
Look at detail view for more detail

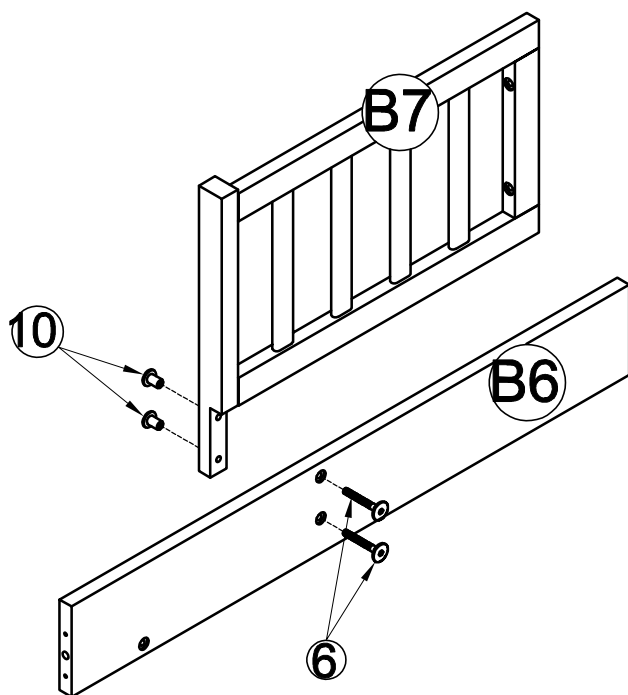

9



2pcs


10



2pcs

## STEP 10: Following below illustration Assembly Upper bed's Footboard.

Using hardware #1,#11 and dowel #2 connect Frame(completed on step 9) with Legs A5,A6  
Look at detail view for more detail

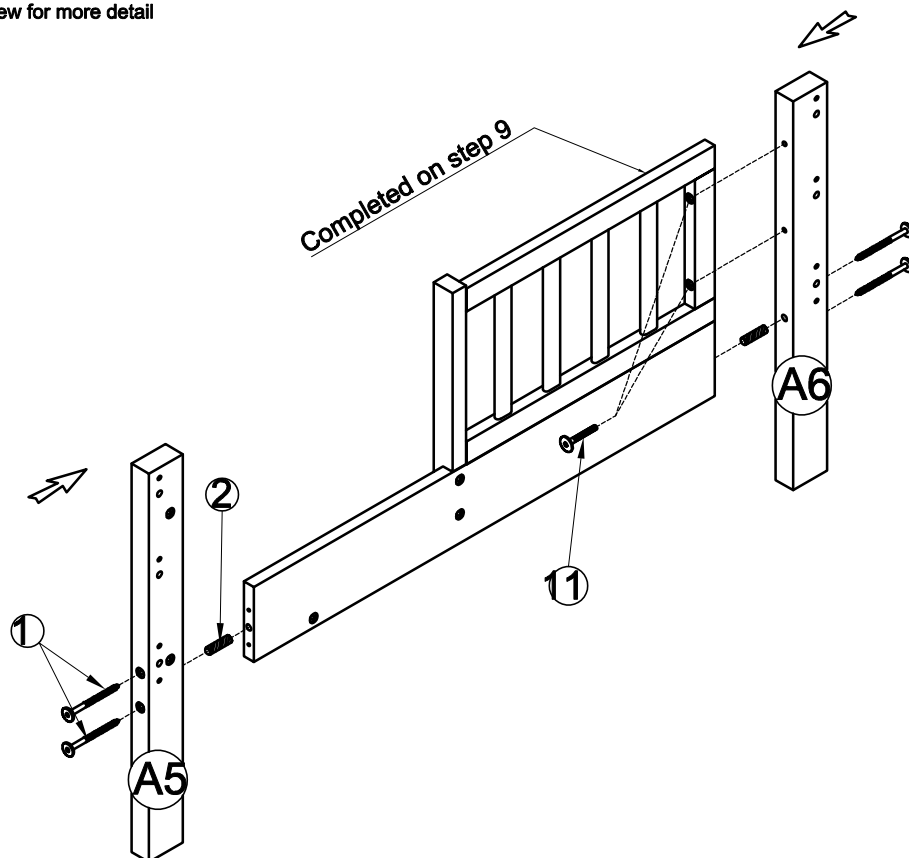


1



4pcs

2



2pcs

11






2pcs



## STEP 11: Following below illustration Assembly Upper bed's Footboard.



Using hardware #9,#10 connect B7 Frame with B6 Woodbar

Using hardware #7 connect Frame with Bracket #8.

Look at detail view for more detail

12	4	2
		
16pcs	16pcs	12pcs

10	9
	
6x2pcs	6x2pcs

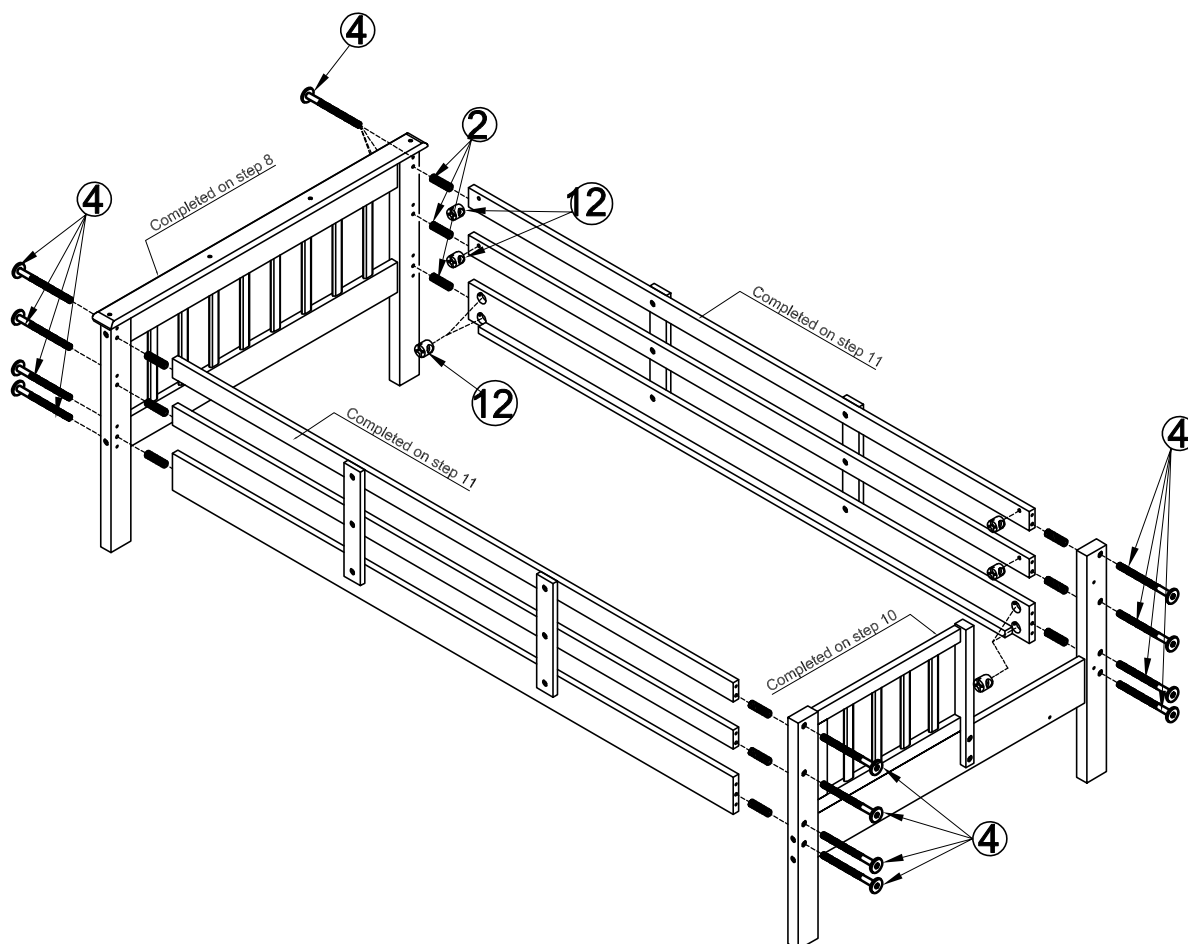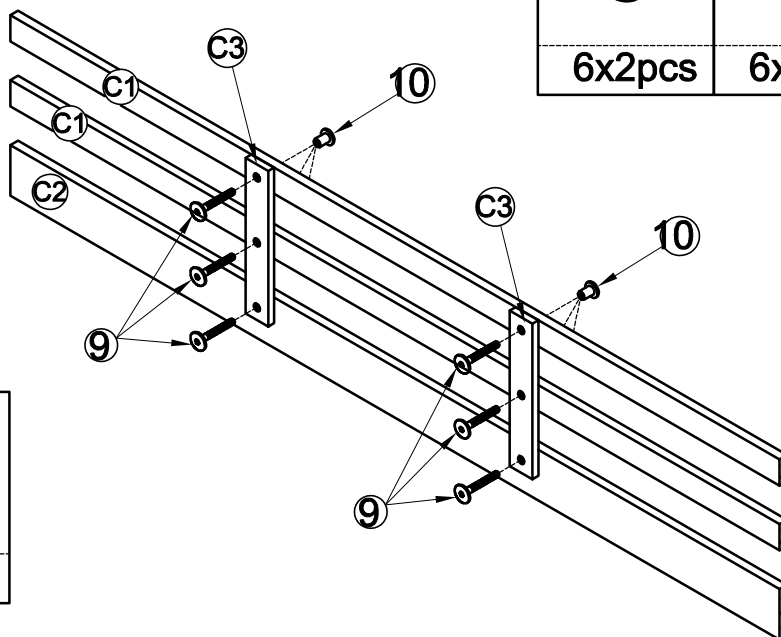

## STEP 12: Following below illustration Using hardware #4,#12 and dowel #2

follow detail view to Assembly Upper bed's Headboard(Completed on step 8) and

Footboard(Completed on step 10) with Frame (Completed on step 11).

Look at detail view for more detail


## STEP 13: Following below illustration:

- Screw 14 slats D and with Side Rail C2 by using hardward #3.
- Look at detail view for more detail

3




28pcs

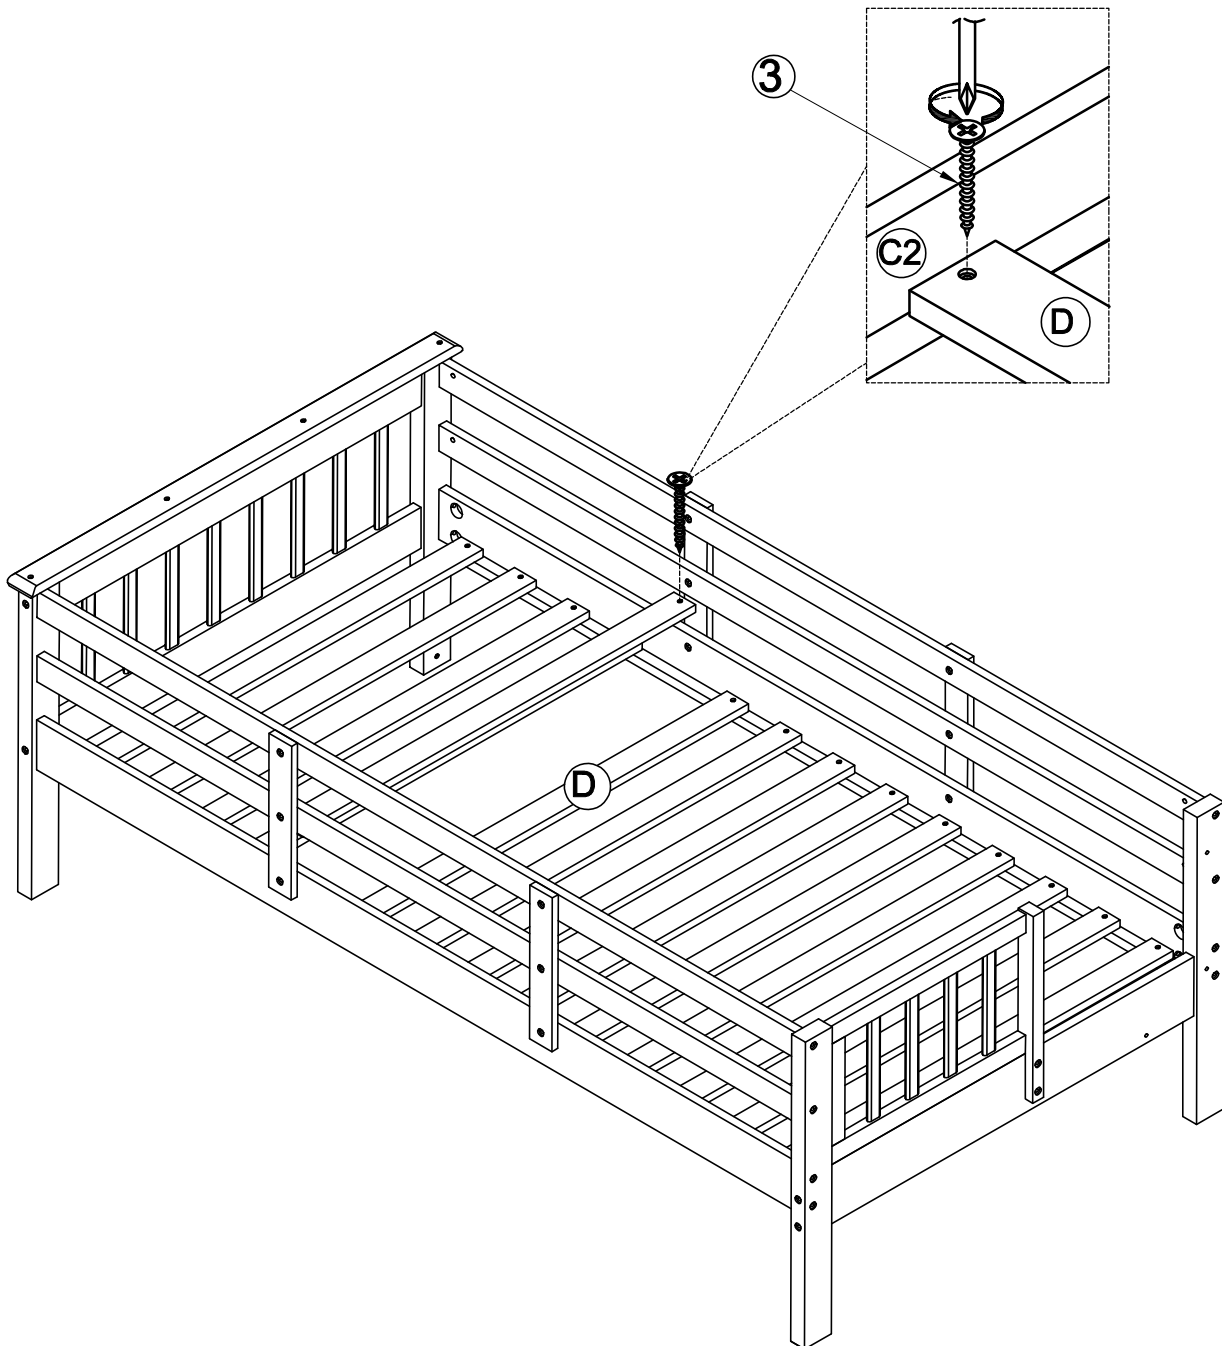


# STEP 14:

Following below illustration. Lay the Upper Bed (Completed on step 13) on Bottom Bed (Completed on step 6). Using the Dowel #13 to connect head of Bottom Bed legs with end of Upper Bed legs.

13




4(pcs)

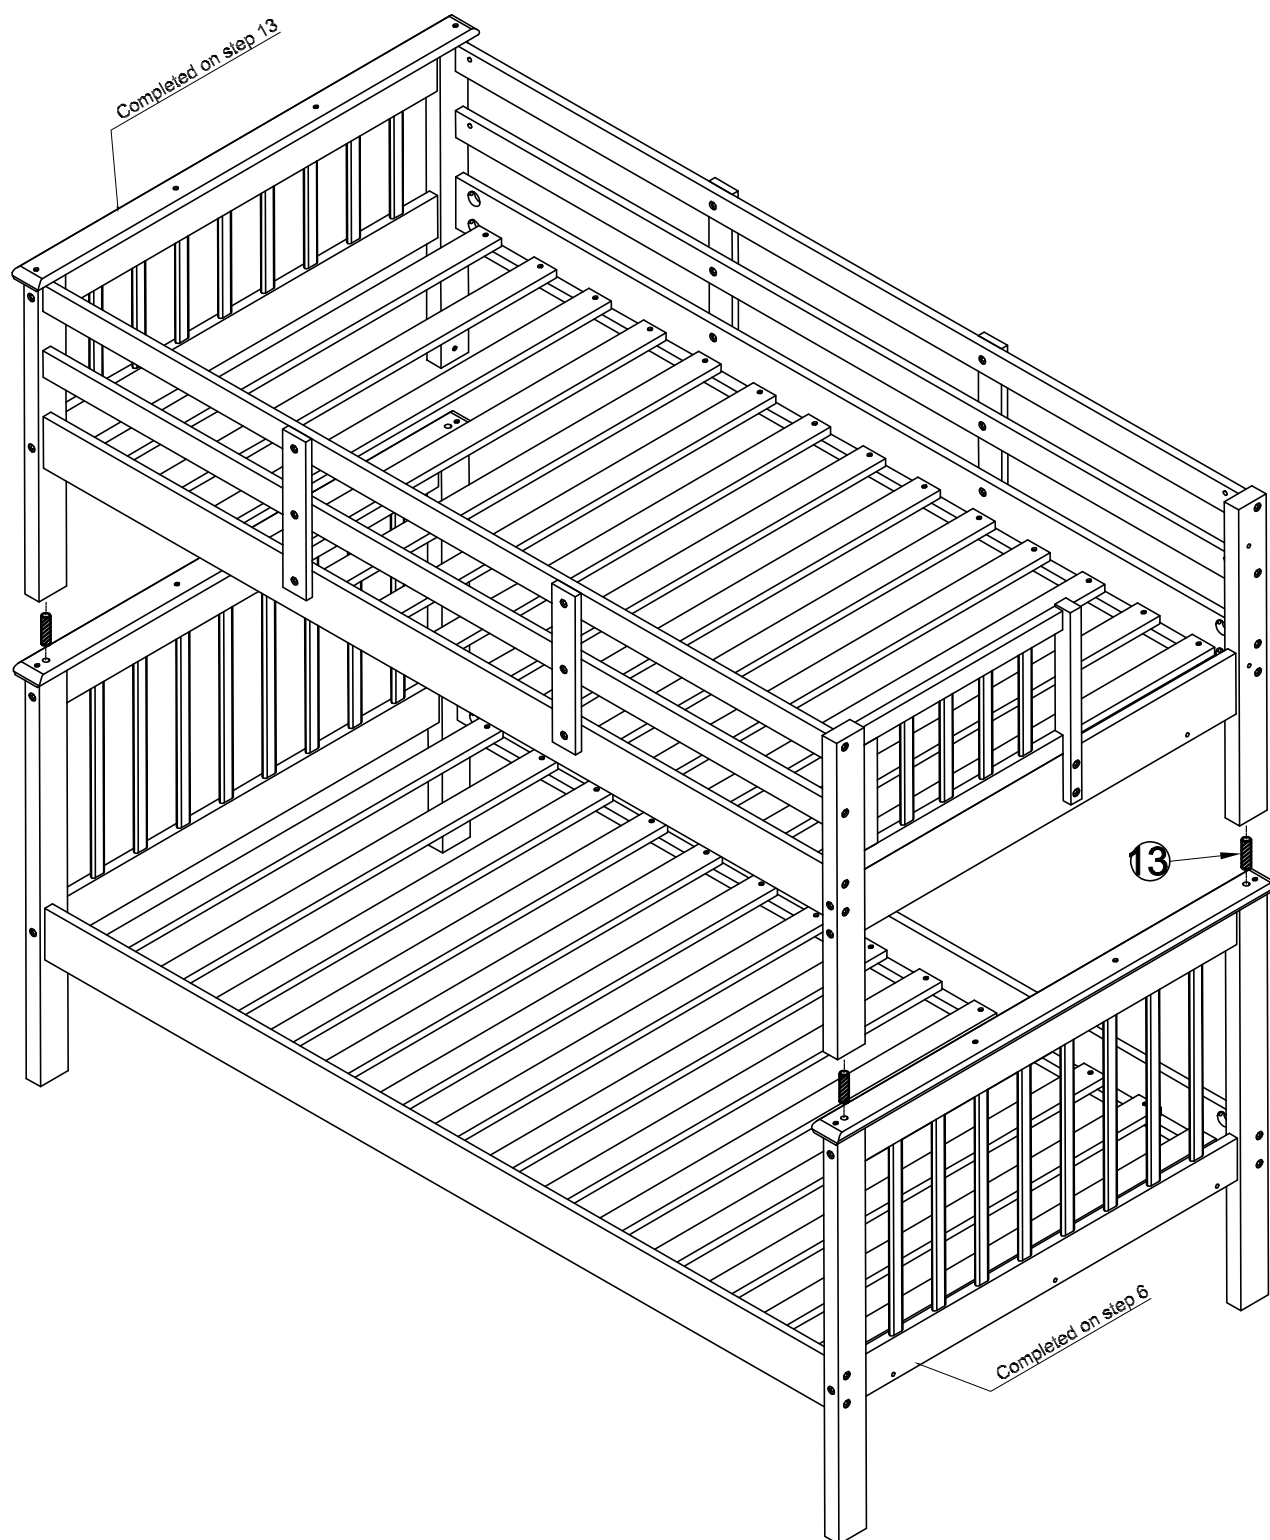



## STEP 15-1:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Support Bar (E15) with E1,E10 panels

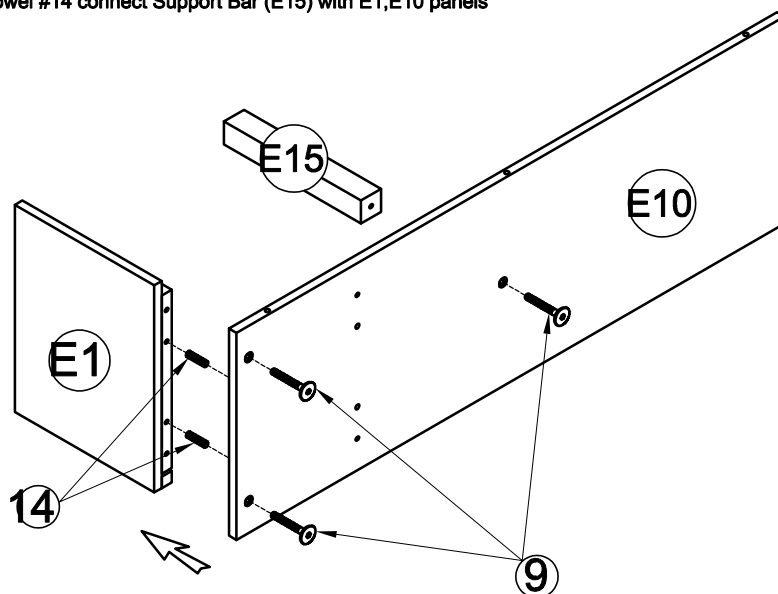


9



3pcs


14



2pcs

## STEP 15-2:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-1) with E2 panel

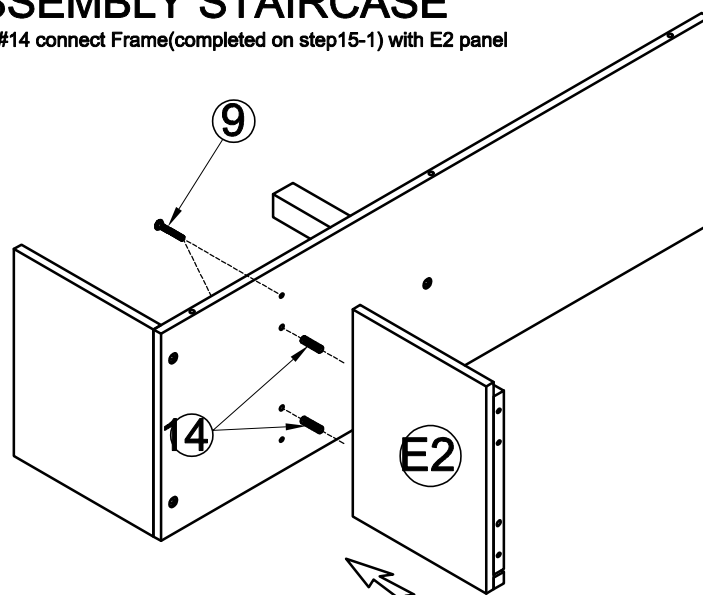


9



2pcs


14



2pcs

## STEP 15-3:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-2) with E9 panel

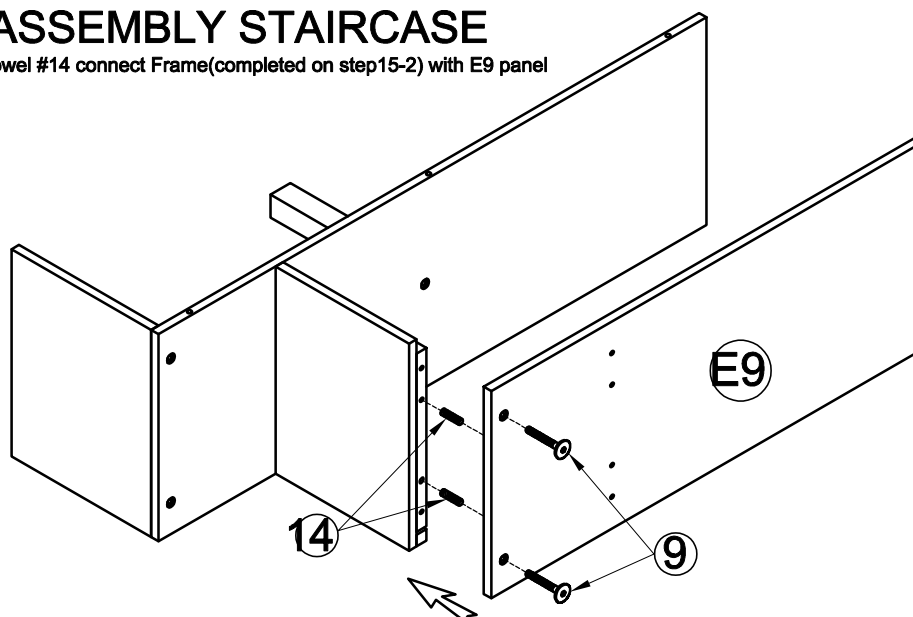


9



2pcs


14



2pcs

## STEP 15-4:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-3) with E2 panel

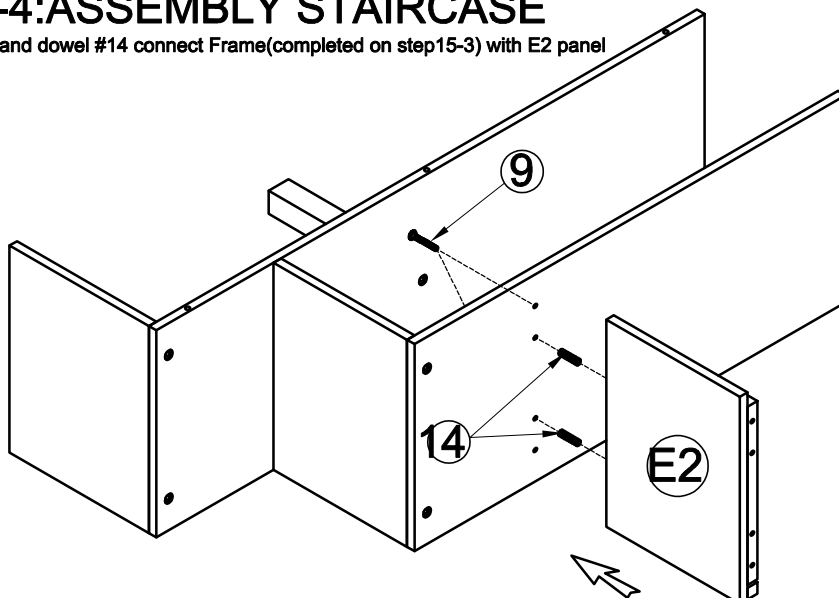


9



2pcs


14



2pcs

## STEP 15-5:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-4) with E8 panel

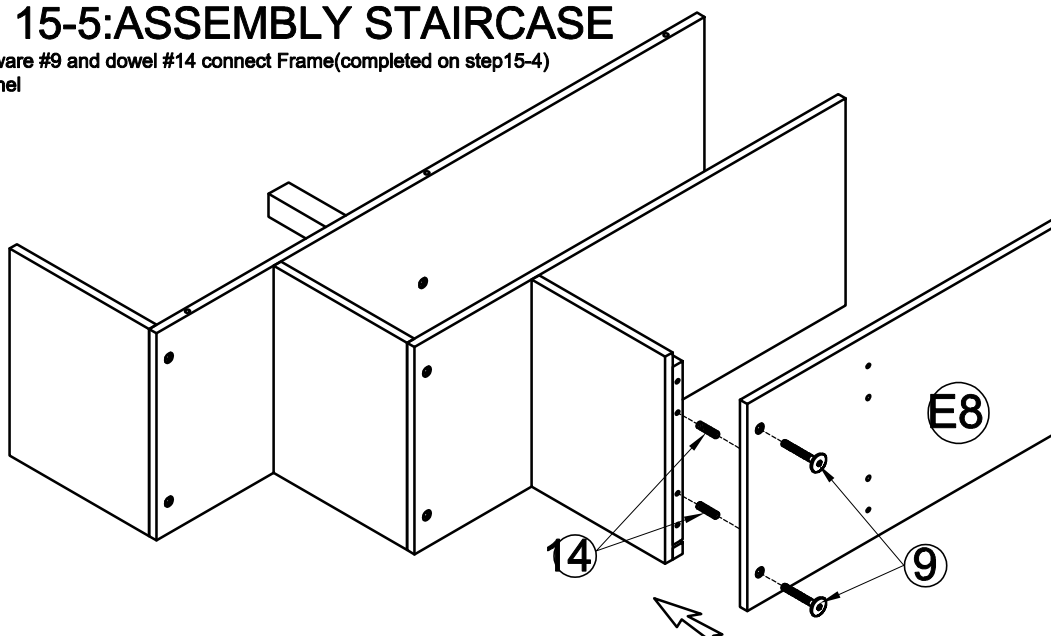


9



2pcs


14



2pcs

## STEP 15-6:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-5) with E3 panel

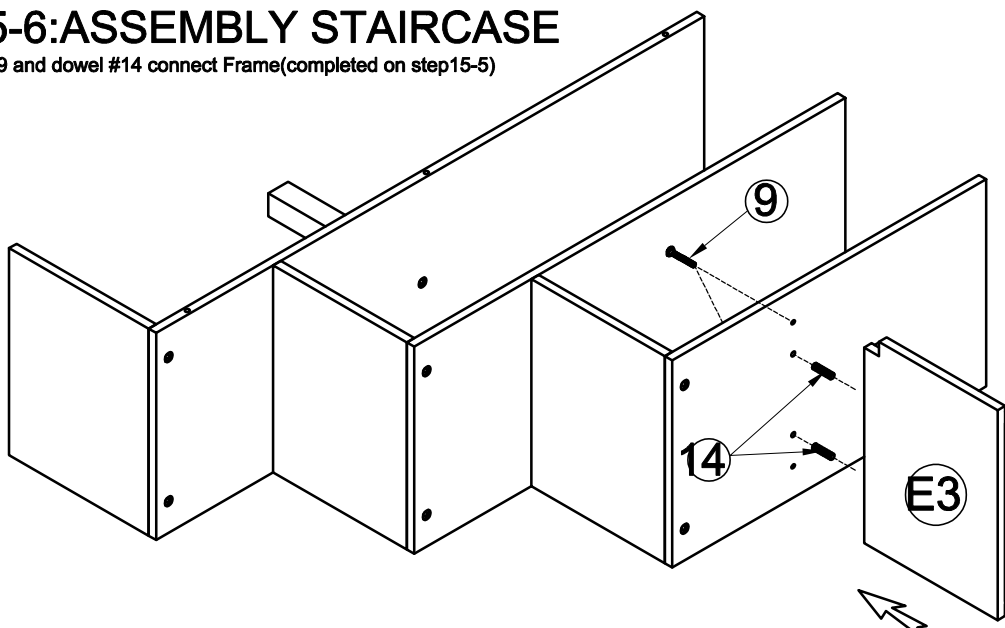


9



2pcs


14



2pcs


## STEP 15-7:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-6)  
with E12 Frame

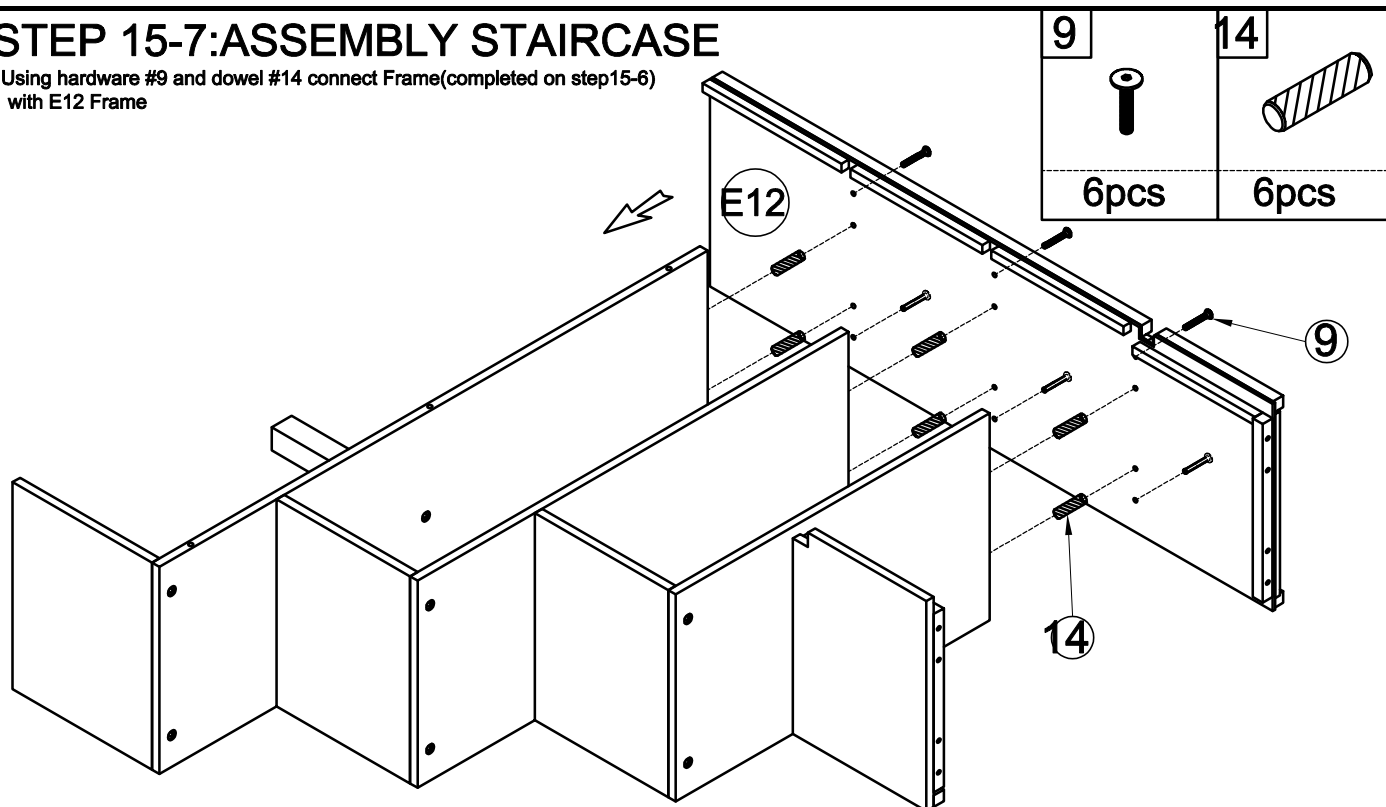

## STEP 15-8:ASSEMBLY STAIRCASE

Using hardware #9 and dowel #14 connect Frame(completed on step15-7)  
with E7 Panel

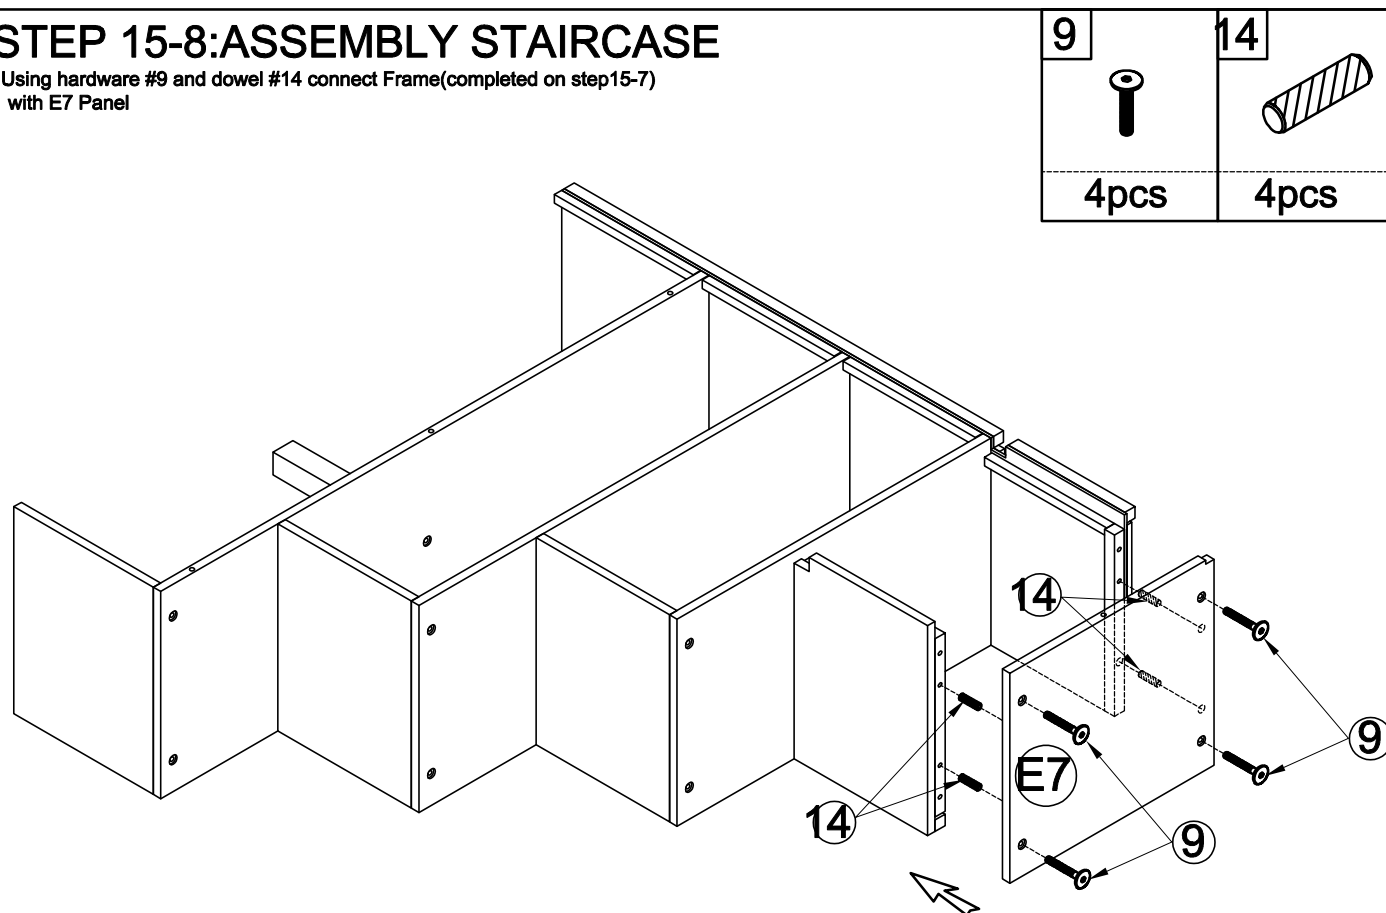


## STEP 15-9:ASSEMBLY STAIRCASE

Using hardware #15 connect Frame(completed on step15-8) with E4,E5,E6 Panels

15




33pcs

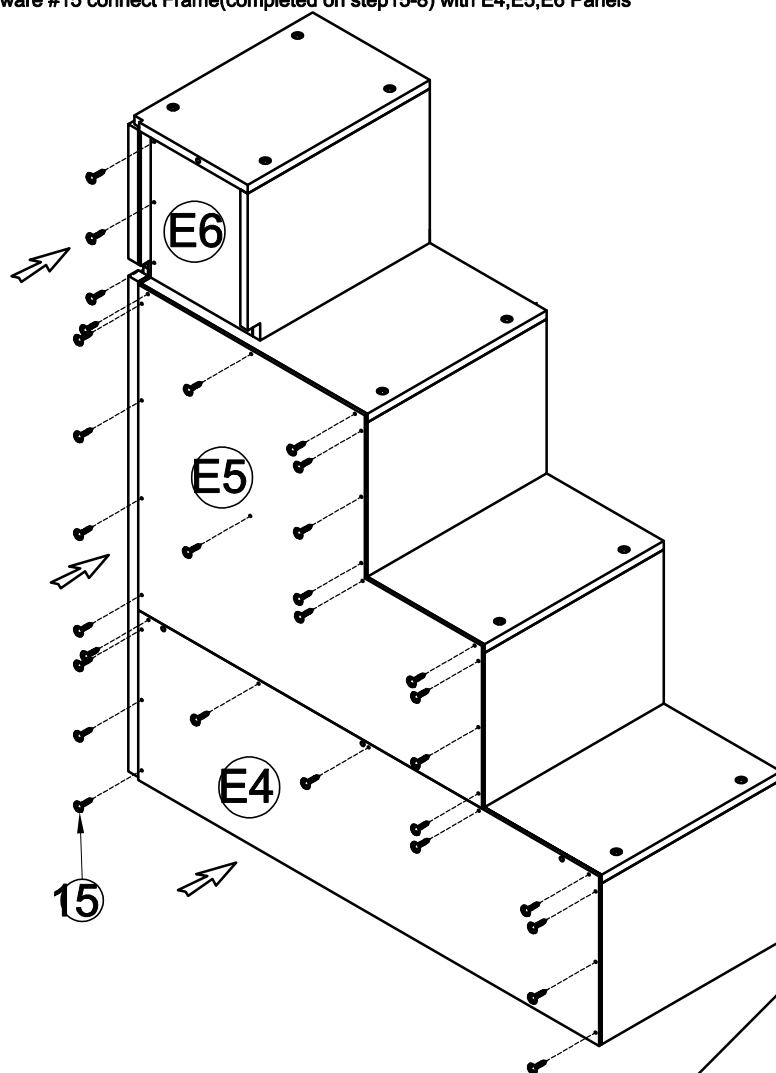

## STEP 15-10:ASSEMBLY STAIRCASE


Using hardware #16 connect E13 Frame with E14 Frame

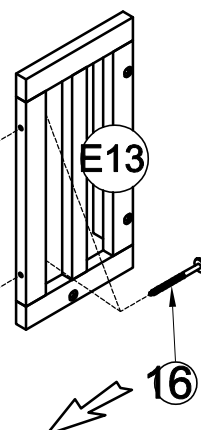

16



2pcs

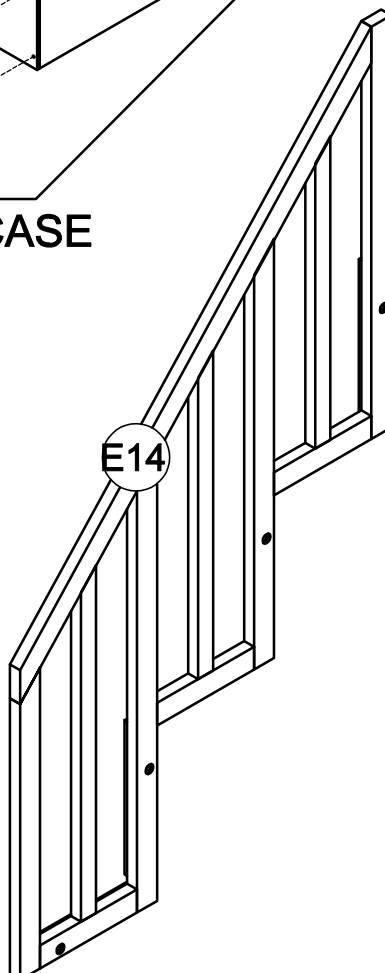

## STEP 15-11:ASSEMBLY STAIRCASE

Using hardware #7,#17 connect Frame(completed on step15-9) with Frame(completed on step15-10) and E11 Frame

17




5pcs

7



2pcs

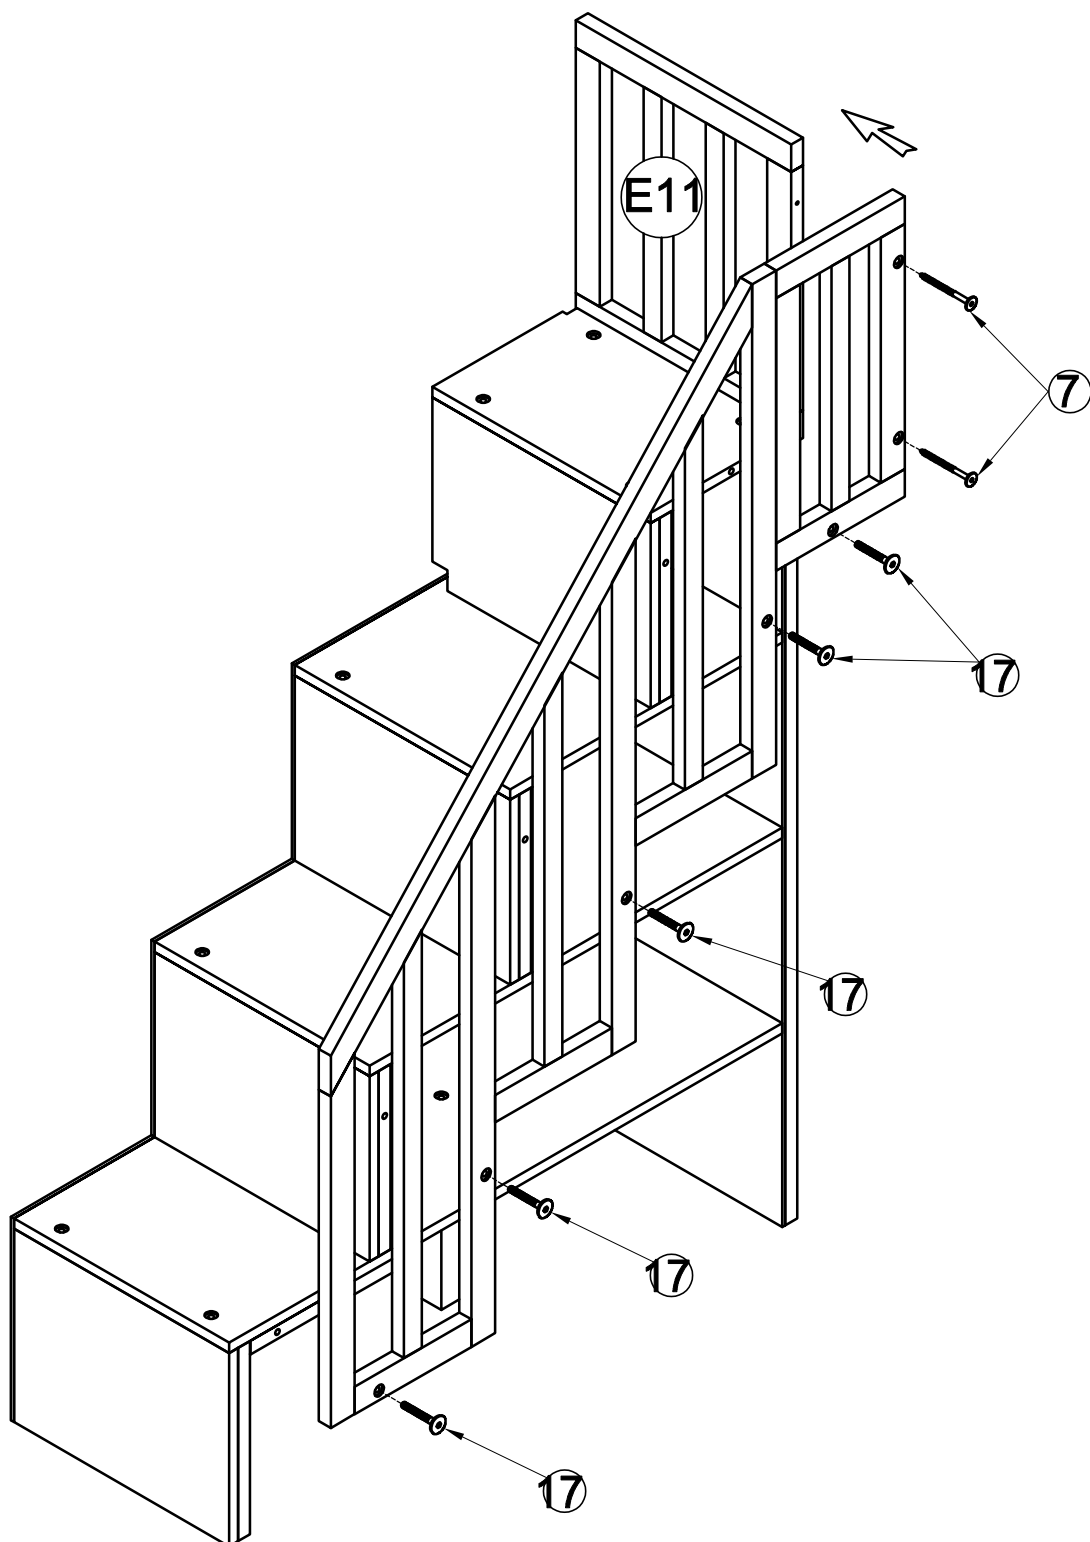

## STEP 16

Align and fix the staircase and the bunk beds, Using #16,#17 connect the staircase with bunk beds

17




4pcs

16



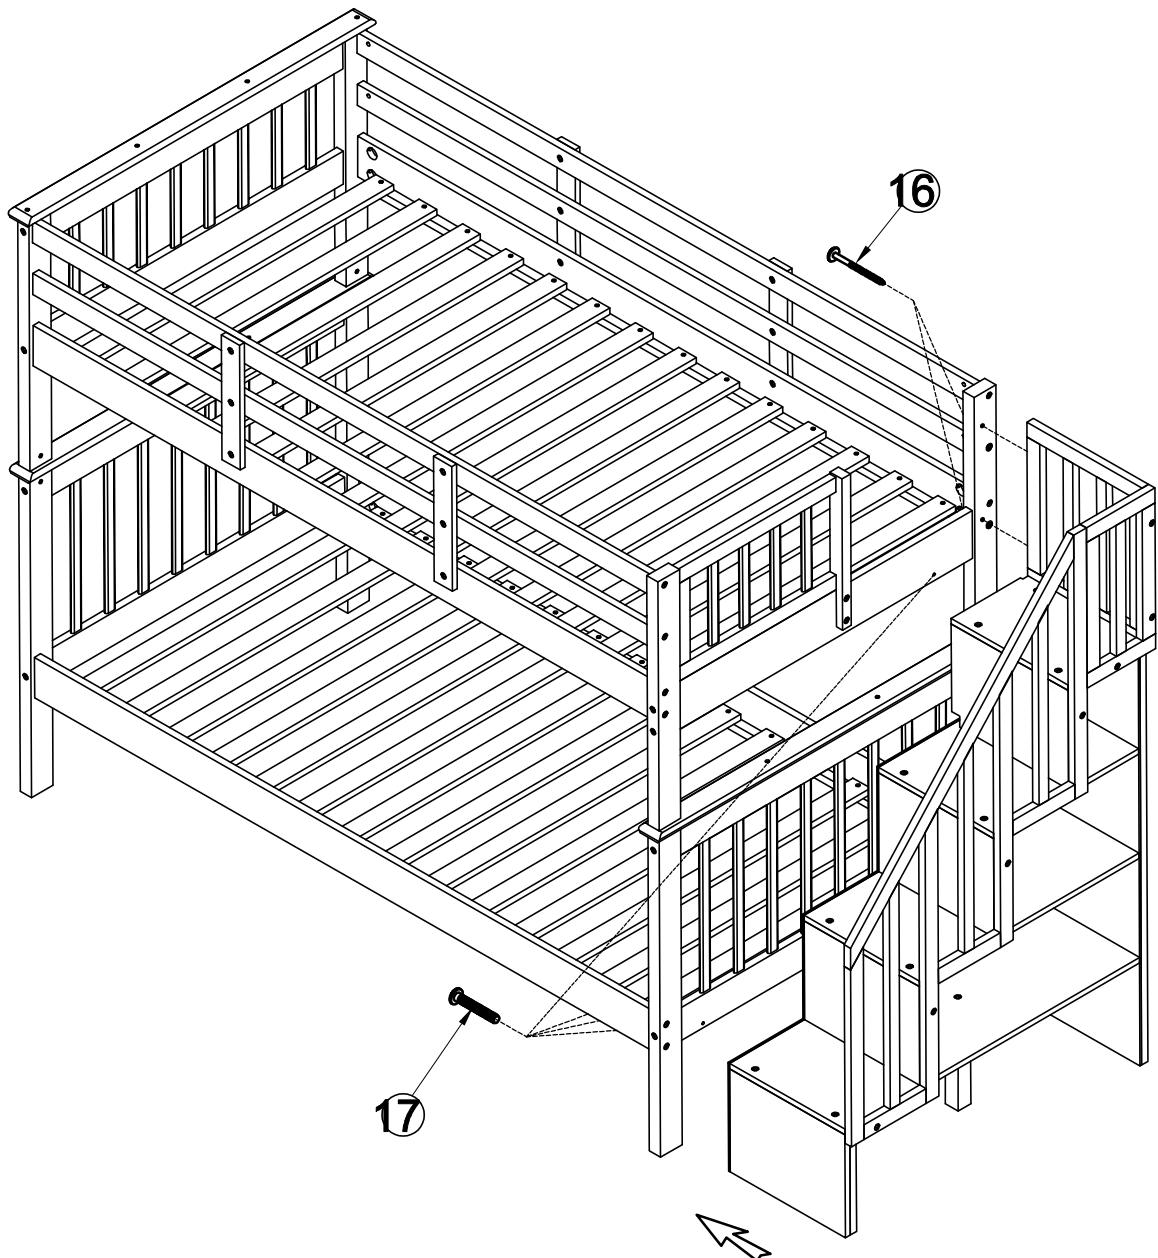


2pcs



CONGRARULATION. YOU HAVE COMPLETED THE BED.

## STEP 17: Following below illustration:

- Screw 1 Handle Wood #20 With Door (T) by hardward #19
- Screw Door T with Bed using hardward #18.
- Look at detail view for more detail

20	18	19
		
1pc	6pcs	1pc

