


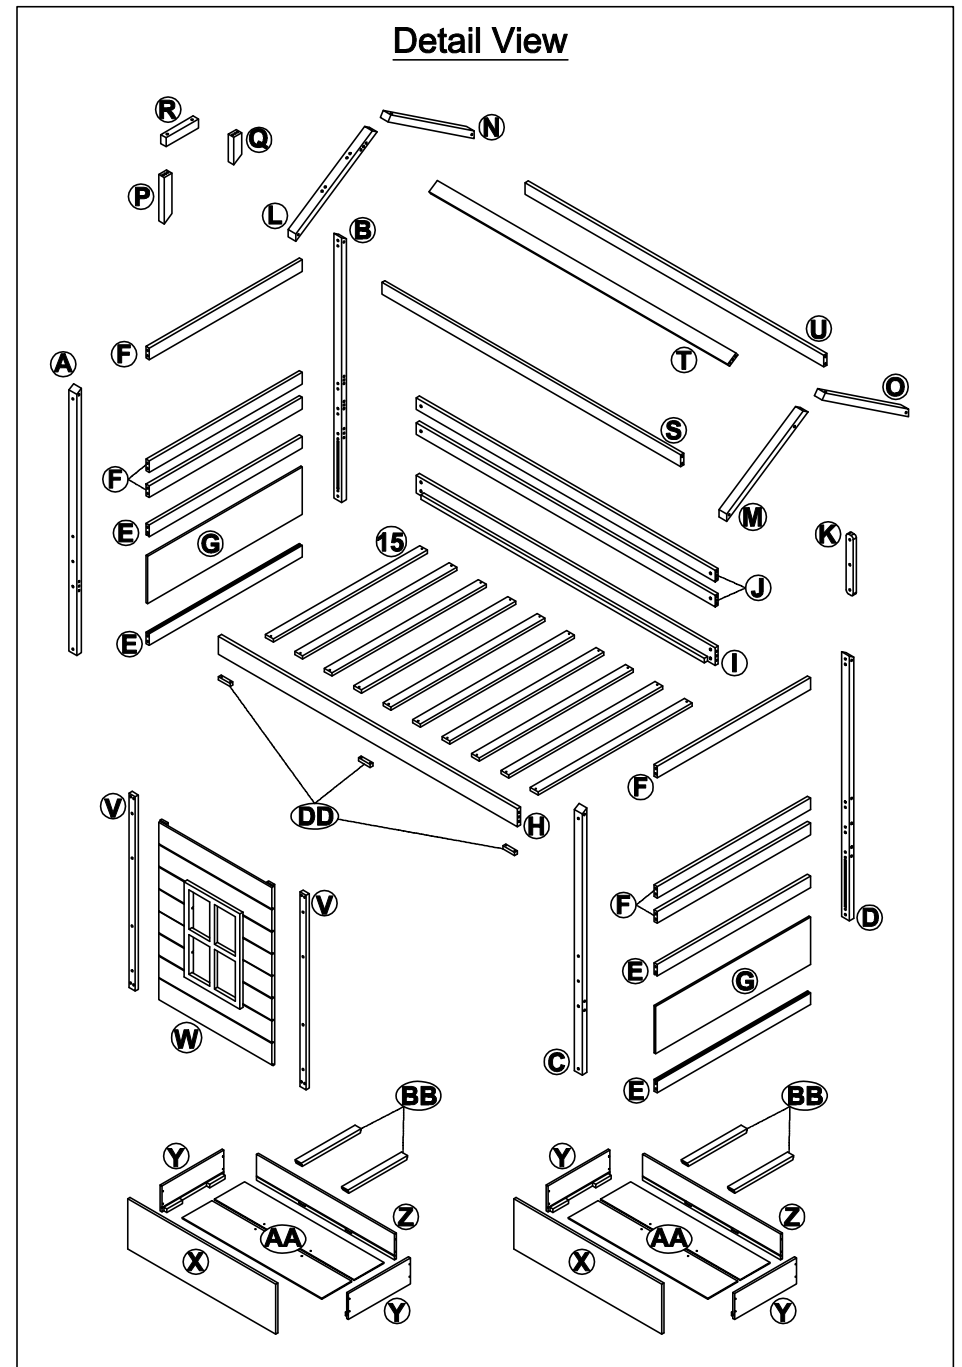






















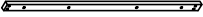





1
















Part List : WF281230

E  HB-FB horizontal (lower) - 4pcs	F  HB-FB horizontal (upper) - 6pcs	G  HB-FB panel - 2pcs
L  Cap of bed (front left) - 1pc	M  Cap of bed (front right) - 1pc	N  Cap of bed (back left) - 1pc
O  Cap of bed (back right) - 1pc	P  Long bar of funnel - 1pc	Q  Short bar of funnel - 1pc
R  Top bar of funnel - 1pc	W  Front frame - 1pc	15  Slat - 10pcs

Part List : WF281231

A  Front left leg - 1pc	B  Back left leg - 1pc	C  Front right leg - 1pc
D  Back right leg - 1pc	H  Front side rail - 1pc	I  Back side rail - 1pc
J  Back horizontal - 2pcs	K  Back vertical - 1pc	S  Horizontal (top front) - 1pc
T  Horizontal (top middle) - 1pc	U  Horizontal (top back) - 1pc	V  Front vertical - 2pcs
X  Drawer front - 2pcs	Y  Drawer side - 4pcs	Z  Drawer back - 2pcs
AA  Drawer bottom - 4pcs	BB  Drawer support - 4pcs	

Hardware List: WF281231

1  Ø10*30mm Wood dowel (46pcs)	2  Ø6*85mm Hex-Head screw (24pcs)	3  Ø1/4**100mm Hex-Head bolt (12pcs)
4  Ø1/4**15 Horizontal-Hole bolt (14pcs)	5  Ø1/4**85mm Hex-Head bolt (2pcs)	6  Ø6*30mm Hex-Head screw (19pcs)
7  Ø6*70mm Hex-Head screw (2pcs)	8  Ø6*80mm Hex-Head screw (8pcs)	9  #3*15mm Screw (24pcs)
10  #4*30mm Screw (42pcs)	11  Wheel (8pcs)	12  K4mm Allen key (1pc)
DD  Wood lock - 3pcs		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

Following below illustration Assembly FRAME #1.
Using hardware #1 & #5 connect R Top bar of funnel with P and Q Long-short bar of funnel to complete FRAME #1.

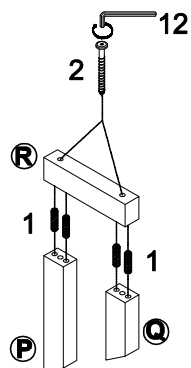


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

1	
4PCS	
2	
2PCS	

STEP 2:

Following below illustration Assembly FRAME #2.
Using hardware #1 & #5 connect L Cap of bed (front left) with P and Q Long-short bar of funnel to complete FRAME #2.

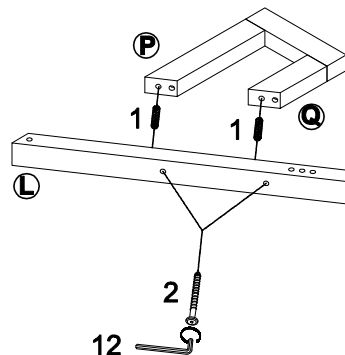


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

1	
2PCS	
2	
2PCS	

STEP 3:

Following below illustration Assembly FRAME #3.
Using hardware #1 & #7 connect N and O Cap of bed (back left-right) with L and M Cap of bed (front left-right) to complete FRAME #3L/R.

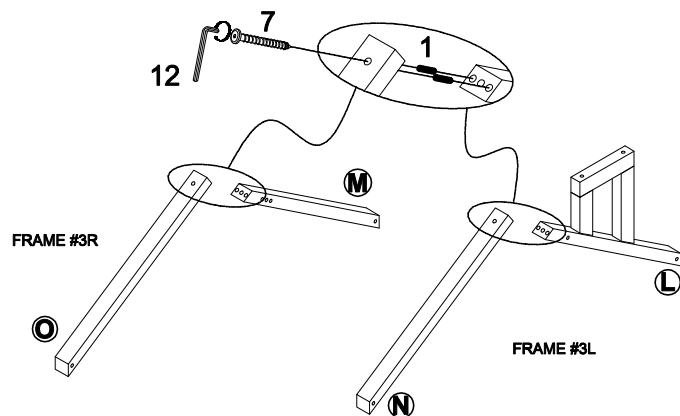


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

1	
4PCS	
7	
2PCS	

STEP 4:

Following below illustration Assembly FRAME #4.
Using hardware #1, #2 & #4 connect FRAME #3L (L and M Cap of bed (front left-right)) with T Horizontal (top middle) to complete FRAME #4.

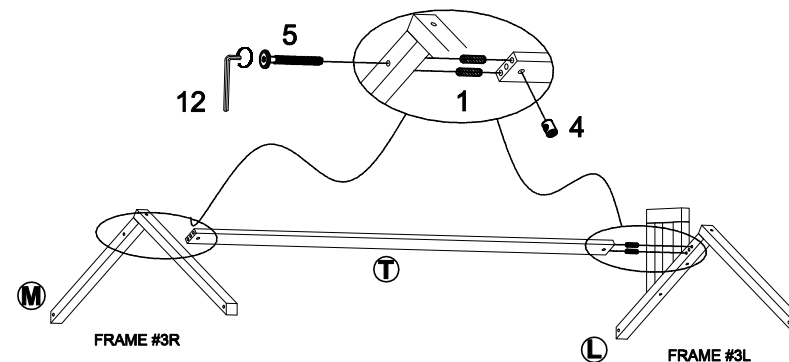


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

1	
4PCS	
5	
2PCS	
4	
2PCS	

STEP 5:

Following below illustration Assembly FRAME #5.
Using hardware #8 connect L, M, N and O Cap of bed with S and U Horizontal (top front-back) to complete FRAME #5.

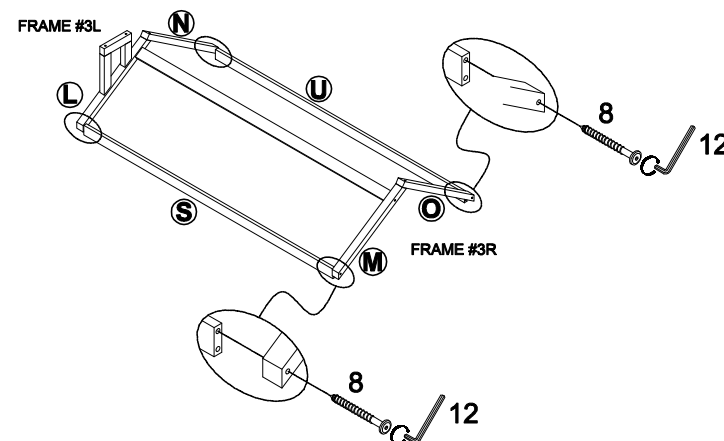


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

8	
4PCS	

STEP 6: Following below illustration Assembly FRAME #6.

Using hardware #1 & #8 connect A and B Front-back left leg with E and F HB-FB Horizontal (lower-upper) and insert G HB-FB panel into the middle groove E HB-FB Horizontal (lower)
And using hardware #1 & #8 connect C and D Front-back right leg with E and F HB-FB Horizontal (lower-upper) and insert G HB-FB panel into the middle groove E HB-FB Horizontal (lower) to complete FRAME #6.

1	2
20PCS	20PCS

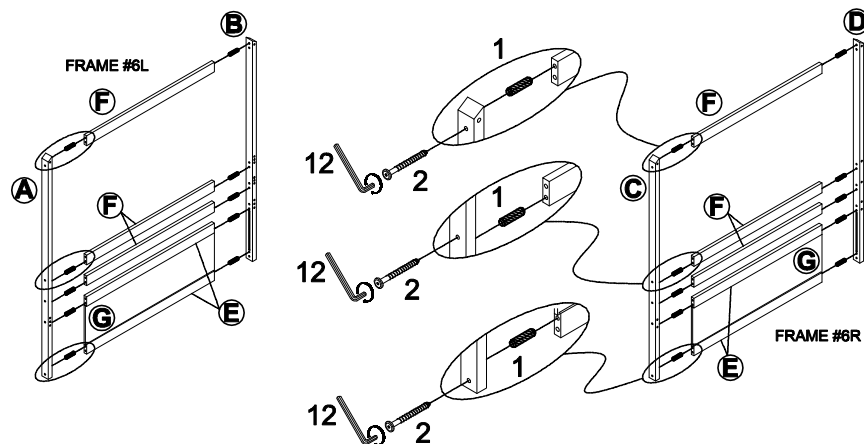


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

STEP 7: Following below illustration Assembly FRAME #7.

Using hardware #10 connect Wood lock DD with H Front side rail to complete FRAME #7.

10
6PCS

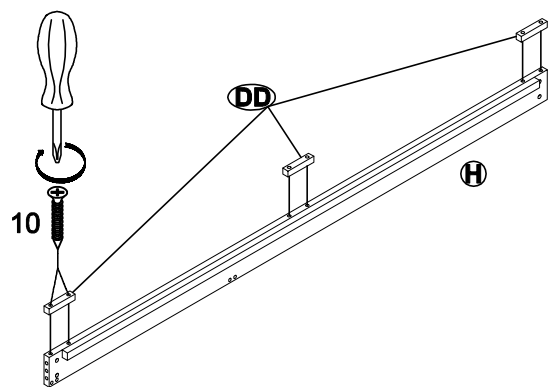


7

STEP 8: Following below illustration Assembly FRAME #8.

Using hardware #1, #3 & #4 connect FRAME #6L (A and B Front-back left leg) with H and I Front-back side rail and J Back horizontal, And using hardware #1, #3 & #4 connect FRAME #6R (C and D Front-back right leg) with H and I Front-back side rail and J Back horizontal to complete FRAME #8.

1	3	4
12PCS	12PCS	12PCS

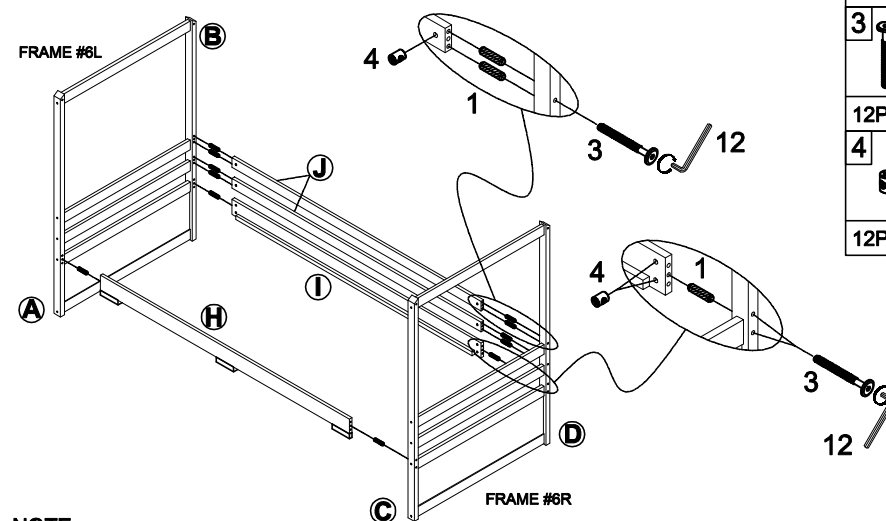


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

STEP 9: Following below illustration Assembly FRAME #9.

Using hardware #6 connect K Back vertical with I Back side rail and J Back horizontal to complete FRAME #9.

6
3PCS

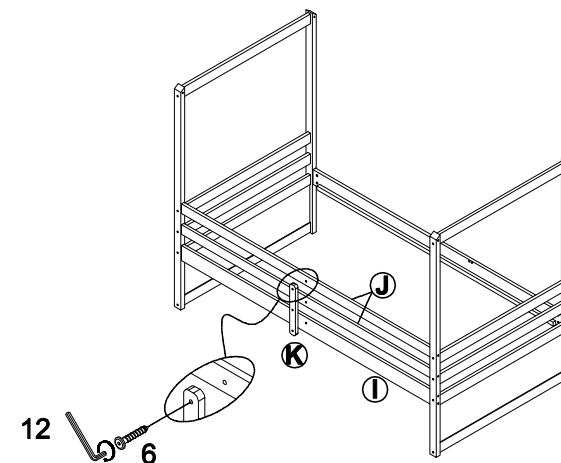



NOTE: In this step, DO NOT tighten any bolt until you connect all part together

8

STEP 10: Following below illustration Assembly FRAME #10.

Move the FRAME #5 put on the FRAME #9


Using hardware #8 connect A, B, C and D Leg of bed with S and U Horizontal (top front-back) to complete FRAME #10.

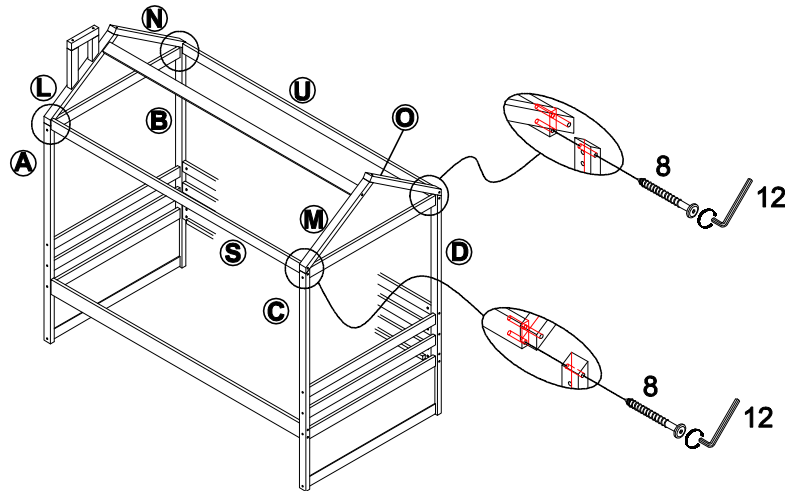

NOTE: In this step, DO NOT tighten any bolt until you connect all part together

STEP 11: Following below illustration Assembly FRAME #11.

Using hardware #6 connect V Front vertical with the Front frame W to complete FRAME #11.


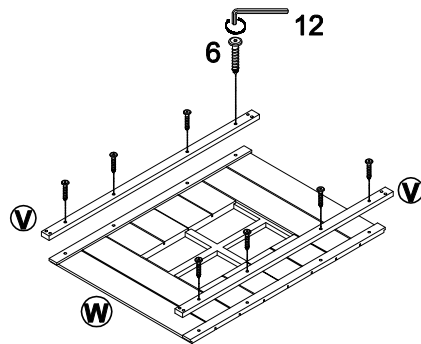


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

9

STEP 12: Following below illustration Assembly FRAME #12.

Using hardware #6 connect V Front vertical with the FRAME #10 (H Front side rail and S Horizontal (top front) to complete FRAME #12.

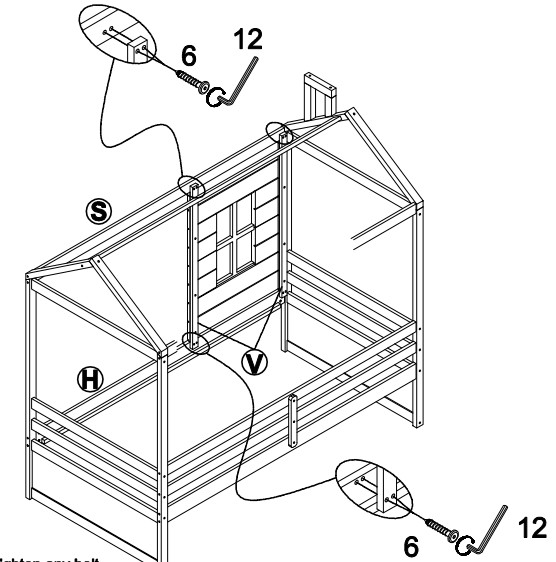


NOTE: In this step, DO NOT tighten any bolt until you connect all part together

STEP 13: Following below illustration Assembly FRAME #13.

Using hardware #10 connect to screw all Wood slats 15 with FRAME #12 on all the Bed. to complete FRAME #13.

WARNING:

Please completed screw all the slats in to side rails before using.

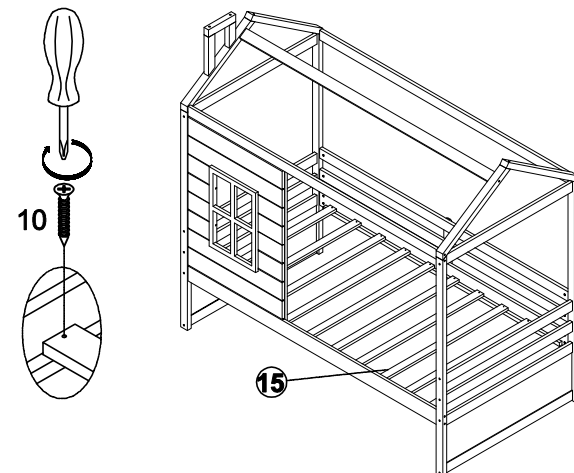

10


STEP 14: Following below illustration Assembly FRAME #14.

Using hardware #10 connect Y Drawer side with X Drawer front
And insert BB Drawer support into the middle groove X Drawer front
to complete FRAME #14.

10



8PCS

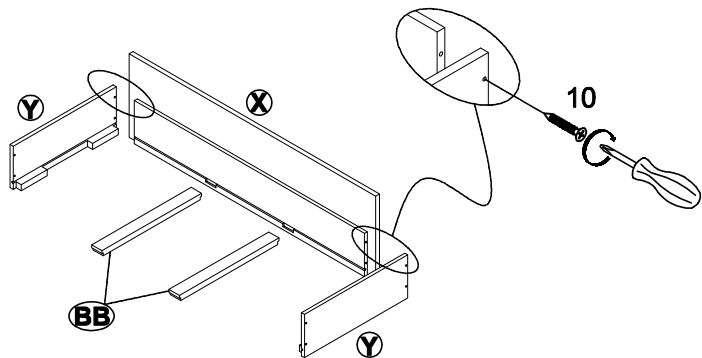


STEP 15: Following below illustration Assembly FRAME #15.

Insert AA Drawer bottom into the middle groove Y Drawer side to the Drawer X and move Z Drawer back into Y Drawer side,
Using hardware #10 connect Y Drawer side with Z Drawer back to complete FRAME #15.

10



8PCS

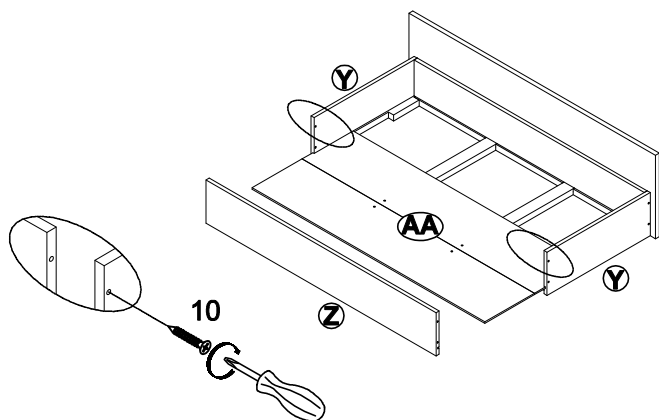

11


STEP 16: Following below illustration Assembly FRAME #16.

Using hardware #9 connect AA Drawer bottom with BB Drawer support to complete FRAME #16.

9



8PCS

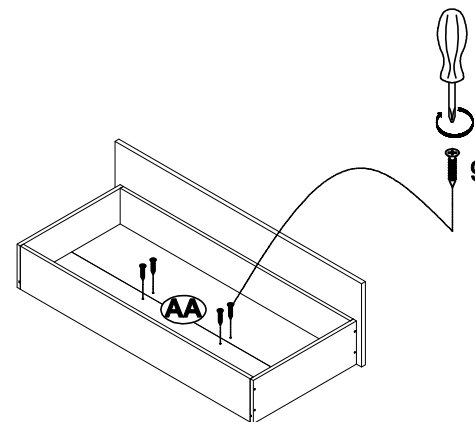

STEP 17: Following below illustration Assembly FRAME #17.

Using hardware #9 connect #11 Wheel with Y Drawer side to complete FRAME #17.

9




16PCS

11



8PCS

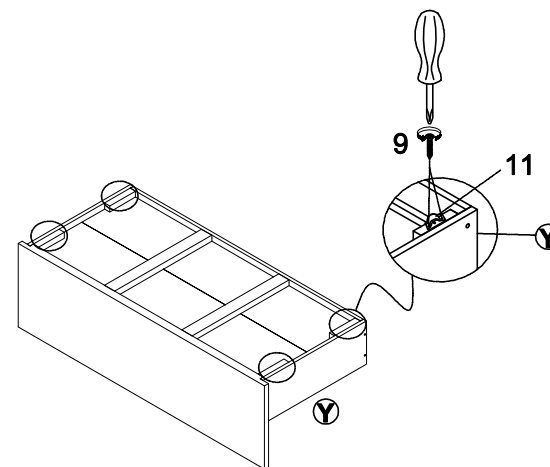

12

COMPLETED

