

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)


















## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 60 minutes.
- \* Tools Required for Assembly : Allen Key, Screwdriver, Wooden hammer.

## CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.

### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Board		1X
B	Bottom Board		1X
C	Side Board Left		1X
D	Back Board		1X
E	Side Board Right		1X
F	Leg Left		1X
G	Leg Right		1X
H	Rod 1		2X
I	Rod 2		1X
J	Drawer Board Front		1X
K	Drawer Side Board Left		1X
L	Drawer Back Board		1X
M	Drawer Side Board Right		1X
N	Drawer Support Board		1X
O	Drawer Bottom Board		1X
P	Drawer Handle		2X
Q	Drawer Slider		2X



**Model# DSK2201**

**Product Dimensions: 43.3"W x 21.7"D x 29.5"H**
















**⚠ WARNING ⚠**

**Weight Capacity: 55 lbs.**



**Warning: Do not stand on Desk.**

**Warning: Do not over torque bolts.**

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Screw M3.5 x 12 mm		8X
HW2	Bolt M6 x 95 mm		6X
HW3	Bolt M6 x 45 mm		2X
HW4	Bolt M6 x 20 mm		4X
HW5	Bolt M6 x 12 mm		4X
HW6	Dowel		12X
HW7	Cambolt M6 x 45mm		2X
HW8	Camlock M15 mm		2X
HW9	Screw M4 x 35 mm		6X
HW10	Cambolt M6 x 27mm		6X
HW11	Camlock M10 mm		6X
HW12	Screw M4 x 25 mm		10X
HW13	Allen Key		1X



## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 60 minutes.
- \* Tools Required for Assembly : Allen Key, Screwdriver, Wooden hammer.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

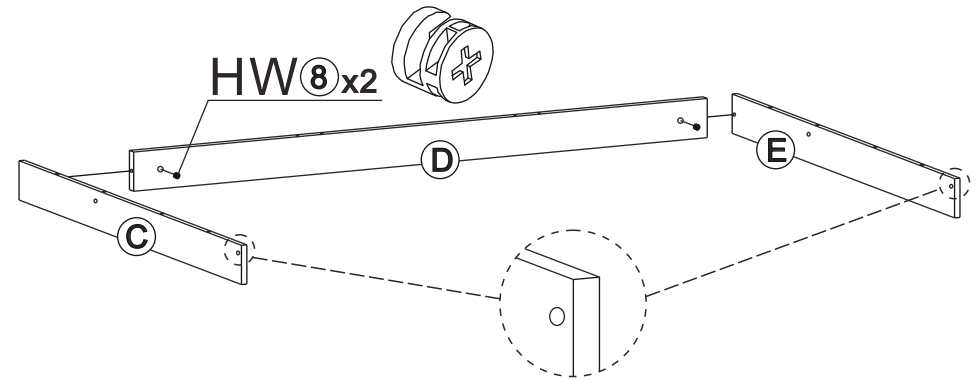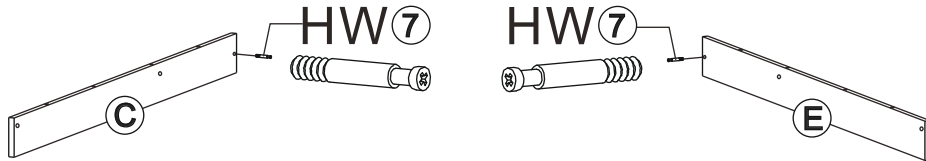


**STEP1:** Attach HW⑦ in pre-drilled holes of part③,⑤.

**STEP2:** Put HW⑧ in pre-drilled holes of part④, attach part③,⑤ to ④, tighten HW⑧ to assemble them.

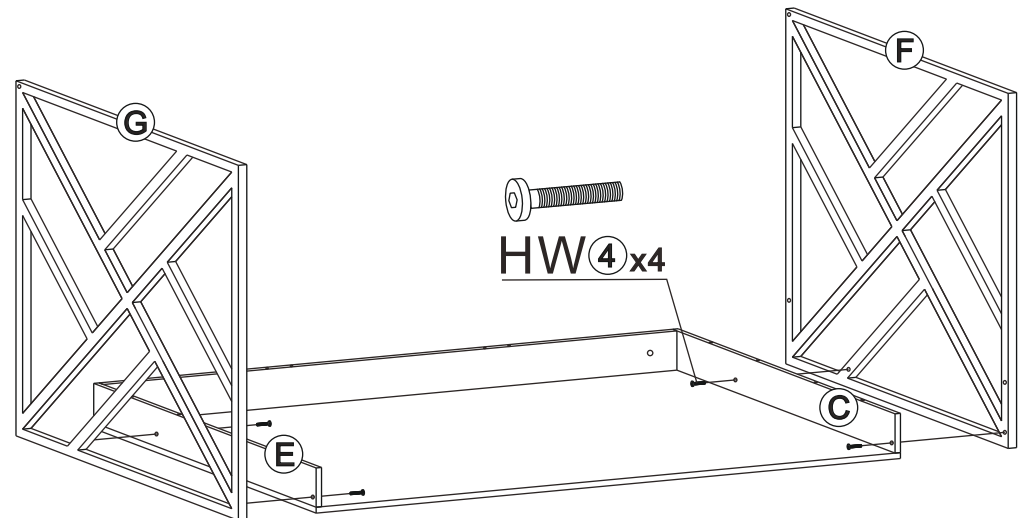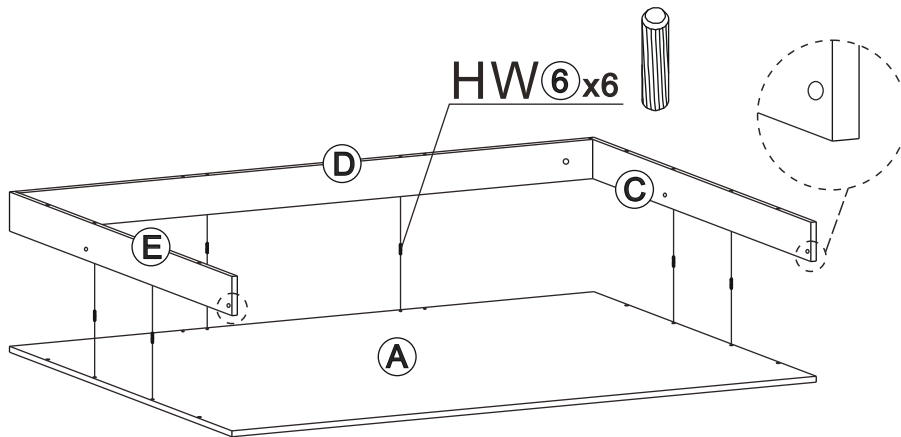


**STEP3:** Flip over the unit, attach the unit to part① using HW⑥.


**STEP4:** Attach part⑦ to ⑤, attach part⑧ to ③ using HW④.

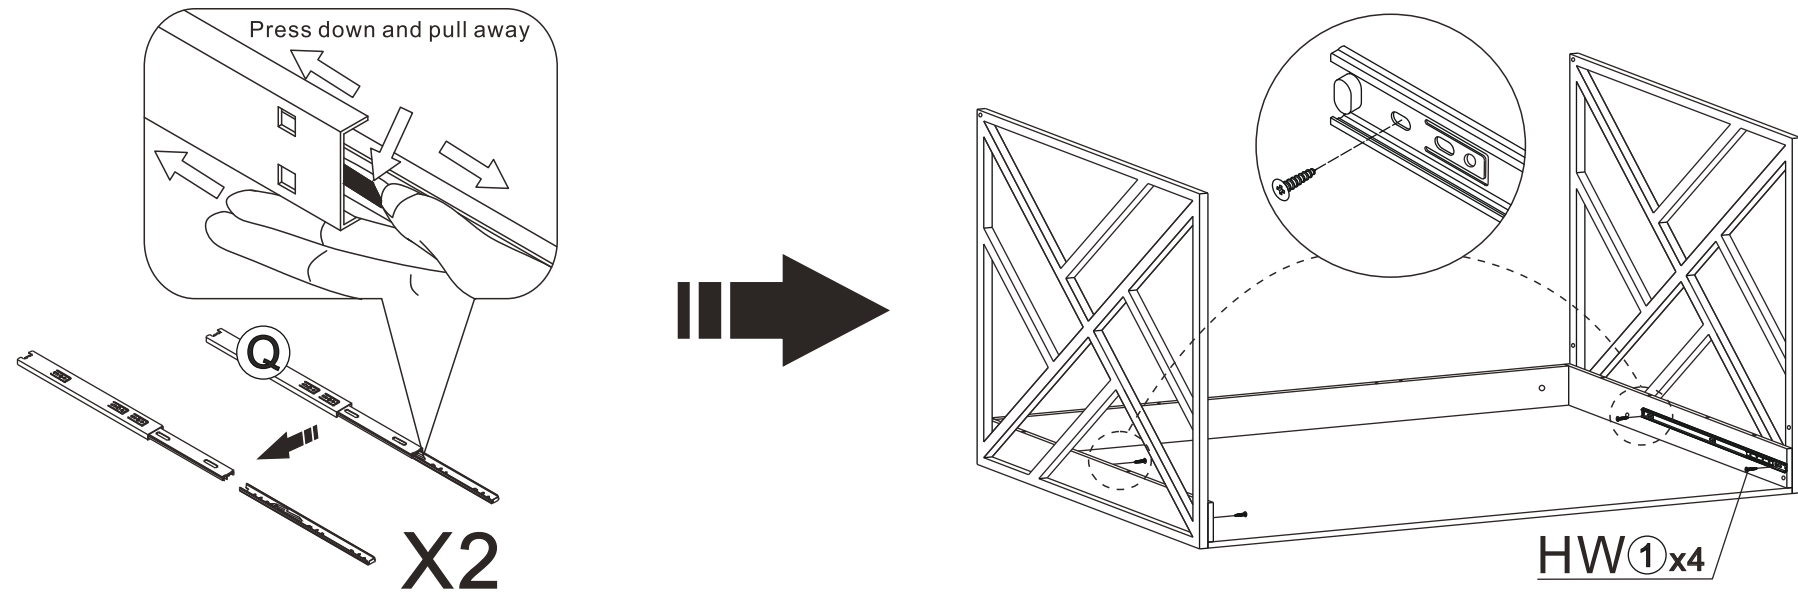


**STEP5:** Separate part **Q** into two parts, attach the big part of **Q** to part **C**, **E** using **HW 1**.

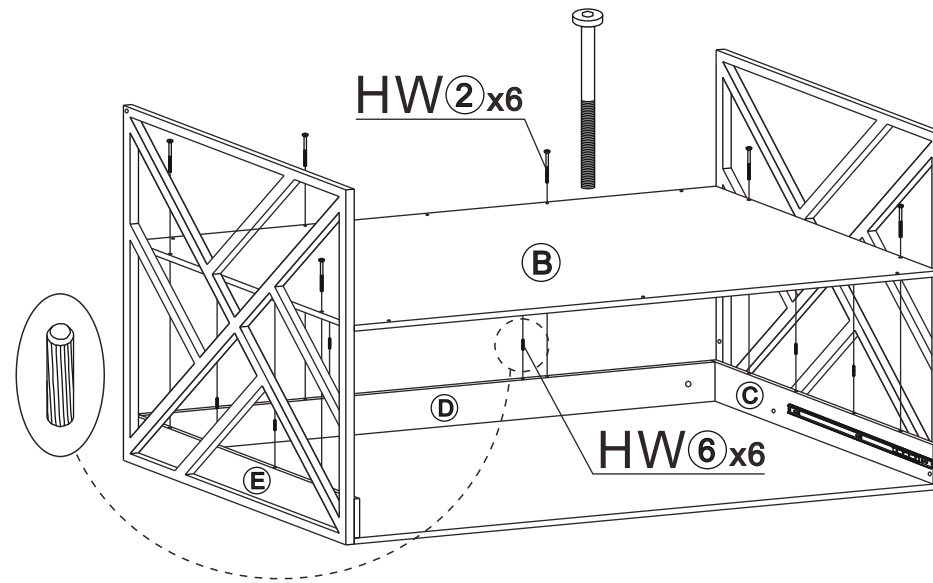


**STEP6:** Attach part **C**, **D**, **E** to **B** using **HW 6**, insert **HW 2** in pre-drilled holes and tighten them.

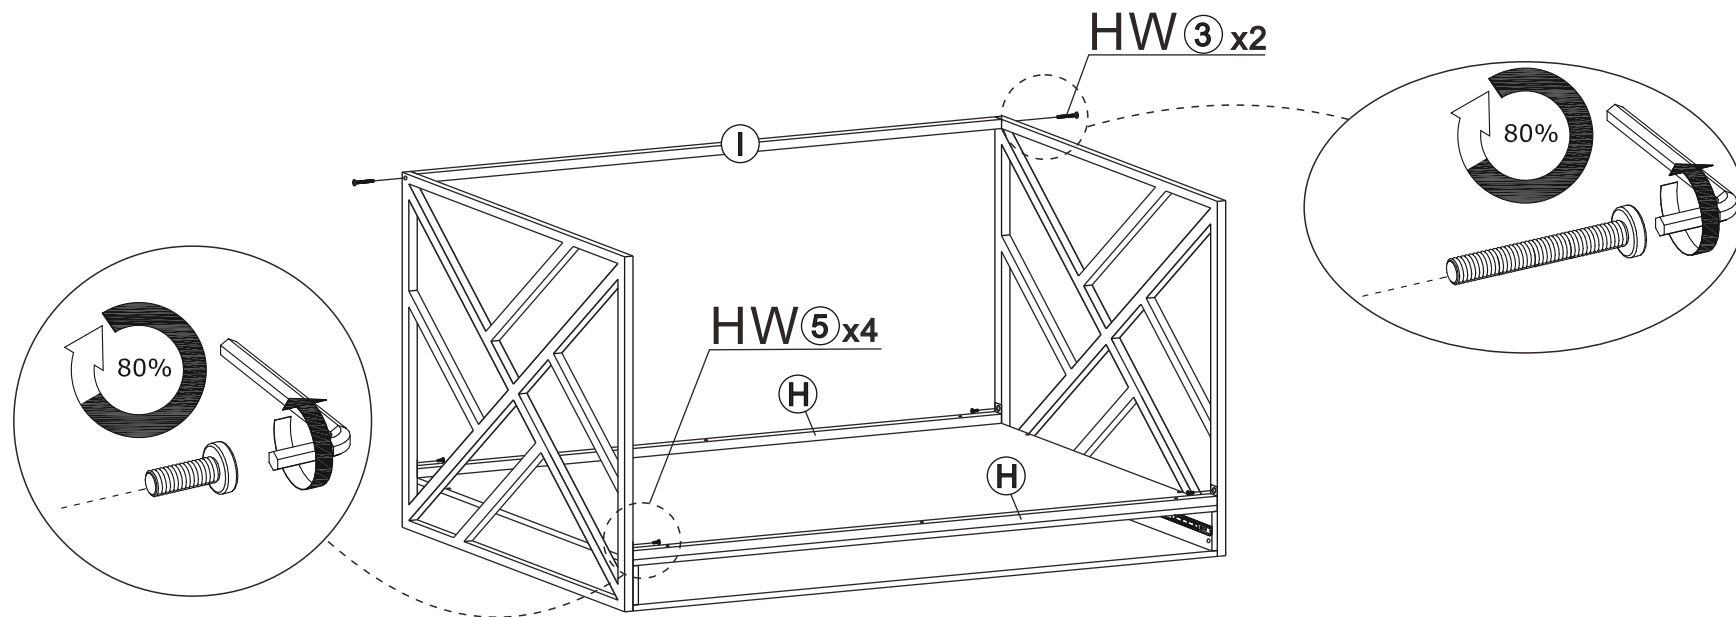


**STEP7:** Attach part ① to ⑥, ⑦ using HW ③, attach part ⑧ to ⑥, ⑦ using HW ⑤, please make HW ③, HW ⑤ to be locked 80% only.

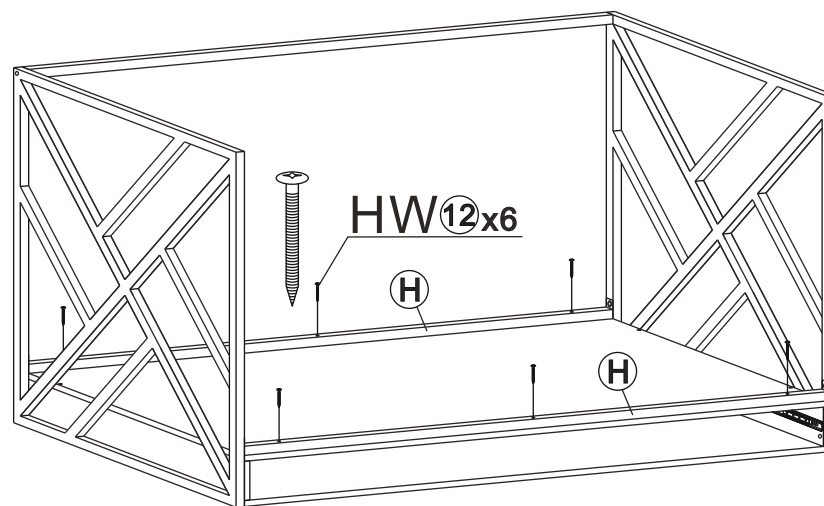


**STEP8:** Attach part ⑧ to ⑥ using HW ⑫.

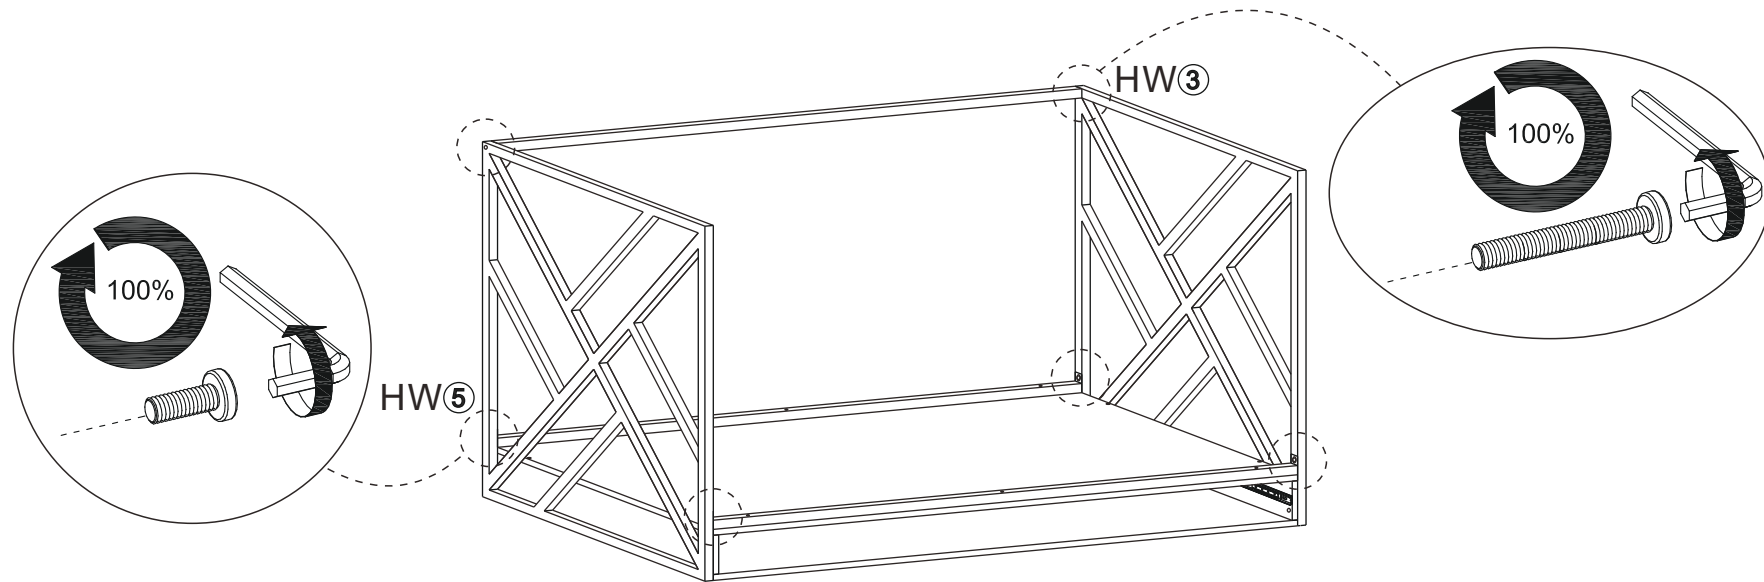


**STEP9:** Make HW③, HW⑤ to be 100% locked.

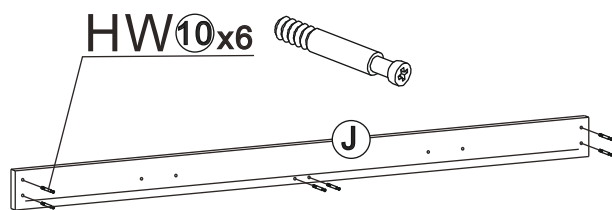

**STEP10:** Attach HW⑩ to part ①.

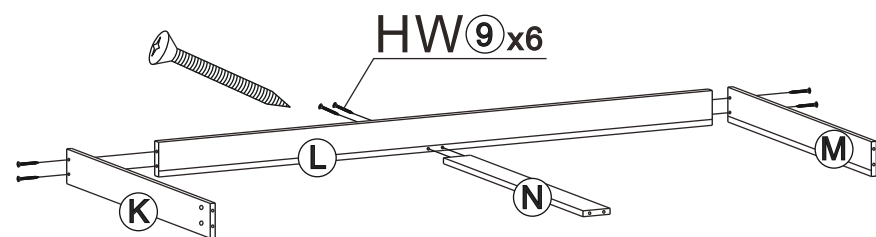


**STEP11:** Attach part ①, ③, ④ to ② using HW⑨.

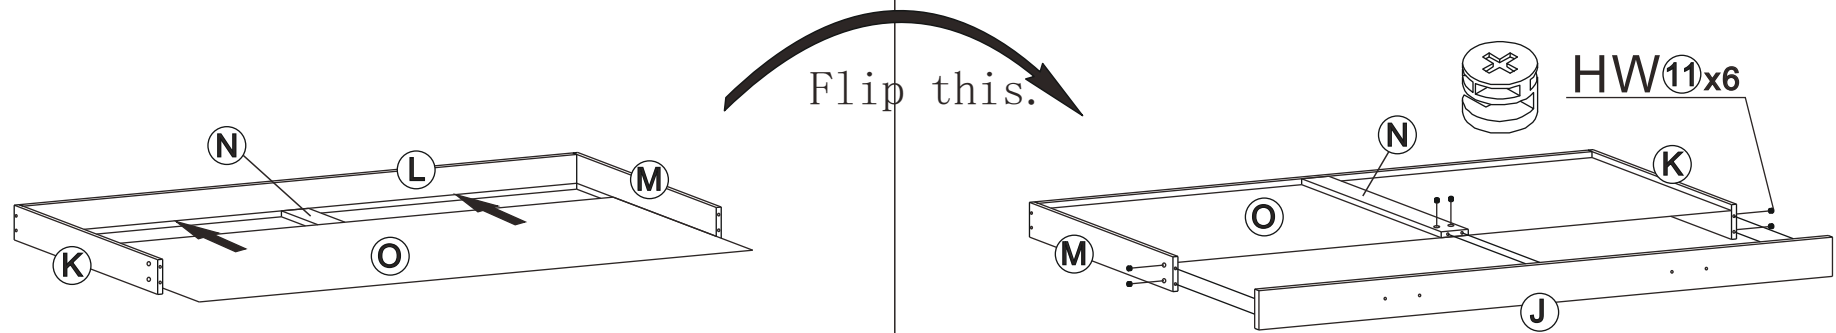


**STEP12:** Insert part⓪ in the unit.


**STEP13:** Put HW11 in pre-drilled holes of partⓂ,Ⓝ,Ⓚ, attach partⓐ to the unit, tighten HW11.

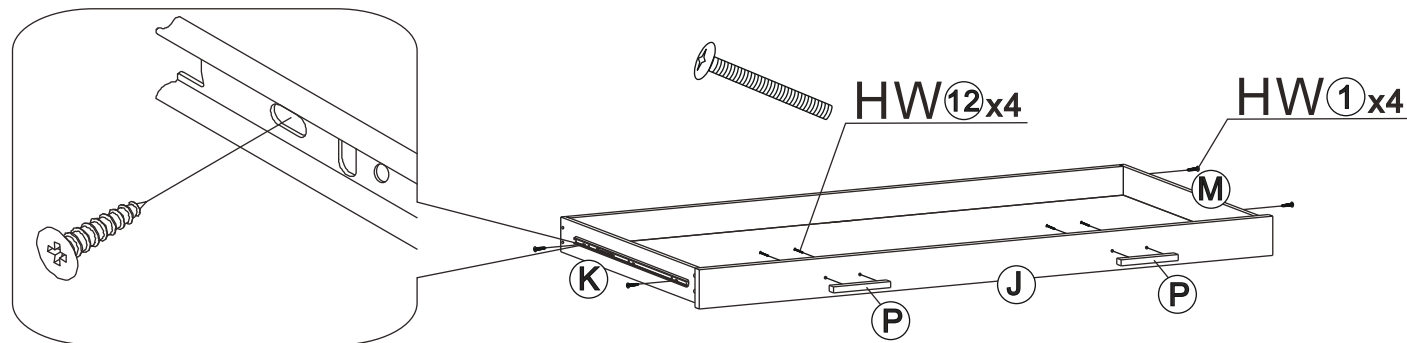

**STEP14:** Attach partⓑ toⓐ using HW12, attach the small part ofⓐ to partⓀ,Ⓜ using HW1.

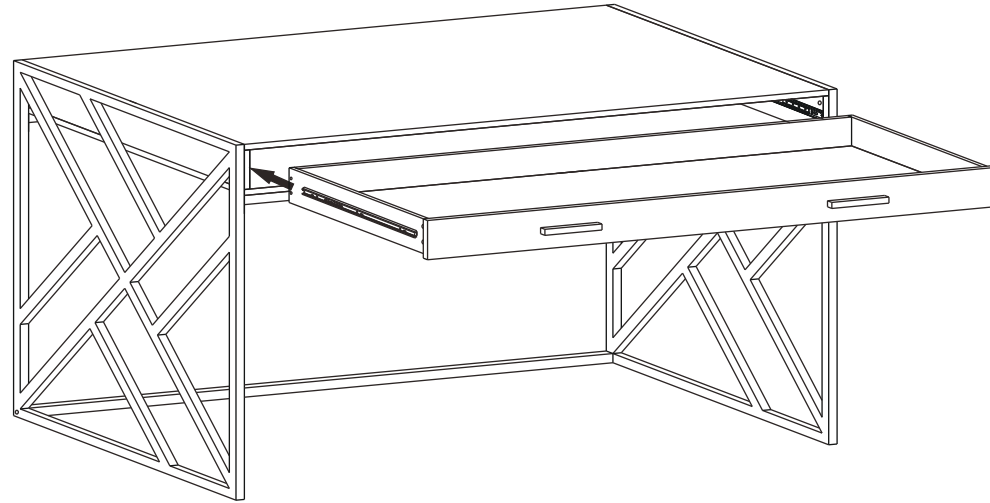

**STEP15:** Slide the drawer in the desk.

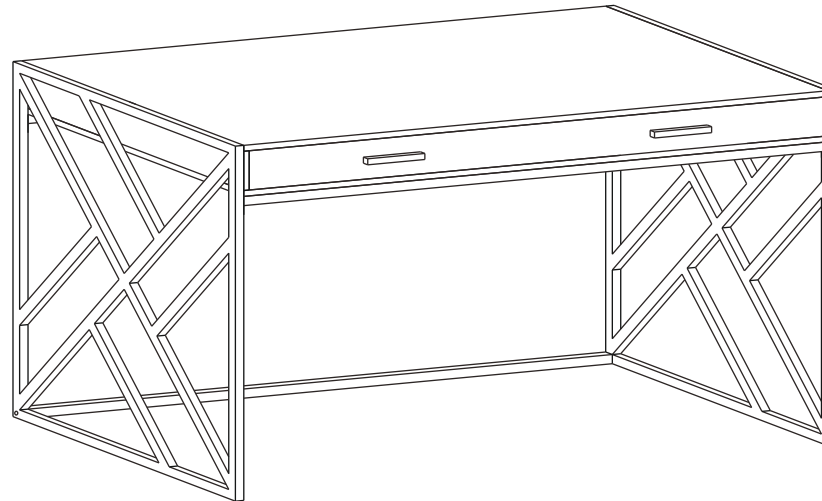

**STEP16:** Finish.