

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening









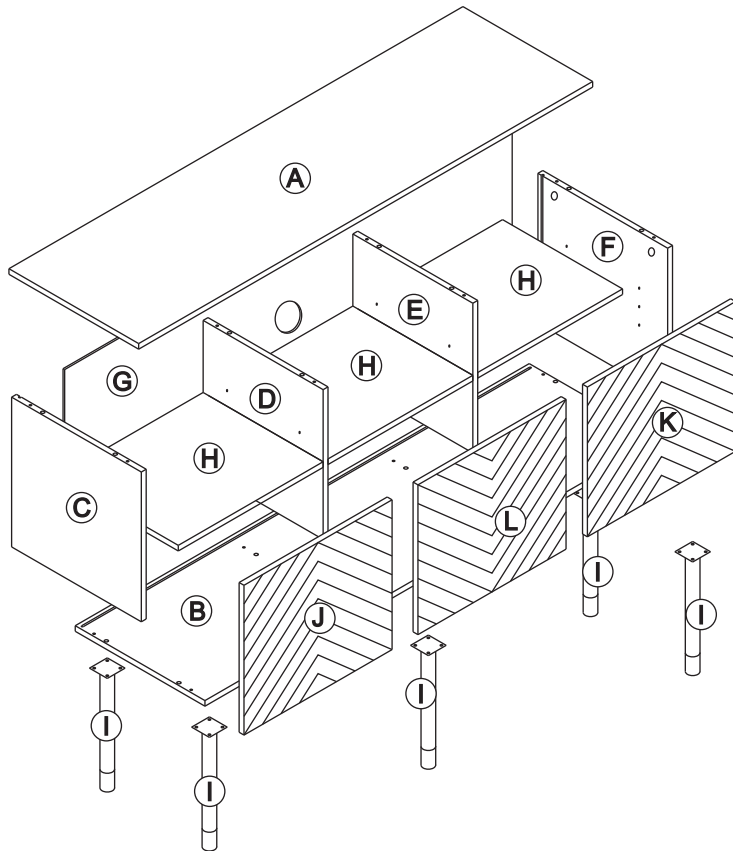











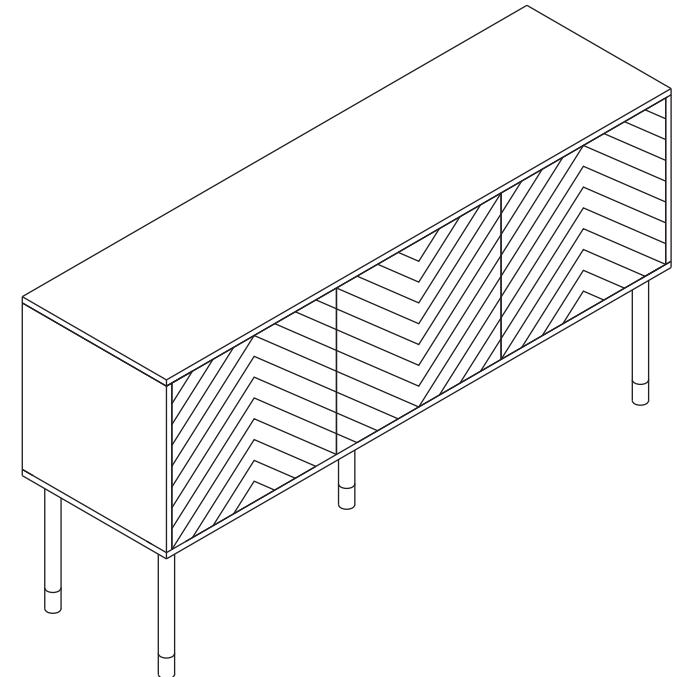
Model# MED2201

Product Dimensions: 55.1"W×15.7"D×29.5"H

Part List and Hardware List



HW1x8 	HW2x8 	HW3x16 
HW4x3 	HW5x6  3.5x12mm	HW6x8 
HW7x20  5x14mm	HW8x4 	HW9x4  3.5x18mm
HW10x12 	HW11x2 	HW12x4 
HW13x36  5x14mm	HW14x2  4x12mm	HW15x2  4x50mm
HW16x2 	HW17x4 	HW18x2 




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.


1

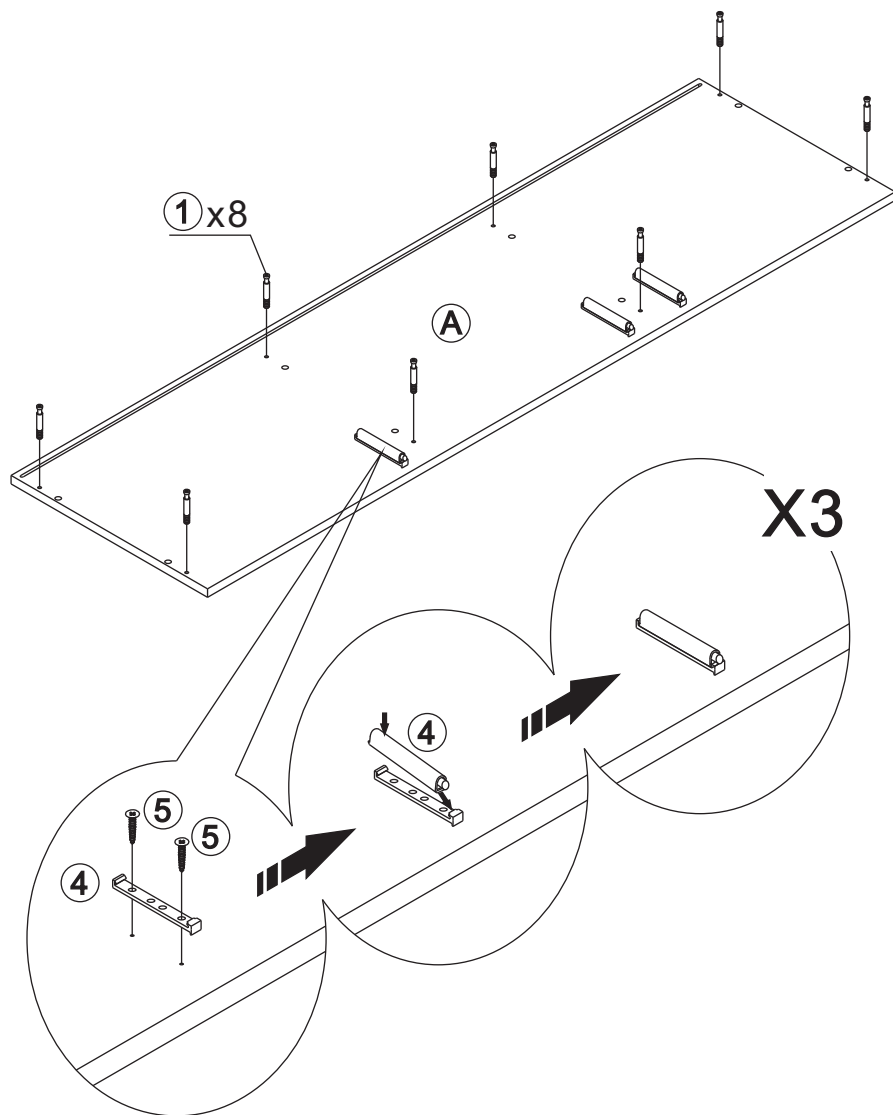


2

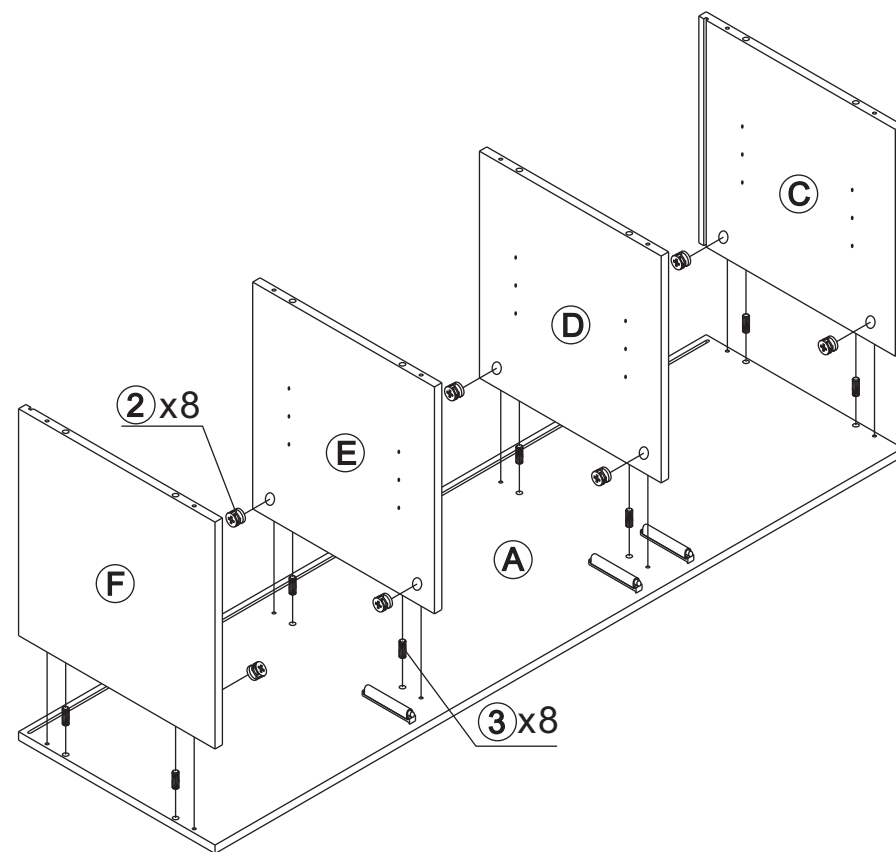


3

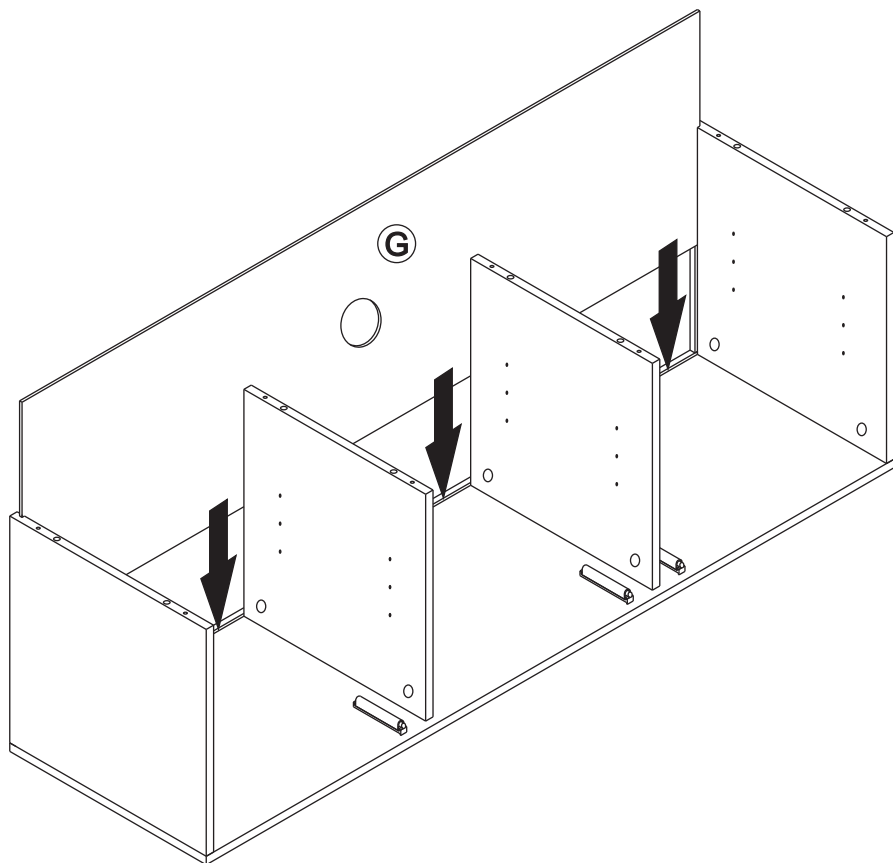


4

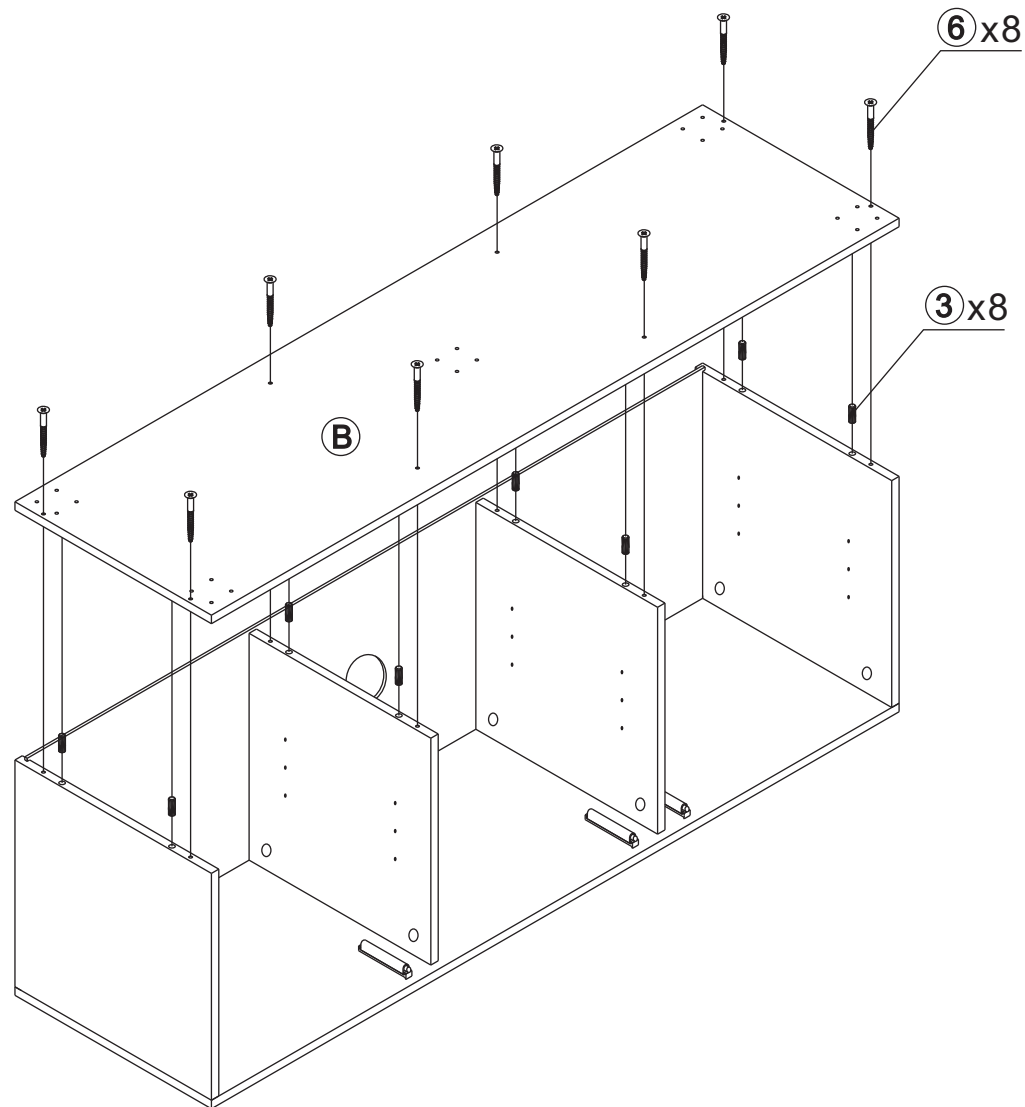


5

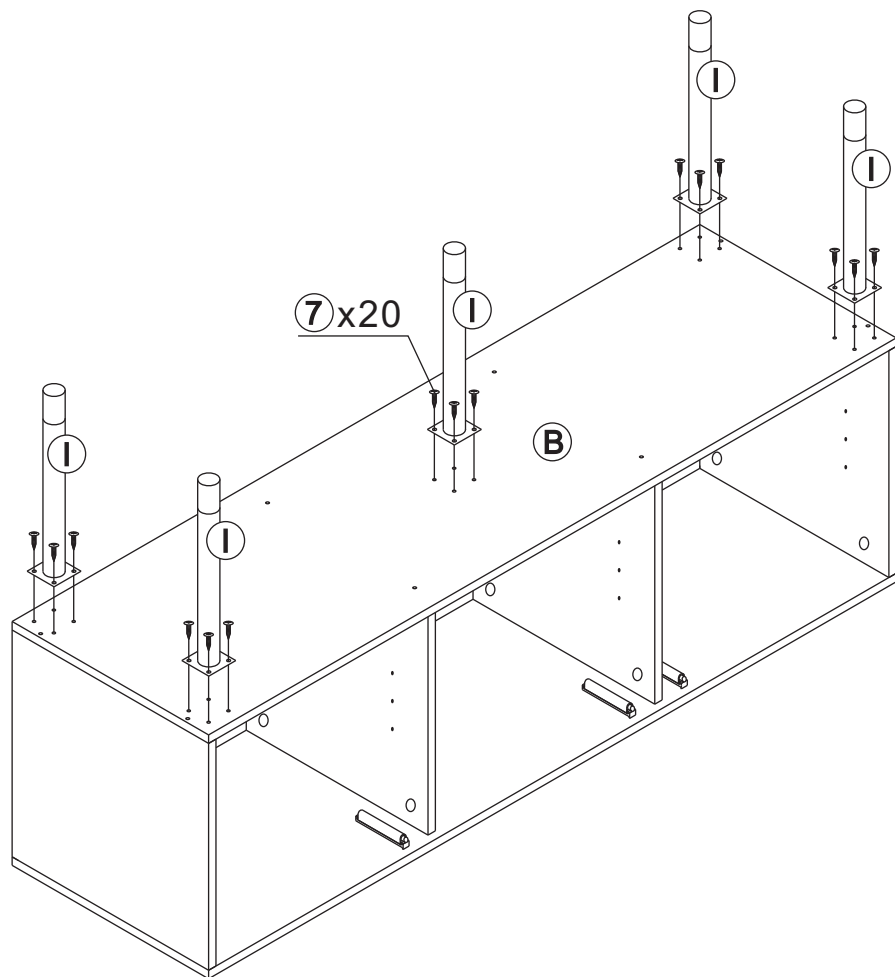


6

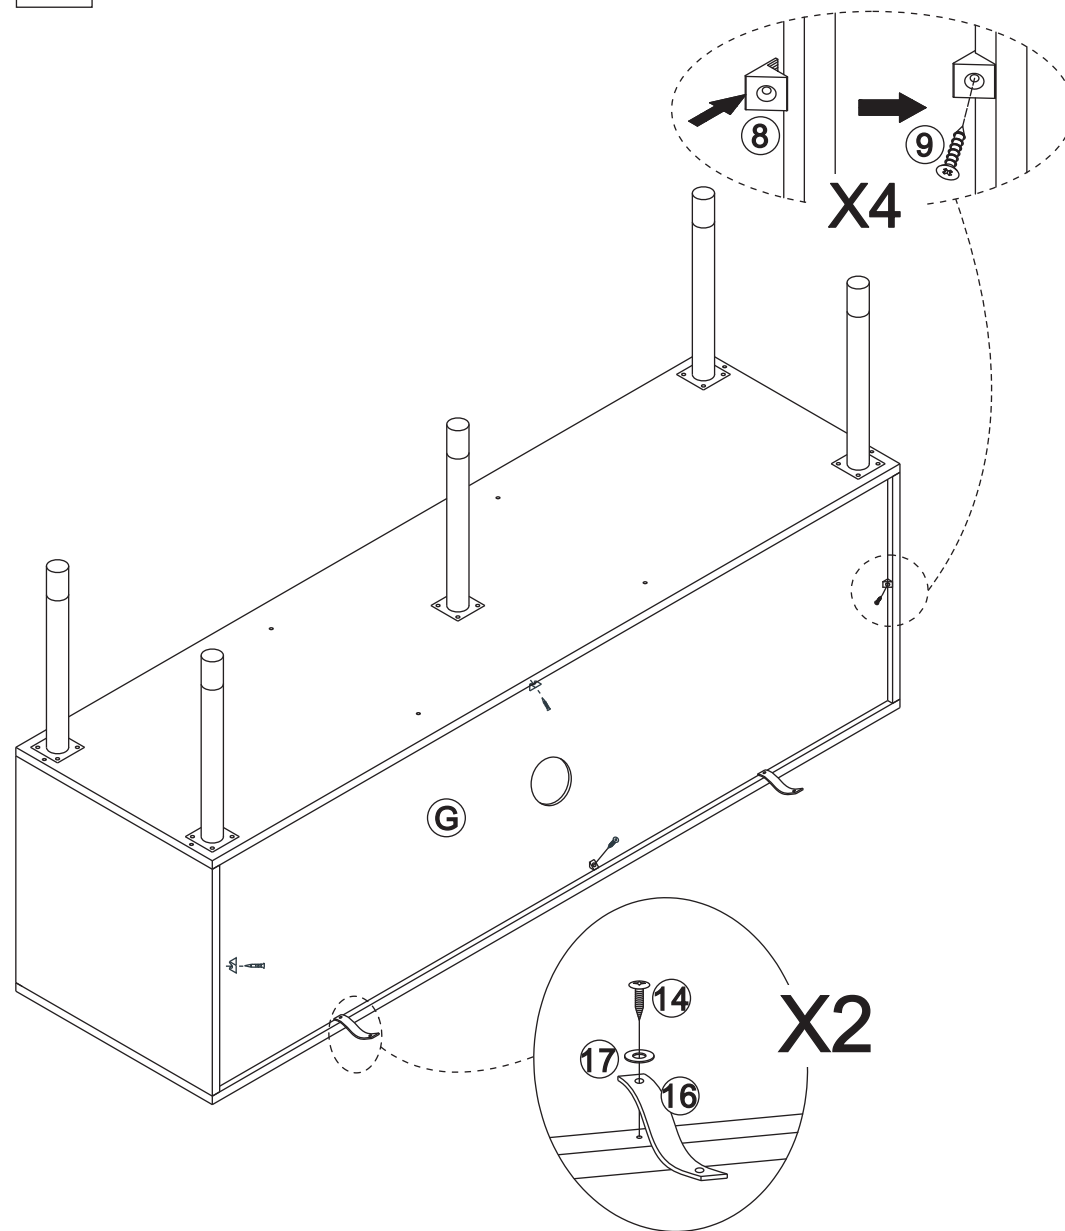



7

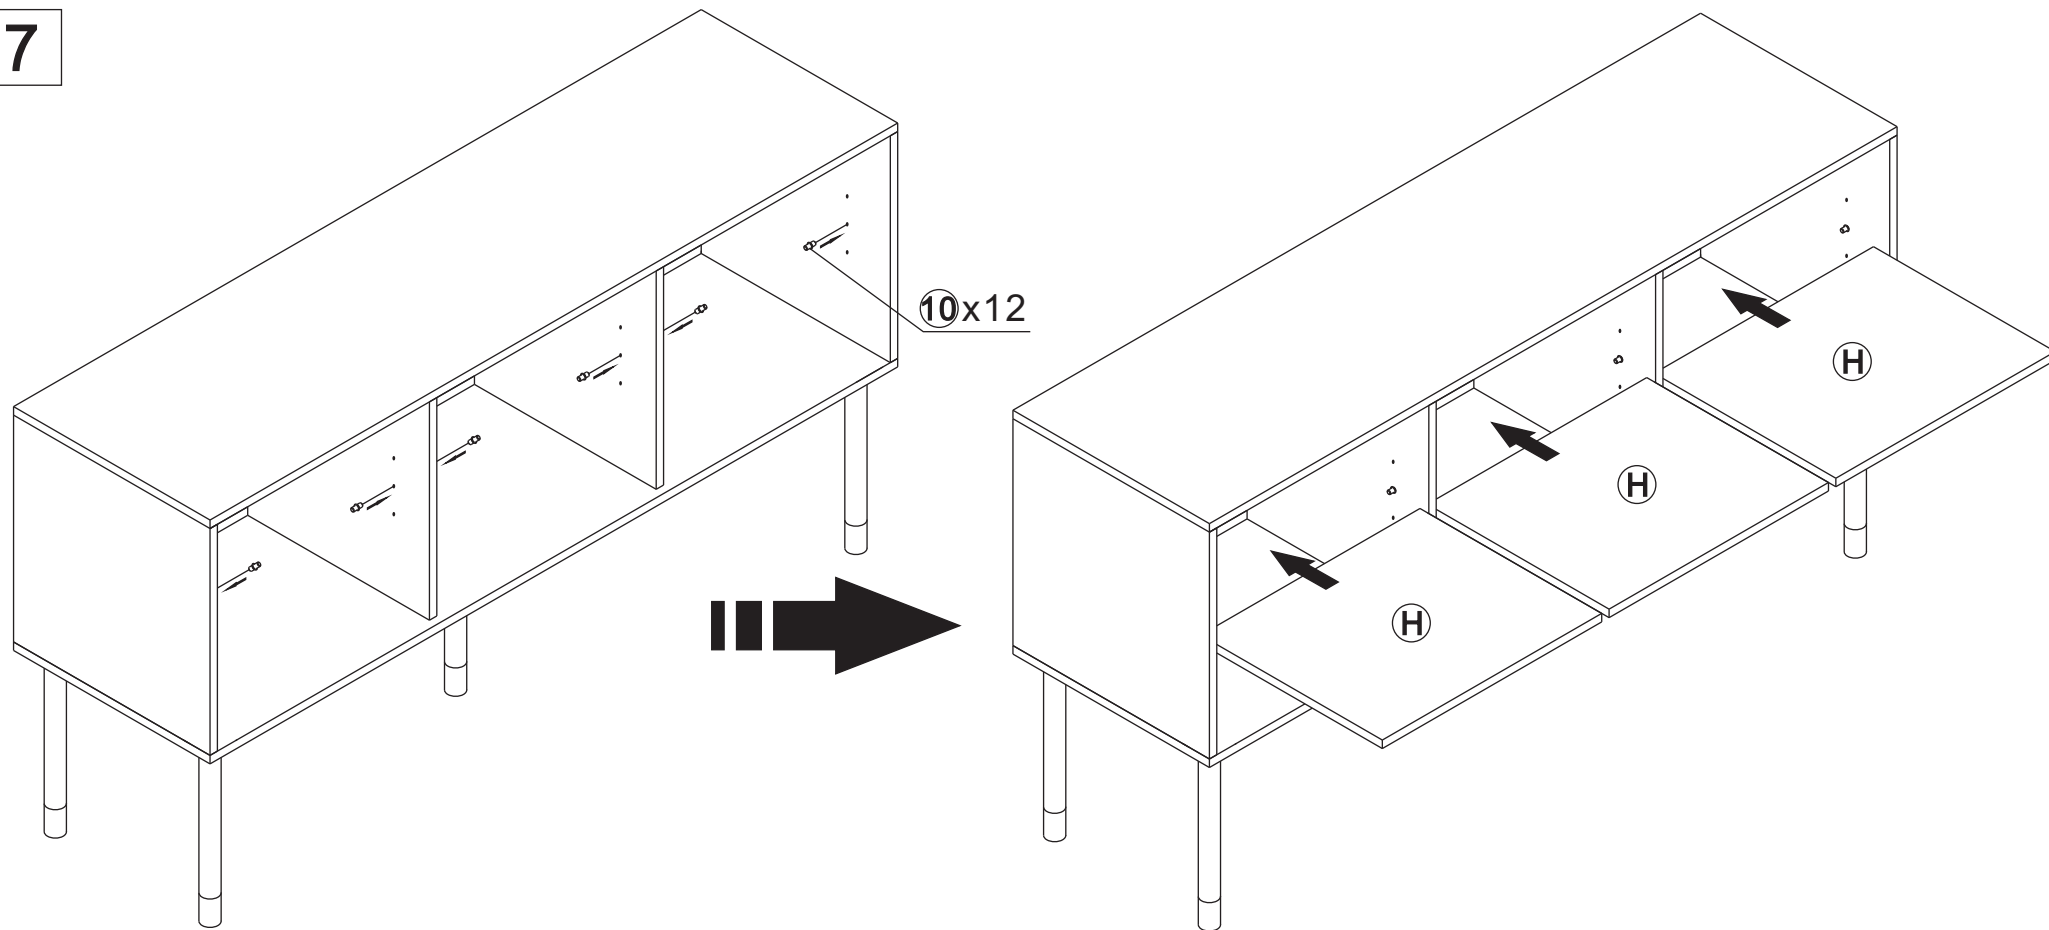

8

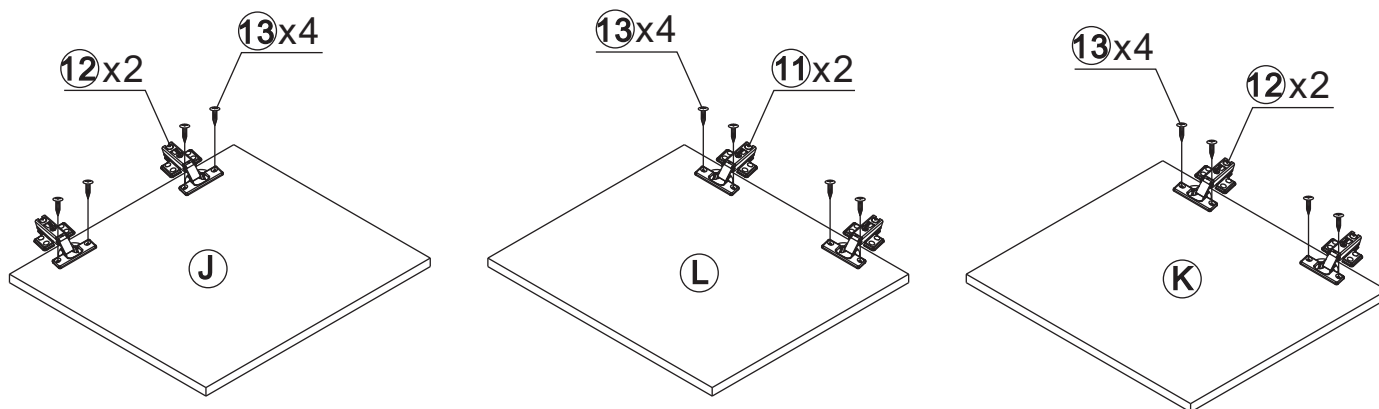

9

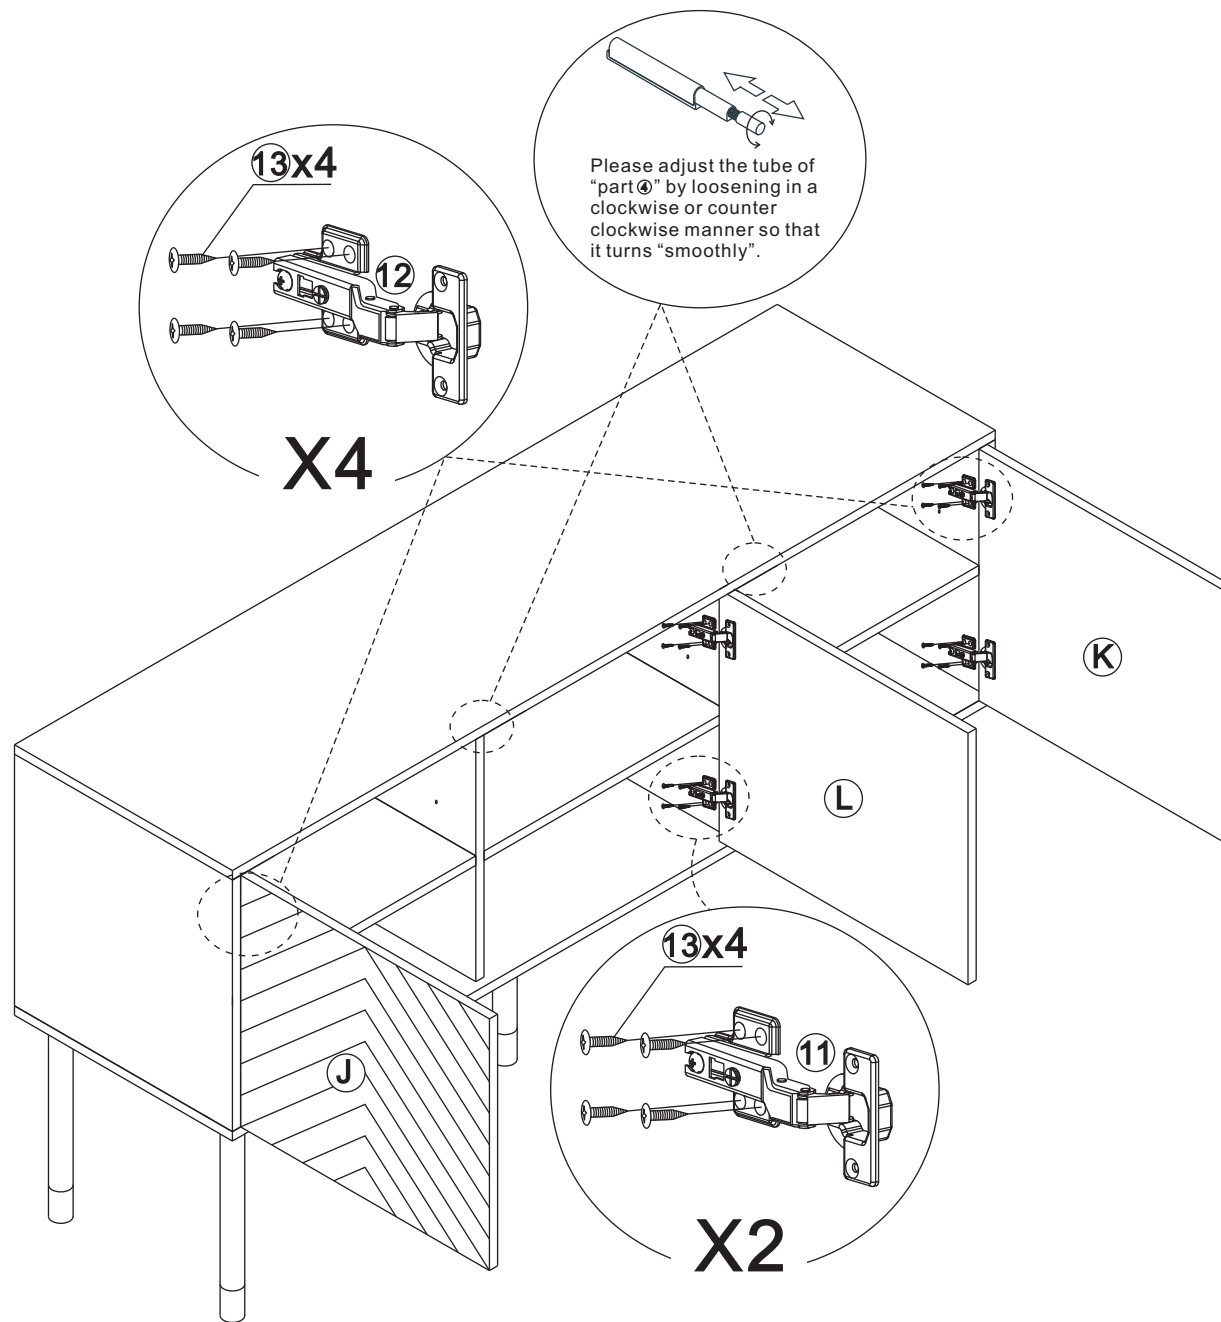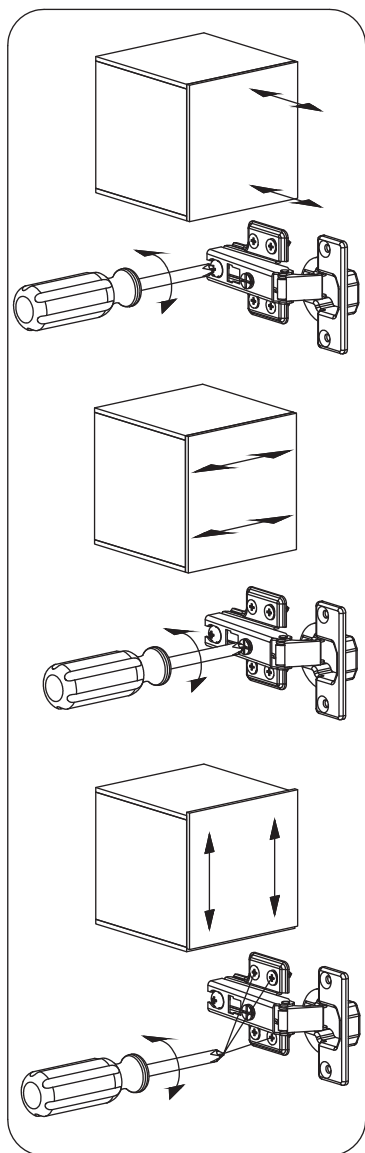

10

