



ASSEMBLY INSTRUCTIONS

FULL SIZE DAY BED WF198307/ WF198308

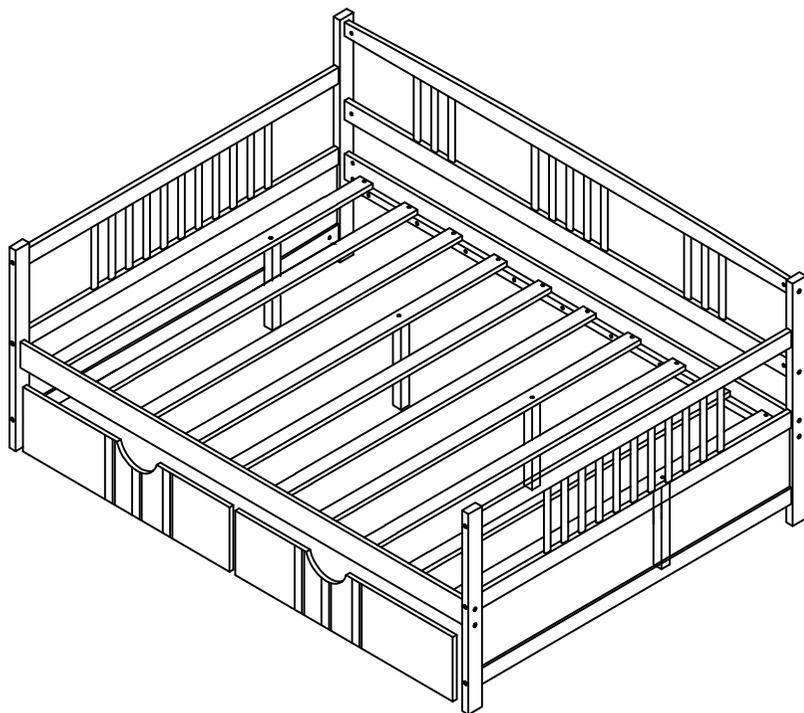






1

Detail View

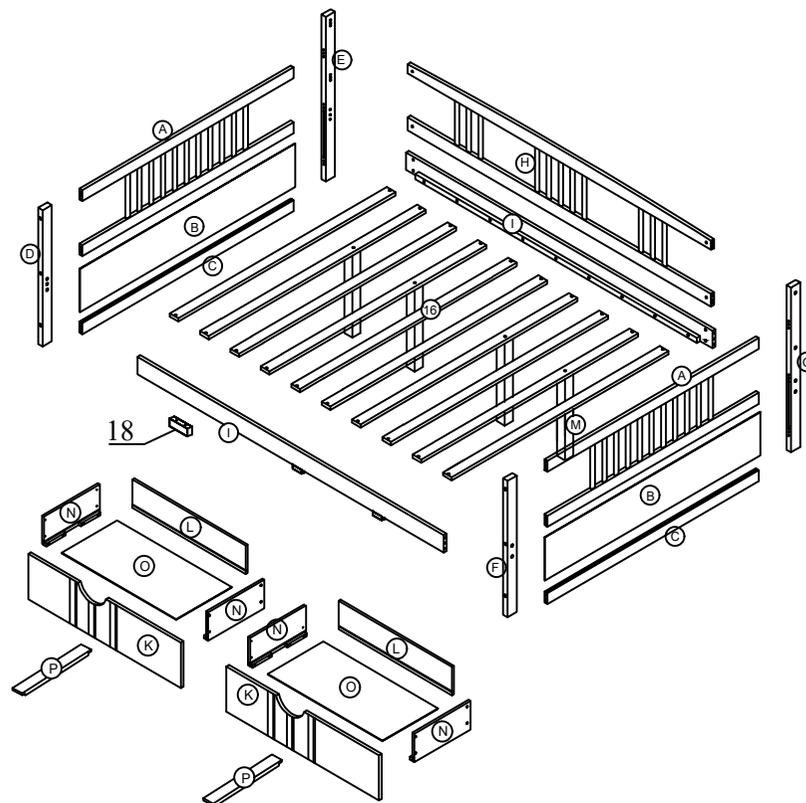

2


Part List: WF198307

A  HB & FB - 2pcs	B  Side panel - 2pcs	C  Horizontal bar - 2pcs
D  Leg left (Front) - 1pc	E  Leg left (Back) - 1pc	F  Leg right (Front) - 1pc
G  Leg right (Back) - 1pc	H  Guard rail (Back)-1pc	I  Side rail (Back & Front)-2pcs
16  Slats - 1set (10pcs)	M  Support slat -4pcs	

Hardware List :198307


1  (Ø15)1/4**110mm Hex-Head bolts (12pcs)	2  (Ø15)1/4**85mm Hex-Head bolts (12pcs)	3  1/4**15 (9.5mm) Horizontal-Hole bolts(12pcs)
4  Ø4*30mm Wood screws (26pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  Ø10*30mm Wood dowel (36pcs)
7  (Ø15)1/4**35mm Hex-Head bolts (4pcs)	8  Wheels Ø26 (8pcs)	9  #4*20mm Wood Screws (16pcs)
18  Wood block 3pcs		12  #4*15mm Wood Screws (20pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


Part List:WF198308

O  Trundle back - 2pcs	N  Trundle back - 4pcs	L  Trundle back - 2pcs
K  Trundle front - 2pcs	P  Trundle front - 2pcs	


STEP 1:

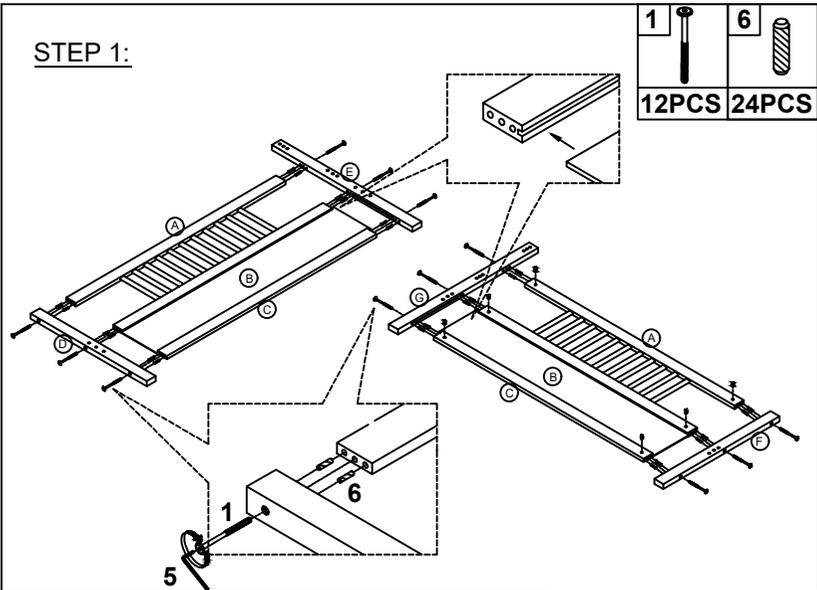


STEP 2:

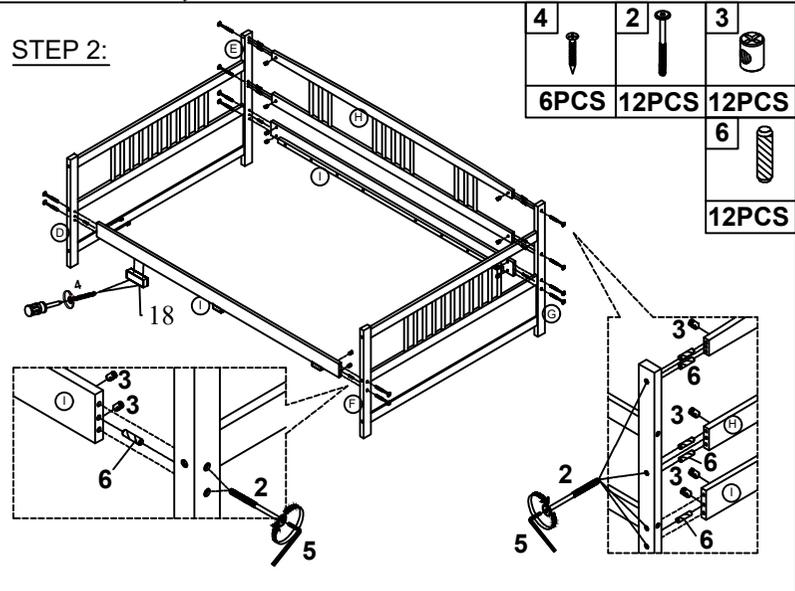


STEP 3:

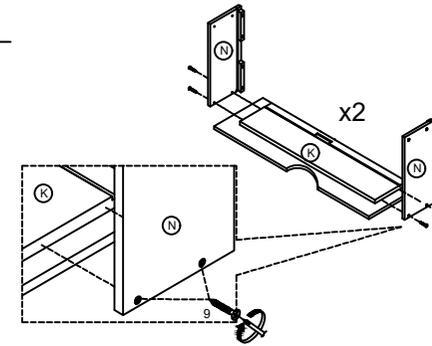


STEP 4:

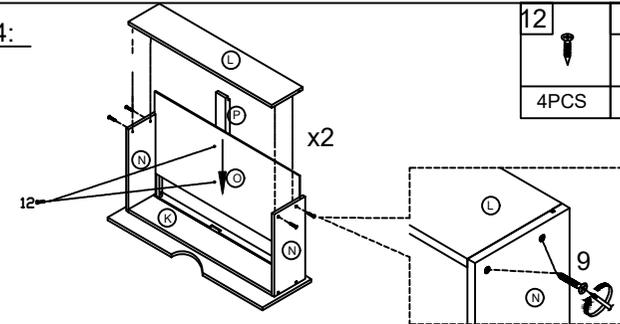

STEP 5:

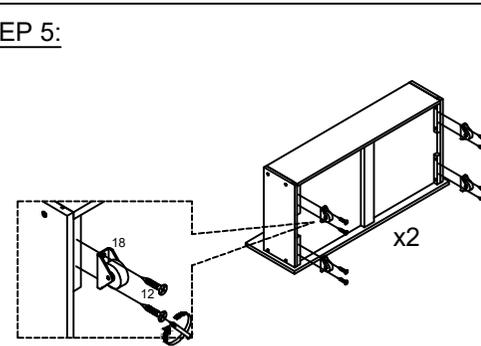

STEP 6:

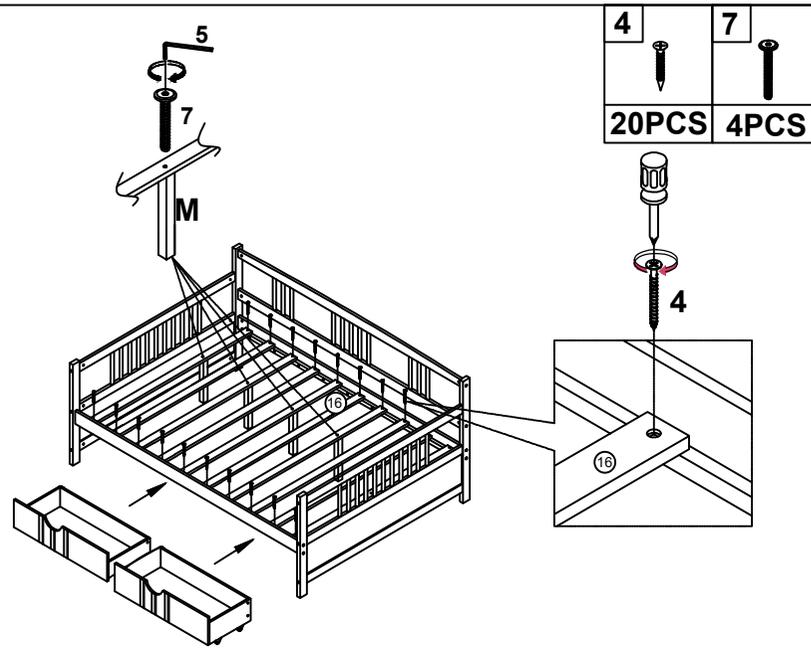

STEP 7:

