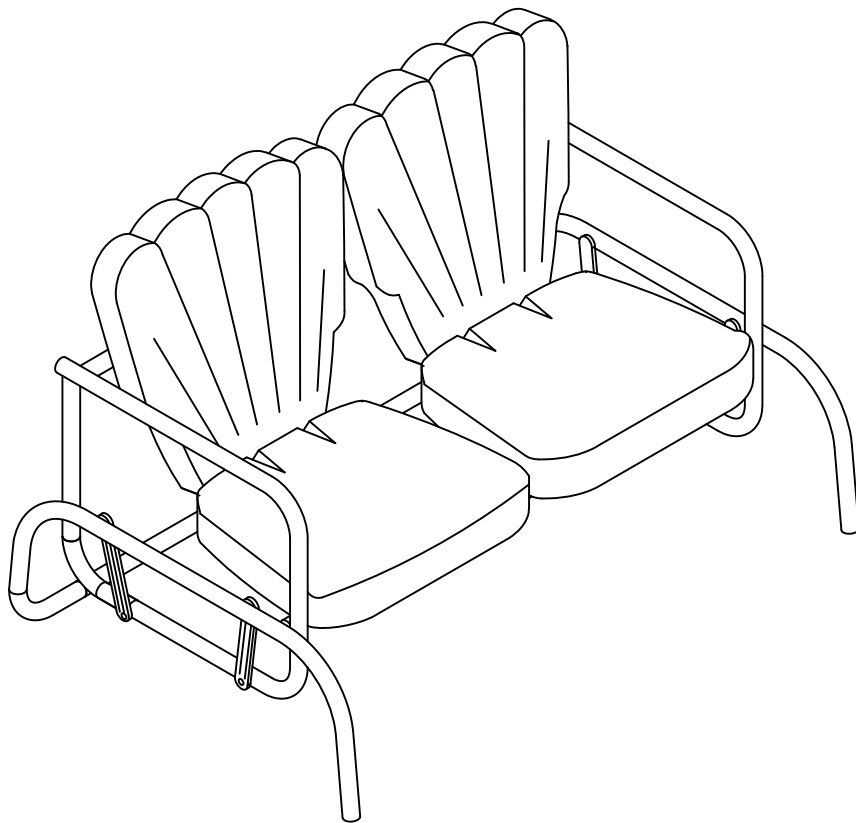










CROSLEY

FURNITURE





Loveseat Glider CO1032



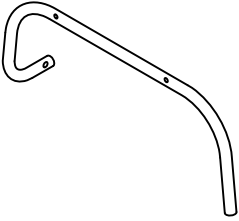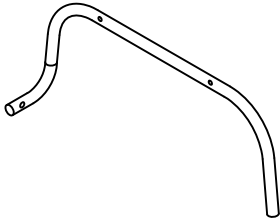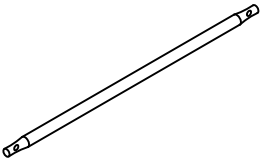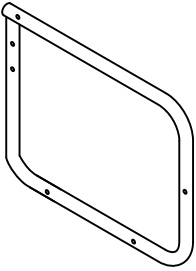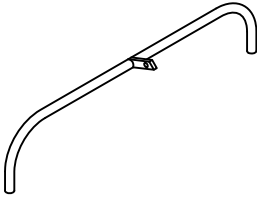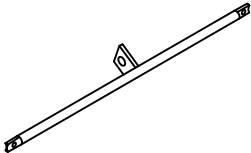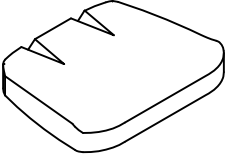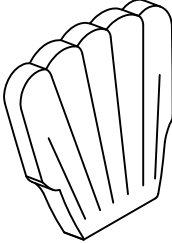PART LIST

A 	B 	C 	D 	E 
Left Support Leg 1 PC	Right Support Leg 1 PC	Leg Connector 1 PC	Swing Bar 4 PCS	Arm Frame 2 PCS
F 	G 	H 	I 	
Back Connector 1 PC	Seat Connecting Bar 1 PC	Seat Panel 2 PCS	Back Panel 2 PCS	


HARDWARE LIST

#1	#2	#3	#4	#5	#6
					
M6X13mm Bolt 7 PCS (Extra 1)	M6X40mm Medium Bolt 4 PCS (Extra 1)	M6X48mm Long Bolt 17 PCS (Extra 1)	Nut 28 PCS (Extra 1)	M6X12mm Small Flat Washer 26 PCS (Extra 1)	M6X20mm Large Flat Washer 16 PCS (Extra 1)
#7	#8	#9	#10	#11	
					
Flat Plastic Washer 20 PCS (Extra 1)	Plastic Washer 4 PCS	Round Plastic Washer 2 PCS	Wrench 1 PC	Allen Wrench 1 PC	

IMPORTANT NOTE: WE RECOMMEND TWO PEOPLE WORK TOGETHER TO ASSEMBLE THE UNIT


Step 1 Attach left support leg (part A) and right support leg (part B) to leg connector (part C) using medium bolts (part #2), flat plastic washers (part #7), small flat washers (part #5), nuts (part #4), wrench (part #10) and allen wrench (part #11).

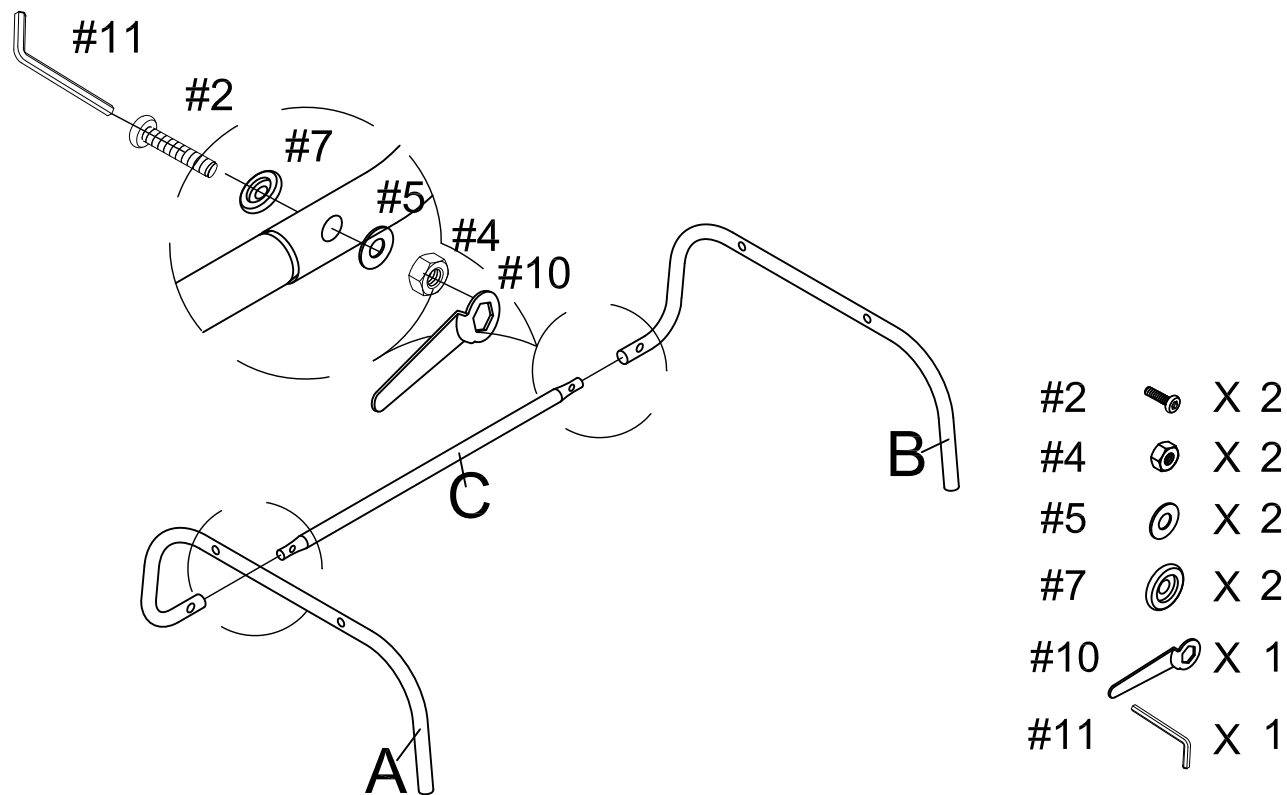NOTE: Please fully tighten bolts at this time.



Step 2 Attach swing bars (part D) to left support leg (part A) and right support leg (part B) using long bolts (part #3), flat plastic washers (part #7), large flat washers (part #6), nuts (part #4), wrench (part #10) and allen wrench (part #11).

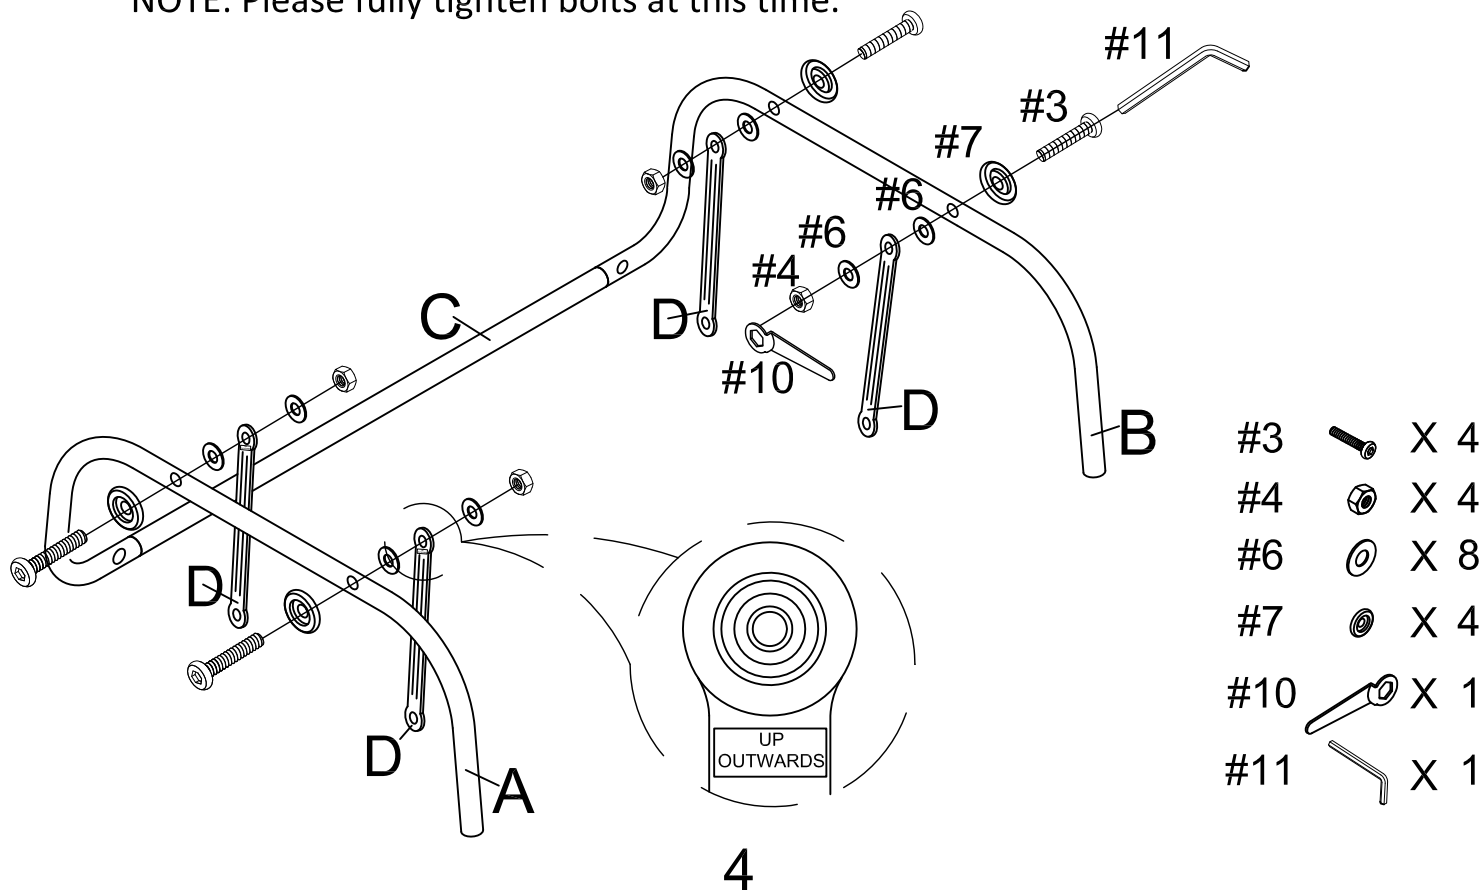NOTE: Please fully tighten bolts at this time.



Step 3 Attach back connector (part F) to arm frames (part E) using long bolts (part #3), flat plastic washers (part #7), small flat washers (part #5), nuts (part #4), wrench (part #10) and allen wrench (part #11). Attach seat connecting bar (part G) to arm frames (part E) using medium bolts (part #2), flat plastic washers (part #7), small flat washers (part #5), nuts (part #4), wrench (part #10) and allen wrench (part #11).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

#2		X 2
#3		X 4
#4		X 6
#5		X 6
#7		X 6
#10		X 1
#11		X 1

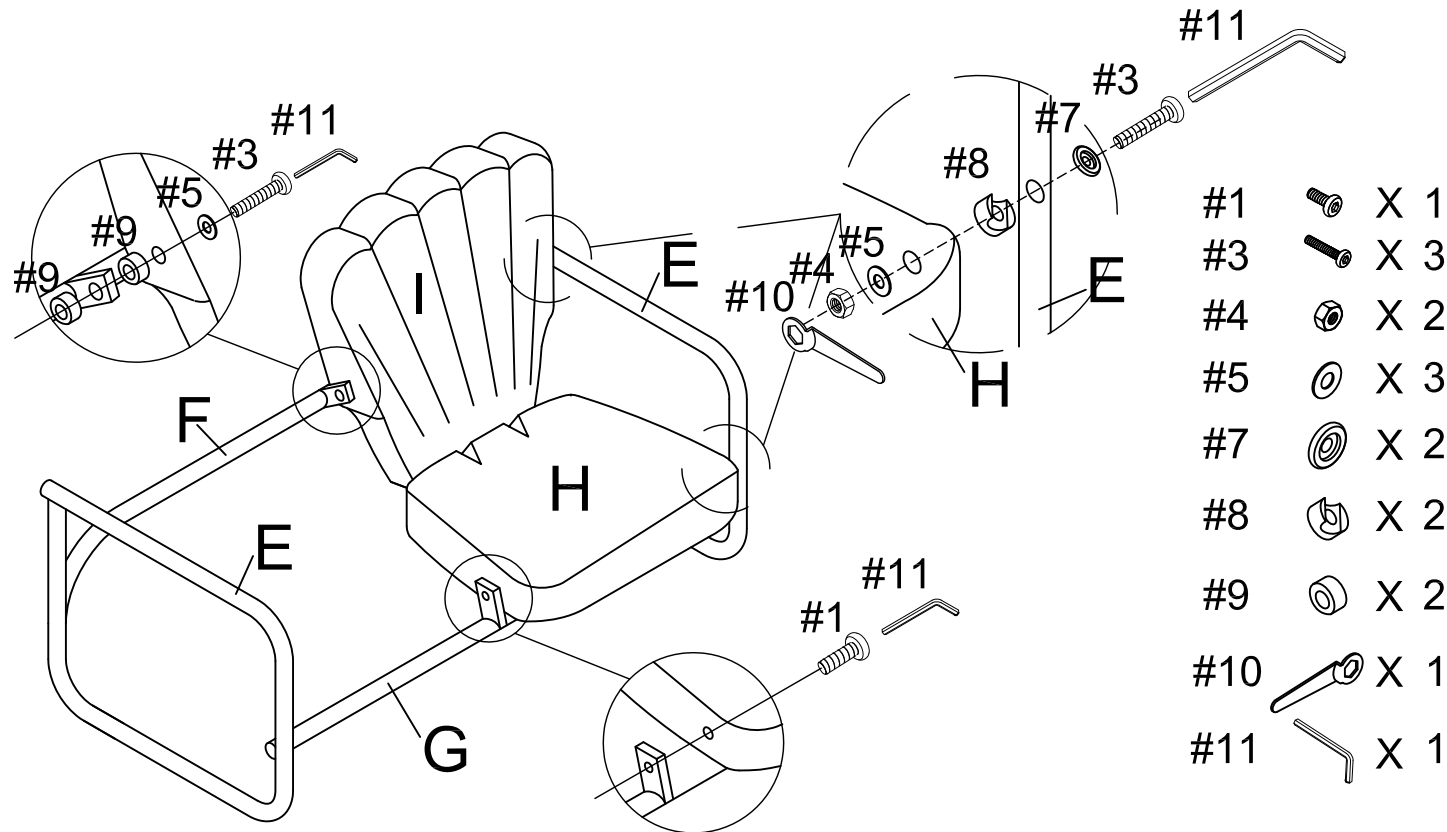
Step 4 Attach seat panel (part H) to back panel (part I) using bolts (part #1), small flat washers (part #5), nuts (part #4), wrench (part #10) and allen wrench (part #11). Repeat for remaining seat and back.

NOTE: Please do not fully tighten bolts until unit is fully assembled.

#1		X 6
#4		X 6
#5		X 12
#10		X 1
#11		X 1


Step 5 Attach assembled unit (parts H & I) to arm frame (part E) using long bolts (part #3), flat plastic washers (part #7), plastic washers (part #8), small flat washers (part #5), nuts (part #4), wrench (part #10) and allen wrench (part #11). Attach back panel (part I) to back connector (part F) using long bolt (part #3), small flat washer (part #5), round plastic washers (part #9) and allen wrench (part #11). Attach seat panel (part H) to seat connecting bar (part G) using bolt (part #1) and allen wrench (part #11).

NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 6 Attach remaining assembled unit (parts H & I) to arm frame (part E) using long bolts (part #3), flat plastic washers (part #7), plastic washers (part #8), small flat washers (part #5), nuts (part #4), wrench (part #10), allen wrench (part #11).

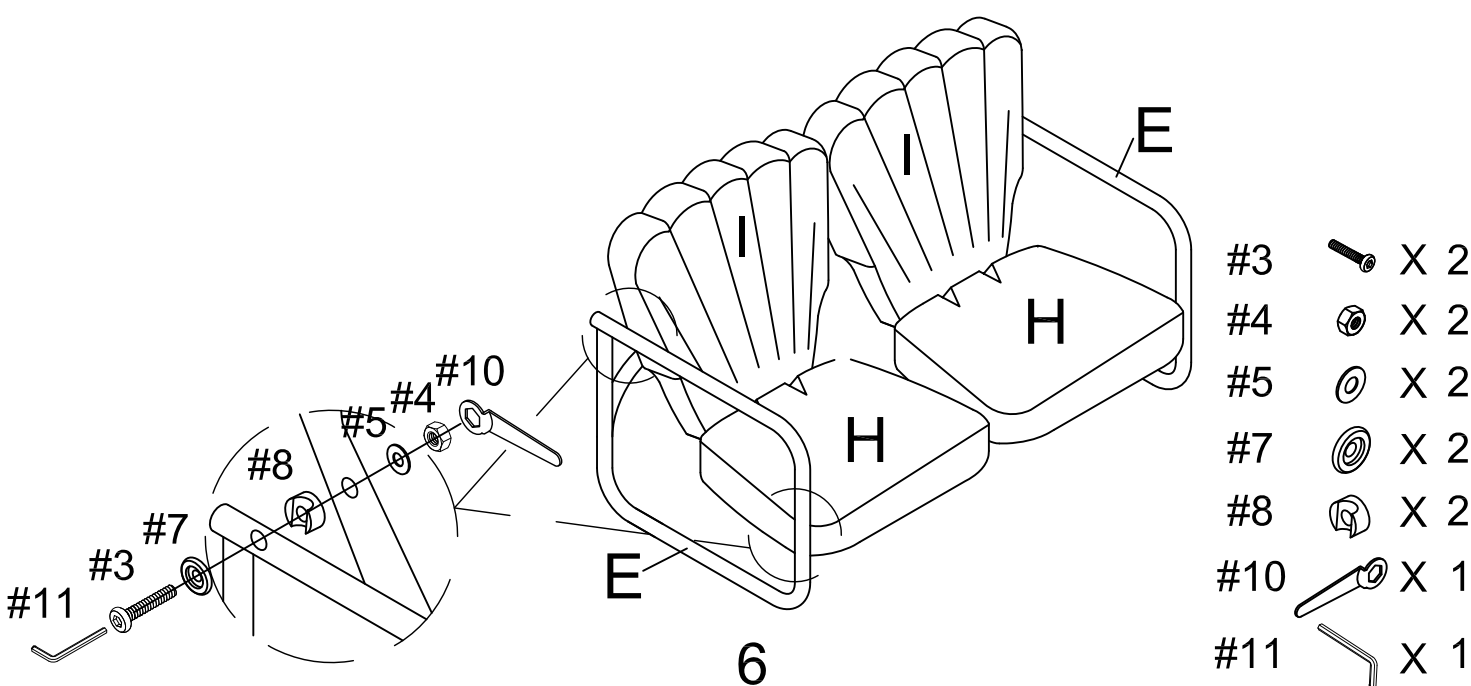NOTE: Please do not fully tighten bolts until unit is fully assembled.



Step 7 Tighten back panel (part I) to back connector (part F) and back panel (part I) using small flat washer (part #5), nut (part #4), wrench (part #10) and allen wrench (part #11). Tighten seat panel (part H) to seat connecting bar (part G) and seat panel (part H) using nut (part #4), wrench (part #10) and allen wrench (part #11).

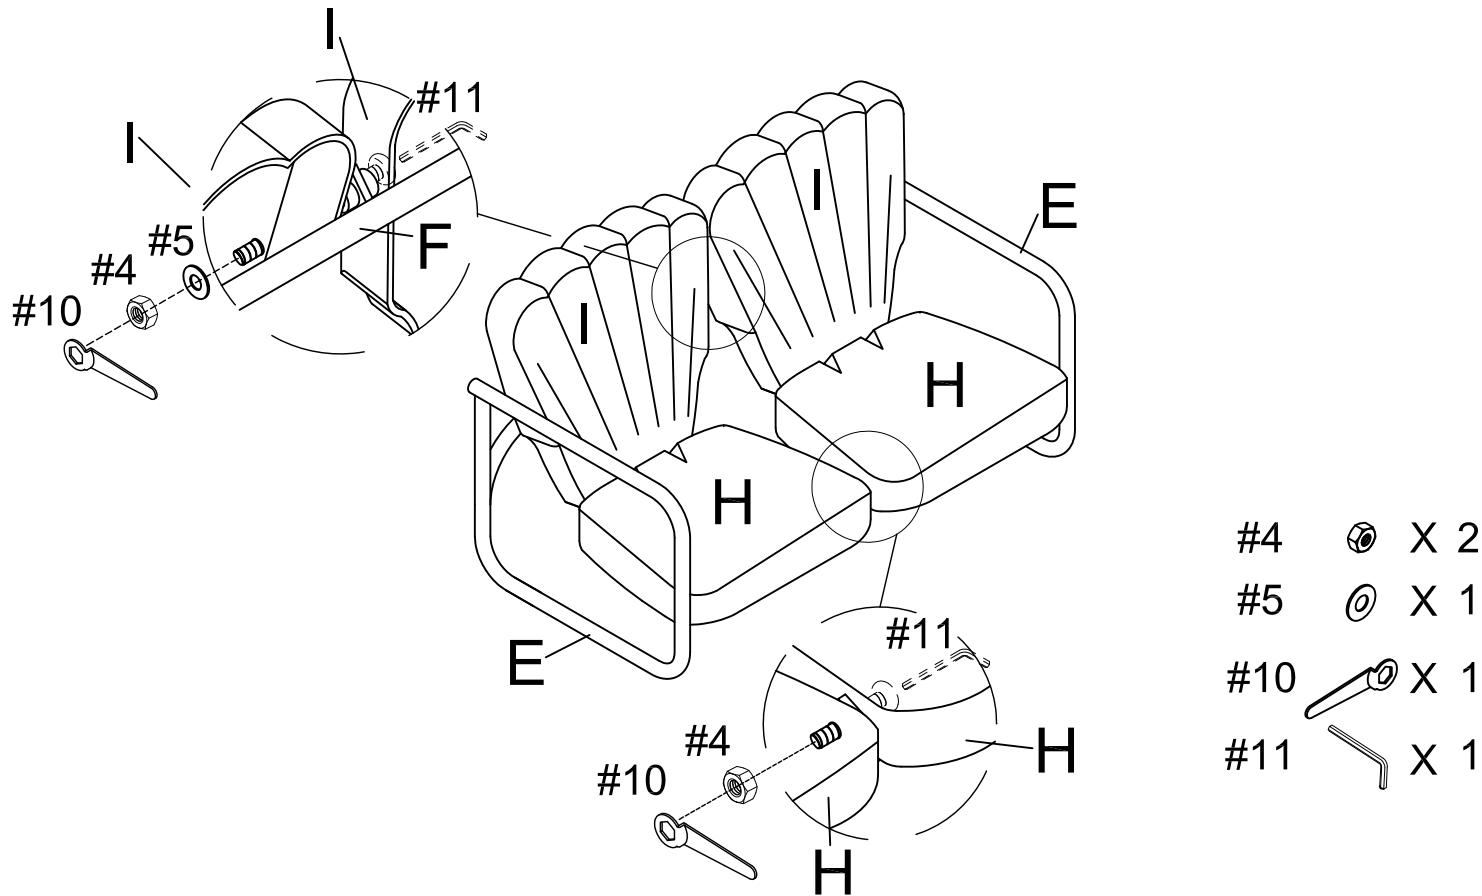NOTE: Please fully tighten bolts at this time.



Step 8 Attach assembled unit (parts E, F, G, H & I) to assembled unit (parts A, B, C & D) using long bolts (part #3), flat plastic washers (part #7), large flat washers (part #6), nuts (part #4), wrench (part #10) and allen wrench (part #11).

NOTE: Please fully tighten all bolts at this time.

