
ASSEMBLY INSTRUCTIONS

FULL/FULL BUNK BED WITH DRAWER

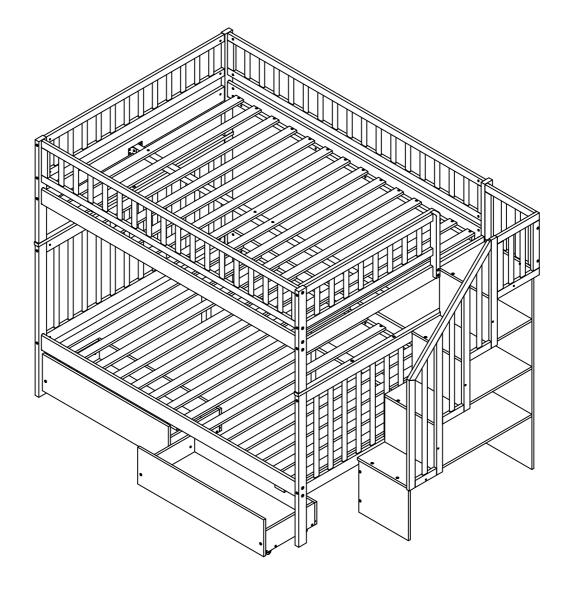

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team.

WF286051/WF286052/WF286053

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safely precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.


Be certain all staples are out of the box before beginning assembly on the shipping carton.


THIS BED IS DESIGNED TO USE A FULL MATTRESSES 53"-54" WIDE X 74"-75" LONG WITH THE TOTAL THICKNESS NOT EXCEEDING 6" FOR UPPER BUNK, FOR THE LOWER FULL-SIZE SHOULD BE 53"-54" WIDE X 74"-75" LONG, WIDE WITH 8" THICKNESS.

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.


Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers

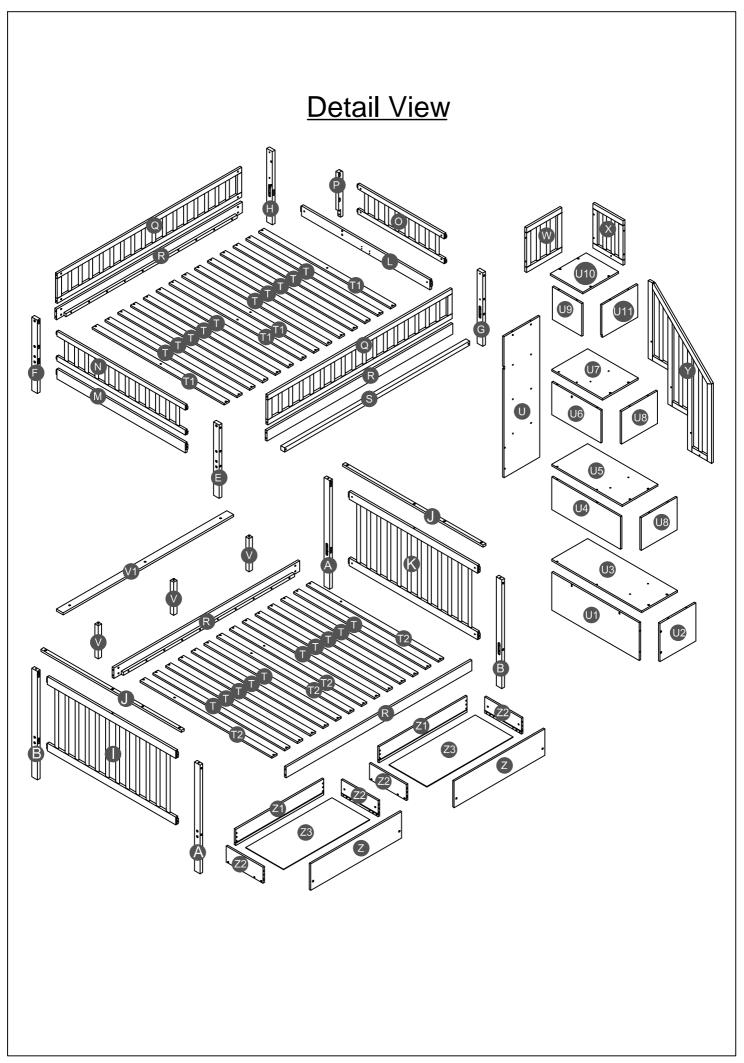


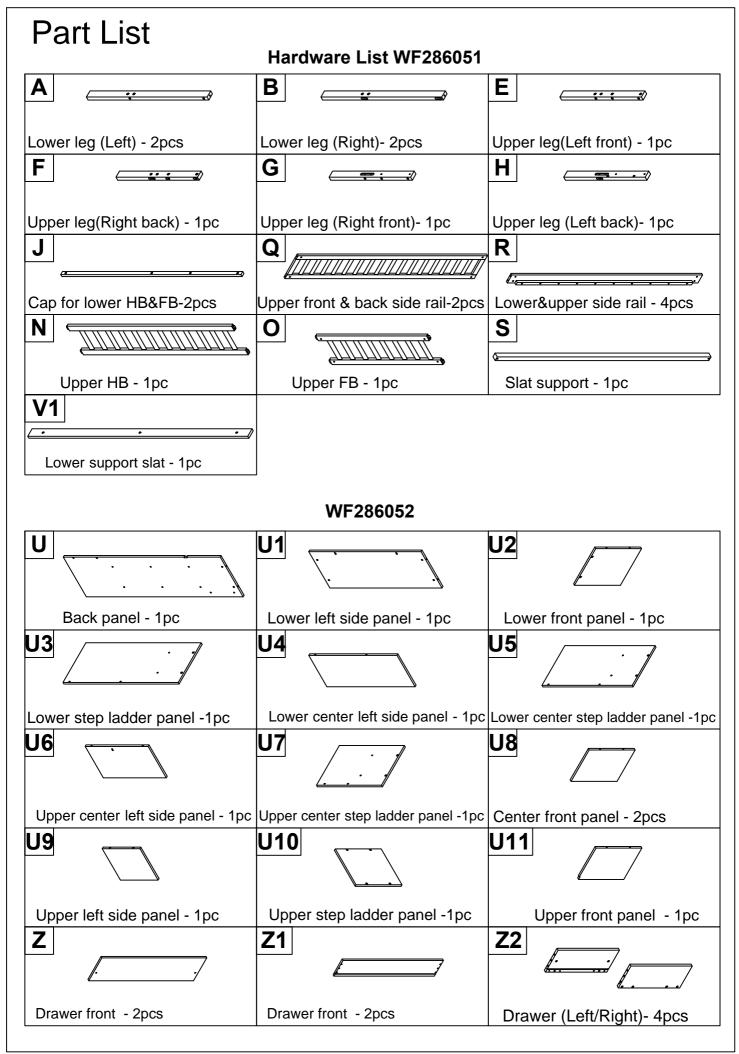

Part List




WF286053

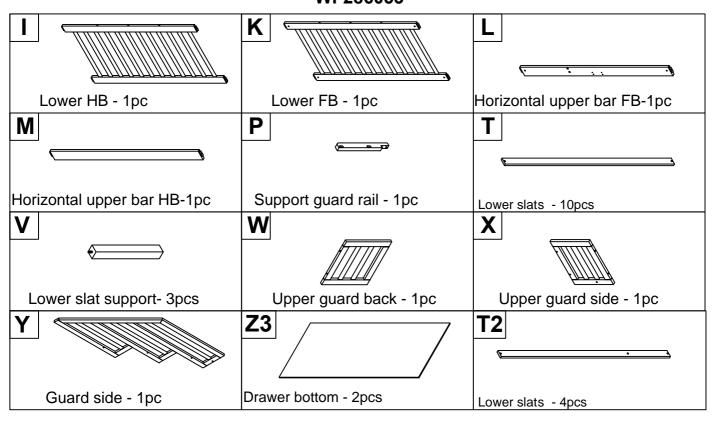

Hardware List


<u>1</u>	2	3
Ø8*30mm	(Ø15)1/4"*100mm	(Ø15)1/4"*80mm
Wood dowel (28pcs)	Hex-Head bolts (18pcs)	Hex-Head bolts (24pcs)
4	5	6
<u> </u>		
(Ø12)1/4"*70mm	(Ø12)1/4"*60mm	(Ø12)1/4"*35mm
Hex-Head bolts (2pcs)	Hex-Head bolts (45pcs)	Hex-Head bolts (2pcs)
7	8	9
(Ø12)1/4"*30mm	1/4"*15 (9.5mm)	Ø9*90mm
Hex-Head bolts (3pcs)	Horizontal-Hole bolts(87pcs)	Connecting bar (4pcs)
10	11	12
		(†))))))))>
(Ø12)1/4"*40mm	(1/4")4.5*58mm	Ø4*30mm
Hex-Head bolts (2pcs)	(1/4")4.5*58mm Allen key (2pcs)	Ø4*30mm Wood screws (86pcs)
Hex-Head bolts (2pcs)	Allen key (2pcs)	Wood screws (86pcs)
Hex-Head bolts (2pcs)	Allen key (2pcs)	Wood screws (86pcs)
Hex-Head bolts (2pcs)	Allen key (2pcs)	Wood screws (86pcs)
Hex-Head bolts (2pcs)	Allen key (2pcs) 14	Wood screws (86pcs) 15
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm	Allen key (2pcs) 14 (Ø12)1/4"*40mm	Wood screws (86pcs) 15 Ø3.5*15mm
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm Flat Washer (3pcs)	Allen key (2pcs) 14 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	Wood screws (86pcs) 15 Ø3.5*15mm Wood screws (8pcs)
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm Flat Washer (3pcs)	Allen key (2pcs) 14 (Ø12)1/4"*40mm Hex-Head bolts (2pcs) 17	Wood screws (86pcs) 15 Ø3.5*15mm Wood screws (8pcs)
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm Flat Washer (3pcs) 16	Allen key (2pcs) 14 (Ø12)1/4"*40mm Hex-Head bolts (2pcs) 17	Wood screws (86pcs) 15 Ø3.5*15mm Wood screws (8pcs) 18
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm Flat Washer (3pcs) 16 100*20*54mm	Allen key (2pcs) 14 (Ø12)1/4"*40mm Hex-Head bolts (2pcs) 17 116*40*27mm	Wood screws (86pcs) 15 Ø3.5*15mm Wood screws (8pcs) 18 Ø10*20mm
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm Flat Washer (3pcs) 16 100*20*54mm Wheels (8pcs)	Allen key (2pcs) 14 (Ø12)1/4"*40mm Hex-Head bolts (2pcs) 17 116*40*27mm Hooks(2pcs)	Wood screws (86pcs) 15 Ø3.5*15mm Wood screws (8pcs) 18 Ø10*20mm
Hex-Head bolts (2pcs) 13 Ø1/4"*19*2mm Flat Washer (3pcs) 16 100*20*54mm Wheels (8pcs)	Allen key (2pcs) 14 (Ø12)1/4"*40mm Hex-Head bolts (2pcs) 17 116*40*27mm Hooks(2pcs)	Wood screws (86pcs) 15 Ø3.5*15mm Wood screws (8pcs) 18 Ø10*20mm


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)








DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT!

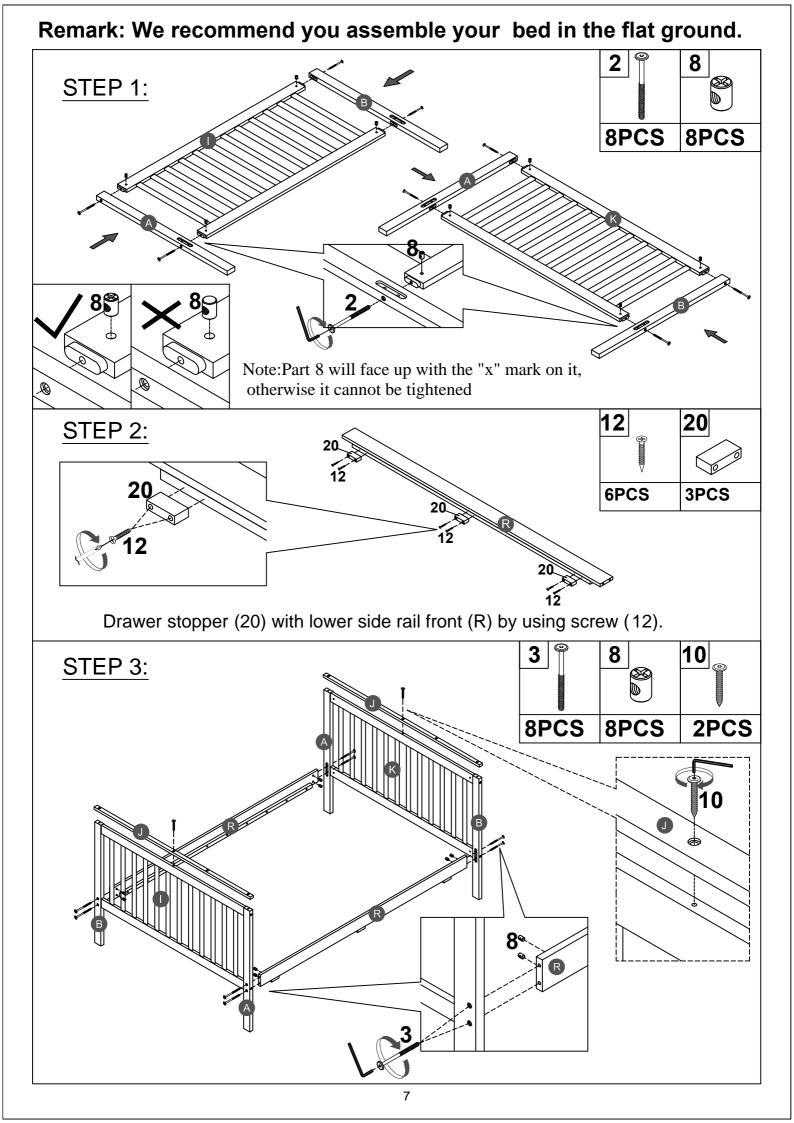


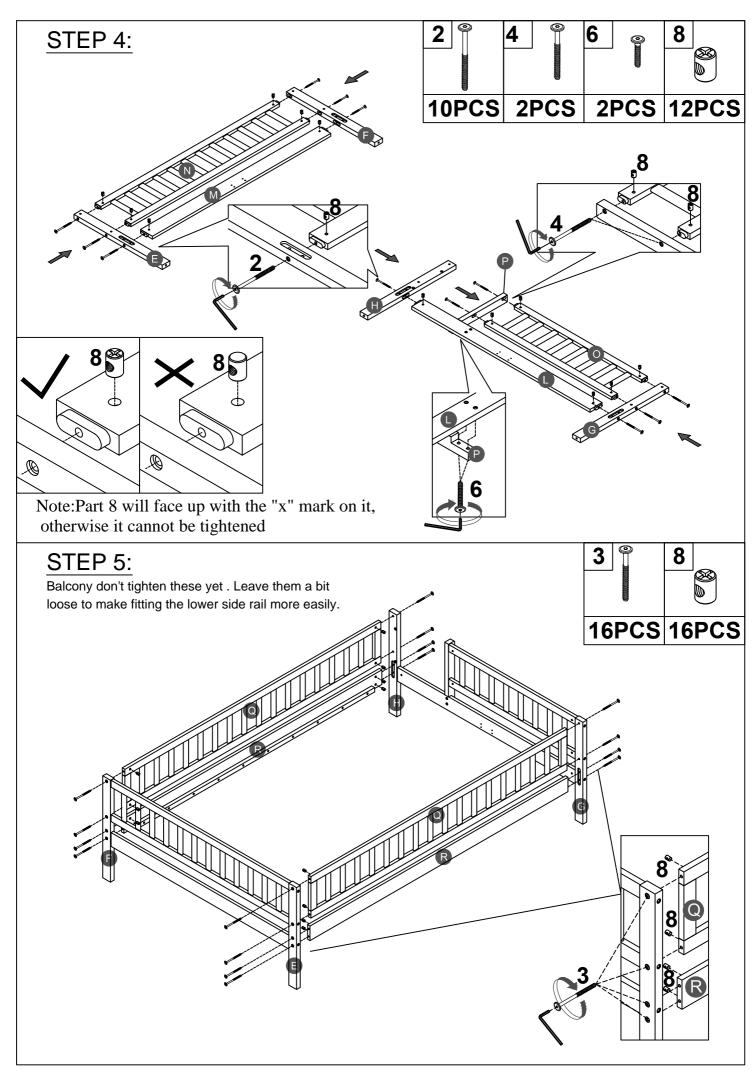


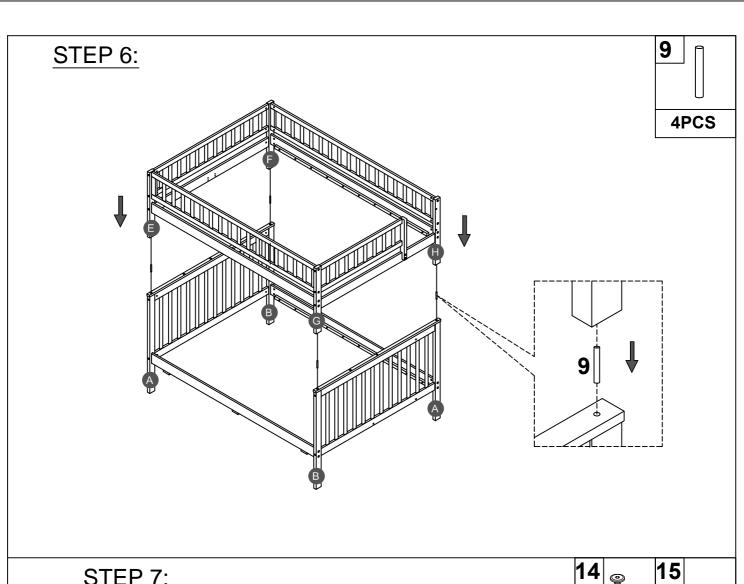


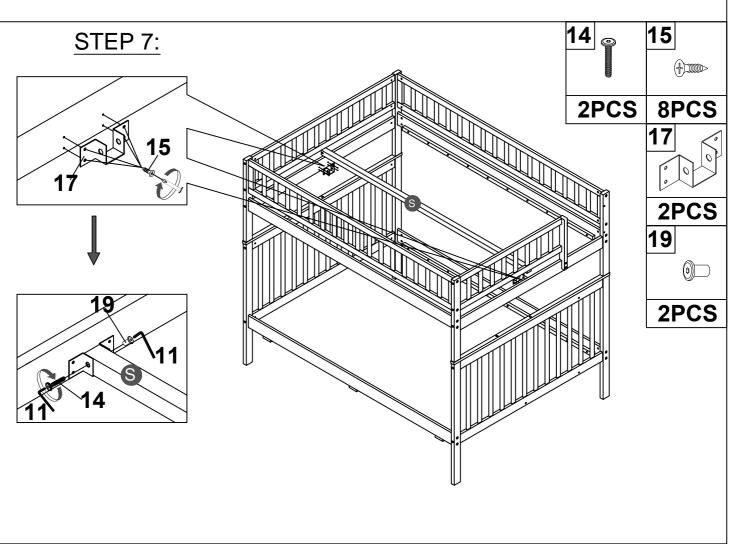

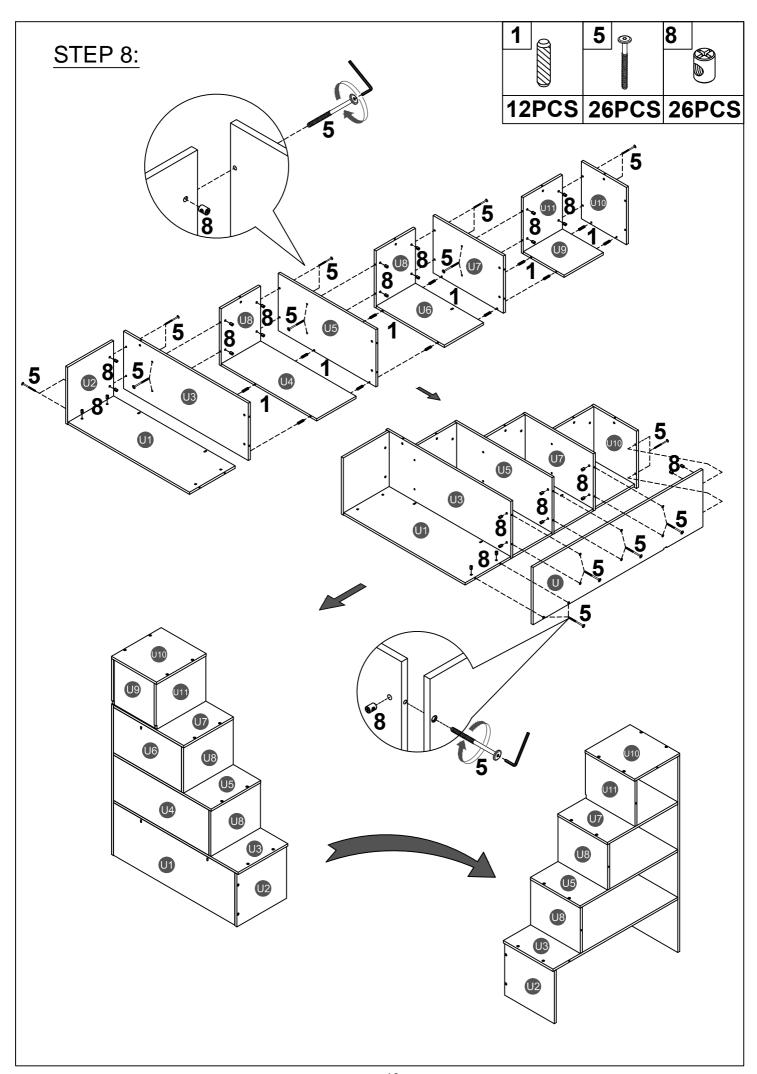


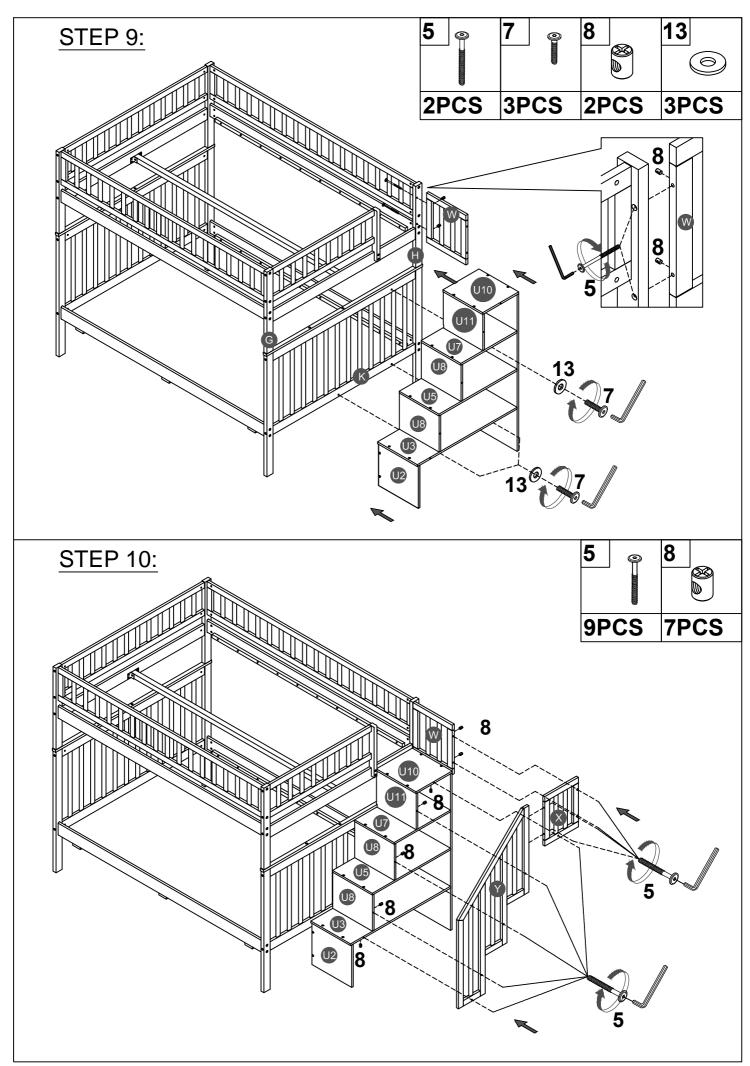


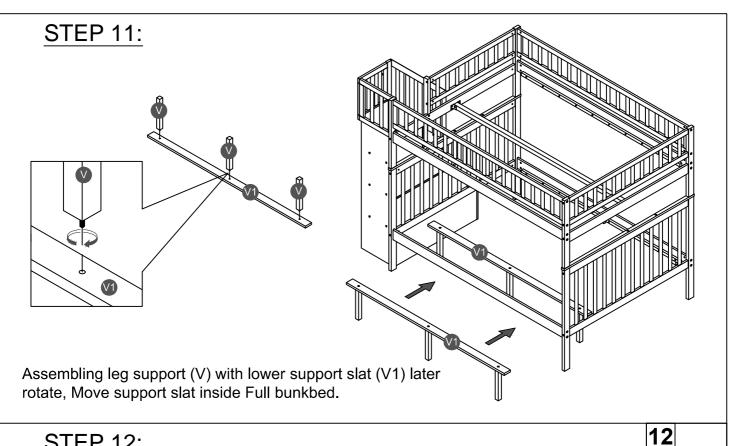

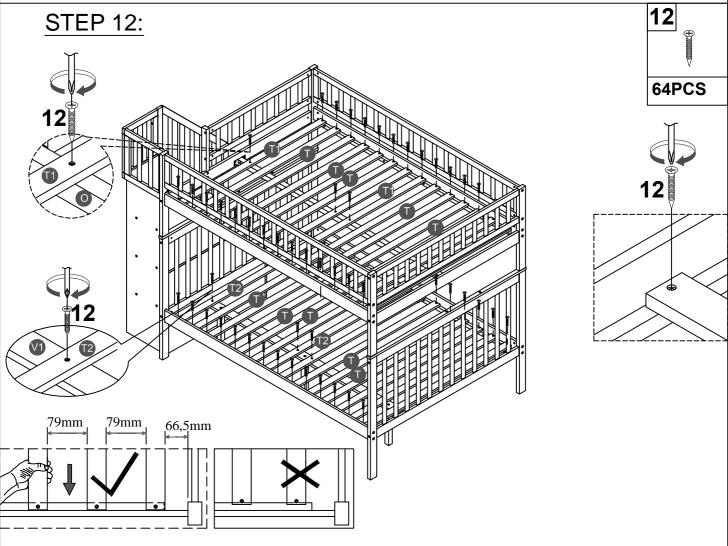

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

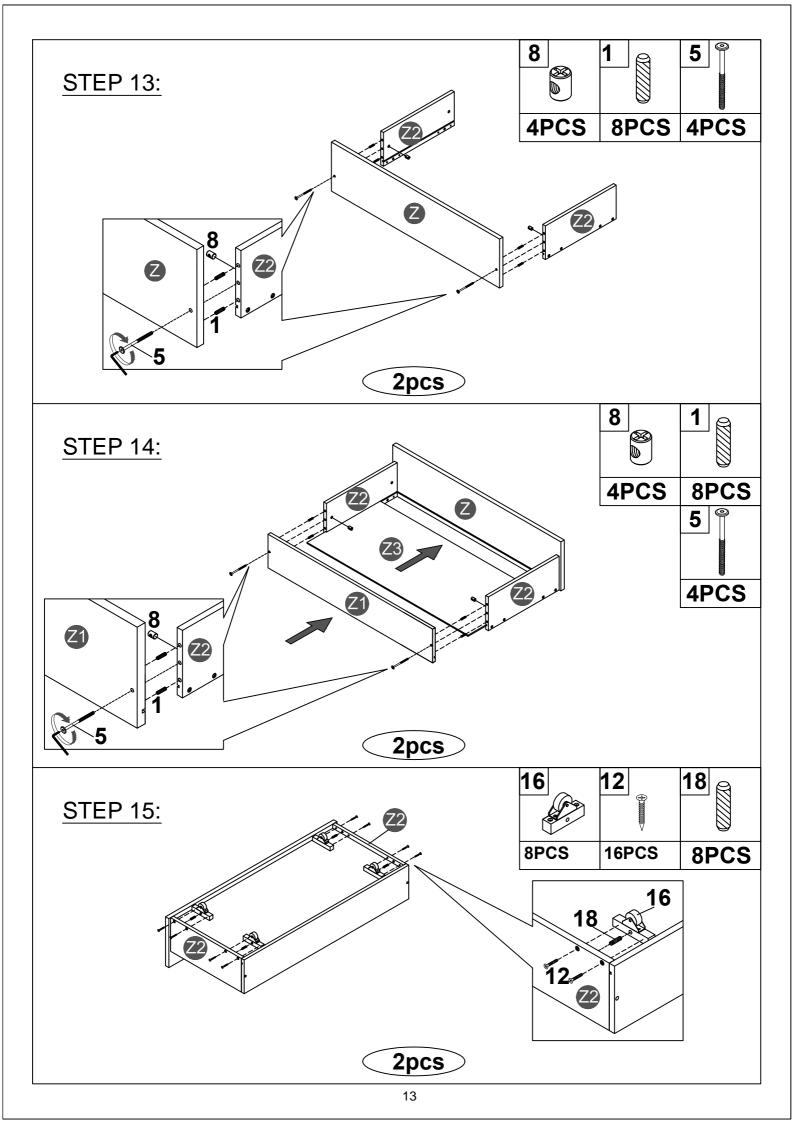

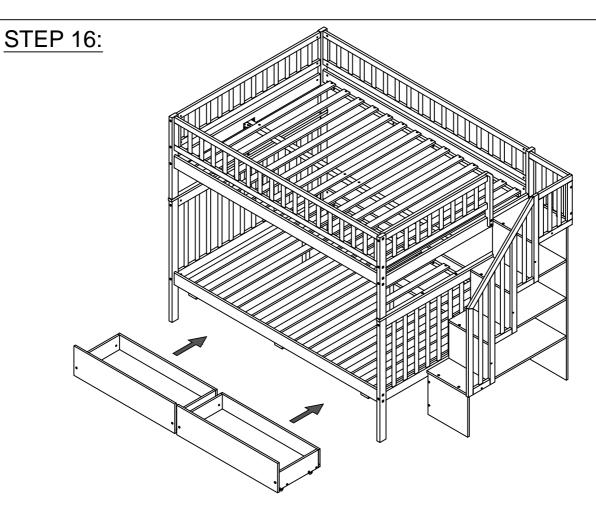

Push Drawer under the bottom of Bunkbed.

