


ASSEMBLY INSTRUCTION


CORNER DESK WITH USB CHARGER & WIRE MANAGEMENT

A Desk Top

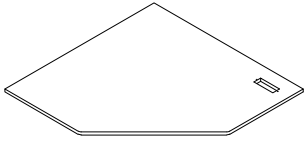


1pc

B Left Side Frame

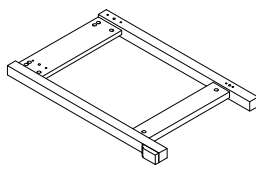


1pc

C Right Side Frame

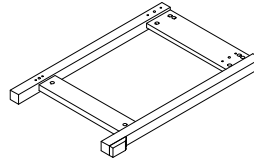


1pc

D Left Top Rail

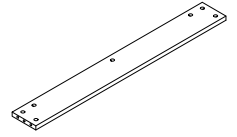


1pc

E Right Top Rail

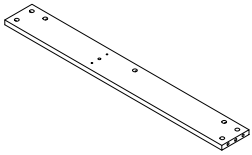


1pc

F Bottom Rail

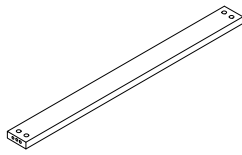


2pcs

G Left Middle Rail

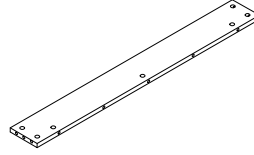


1pc

H Right Middle Rail




1pc

I Back Leg Post

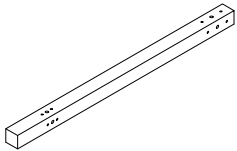

1pc

J Wood Dowel
Ø8*30mm




24pcs

K Nut
Ø15*12mm




39pcs

L Bolt
Ø5*25mm



39pcs

M Adaptor

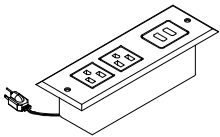


1pc

N Screw
Ø3*12mm



2pcs

O Glue




1pc

P Screwdriver
(Not Provided)





1pc

Q Anti-Tipping Kit

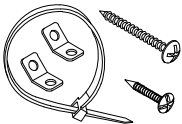

1set

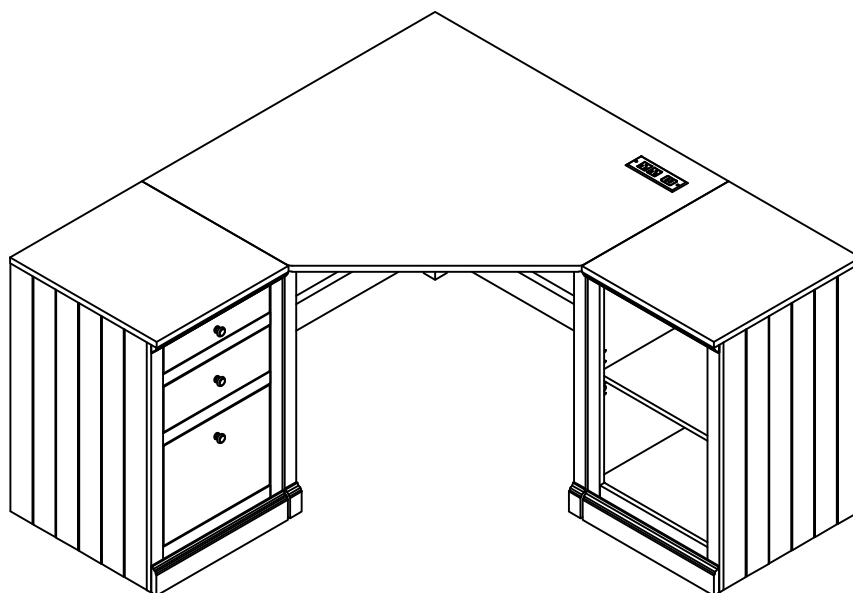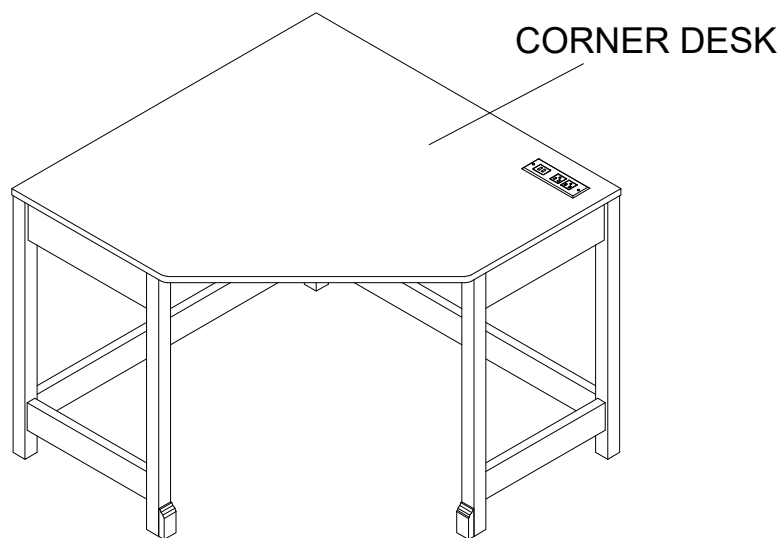


E862-15CRA+E862-15CRB(in other carton)

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


ASSEMBLY

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.


- 1** Insert Bolt (L) to Desk Top (A) and Back Leg Post (I) by Screwdriver (P) as below shown.

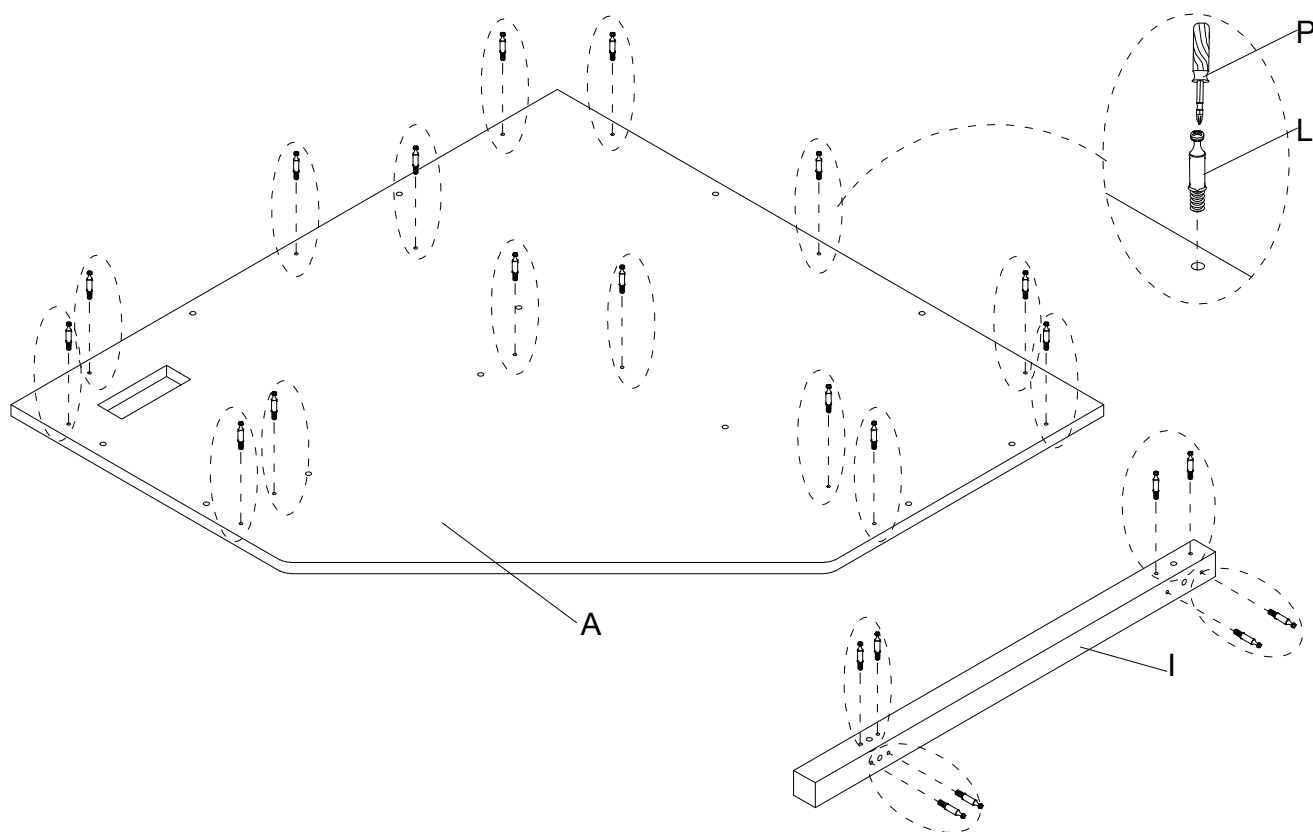


- 2** Insert Bolt (L) to Left Side Frame (B), Right Side Frame (C), Left Middle Rail (G) and Right Top Rail (E) by Screwdriver (P) as below shown.

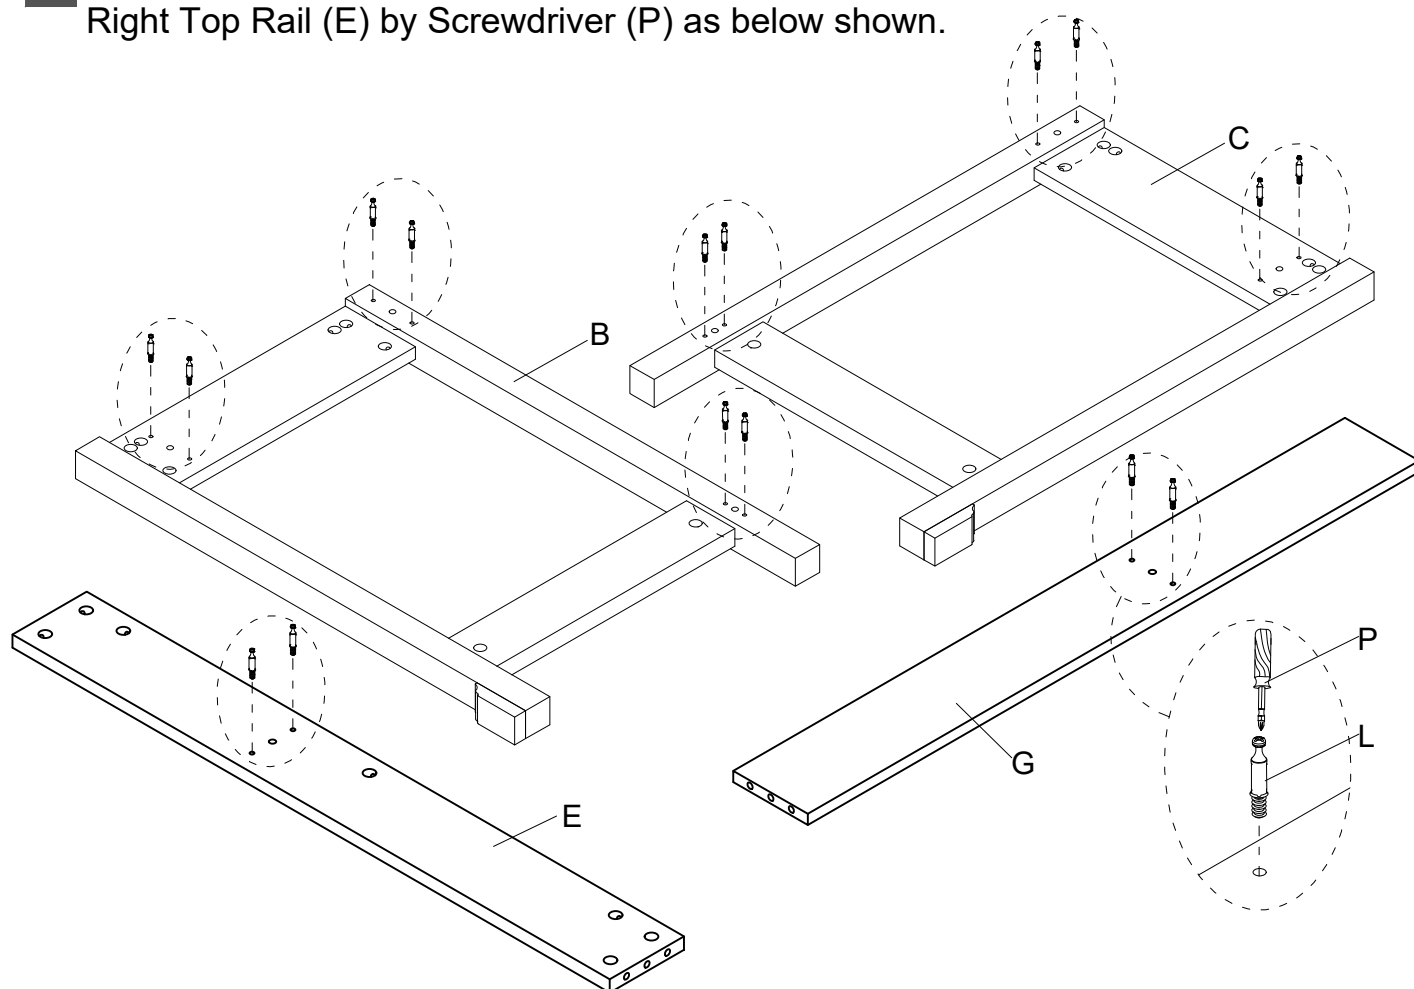


- 3** Assemble Back Leg Post (I) to Right Top Rail (E), using Glue (O) & Wood Dowel (J) first, then assemble Nut (K) to Bolt (L) by Screwdriver (P) as below shown.

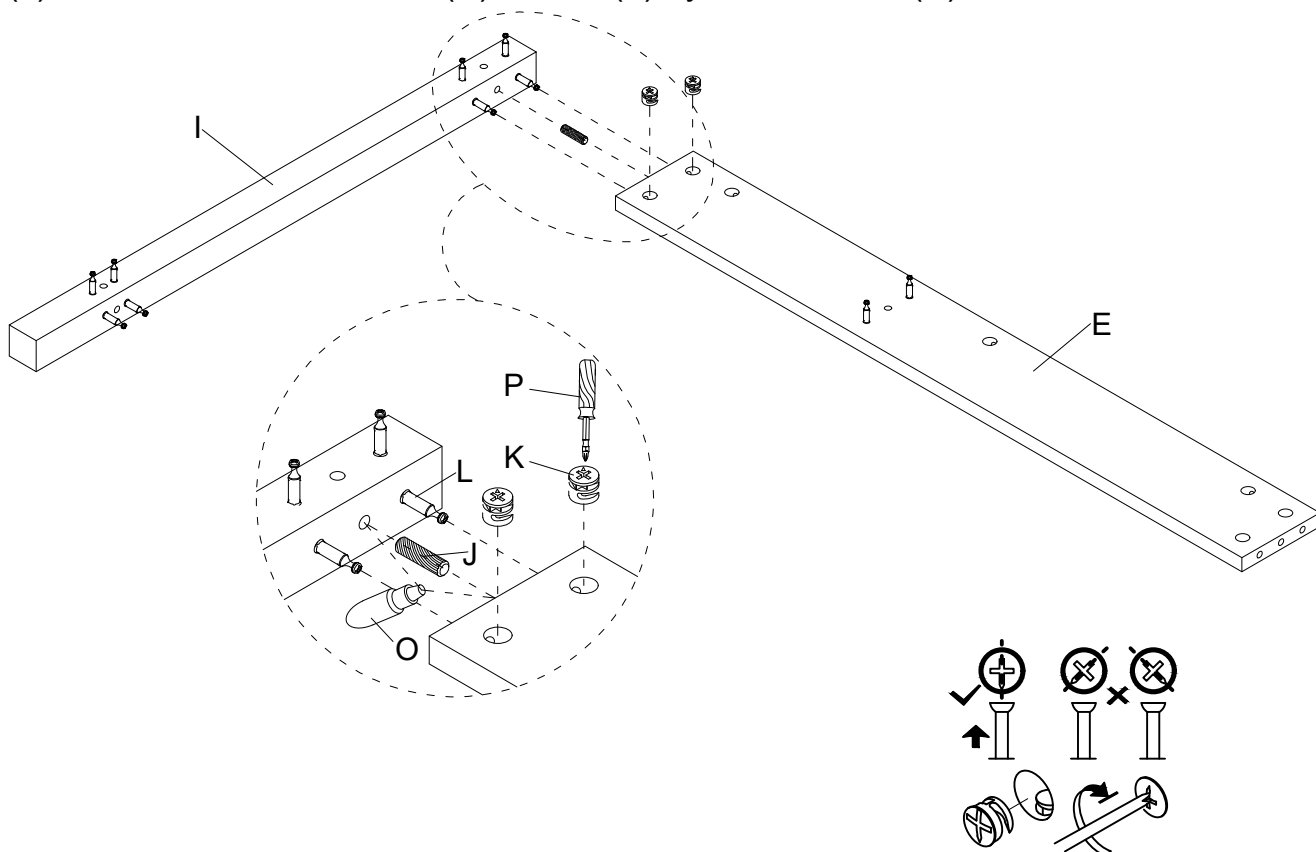


- 4** Assemble Right Middle Rail (H) to Right Side Frame (C), using Glue (O) & Wood Dowel (J) first, then assemble Nut (K) to Bolt (L) by Screwdriver (P) as below shown.

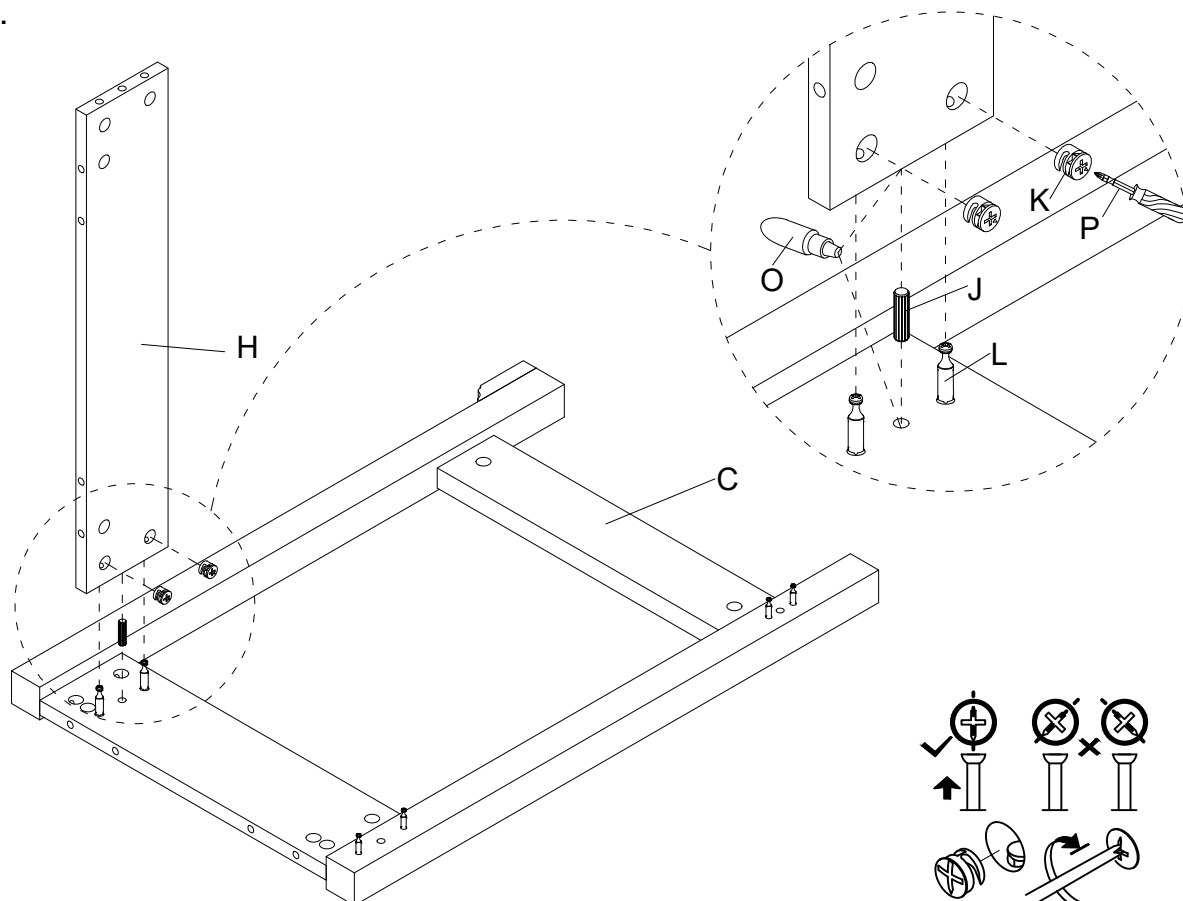


- 5** Assemble Left Top Rail (D) and Left Middle Rail (G) to Left Side Frame (B), using Glue (O) & Wood Dowel (J) first, then assemble Nut (K) to Bolt (L) by Screwdriver (P) as below shown.

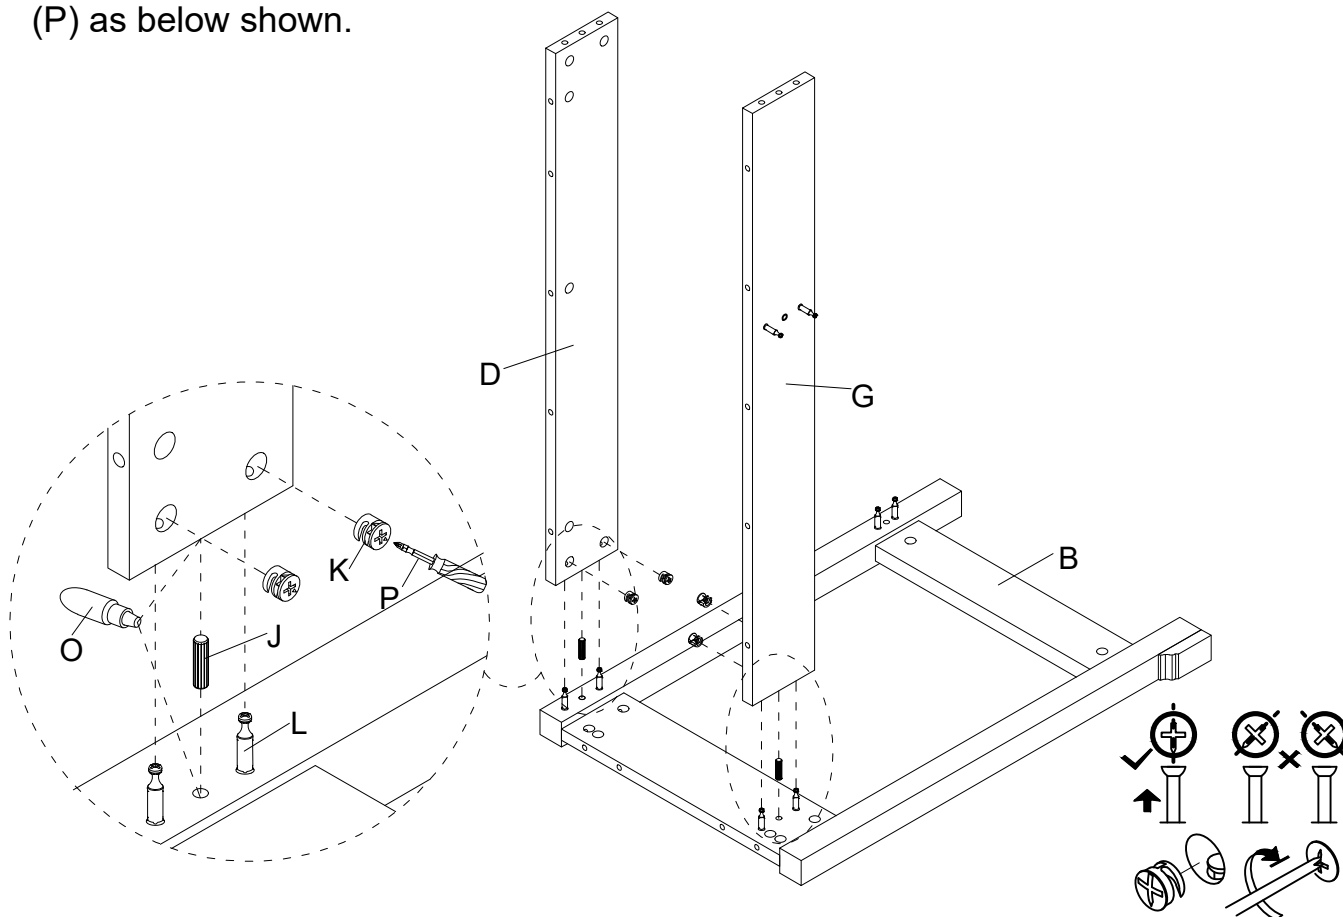


- 6** Assemble pre-assembled Back Leg Post (I) and Right Top Rail (E) to pre-assembled Left Top Rail (D), Left Middle Rail (G), assemble Bottom Rail (F) to Left Side Frame (B) and Back Leg Post (I) at the same step, using Glue (O) & Wood Dowel (J) first, then assemble Nut (K) to Bolt (L) by Screwdriver (P) as below shown.

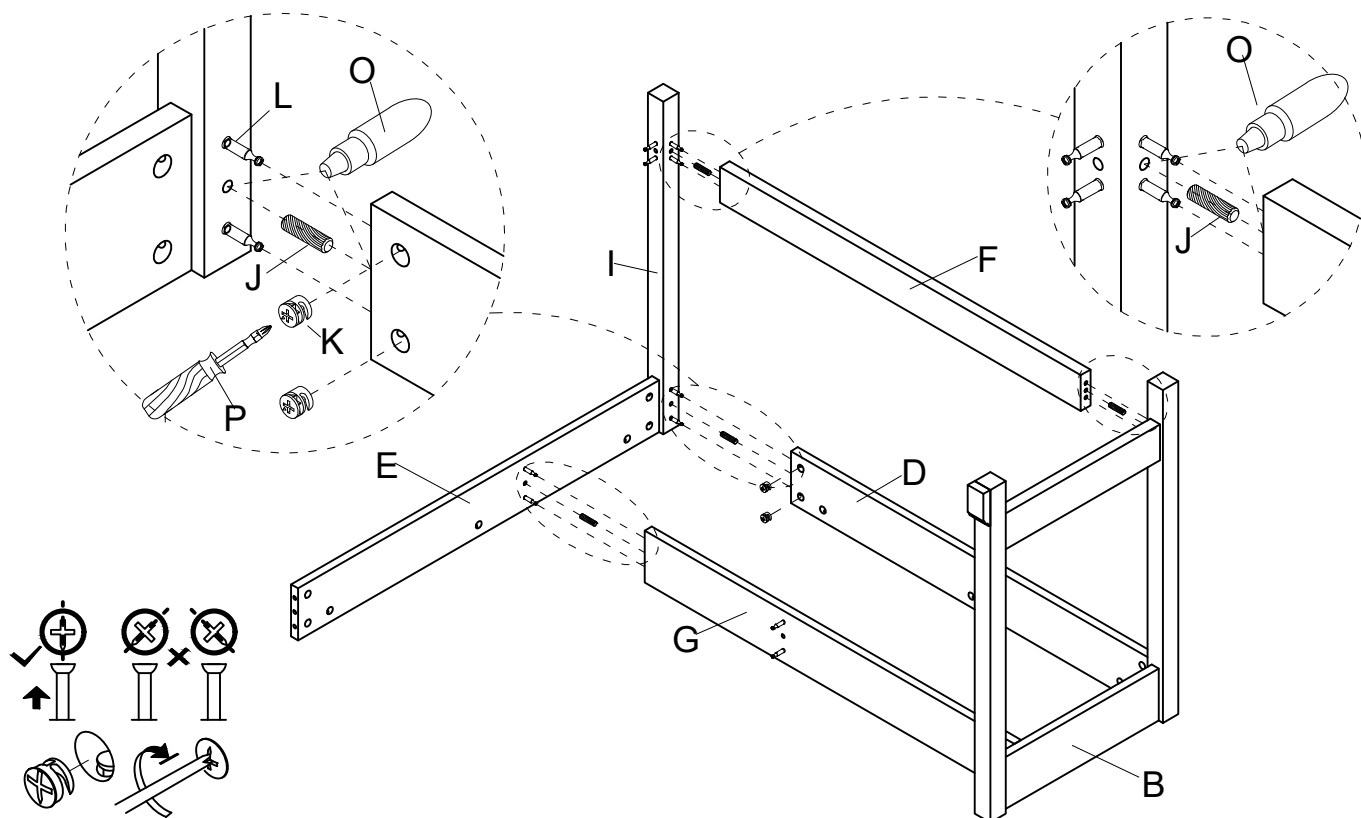


- 7** Assemble pre-assembled Right Middle Rail (H) and Right Side Frame (C) to Left Middle Rail (G) and Right Top Rail (E), assemble Bottom Rail (F) to Right Side Frame (C) and Back Leg Post (I) at the same step, using Glue (O) & Wood Dowel (J) first, then assemble Nut (K) to Bolt (L) by Screwdriver (P). Using Nut (K) to lock Bottom Rail (F) with Back Leg Post (I) and Left Side Frame (B) as below shown.

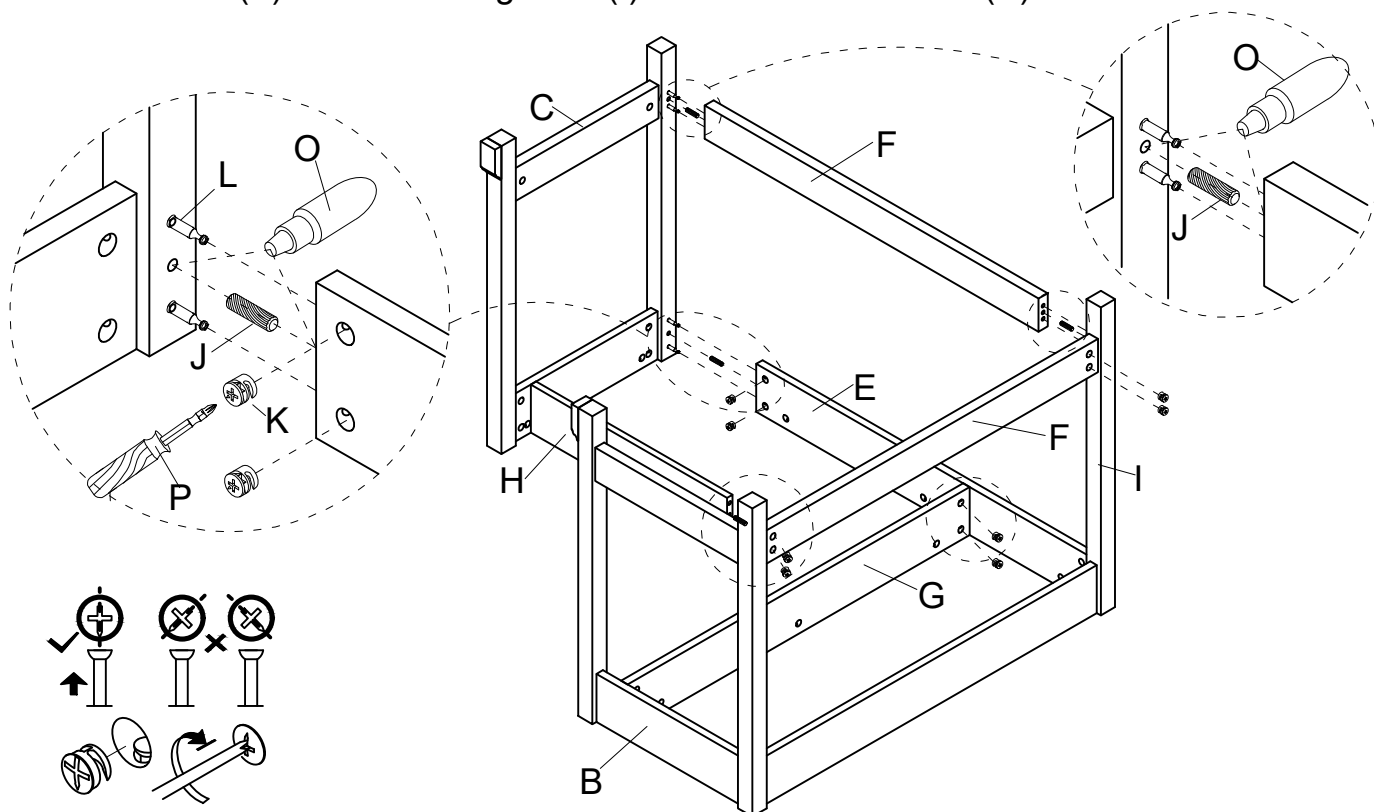


- 8** Using Nut (K) to lock Bottom Rail (F) with Back Leg Post (I) and Right Side Frame (C), and using Nut (K) to lock Right Middle Rail (H) with Left Middle Rail (G) by Screwdriver (P) as below shown.

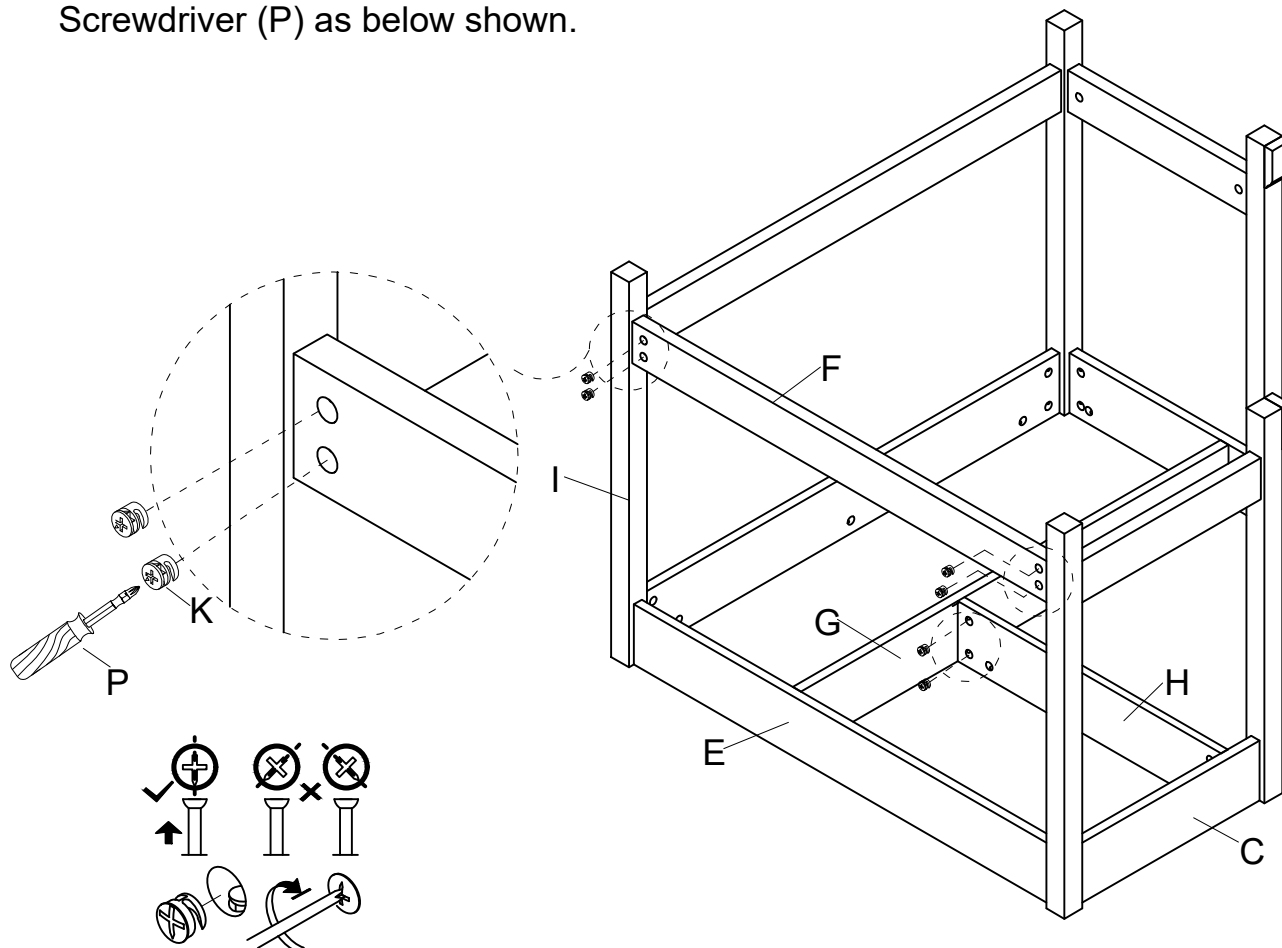



- 9** Assemble Desk Top (A) to pre-assembled Desk base that Right Middle Rail (H), Left Middle Rail (G), Left Side Frame(B), Right Side Frame (C), Left Top Rail (D) and Right Top Rail (E), using Glue (O) & Wood Dowel (J) first, then assemble Nut (K) to Bolt (L) by Screwdriver (P) as below shown.

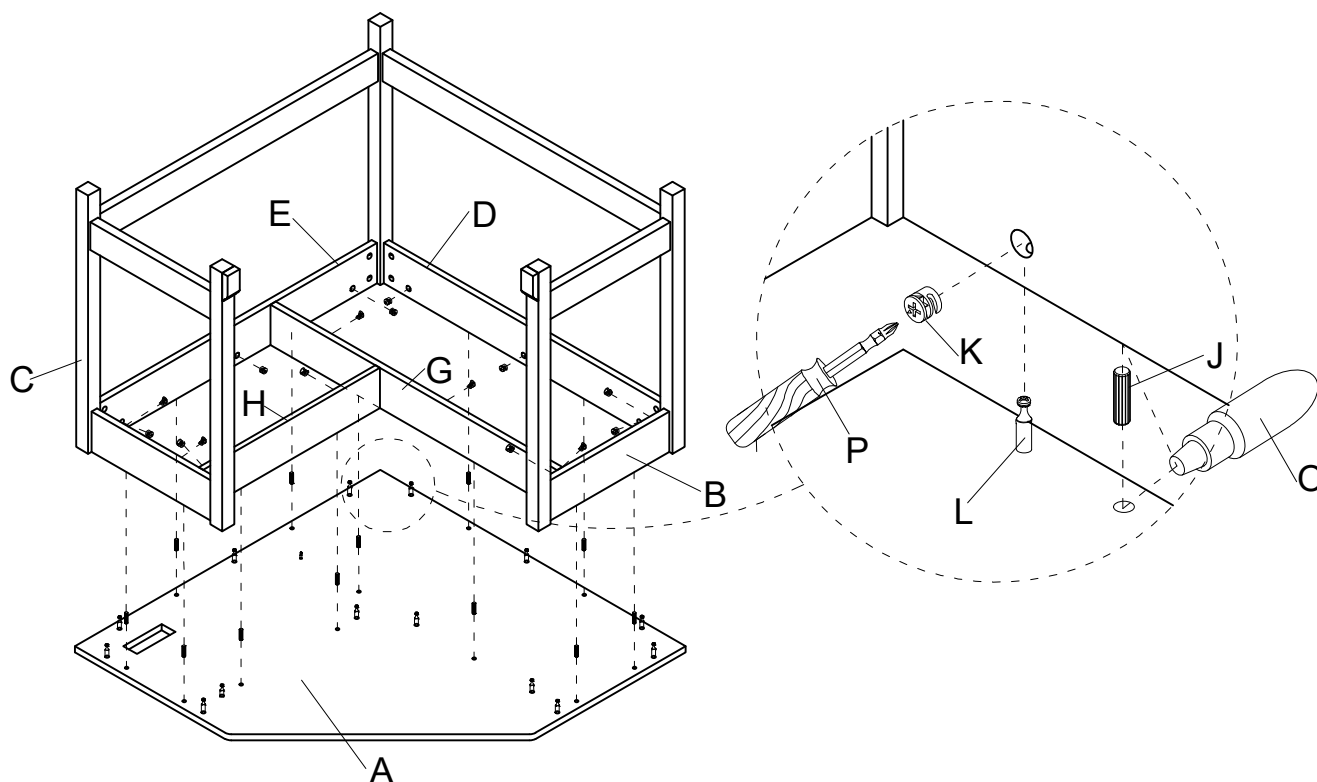

- 10** Attach Adaptor (M) to the hole of Desk Top (A), using Screw (N) by Screwdriver (P) as below shown.

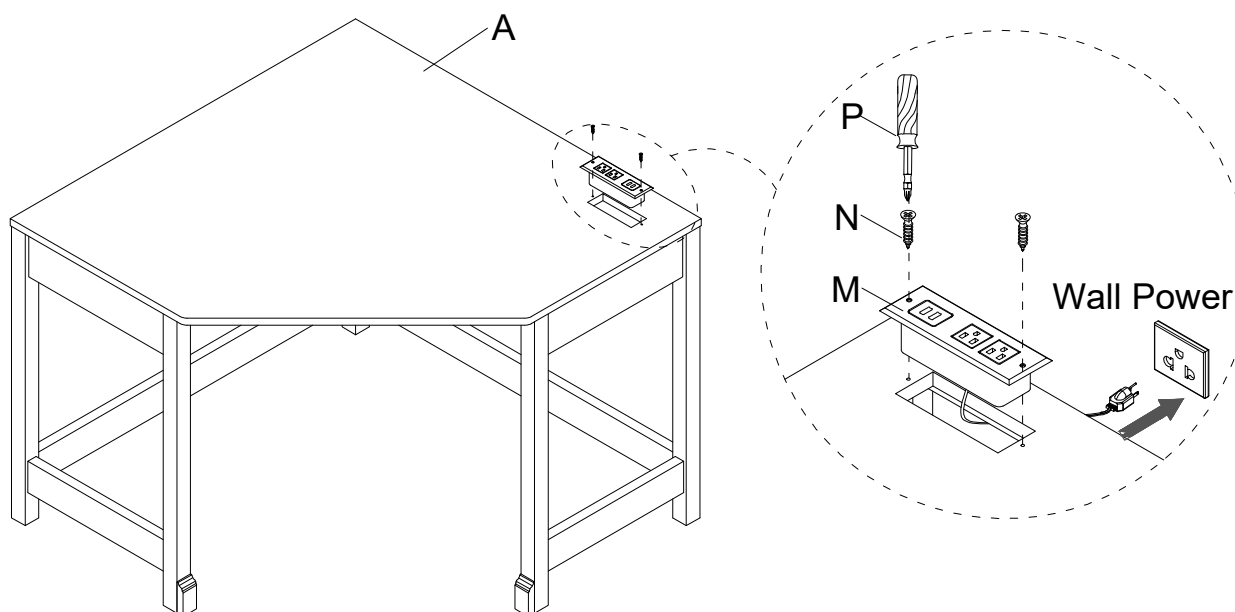

- 11** Remark: there is an Anti-Tipping Kit (Q) provided on the back of this product. Please read the instruction throughly and install immediately when placed in home. To prevent tip over, the product must be attached to wall.

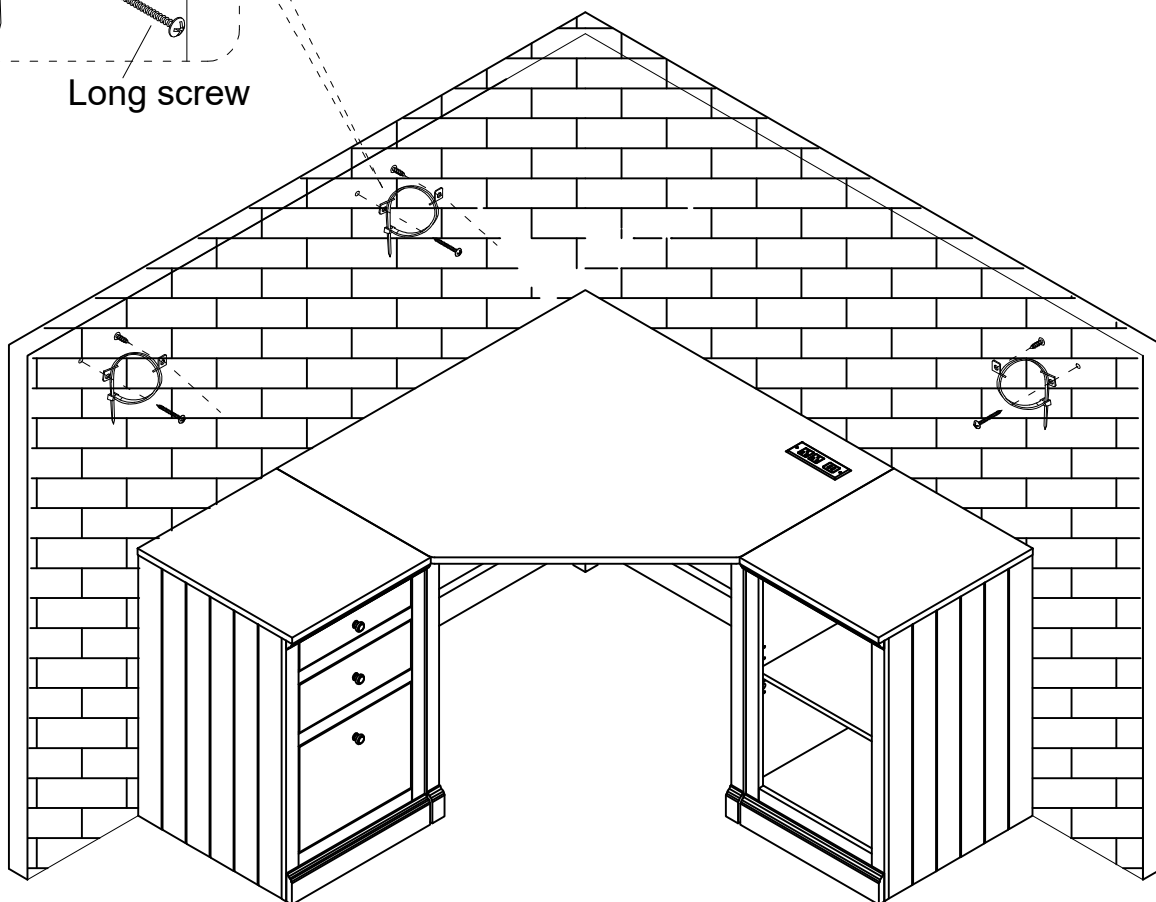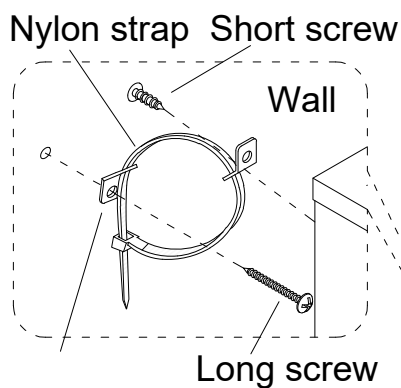


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION


FILE CABINET & BOOKCASE

A Top Panel

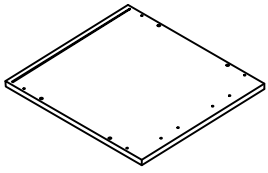


2pcs

B Bookcase Side Panel - L

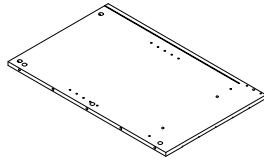


1pc

C Bookcase Side Panel - R

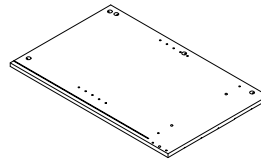


1pc

D Bookcase Bottom Shelf

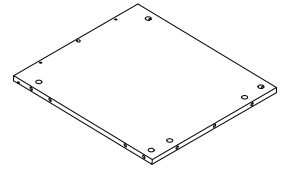


1pc

E Bookcase Adjustable Shelf

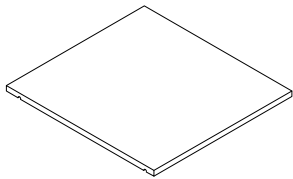


1pc

F Top Rail




2pcs

G Back Panel

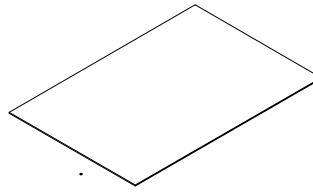


2pcs

H Front Post - L

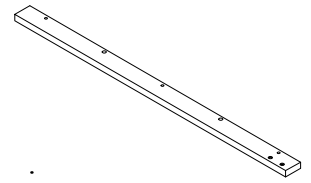


2pcs

I Front Post - R

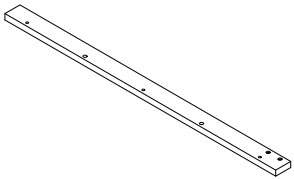


2pcs

J Bottom Back Panel

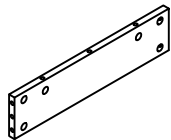


2pcs

K Front Bottom Rail

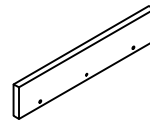


2pcs

L Front Bottom Trim

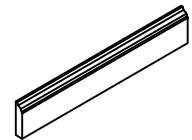


2pcs

M Cabinet Side Panel - L

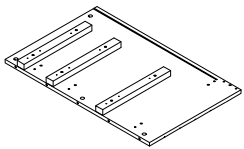


1pc

N Cabinet Side Panel - R

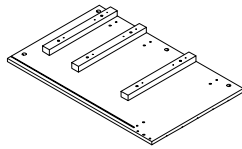


1pc

O Cabinet Back Support

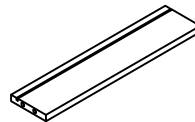


1pc

P Drawer Support Panel - Front

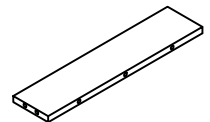


3pcs

Q Cabinet Front Rail




2pcs

R Top Drawer Front Panel

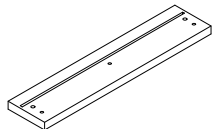


1pc

S Top Drawer Side Panel - L




1pc

T Top Drawer Side Panel - R

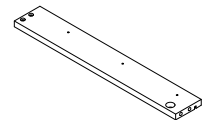


1pc

U Top Drawer Back Panel

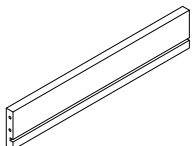


1pc

V Drawer Bottom Panel

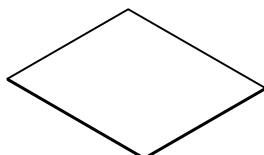


3pcs

W Middle Drawer Front Panel









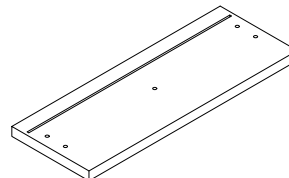








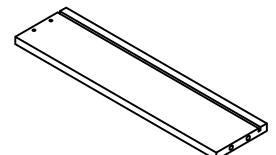





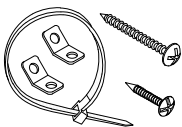



1pc

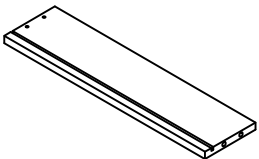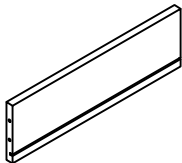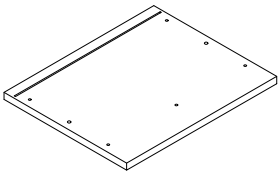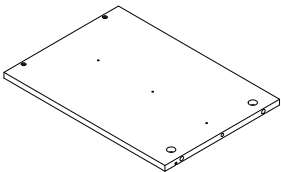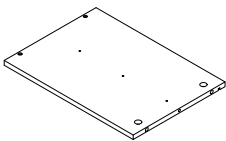X Middle Drawer Side Panel - L

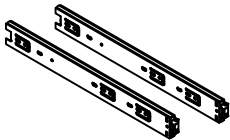

1pc

Y Middle Drawer Side Panel - R  1pc	Z Middle Drawer Back Panel  1pc	AA Bottom Drawer Front Panel  1pc	AB Bottom Drawer Side Panel - L  1pc
AC Bottom Drawer Side Panel - R  1pc	AD Bottom Drawer Back Panel  1pc	AE Wood Dowel Ø8*30mm  38pcs	AF Wood Dowel Ø6*20mm  8pcs
AG Wood Dowel Ø6*30mm  6pcs	AH Nut Ø15*12mm  52pcs	AI Nut Ø15*9mm  10pcs	AJ Bolt Ø5*25mm  62pcs
AK Back Clip  12pcs	AL Screw Ø3*17mm  12pcs	AM Slide Rail  3sets	AN Screw Ø3.5*12mm  36pcs
AO Knob Ø31*25mm  3pcs	AP Bolt Ø4*22mm  3pcs	AQ Screw Ø4*30mm  16pcs	AR Screw Ø4*25mm  10pcs
AS Shelf Pin Ø5*16mm  4pcs	AT Glue  1pc	AU Screwdriver (Not Provided)  1pc	AV Anti-Tipping Kit  2sets

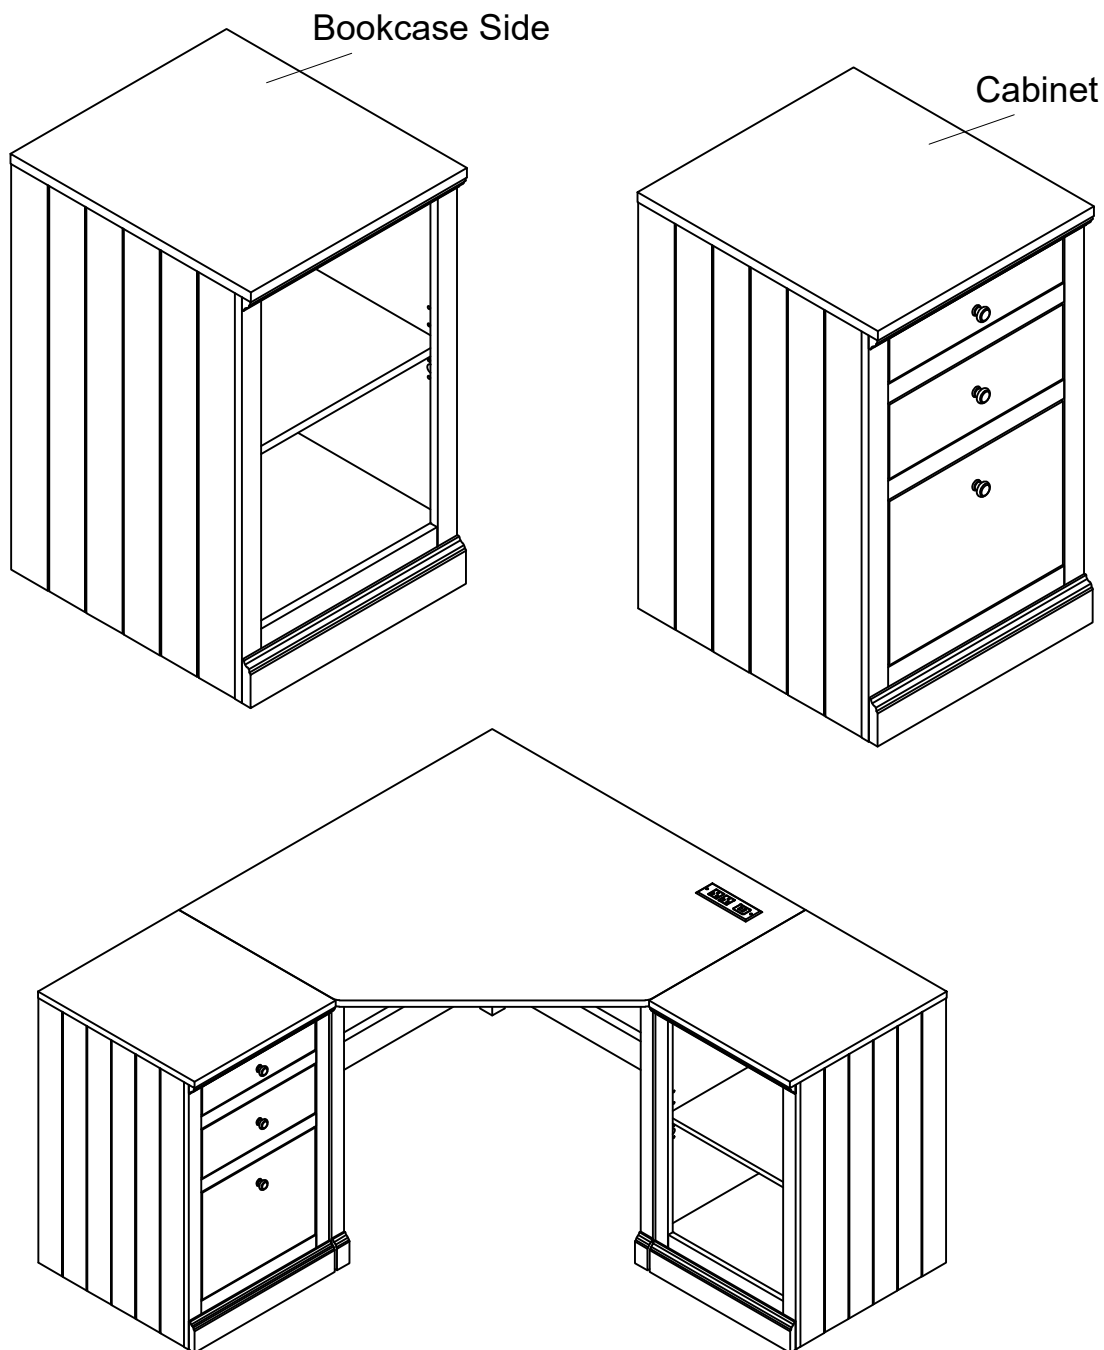

E862-15CRA(in other carton)+E862-15CRB

The first page, second page and third page list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


ASSEMBLY

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.


-

-


- 3** Assemble Top Rail (F) to Top Panel (A) by Glue (AT) & Wood Dowel (AF) first, then assemble Screw (AQ) By Screwdriver (AU) as below shown.

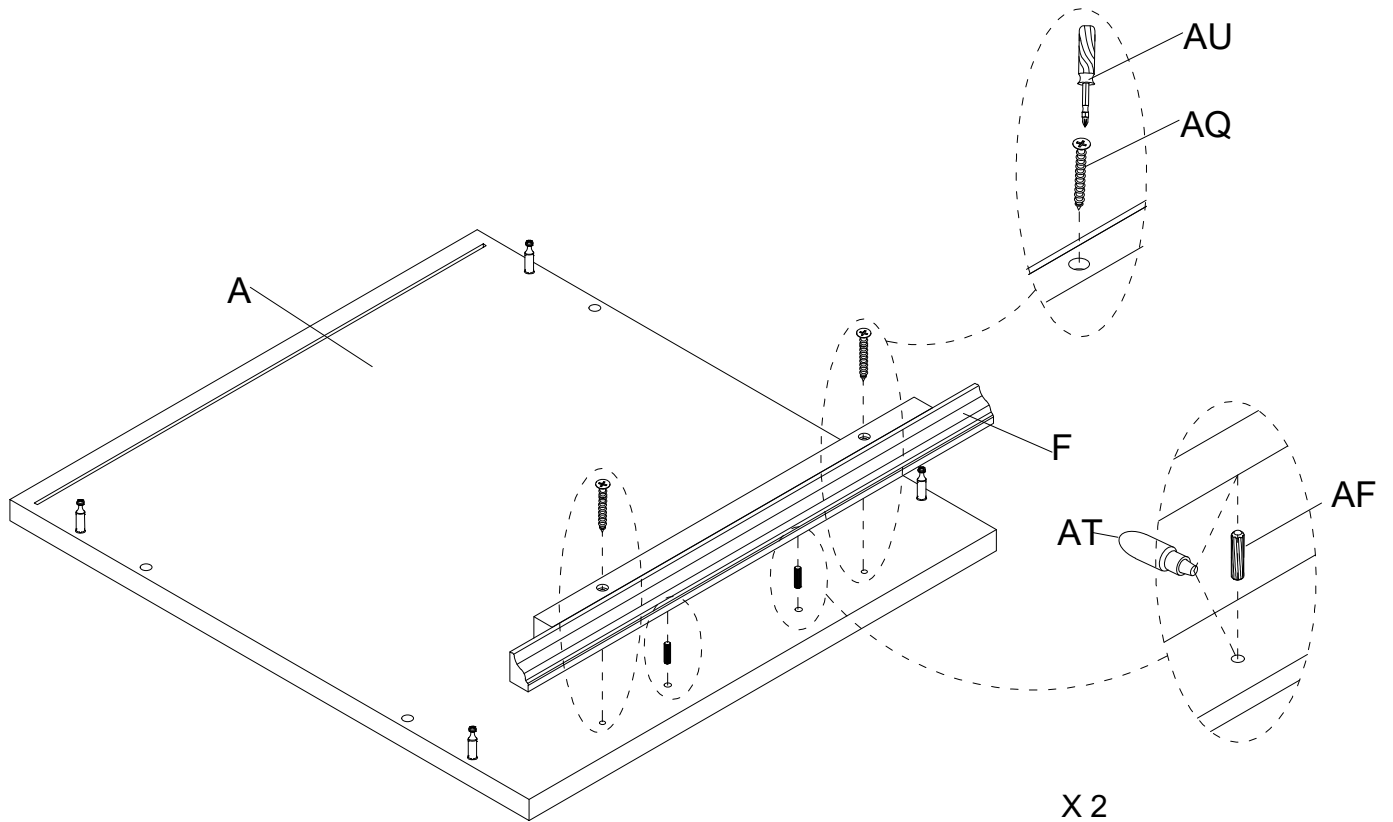


- 4** Insert Bolt (AJ) to Bookcase Side Panel - L (B), Bookcase Side Panel - R (C), Bookcase Bottom Shelf (D) and Front Bottom Rail (K) by Screwdriver (AU) as below shown.

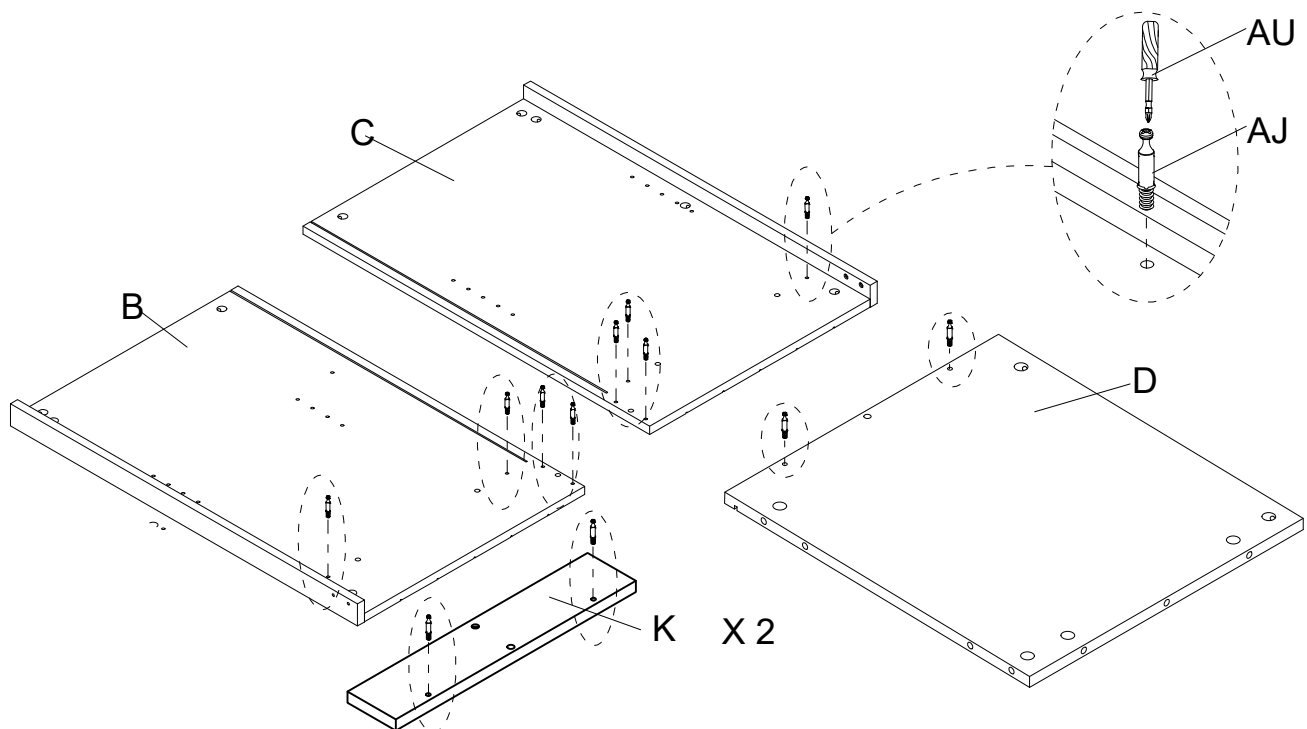


- 5** Assemble Front Bottom Rail (K) and Bottom Back panel (J) to Bookcase Bottom Shelf (D) by Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

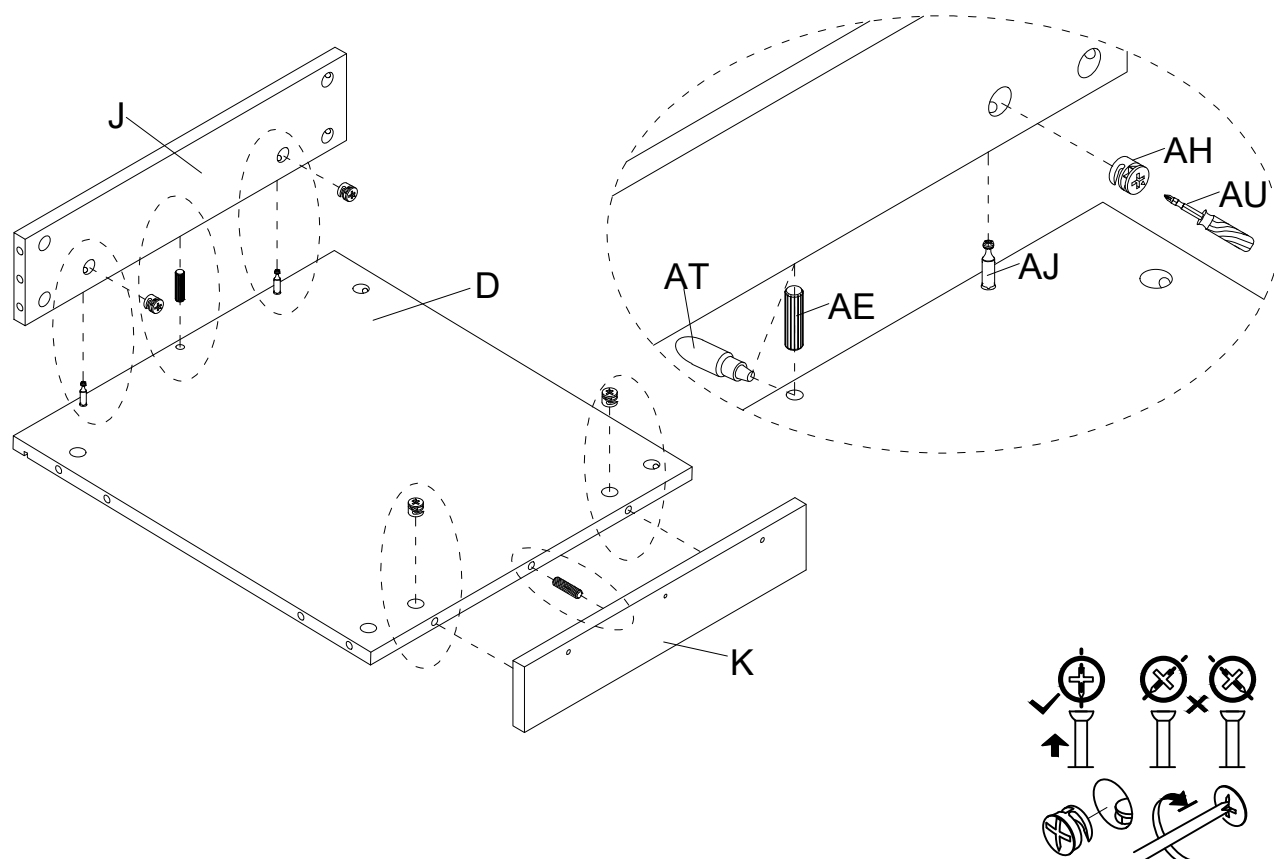


- 6** Assemble pre-assembled Front Bottom Rail (K), Bottom Back panel (J) and Bookcase Bottom Shelf (D) to Bookcase Side panel - R (C), using Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown. Assemble Bookcase Side panel - L (B) to Bookcase Bottom Shelf (D), Front Bottom Rail (K) and Bottom Back panel (J) in the same way.

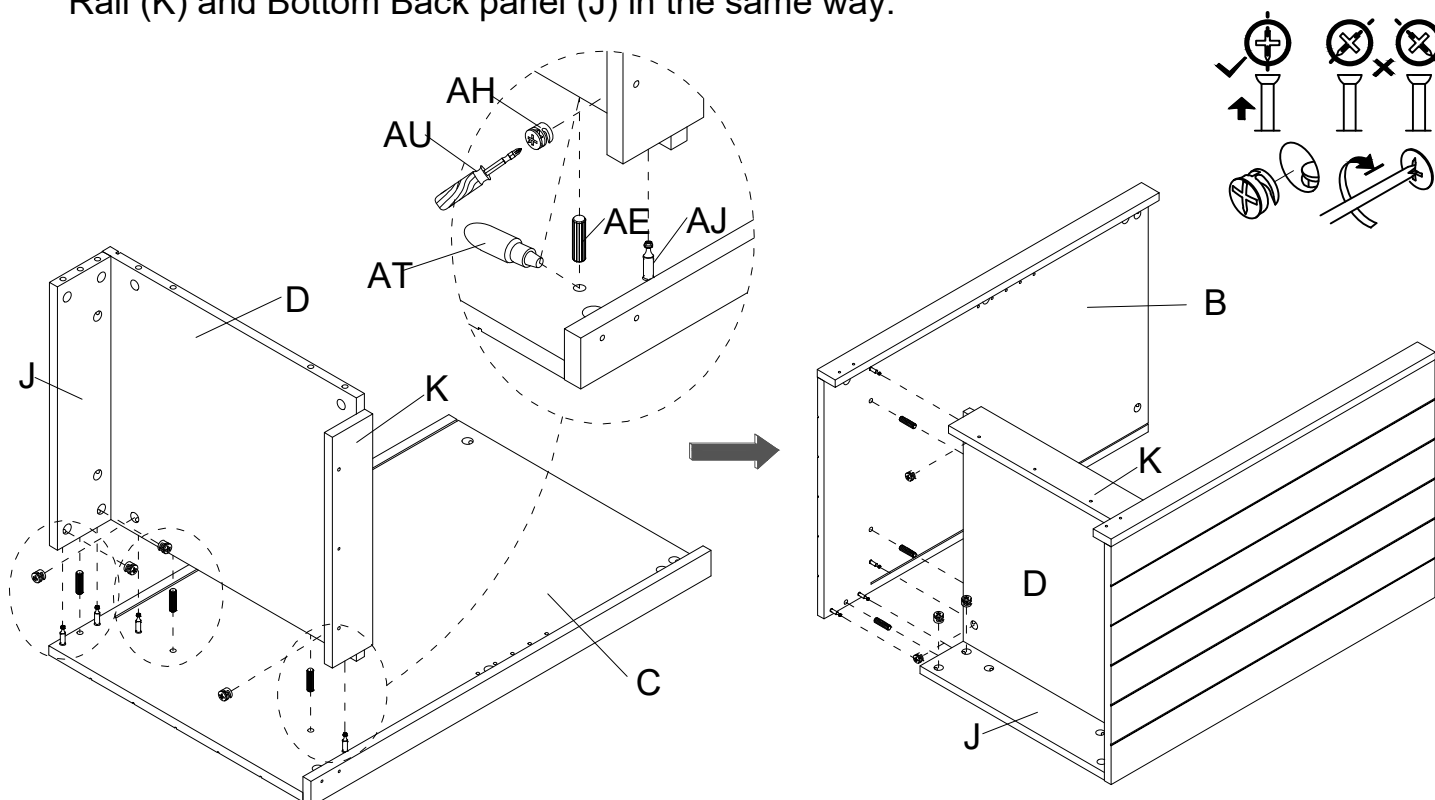


- 7** Assemble Front Bottom Trim (L) to pre-assembled Front Bottom Rail (K), Front Post - L (H) and Front Post - R (I) by Glue (AT) & Wood Dowel (AF) first, then assemble Screw (AR) By Screwdriver (AU) as below shown.

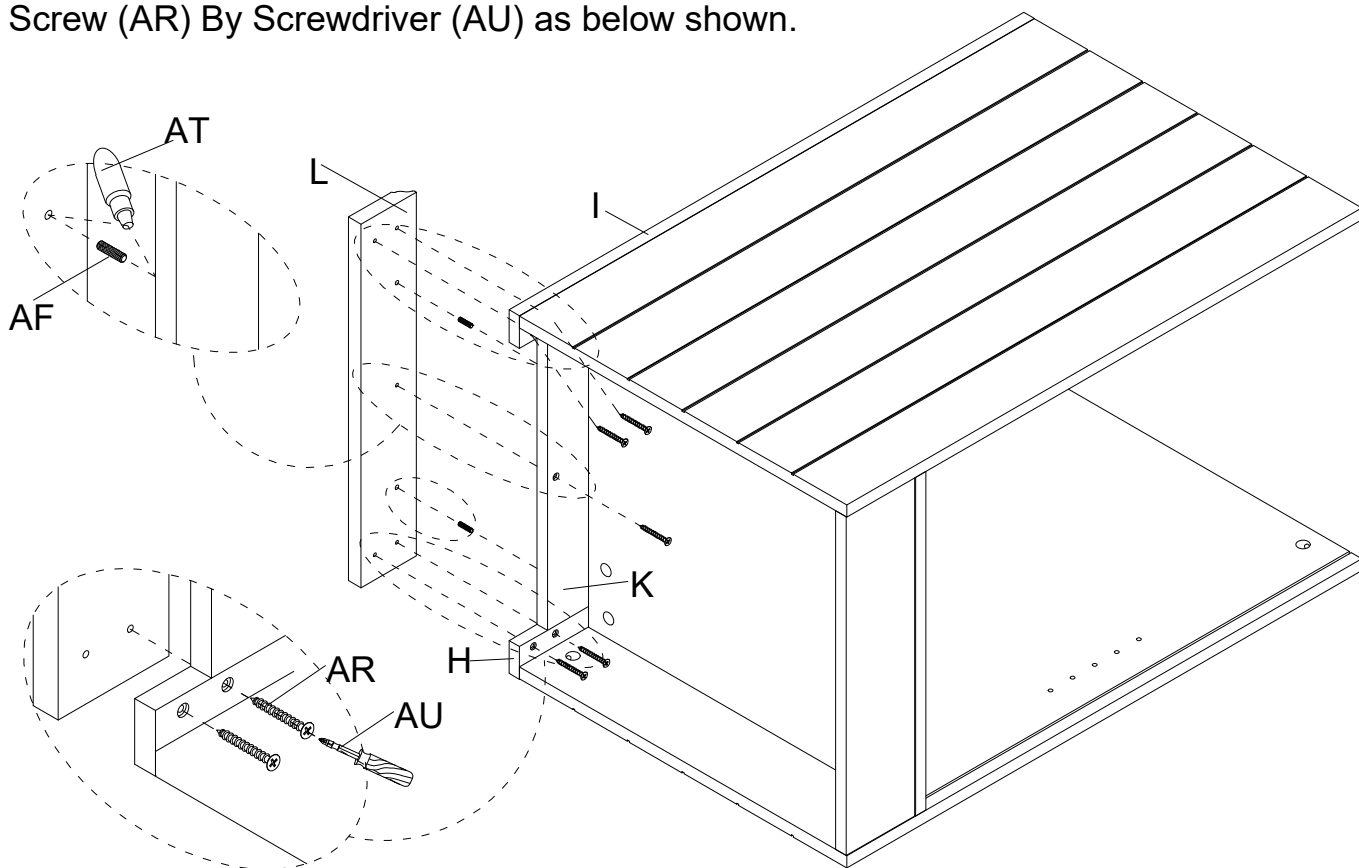


- 8** Insert Back Panel (G) to Bookcase Side Panel - L (B), Bookcase Side Panel - R (C), and Bookcase Bottom Shelf (D) as below shown.

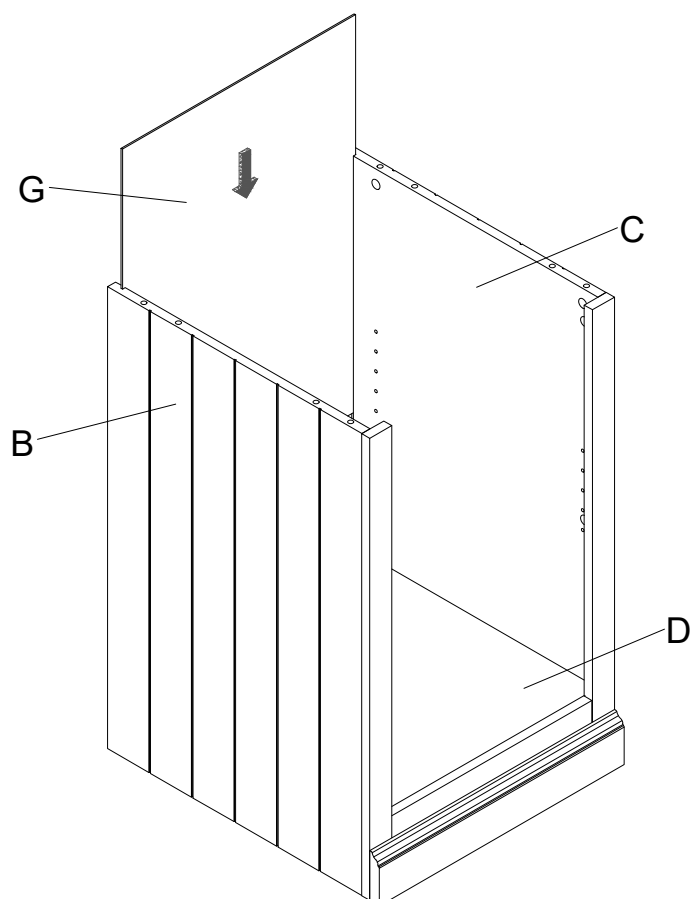


- 9** Assemble Top Panel (A) to Bookcase Side Panel - L (B) and Bookcase Side Panel - R (C) by Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

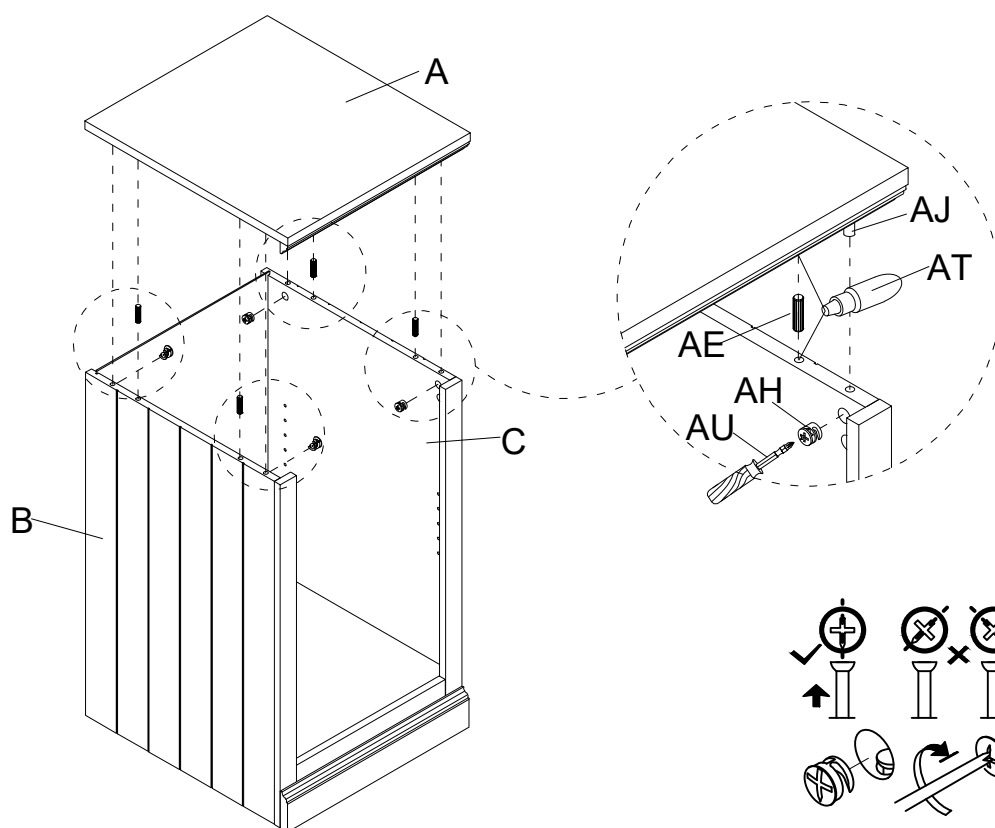


- 10** First, insert Shelf Pin (AS) to pre-assembled Bookcase Side Panel - L (B) & Bookcase Side Panel - R (C) as below shown. The Shelf Pin (AS) is adjustable, you can assemble them to the level you need. Second, Put Adjustable Shelf (E) onto Shelf Pin (AS) as below shown.

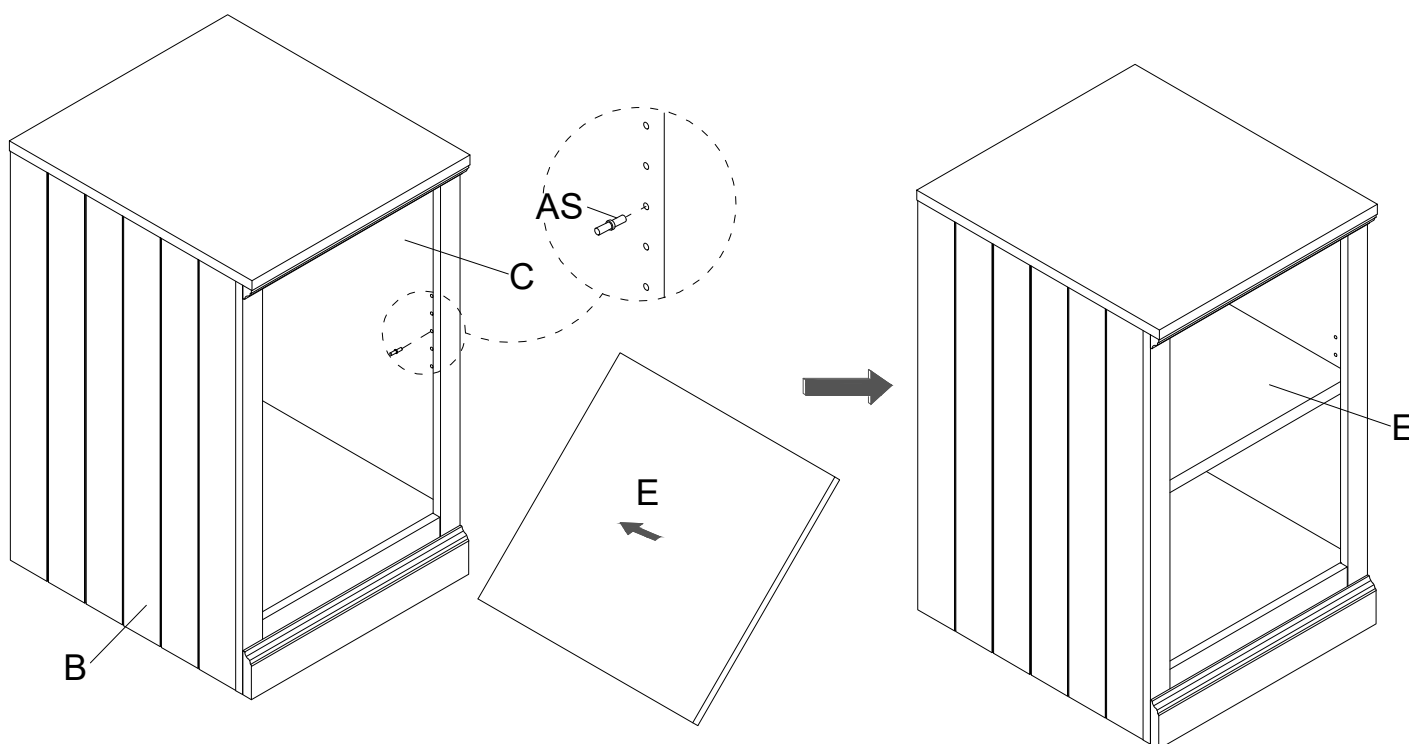


- 11** Assemble Back Clip (AK) to Back Panel (G) using Screw (AL) by Screwdriver (AU) as below shown.

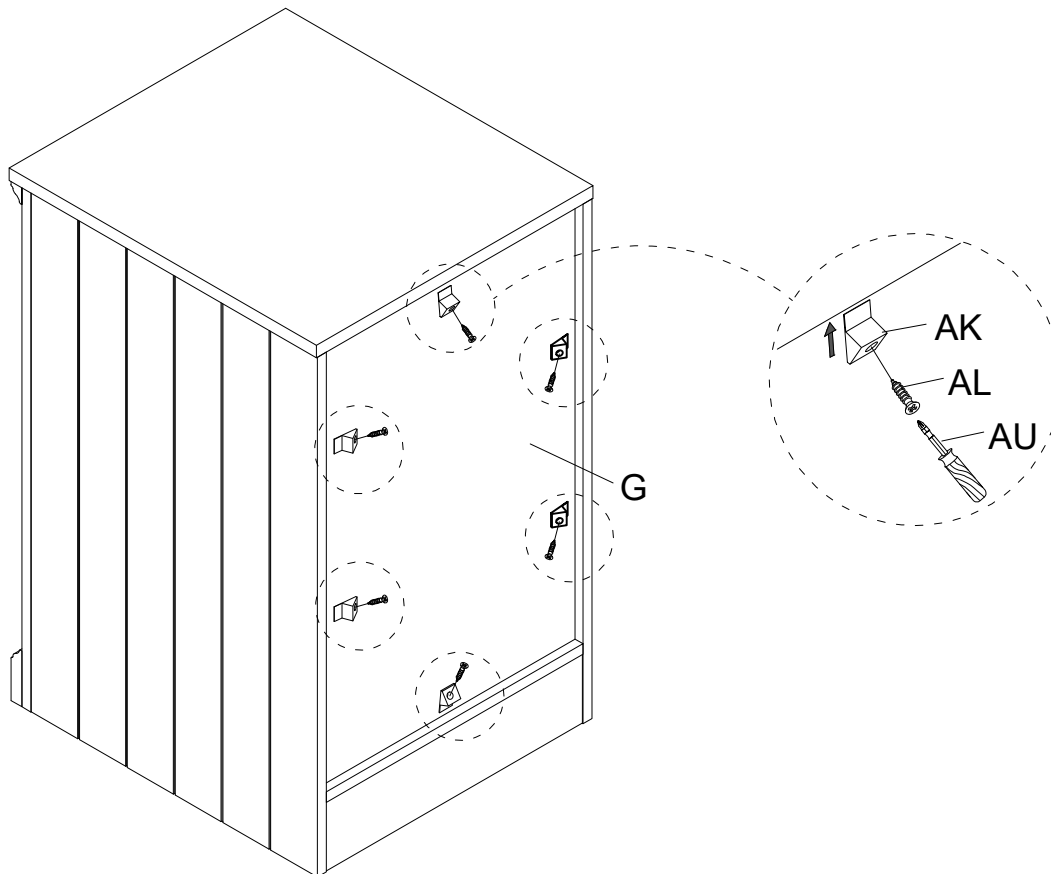


- 12** Assemble Front Post - L (H) to Cabinet Side Panel - L (M), Front Post - R (I) to Cabinet Side Panel - R (N), using Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

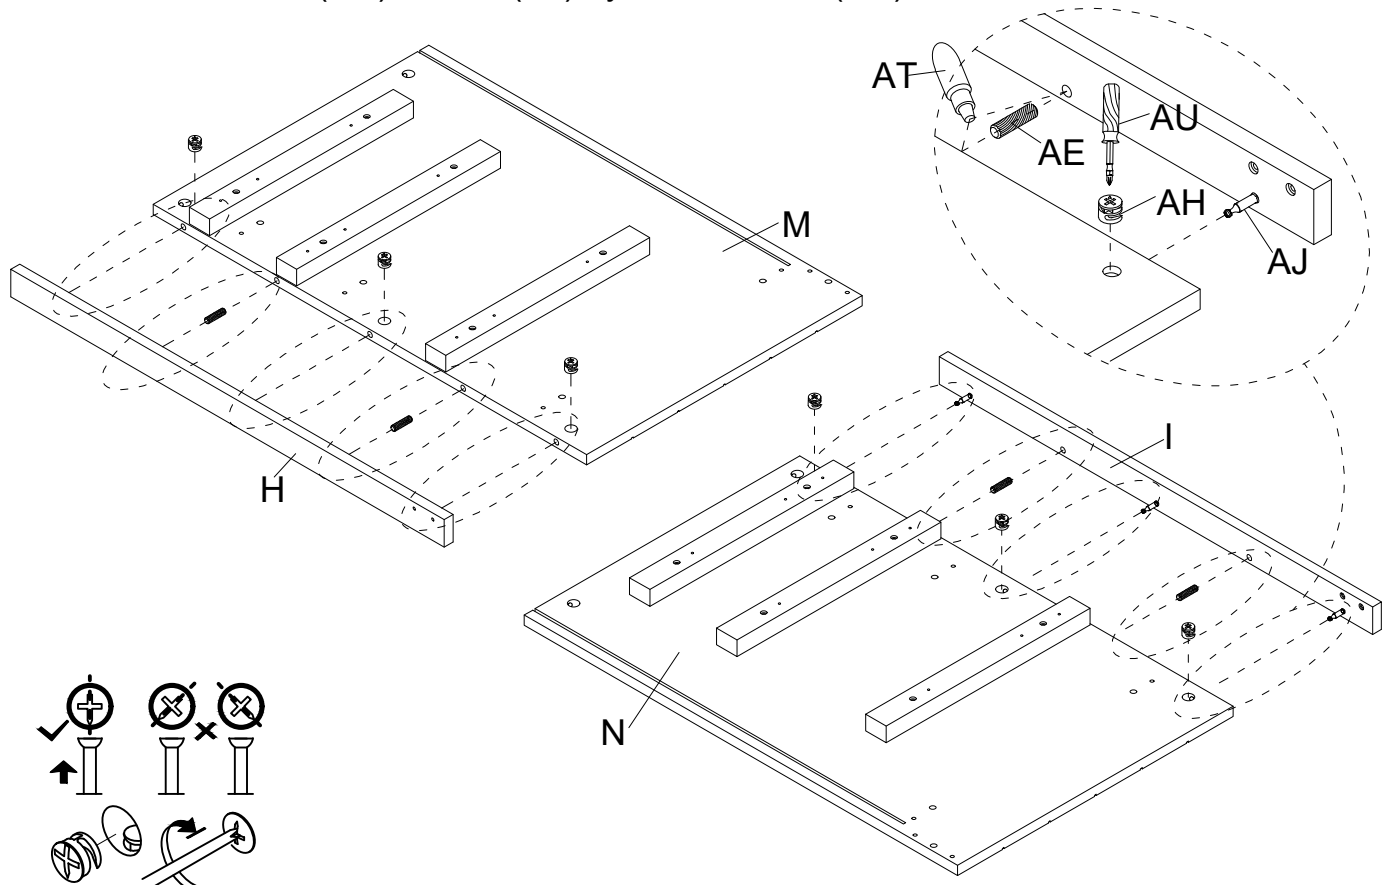


- 13** Insert Bolt (AJ) to Cabinet Side Panel - L (M), Cabinet Side Panel - R (N), Cabinet Back Support (O) and Cabinet Front Rail (Q) by Screwdriver (AU) as below shown.

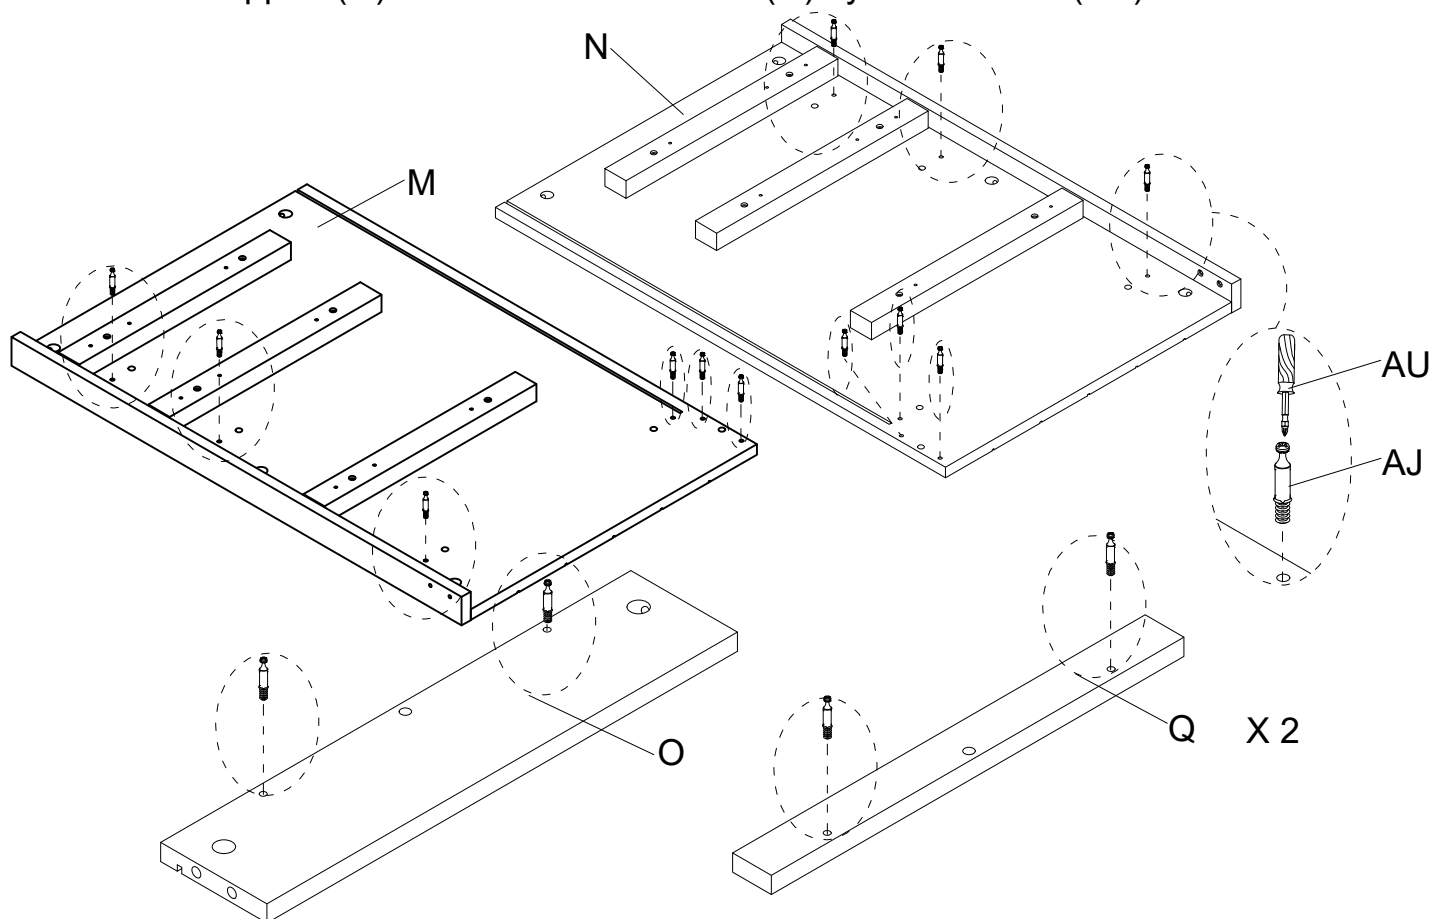


- 14** Assemble Bottom Back Panel (J) to Cabinet Back Support (O), Drawer Support Panel - Front (P) to Front Bottom Rail (K) and Cabinet Front Rail (Q) by Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

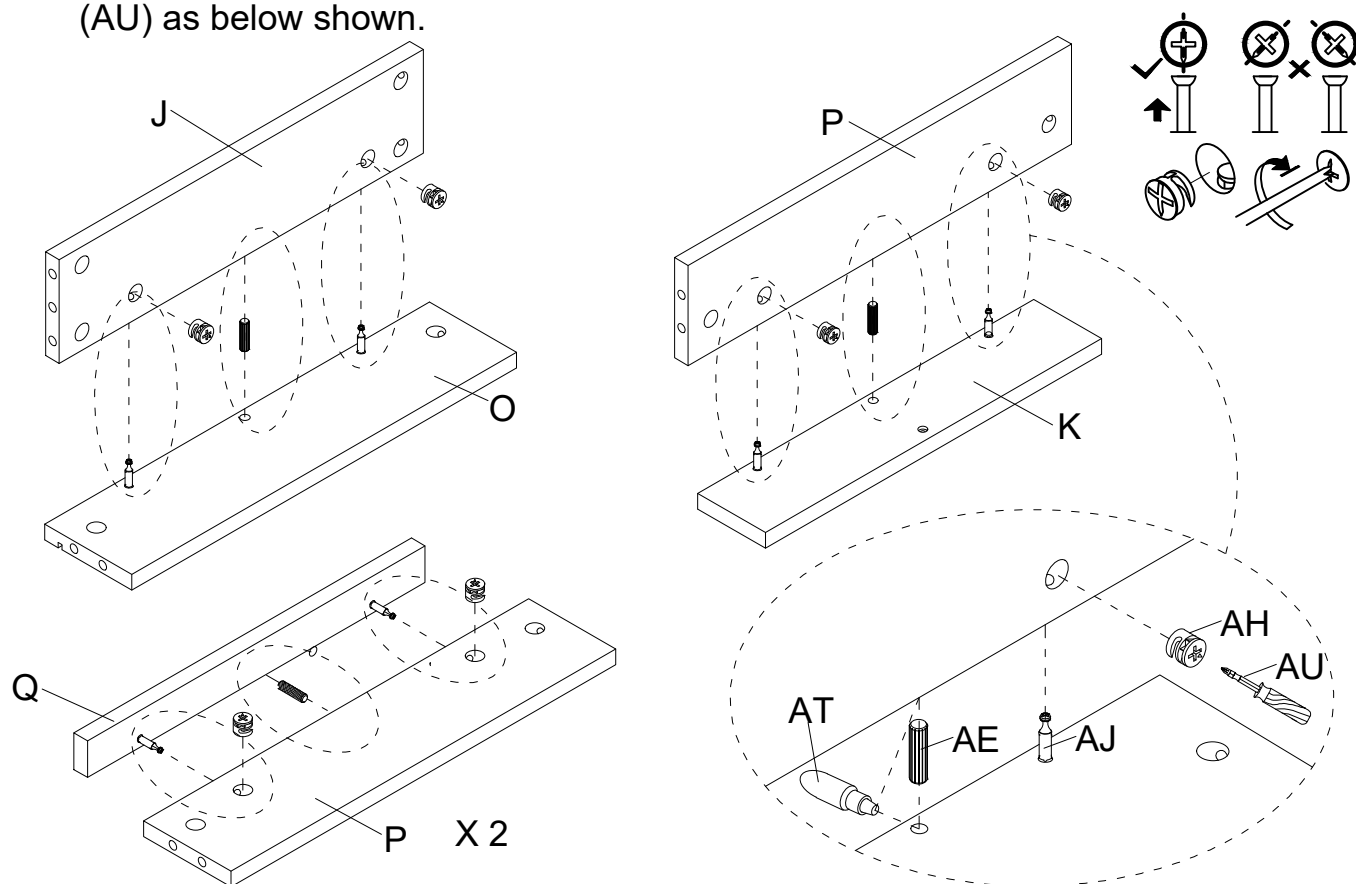


- 15** Pull out Slide Rail (AM) fully extended, a hold-in detent can be seen or touched on slide runners.

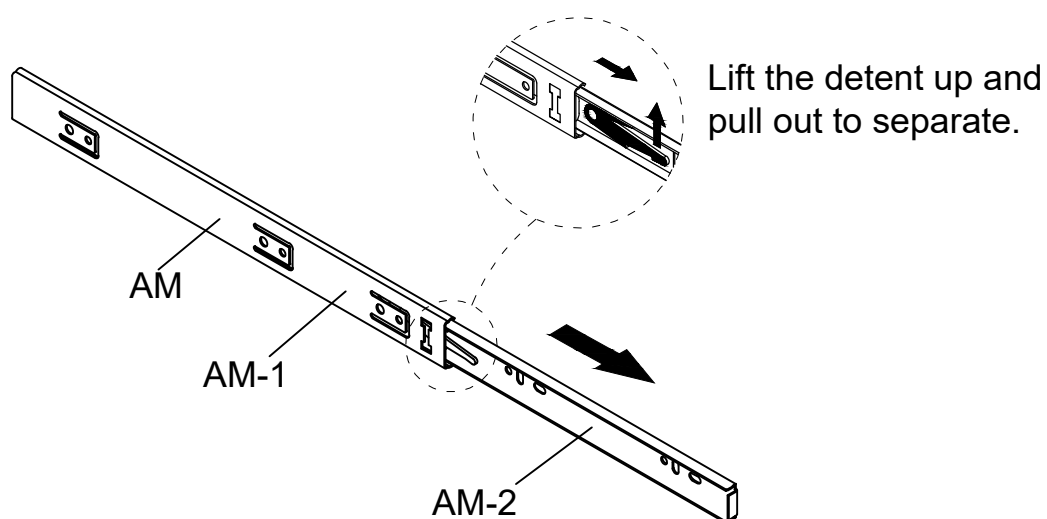


- 16** Assemble part 2 of Slide Rail (AM-1) to Cabinet Side Panel - L (M) and Cabinet Side Panel - R (N), using Screw (AN) by Screwdriver (AU) as below shown.

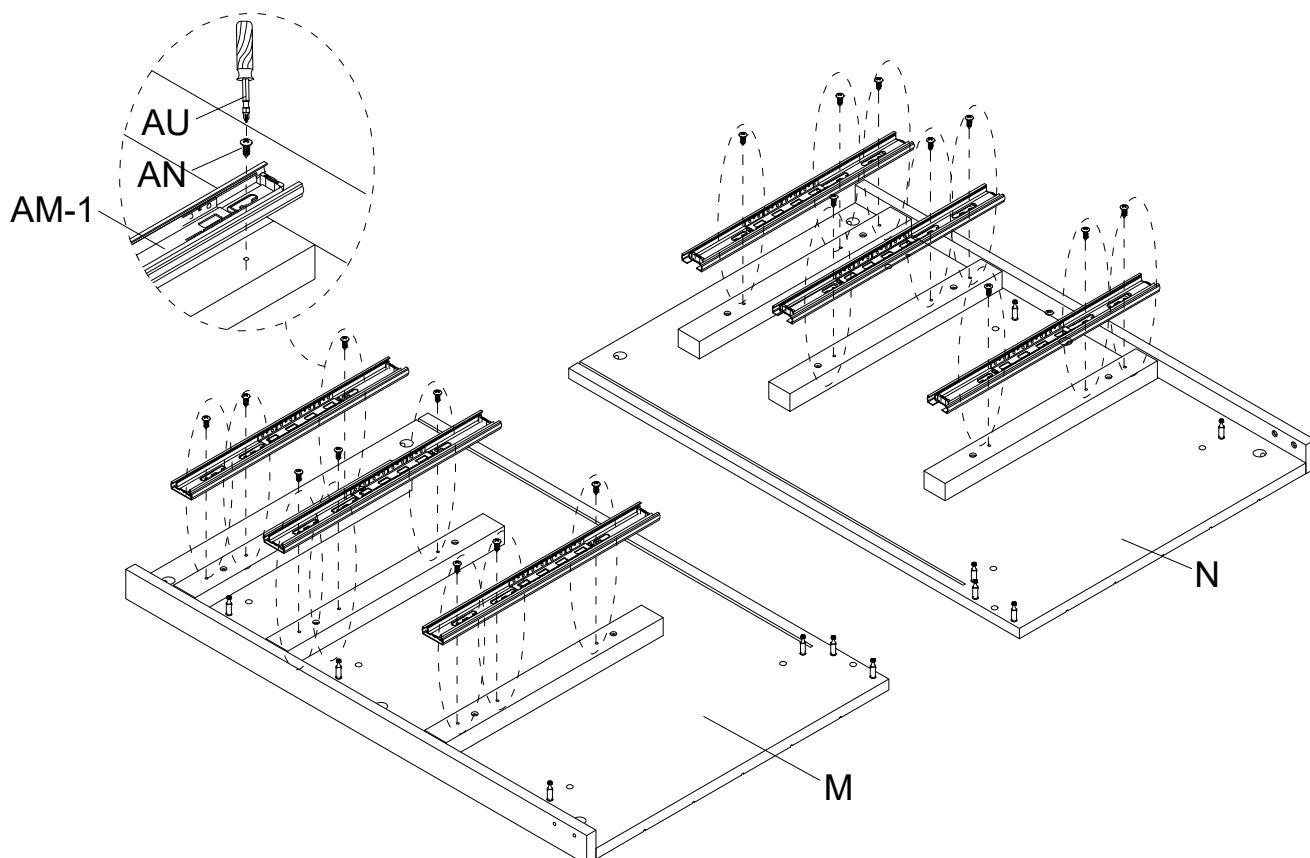


- 17** Assemble pre-assembled Drawer Support Panel - Front (P), Bottom Back Panel (J) and Cabinet Back Support (O) to Cabinet Side Panel - L (M), by Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

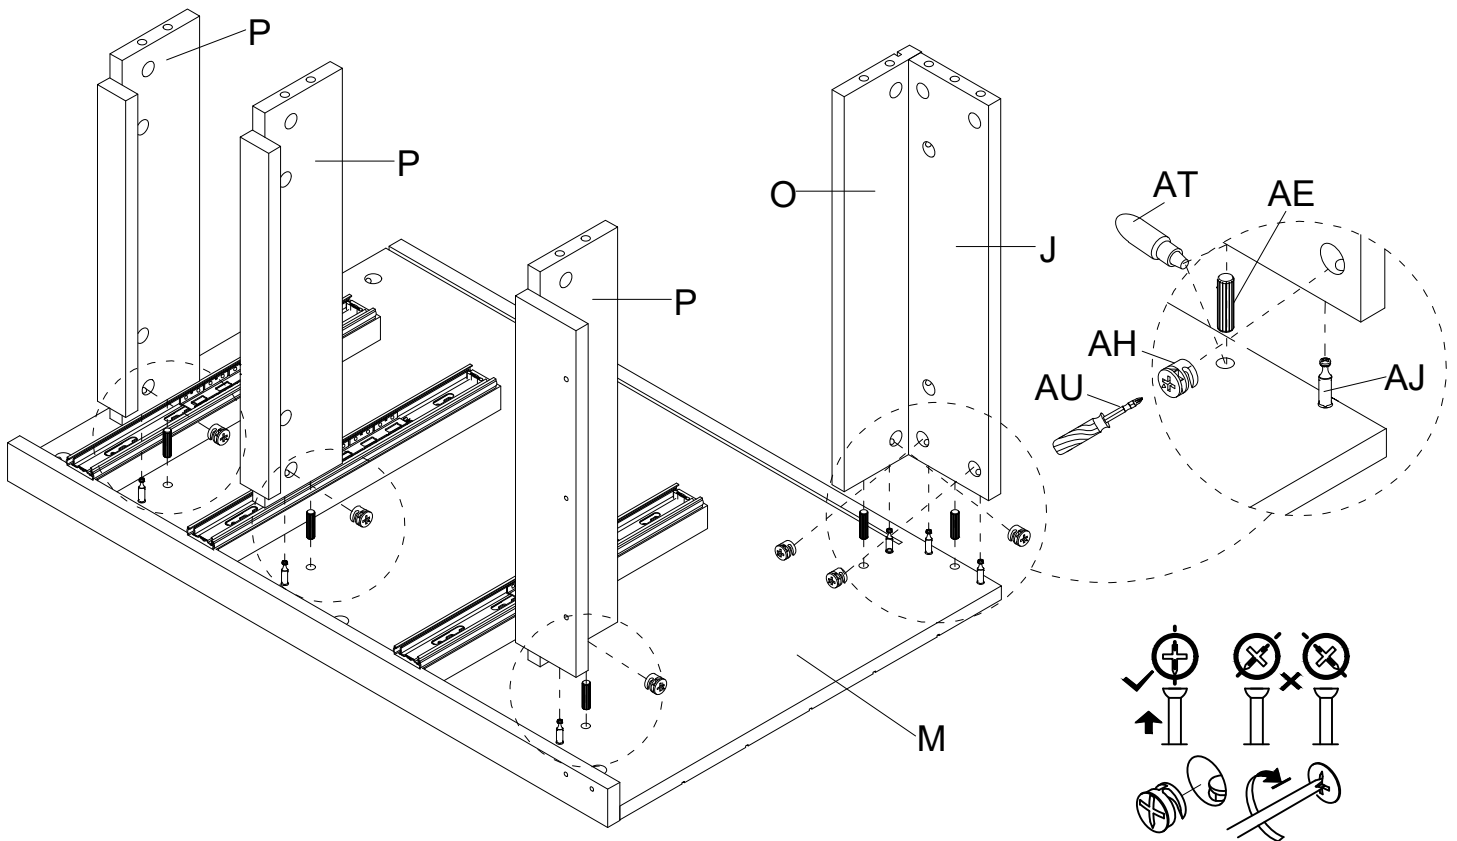


- 18** Assemble pre-assembled Drawer Support Panel - Front (P), Bottom Back Panel (J) and Cabinet Back Support (O) to Cabinet Side Panel - R (N), by Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

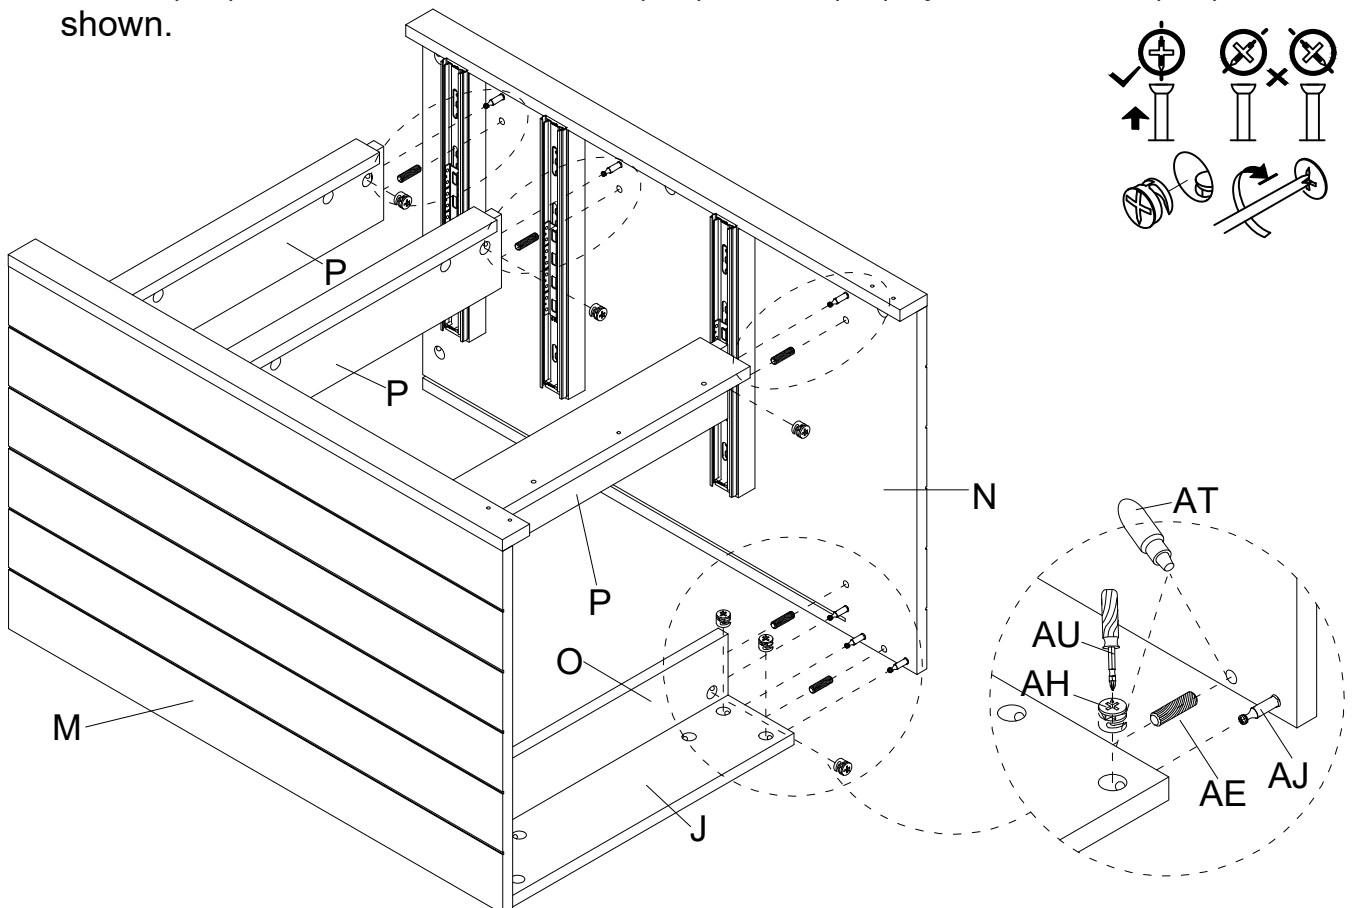


- 19** Assemble Front Bottom Trim (L) to pre-assembled Front Bottom Rail (K), Front Post - L (H) and Front Post - R (I) by Glue (AT) & Wood Dowel (AF) first, then assemble Screw (AR) By Screwdriver (AU) as below shown.

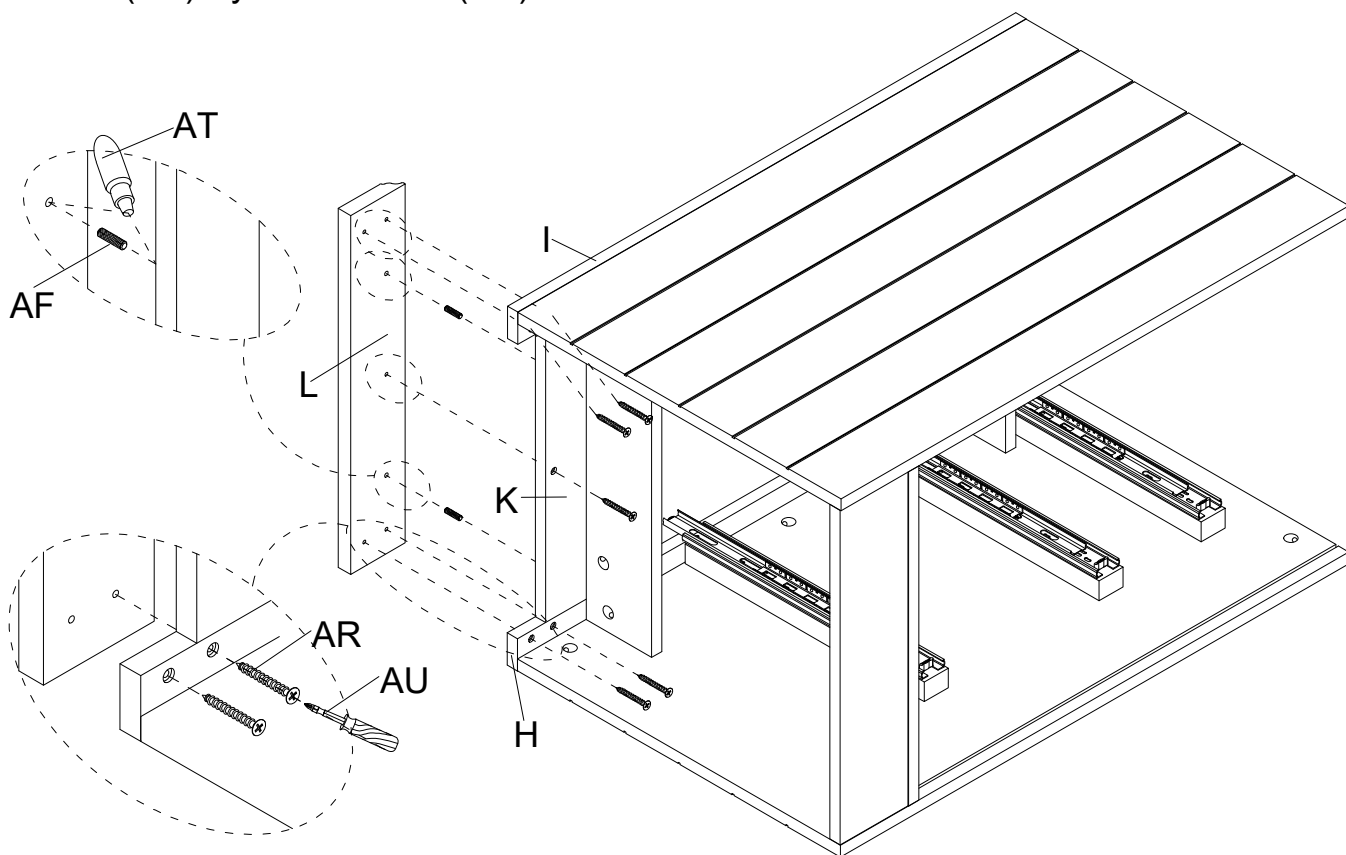


- 20** Insert Back Panel (G) to Cabinet Side Panel - L (M), Bookcase Side Panel - R (N) and Cabinet Back Support (O) as below shown.

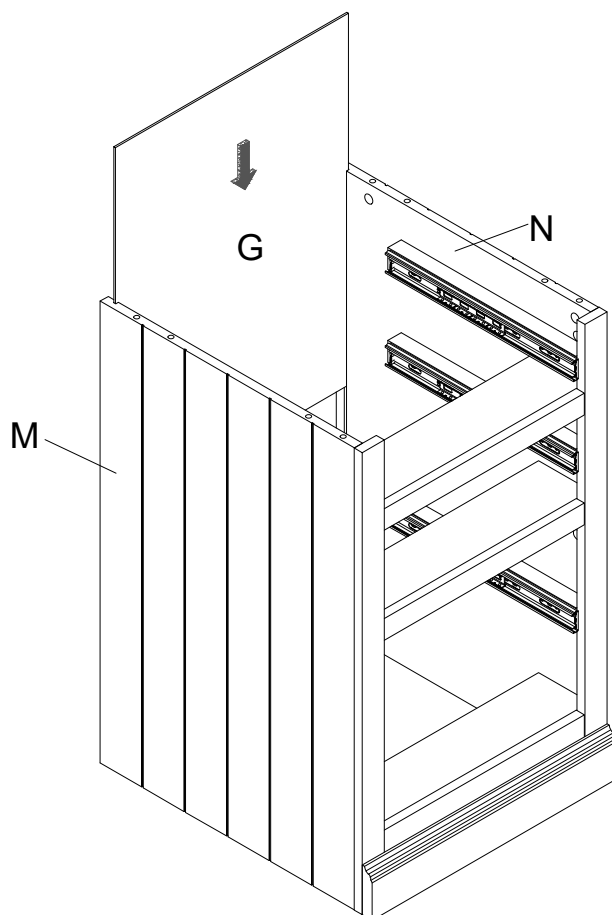


- 21** Assemble Top Panel (A) to Cabinet Side Panel - L (M) and Cabinet Side Panel - R (N) by Glue (AT) & Wood Dowel (AE) first, then assemble Nut (AH) to Bolt (AJ) by Screwdriver (AU) as below shown.

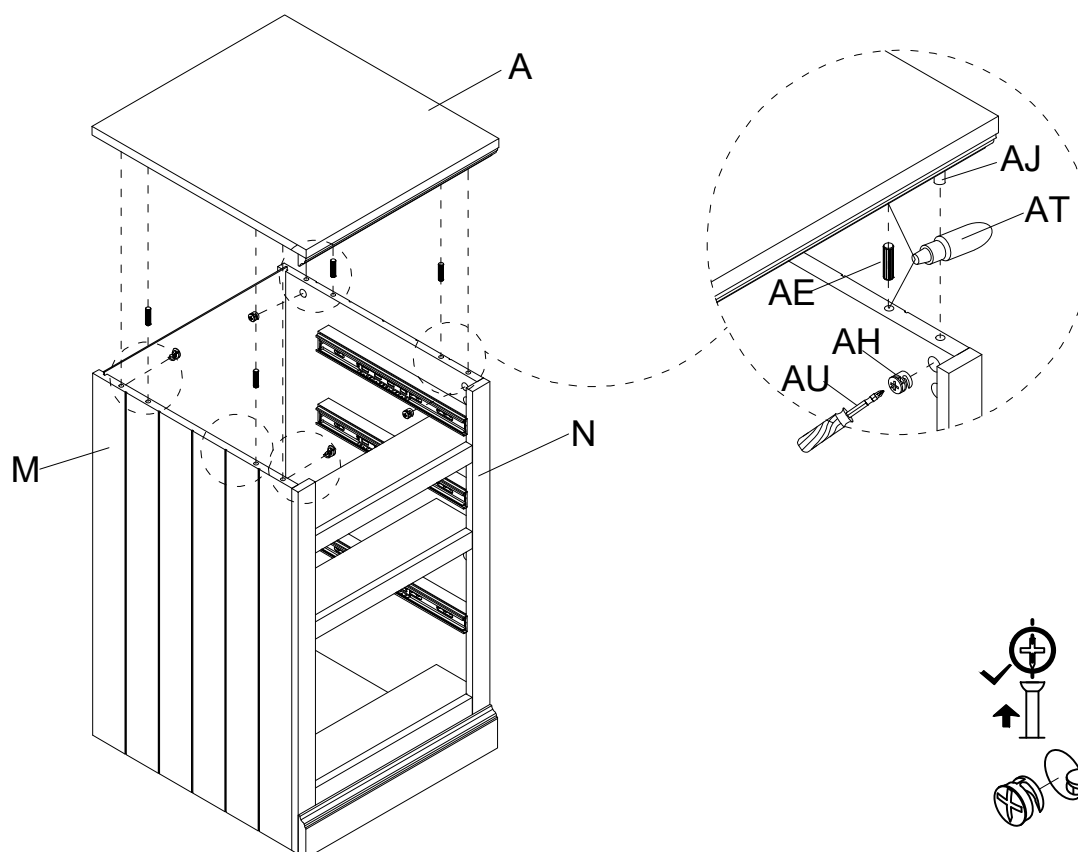


- 22** Assemble Back Clip (AK) to Back Panel (G) using Screw (AL) by Screwdriver (AU) as below shown.

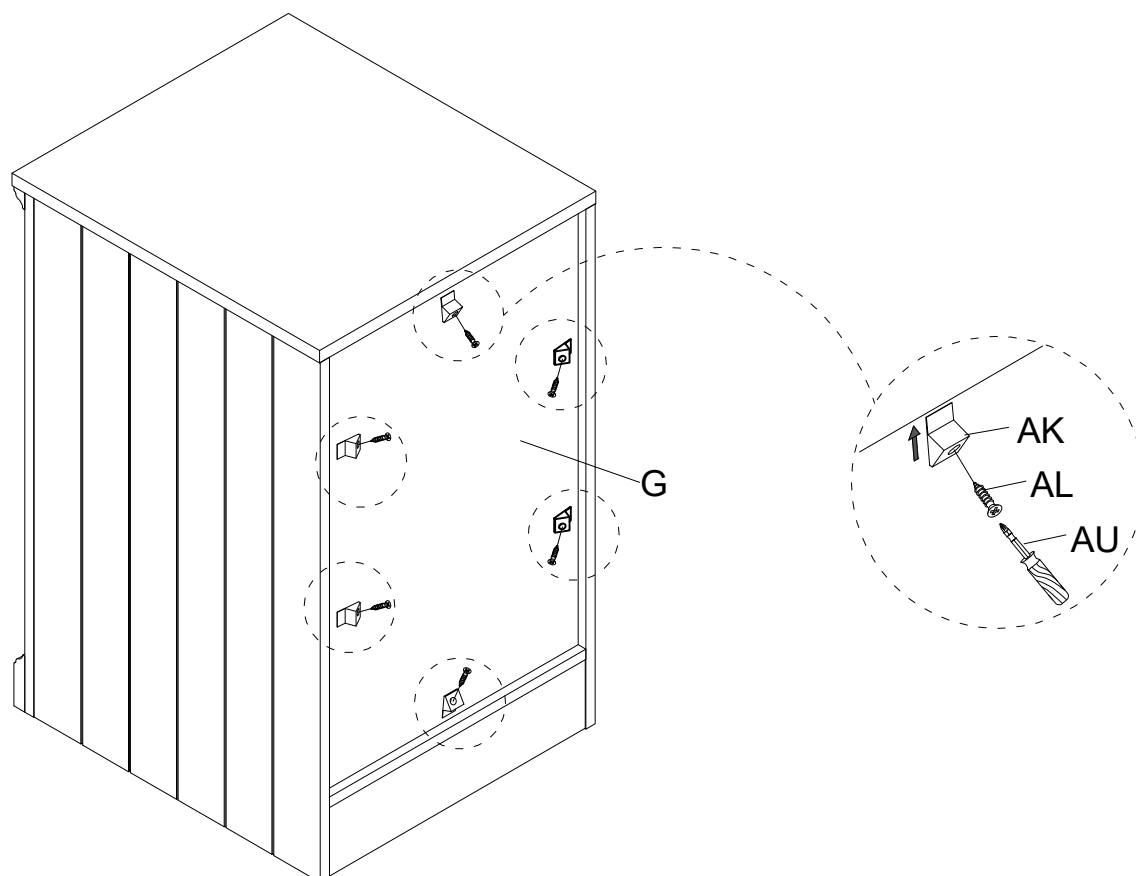


- 23** Insert Bolt (AJ) to Top Drawer Front Panel (R), Middle Drawer Front Panel (W), Bottom Drawer Front Panel (AA) by Screwdriver (AU) as below shown.

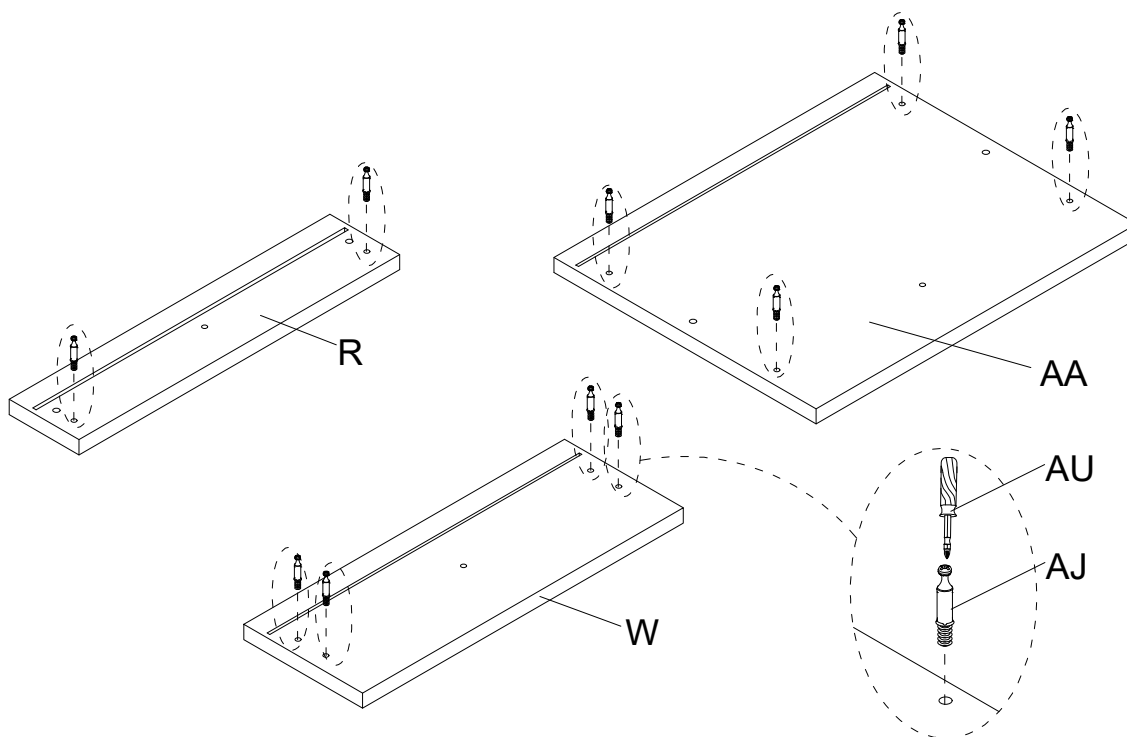


- 24** Assemble part 2 of Slide Rail (AM-2) to Top Drawer Side Panel - L (S) and Top Drawer Side Panel - R (T), Bottom Drawer Side Panel - L (AB) and Bottom Drawer Side Panel - R (AC), using Screw (AN) to tighten by Screwdriver (AU). Insert Wood Dowel (AG) to Top Drawer Side Panel - L (S), Top Drawer Side Panel - R (T), Bottom Drawer Side Panel - L (AB) and Bottom Drawer Side Panel - R (AC) as below shown.

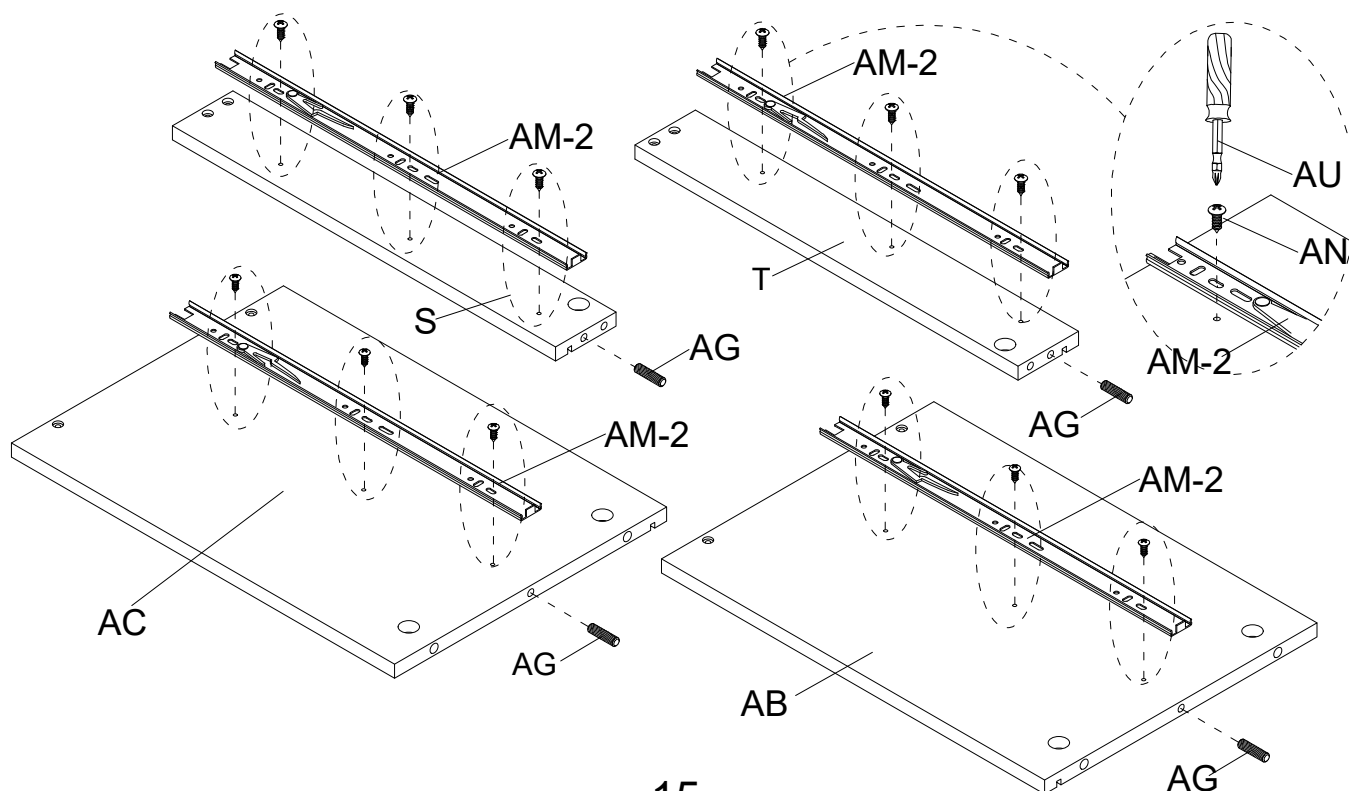


- 25** Insert Wood Dowel (AG) to Bottom Drawer Back Panel (AD) first, then insert Drawer Bottom Panel (V) into Bottom Drawer Side Panel - L (AB), Bottom Drawer Side Panel - R (AC) and Bottom Drawer Back Panel (AD), insert Drawer Bottom Panel (V) into Top Drawer Side Panel - L (S), Top Drawer Side Panel - R (T) and Top Drawer Back Panel (U) in the same way. Using Screw (AQ) by Screwdriver (AU) to assemble the panels together as below shown.

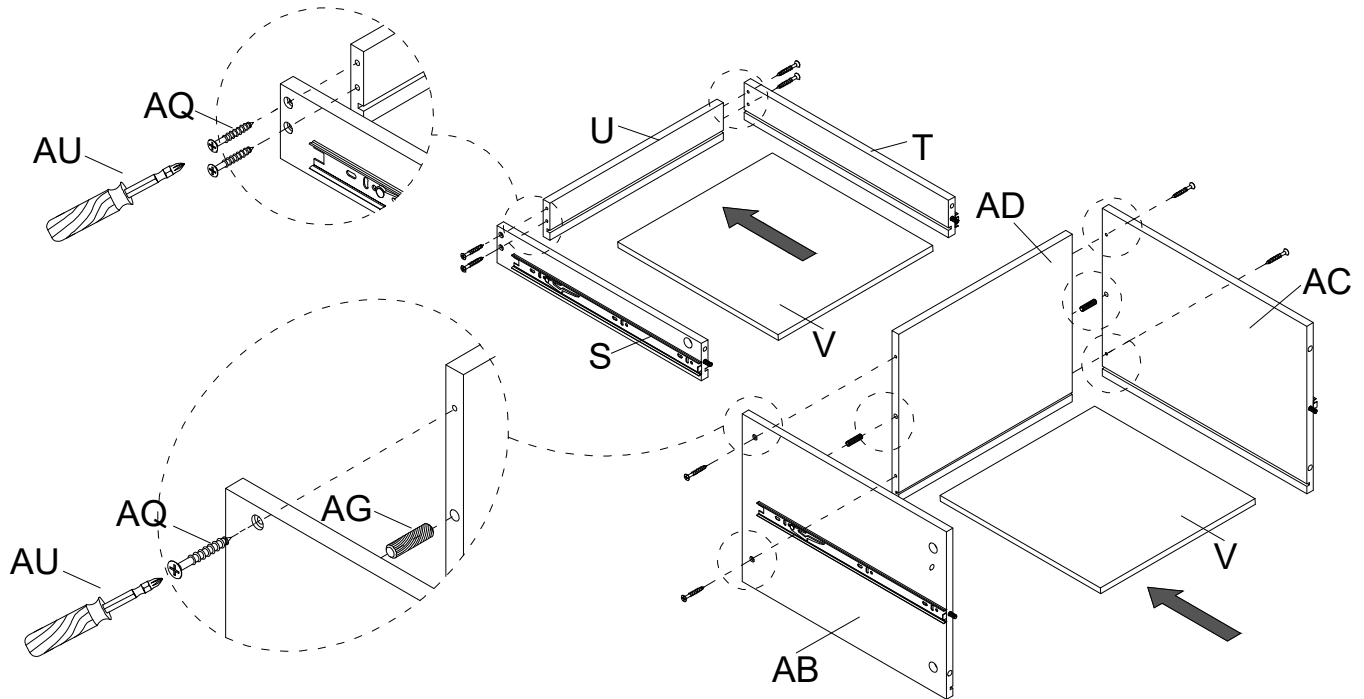


- 26** Assemble Top Drawer Front Panel (R) to pre-assembled Top Drawer Side Panel - L (S) and Top Drawer Side Panel - R (T), using Nut (AI) to Bolt (AJ) by Screwdriver (AU), attach Knob (AO) to Top Drawer Front Panel (R), using Bolt (AP) by Screwdriver (AU) as below shown. Repeat the same assemble way to assemble Bottom Drawer Front Panel (AA) to pre-assembled Bottom Drawer Side Panel - L (AB) and Bottom Drawer Side Panel - R (AC).

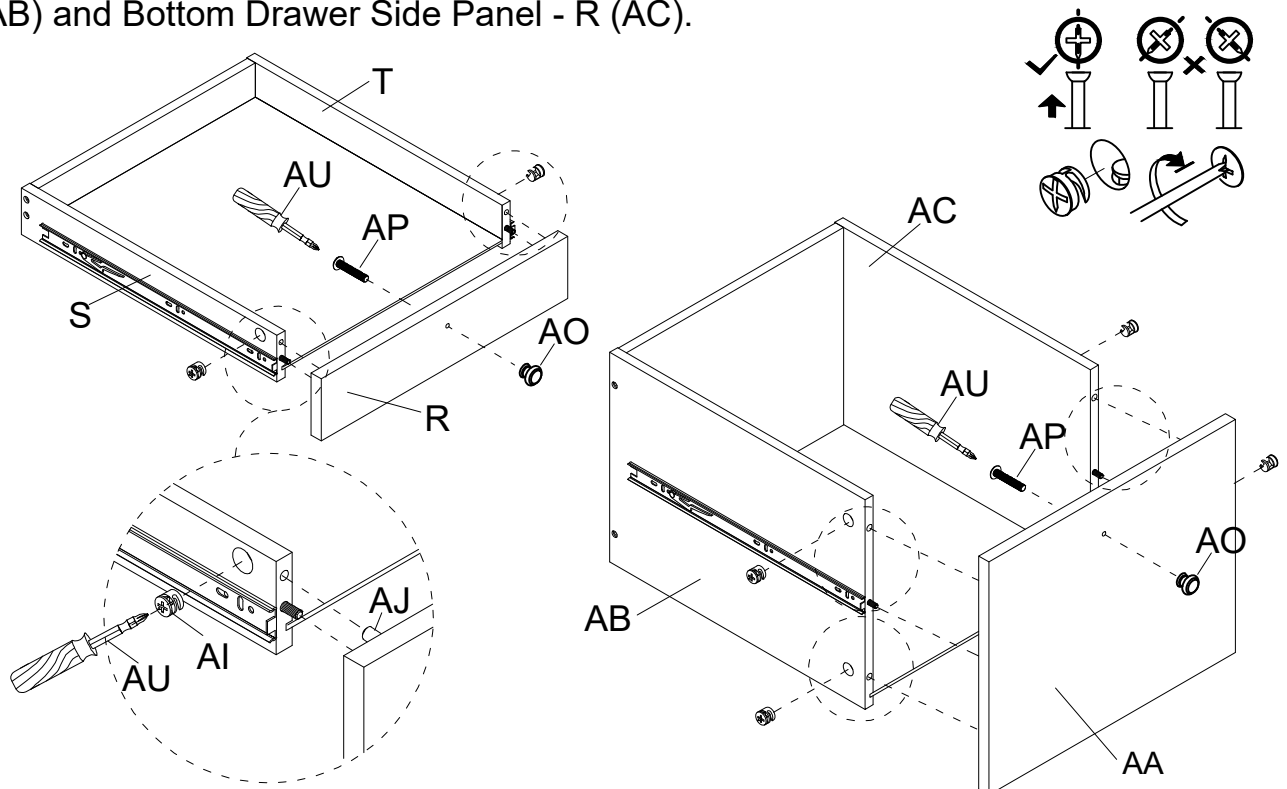


- 27** Insert Drawer Bottom Panel (V) into Middle Drawer Side Panel - L (X), Middle Drawer Side Panel - R (Y) and Middle Drawer Back Panel (Z) first, then using Screw (AQ) by Screwdriver (AU) to assemble the panels together as below shown.

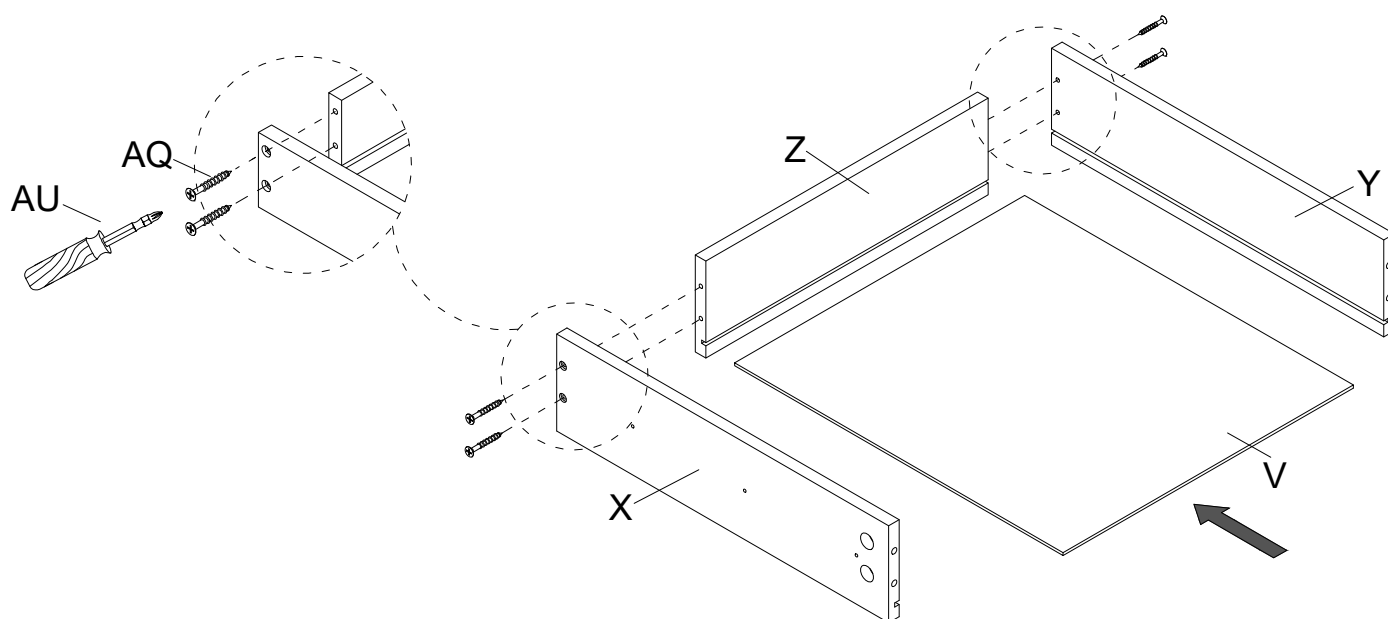


- 28** Assemble Middle Drawer Front Panel (W) to pre-assembled Middle Drawer Side Panel - L (X) and Middle Drawer Side Panel - R (Y), using Nut (AI) to Bolt (AJ) by Screwdriver (AU), attach Knob (AO) to Middle Drawer Front Panel (W), using Bolt (AP) by Screwdriver (AU) as below shown.

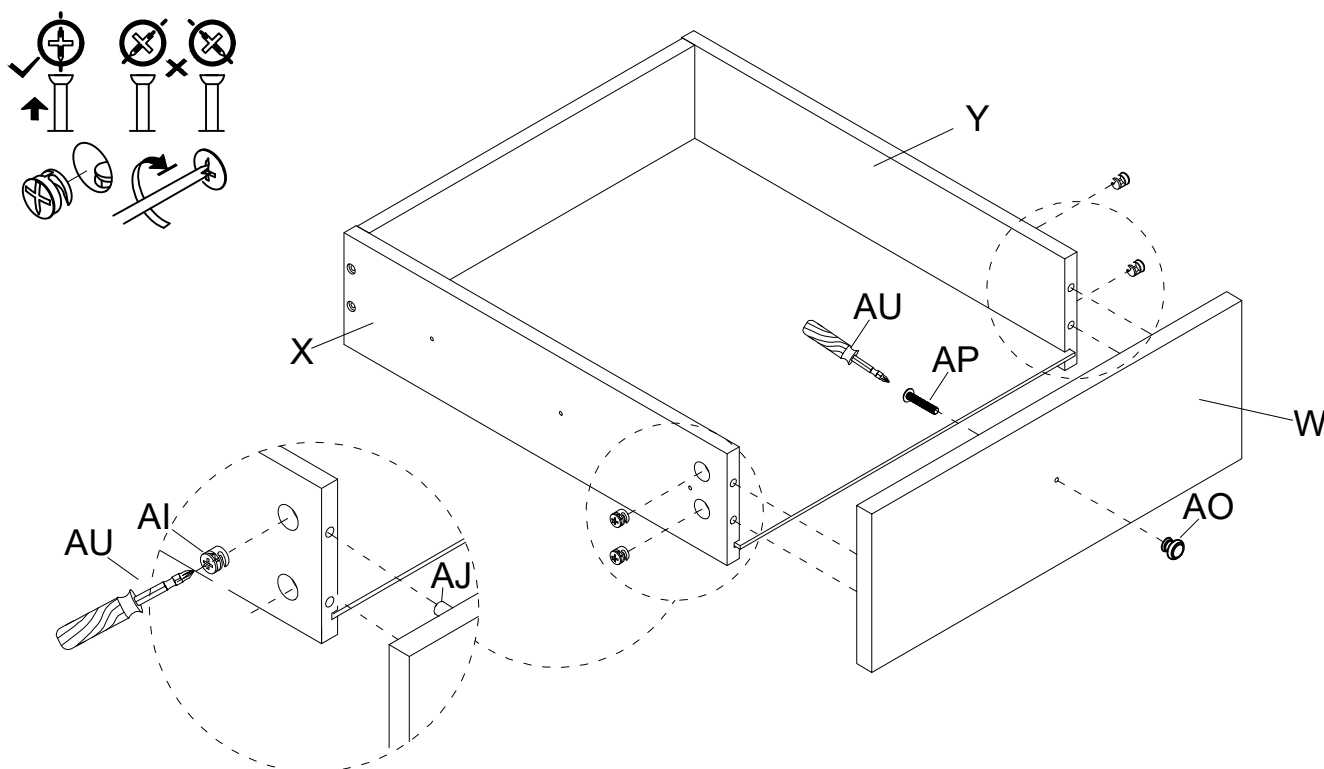

- 29** Assemble part 2 of Slide Rail (AM-2) to pre-assembled Middle Drawer Side Panel - L (X) and Middle Drawer Side Panel - R (Y), using Screw (AN) to tighten by Screwdriver (AU) as below shown.


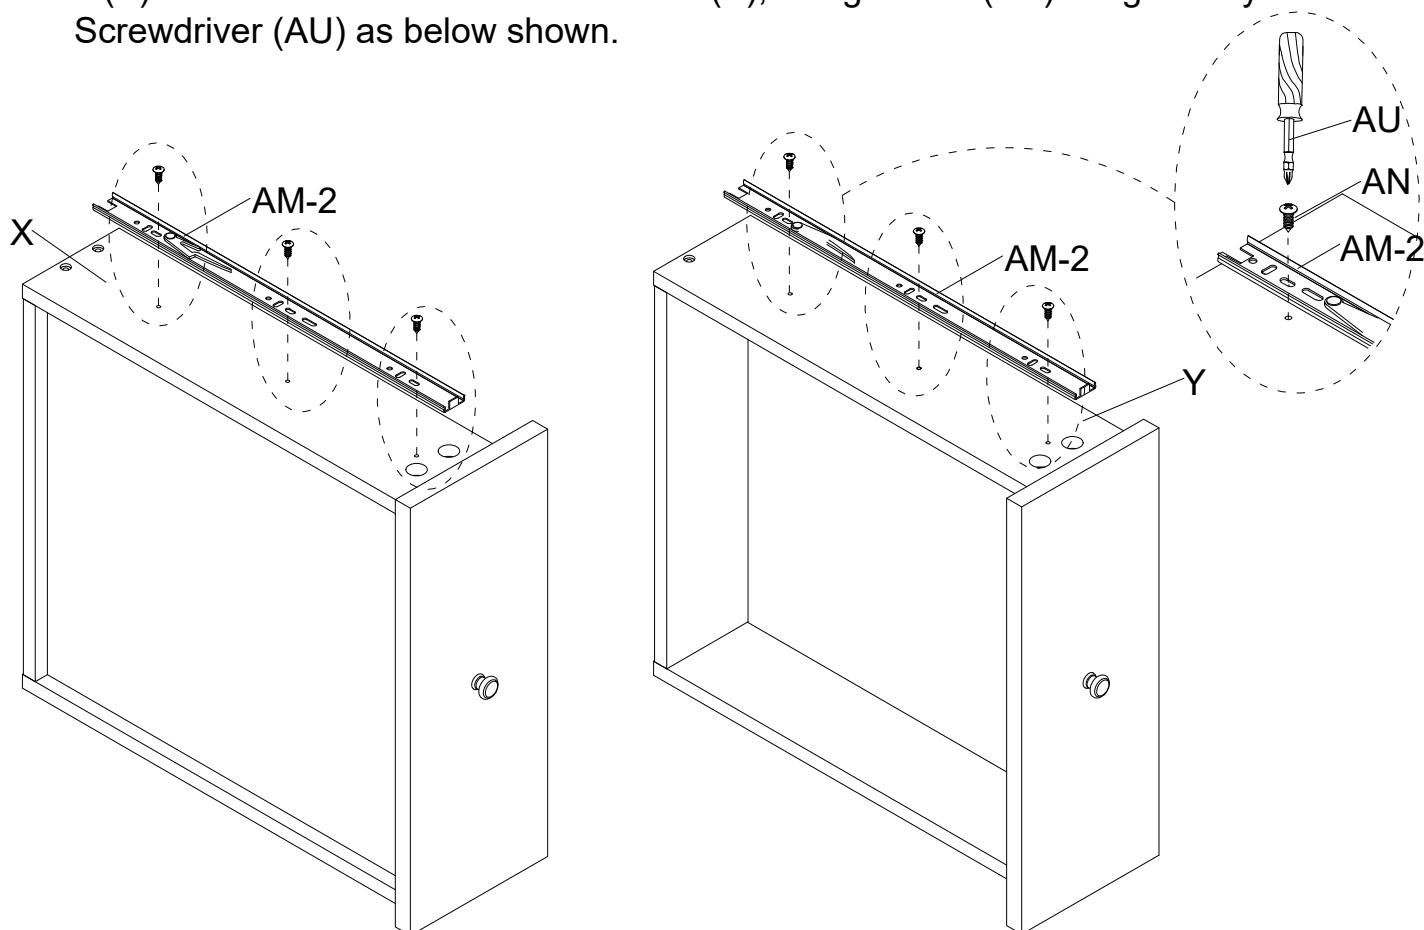


- 30** Attach the pre-assembled drawer by using Slide Rail (AM) to the pre-assembled Cabinet. Move slide ball spacers to front. Hold drawer horizontally, and slide runners into ball spacers.

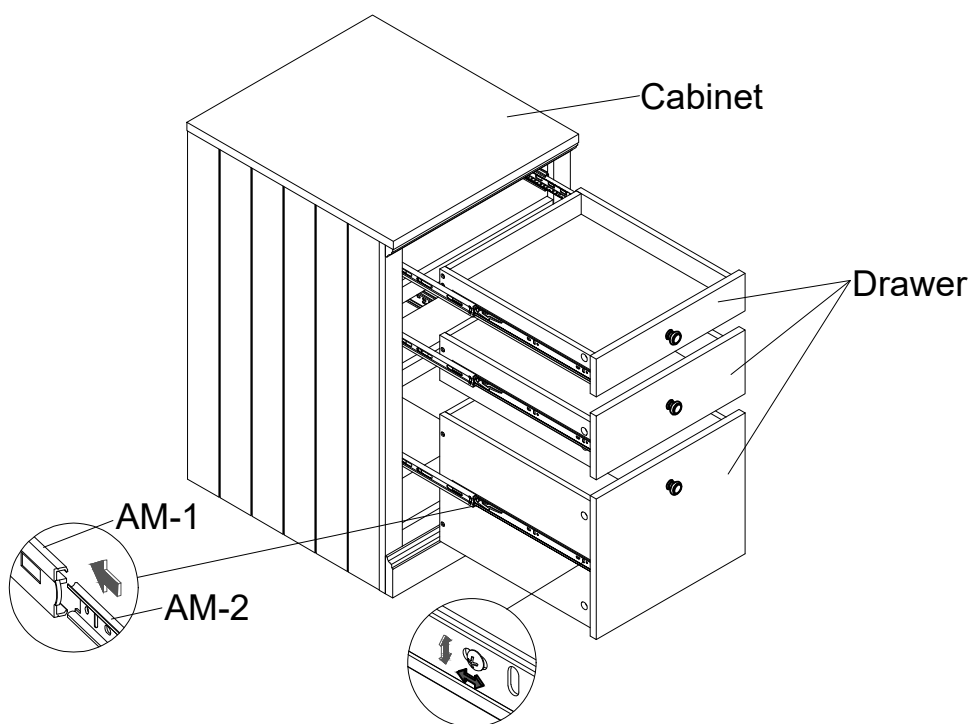

- 31** Remark: there is an Anti-Tipping Kit (AV) provided on the back of this product. Please read the instruction throughly and install immediately when placed in home. To prevent tip over, the product must be attached to wall.

Nylon strap Short screw

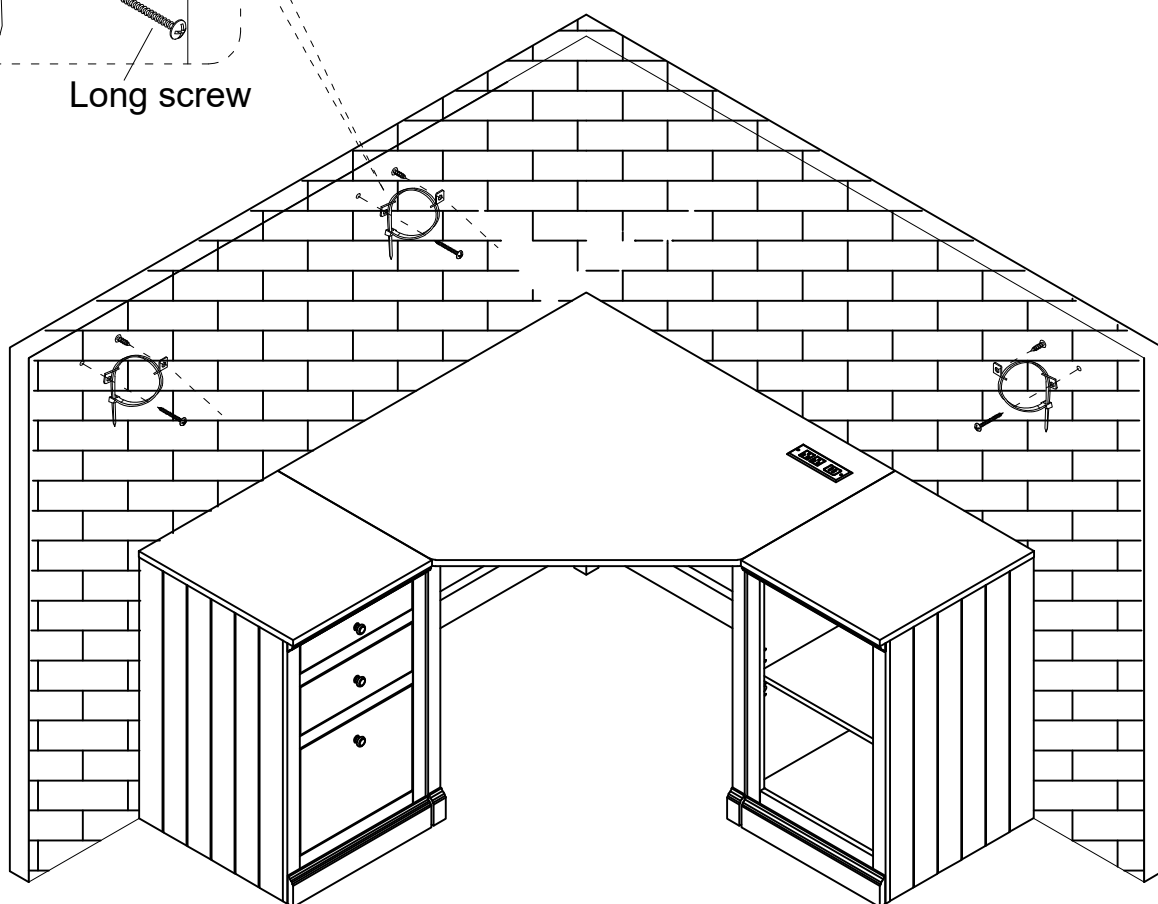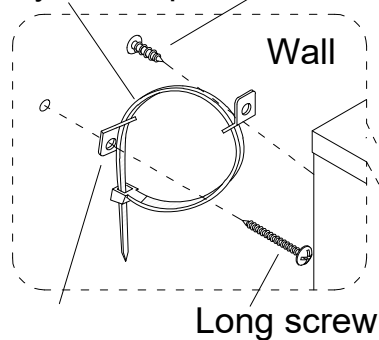

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.