

ASSEMBLY INSTRUCTION


METAL SPOOL DAYBED

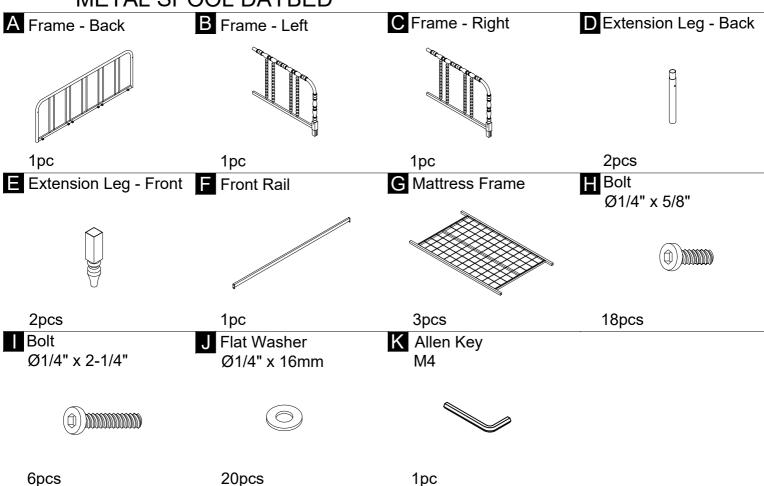

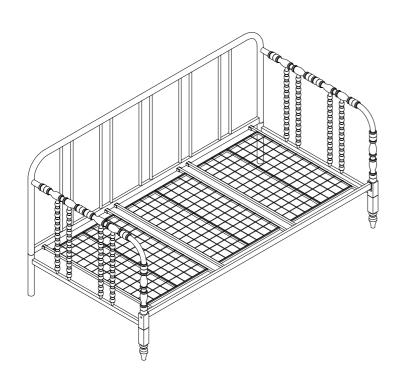


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Insert Extension Leg - Back (D) to Frame - Back (A) as below shown.

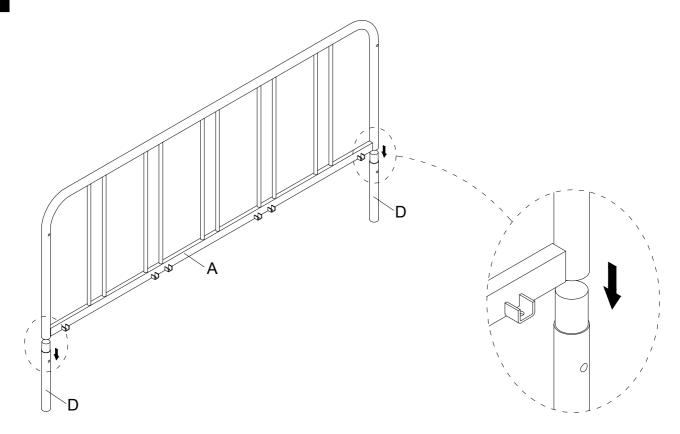


Remind:

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.

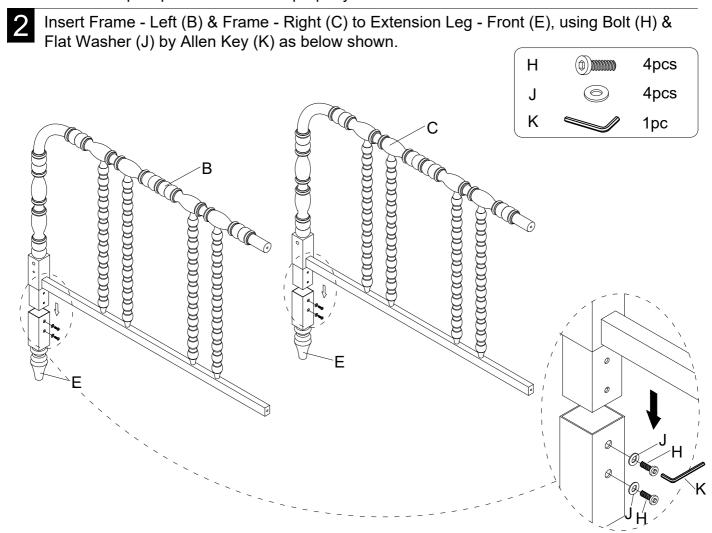


2

Assemble pre-assembled Frame - Left (B) & Frame - Right (C) to the pre-assembled Frame - Back (A) & Extension Leg - Back (D), using Bolt (I) by Allen Key (K) as below shown.

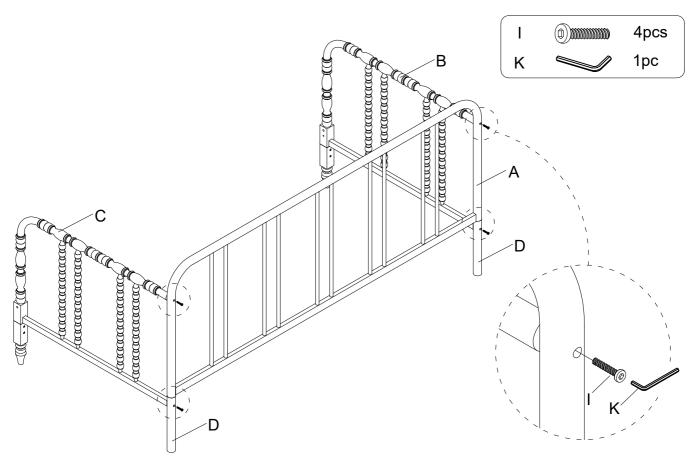


Assemble Front Rail (F) to the pre-assembled Frame - Left (B) & Frame - Right (C), using Bolt (H) & Bolt (I) and Flat Washer (J) by Allen Key (K) as below shown.

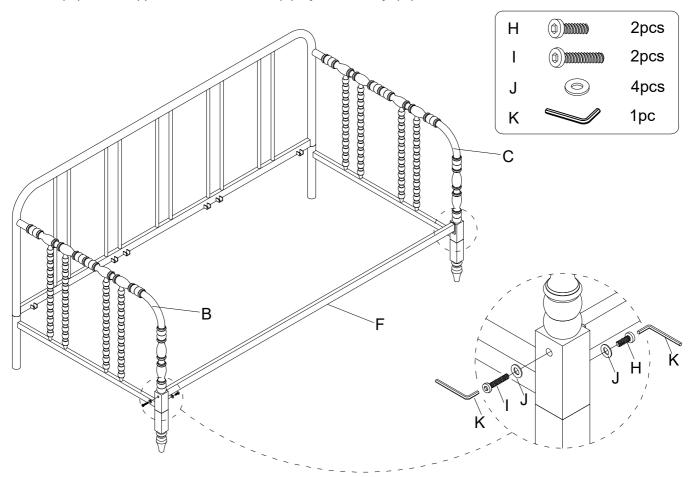

5

Assemble Mattress Frame (G) to Frame - Back (A) & Front Rail (F), using Bolt (H) & Flat Washer (J) by Allen Key (K) as below shown.

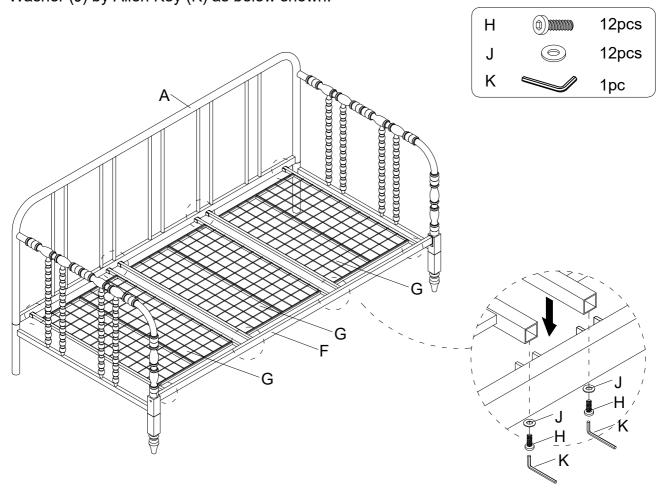

Adjust any parts out of alignment and tighten all bolts and screws from steps 1 through 5.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.