


INSTRUCTION MANUAL

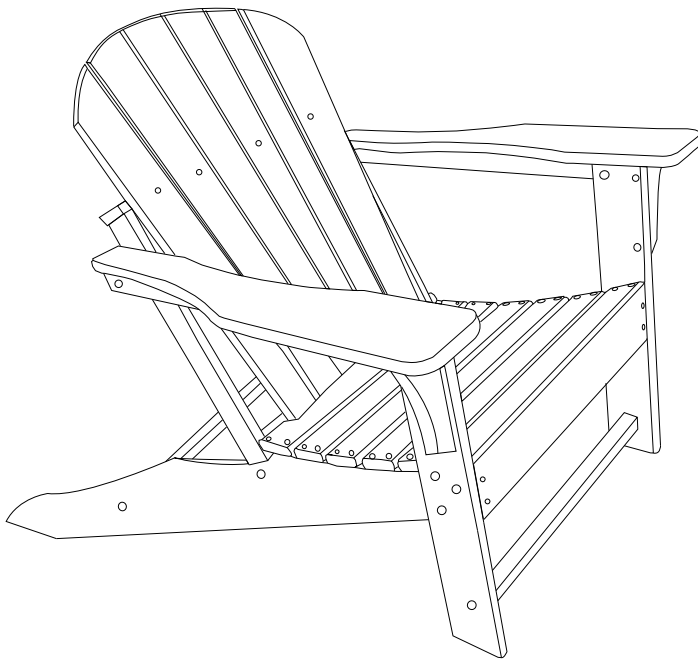

Altura Outdoor Adirondack Chair
SKU: OP6001

! NOTICE

Do not overtighten bolts. (Insert all bolts before tighten bolts.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



CHAIR
330 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 30 MIN.
ASSEMBLY

HARDWARE

1


M6 x 80mm
BOLT



2 PCS

2

M6 x 50mm
BOLT



8 PCS

3

M6 x 40mm
BOLT



4 PCS

4

M6 x 60mm
BOLT



2 PCS

5

M6 NUT



8 PCS

6

M6 WASHER



8 PCS

7


WRENCH



1 PC

8

ALLEN
WRENCH




1 PC

PARTS

A


CHAIR SEAT

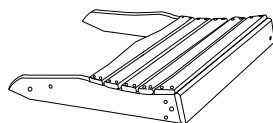

1 PC

B


CHAIR BACKREST

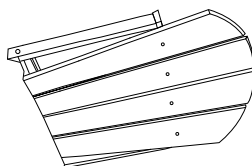

1 PC

C

RIGHT CHAIR ARM




1 PC

PARTS

D


LEFT CHAIR ARM



1 PC

E


RIGHT CHAIR LEG

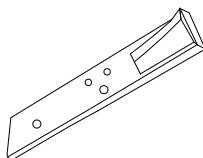

1 PC

F


LEFT CHAIR LEG

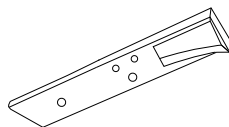

1 PC

G


BACK RAIL



1 PC

H

FRONT RAIL

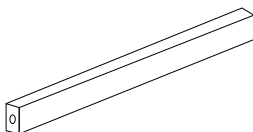


1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

1

Look at following overall view of this chair and learn the exact position of each parts to be assembled.

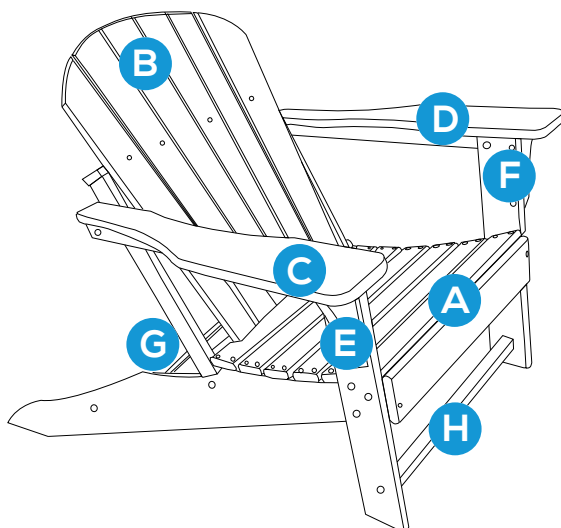


PRODUCT ASSEMBLY

1

Attach part F Left Chair Leg to part A Chair Seat with 3 pcs of part 2 bolt, part 6 washer and part 5 Nut. Do the same to part E Right Chair Leg and part A Chair Seat.

Attach part H Front Rail to two Chair legs with 2 pcs of part 3 Bolt.


Do not tighten bolts too much at this stage.

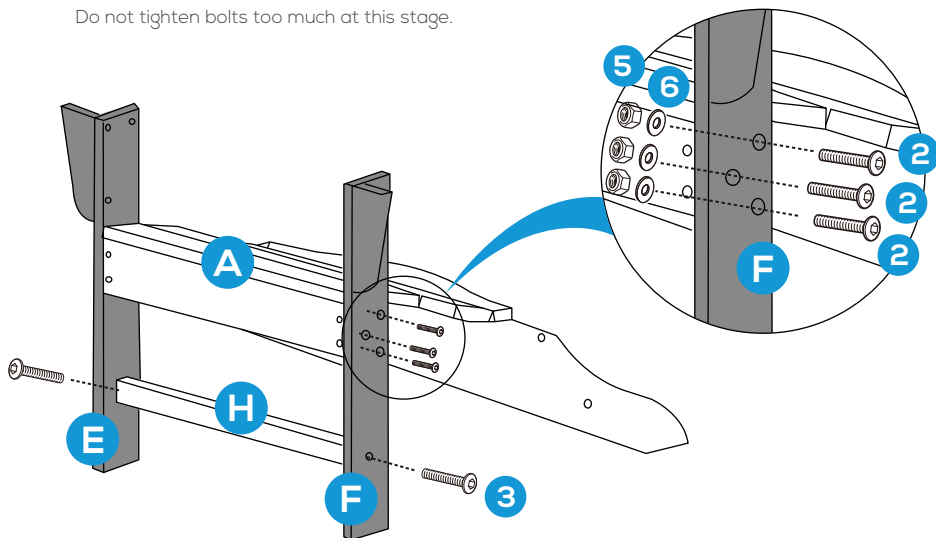

2

Attach part C Right Chair Arm to part E Right Chair Leg with 1pc of part 4 bolt, part 6 washer and part 5 Nut. Do the same to attach part D Left Chair Arm to part F Left Chair Leg.

Do the same to attach part D Left Chair Arm to part F Left Chair Leg.

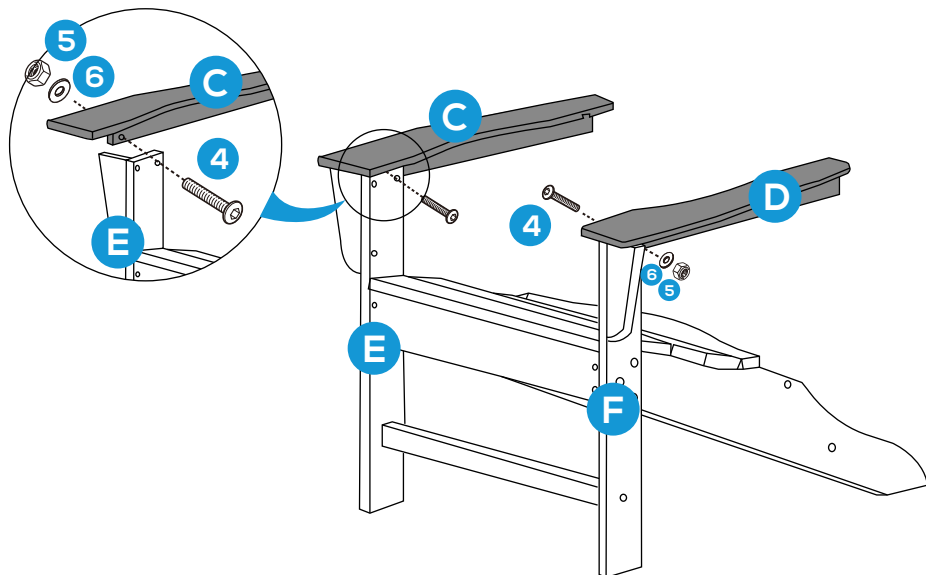


PRODUCT ASSEMBLY

3

Attach part B Chair Backrest to part C Right Chair Arm and part D Left Chair Arm with 2 pcs of part 1 Bolt.


Attach part B Chair Backrest to part A Chair Seat with 2 pcs of part 2 Bolt.

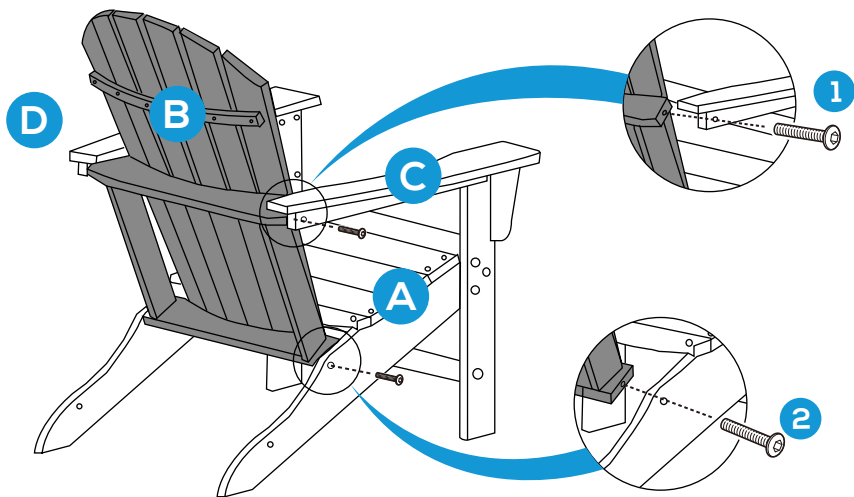


4

Attach part G Back Rail between rear legs of Part A Chair Seat with 2 pcs of part 3 bolt.

Check and tighten all the bolts and screws again and finish the assembly.

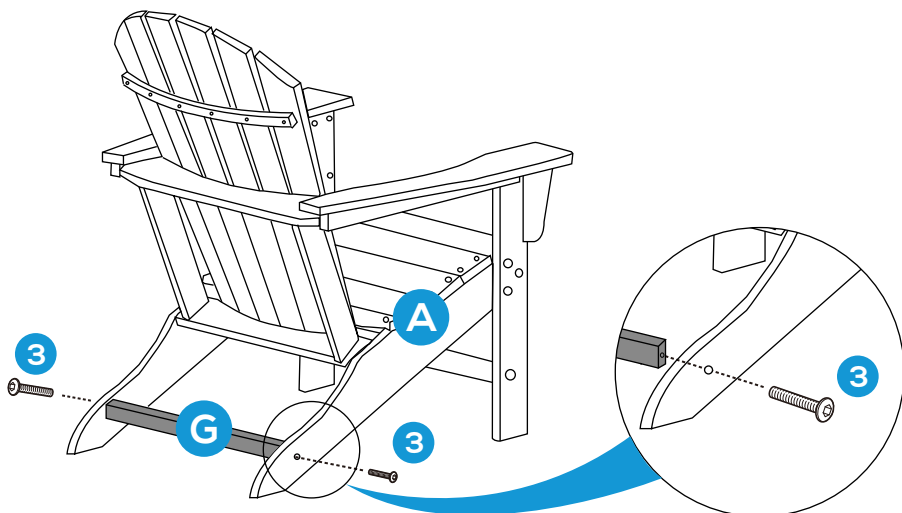

INSTRUCTION MANUAL

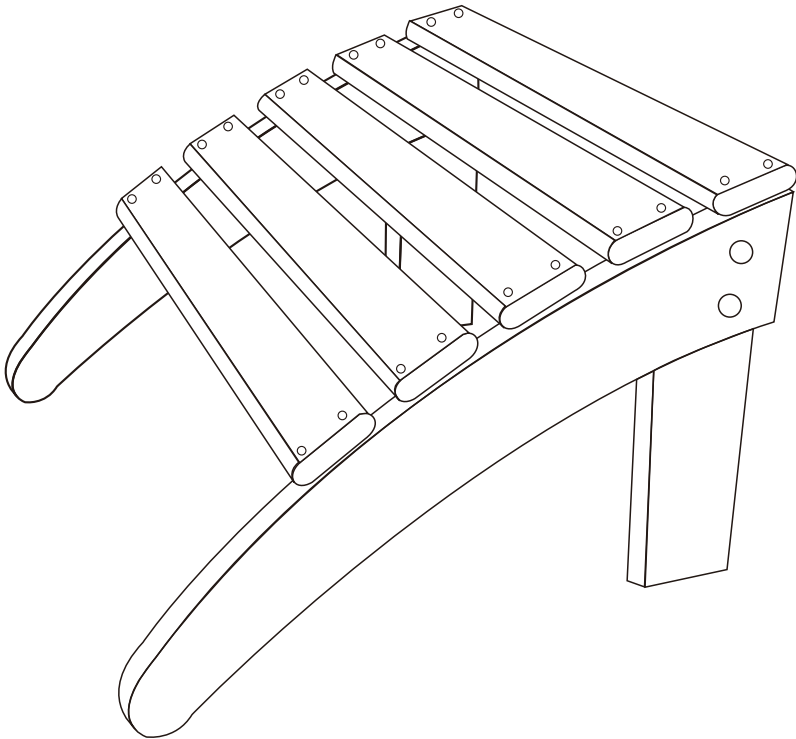

Outdoor Adirondack Chair Folding Ottoman
SKU: 2001OT

! NOTICE

Do not overtighten screws or bolts. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tool for avoiding to crack the PE board when assembling.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



TABLE
180 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

M6x45mm
BOLT



2 PCS

2

M6 NUT



2 PCS

3


M6 WASHER



2 PCS

4

WRENCH



1 PC

5

ALLEN
WRENCH




1 PC

PARTS

A

FOLDING
OTTOMAN

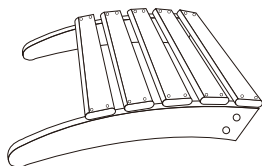


1 PC

PRODUCT ASSEMBLY

1


Put the Ottoman upside down for your easy assembly.

Pull up the Ottoman Leg and lock it with frame by 1 PC of part 1 Screw and part 3 washer as well as 1 PC of part 2 Nut.

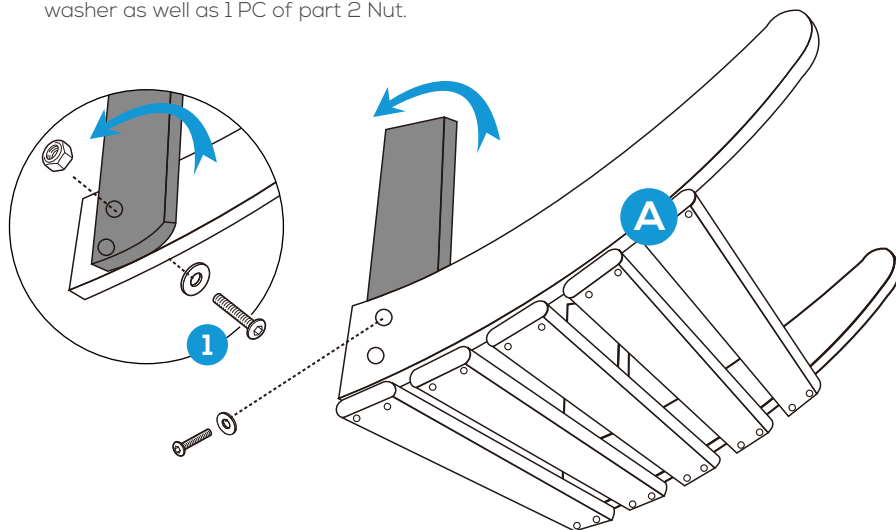


2

Do the same to the other leg to finish the assembly of this folding Ottoman.

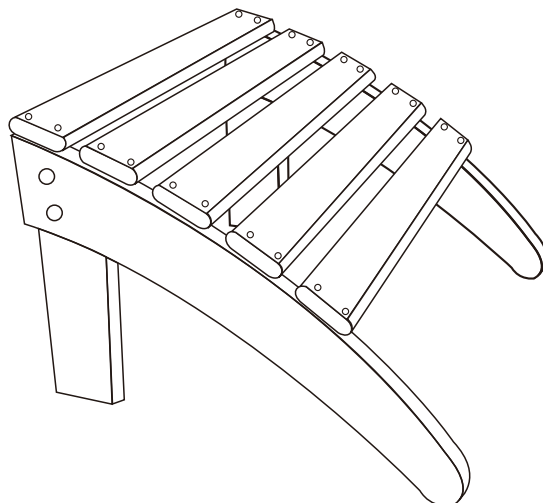

INSTRUCTION MANUAL

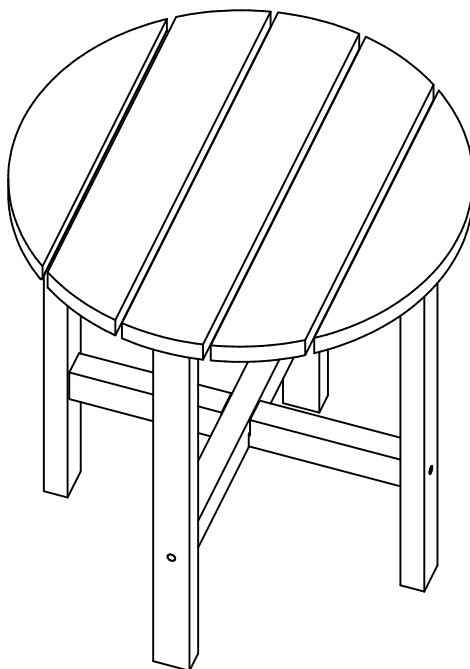

Altura Round 18" Side Table
SKU: OP8003

V1.0

! NOTICE

Do not overtighten bolts. (Insert all bolts before tighten bolts.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



CHAIR
180 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 15 MIN.
ASSEMBLY

HARDWARE

1

M6 x 40mm
BOLT



8PCS

2

ALLEN
WRENCH




1 PC

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



4PCS

C

CROSS FEET

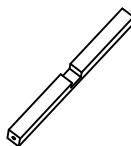


2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW

1


Look at following overall view of this chair and learn the exact position of each parts to be assembled.

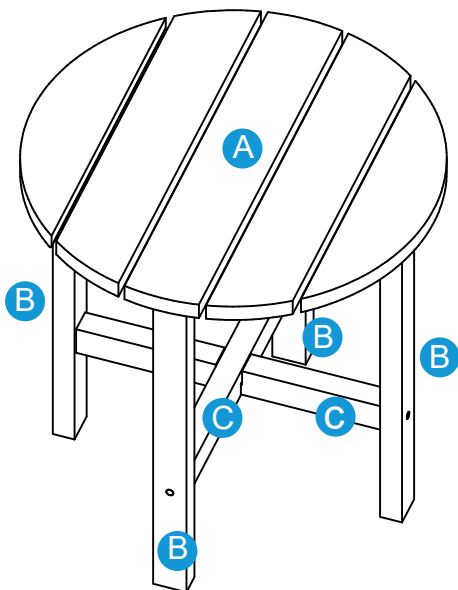

PRODUCT ASSEMBLY

1


Attach part C Cross feet to 2 pcs of part B Table leg with 2 pcs of part 1 Bolt as picture.

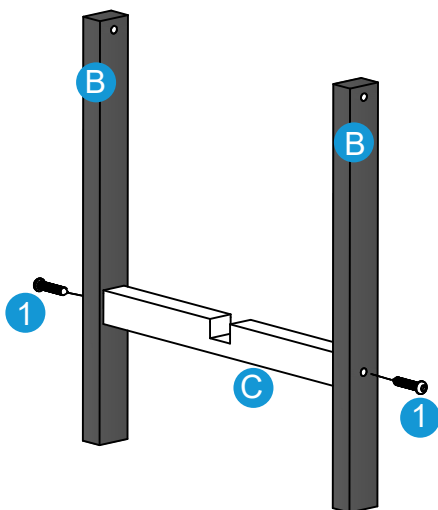

PRODUCT ASSEMBLY

2

Attach part C Cross feet to 2 pcs of part B Table leg with 2 pcs of part 1 Bolt as picture.

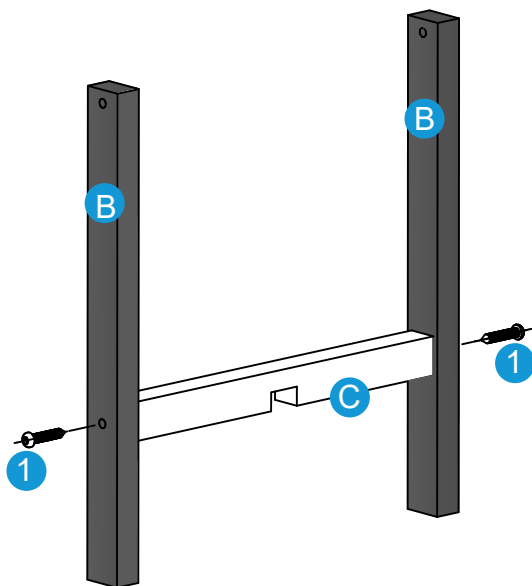

3

Place step 1 and step 2 part cross, then attach 4 pcs of part B table leg to part A table top with 4 pcs of part 1 Bolt.

Check and tighten all the bolts and screws again and finish the assembly.

