


# FULL/QUEEN BED ASSEMBLY INSTRUCTIONS

## BM272991

### BOX #1

- A. HEADBOARD 1PC
- B. LEFT LEG 1PC
- C. RIGHT LEG 1PC
- D. FOOTBOARD 1PC
- HEADBOARD HARDWARE BOX

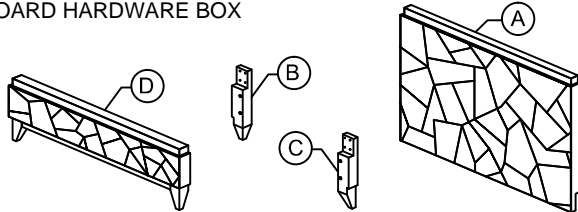

### HARDWARE PACKED IN BOX #1


1	ALLEN BOLT (6X40mm)		8 PCS
2	SPRING WASHER (M6)		8 PCS
3	FLAT WASHER (M6)		8 PCS
4	ALLEN KEY (L4)		1 PC

### HARDWARE PACKED IN BOX #2


5	PHILLIPS HEAD BOLT (8X20mm)		8 PCS
6	SPRING WASHER (M8)		8 PCS
7	FLAT WASHER (M8)		8 PCS
8	WOOD SCREW (8X30mm)		11 PCS
9	ALLEN BOLT (6X40mm)		6 PCS
10	ALLEN KEY (L4)		1 PC

### BOX #2 :

- E. SIDE RAIL 2PCS
- F. BED SLAT 5PCS
- G. SLAT SUPPORT 5PCS
- BED HARDWARE BOX

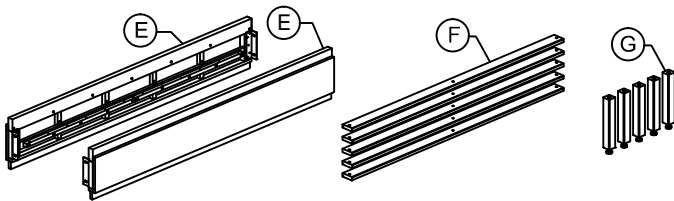


ASSEMBLY COMPLETE

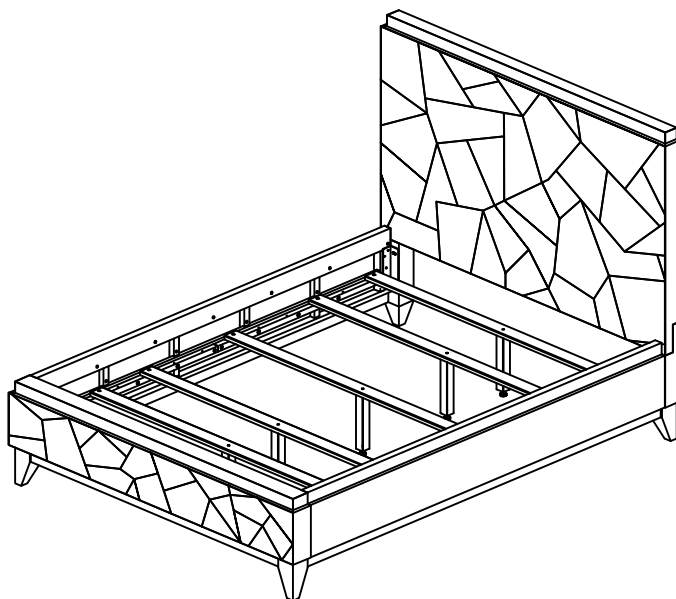


**TOOL REQUIRED :** PHILLIPS HEAD  
SCREWDRIVER (NOT PROVIDED)

**YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE**




### STEP 1 :

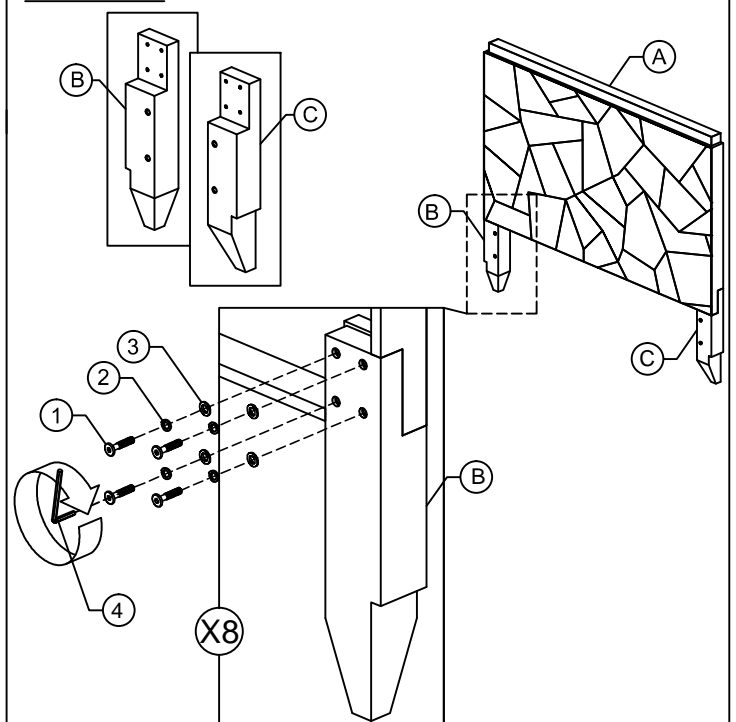


# FULL/QUEEN BED ASSEMBLY INSTRUCTIONS BM272991


## STEP 2 :

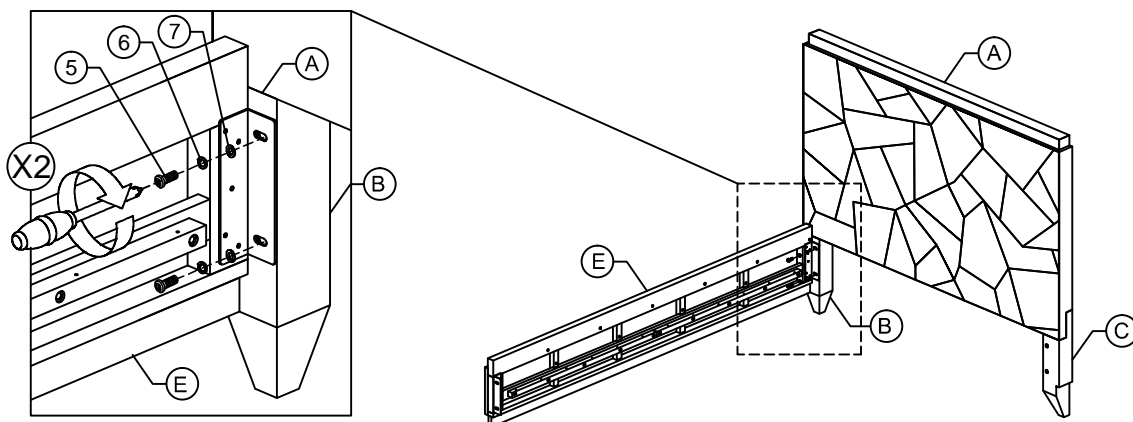

## STEP 3 :

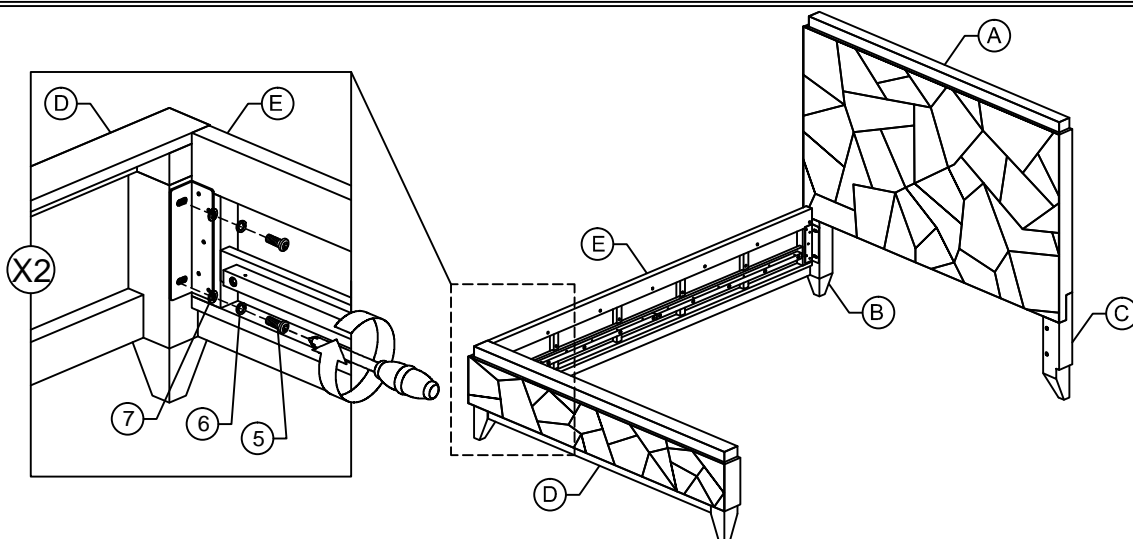

## STEP 4 :

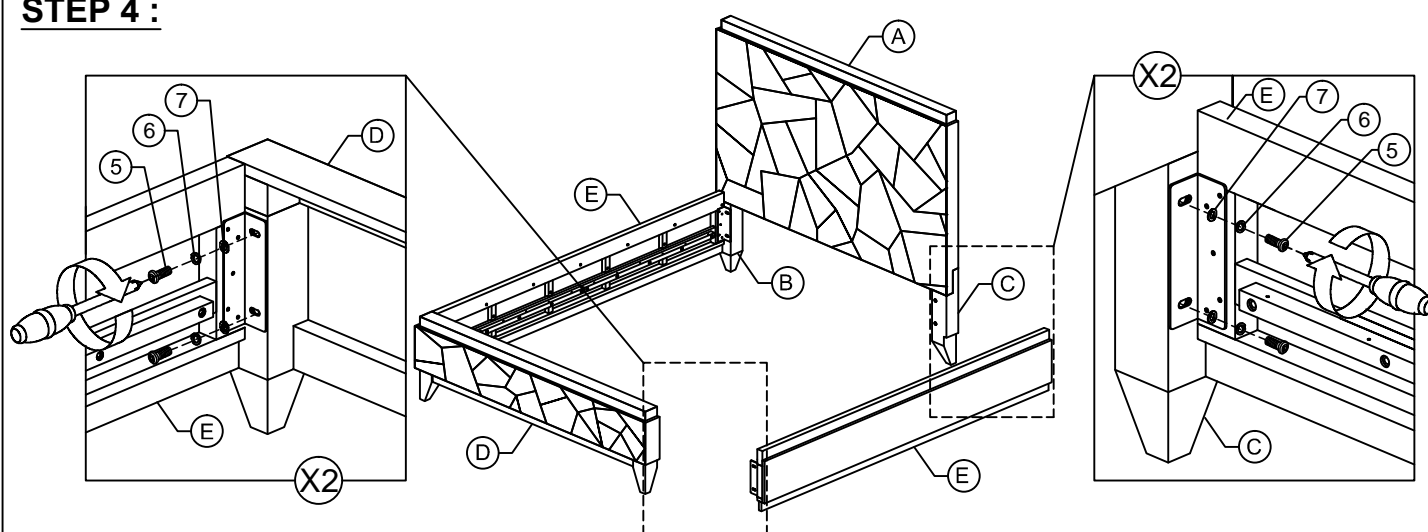


## STOP


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.

# FULL/QUEEN BED ASSEMBLY INSTRUCTIONS BM272991

## STEP 5 :

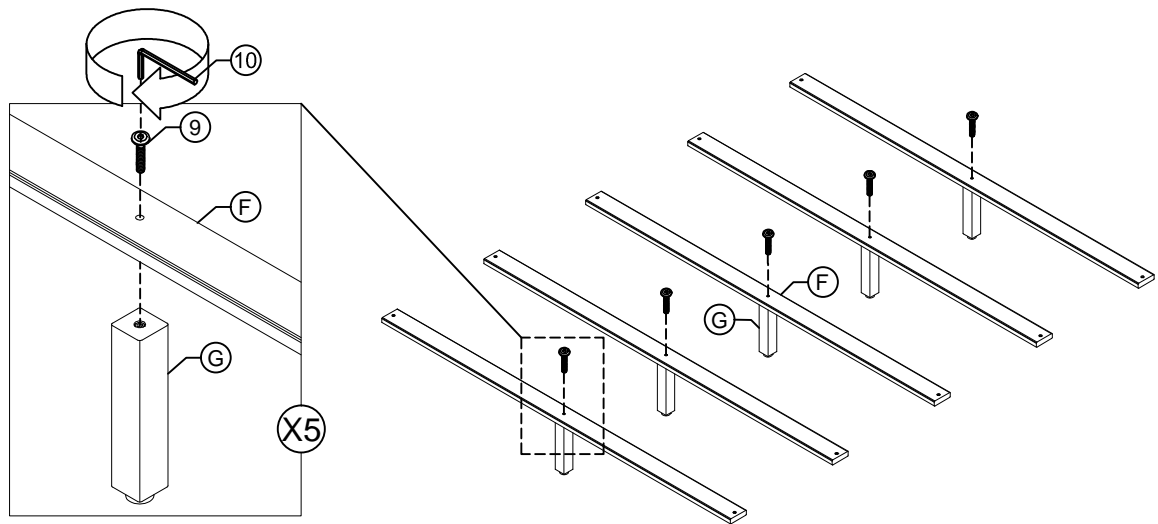

## STEP 6 :

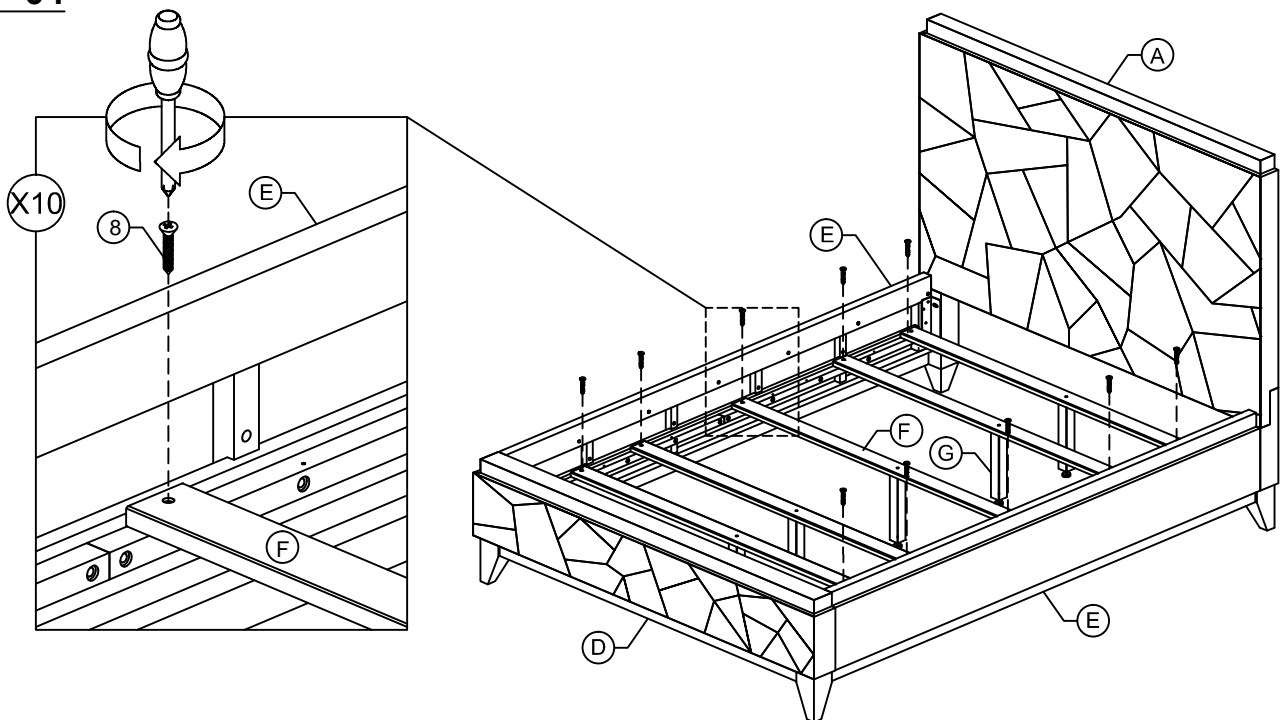


## INSTRUCTIONS FOR ADJUSTING LEVELER :

Position the bed in your space and locate the leveler under each slat support (G).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support .

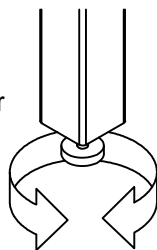

## MAINTENANCE INSTRUCTION :

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it. Dragging can damage the leg support.
- Readjust levelers after moving your bed.

## APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

BM272991

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. BED SLAT  
G. SLAT SUPPORT

5PCS  
5PCS

8. WOOD SCREW (8X30mm)


11PCS

9. ALLEN BOLT (6X40mm)

6PCS

### STEP 1 :

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

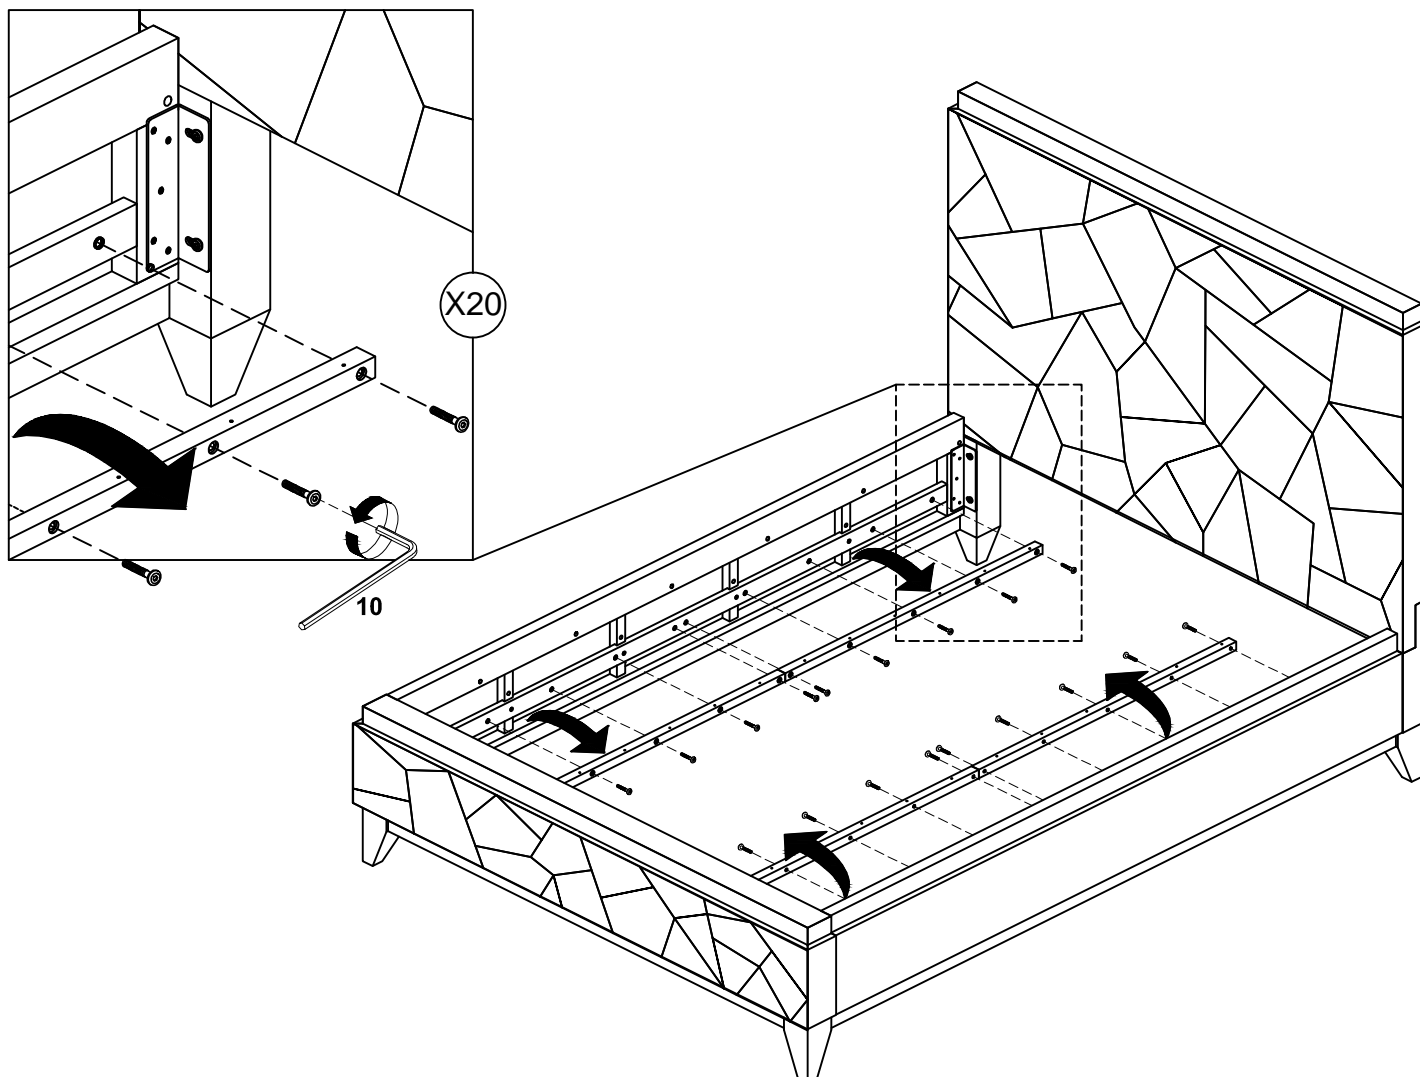

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.