


ASSEMBLY INSTRUCTION


FULL METAL BED
QUEEN METAL BED

MB-1089 MOP
MB-1087 MOP


PART LIST:

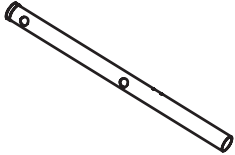


A:LSF Headboard
Post 1PC

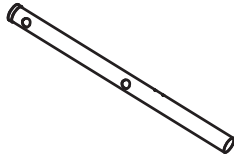


B:RSF Headboard
Post 1PC




C:LSF Footboard
Post 1PC




D:RSF Footboard
Post 1PC

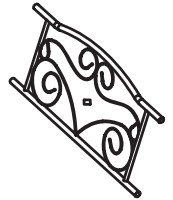

E:Headboard/Footboard
2PCS




F:Rail section(1)
2PCS

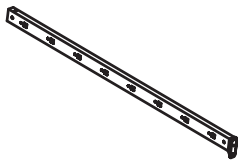

G:Rail section(2)
2PCS



H:Front Support Bar
2PCS




I:Center Support Bar
1PC



J:Front center
rail 1PC




K:Rear center
rail 1PC

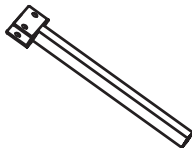

L:Rail Support Leg
2PCS



M:Center Support
Legs 3PCS



N:Slat
16PCS



O:Slat Connector
32PCS



P:Finial
4PCS

HARDWARE LIST:

Q*22PCS



1/4*13MM

R*10PCS



1/4*36MM

S*10PCS



1/4

T*8PCS



1/4*55MM




U*1PC




V*1PC

IMPORTANT NOTE:PLEASE NOT TIGHTEN ANY BOLTS UNTIL ALL OF THEM ARE PUT IN PLACES THEN TIGHTEN THE BOLTS.


STEP 1

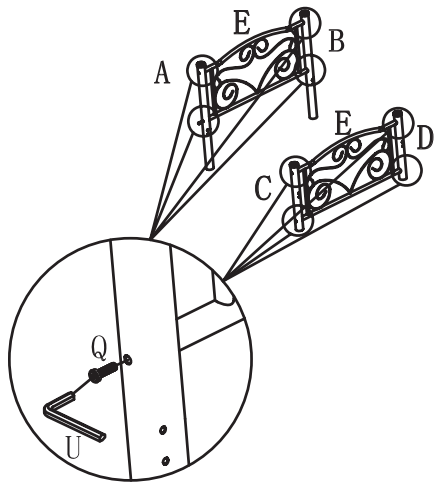


STEP 2

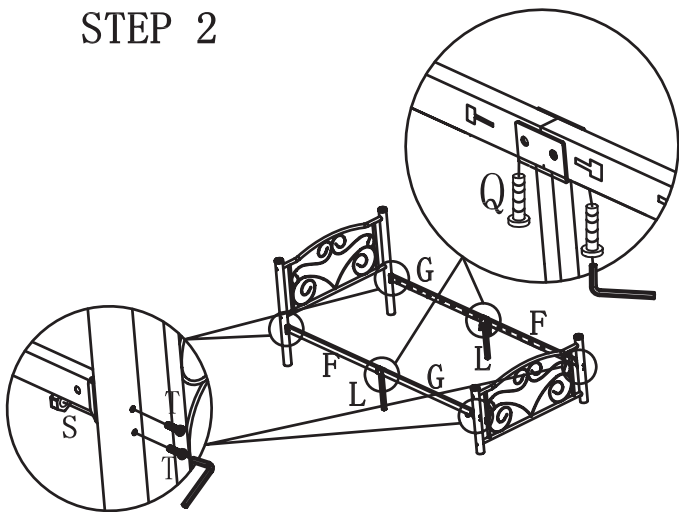


STEP 3

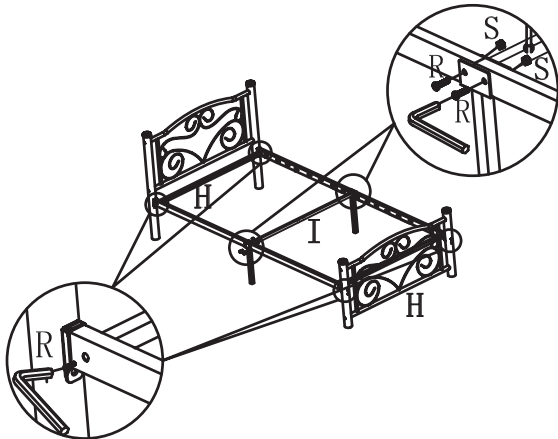

STEP 4

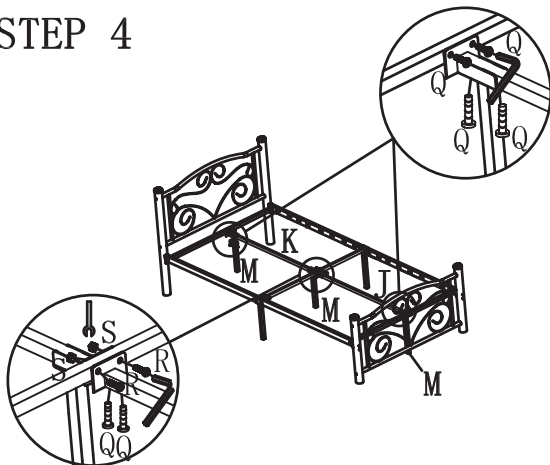

STEP 5

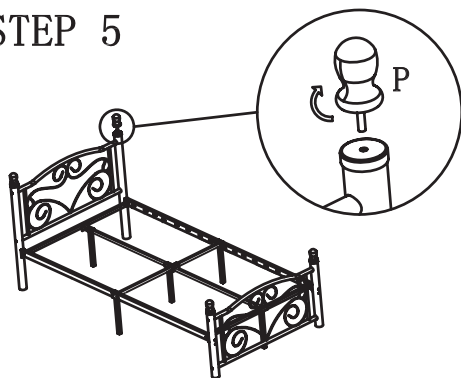

STEP 6

