



BED
E. KING/QUEEN/FULL
ASSEMBLY INSTRUCTIONS

PARTS AND FITTING PACKAGING DETAIL

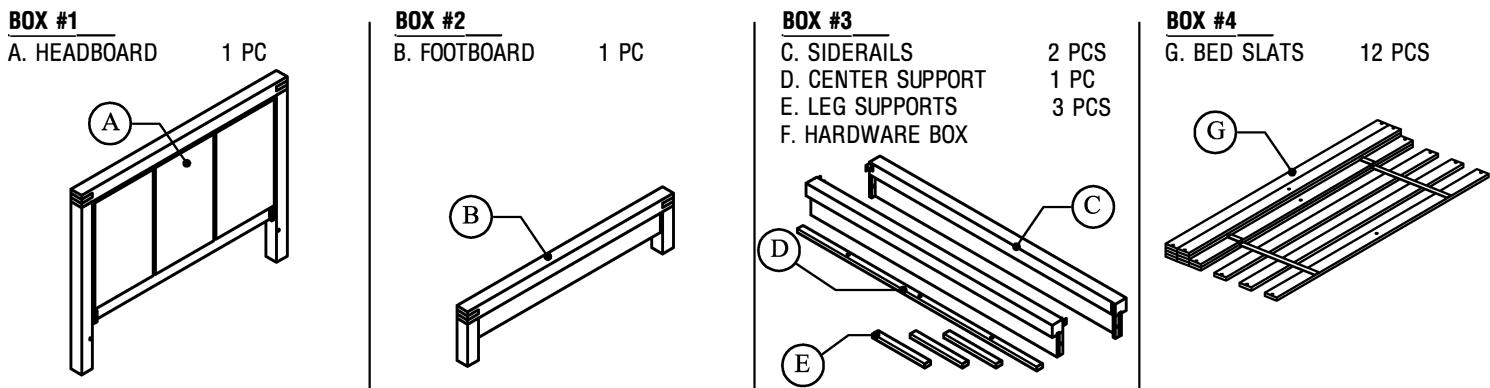

BED ASSEMBLED

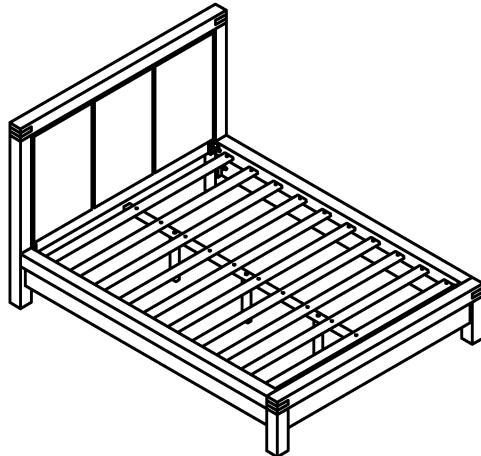

HARDWARE* PACKED IN BOX #3


H1 ALLEN BOLT 40mm & FLAT WASHER Ø8 x Ø20 4 PCS	H2 ALLEN BOLT 20mm & FLAT WASHER Ø8 x Ø20 4 PCS	H3 ALLEN BOLT 50mm 3 PCS
		
H4 WOOD SCREWS 25mm 36 PCS	H5 ALLEN KEY Ø4 1 PCS	
		

YOUR BOX MAY CONTAIN EXTRA HARDWARE

STEP 1:


Fix one of the siderails (C) to the headboard (A) using the shortest 20mm allen bolts & washers (H2) on the top hole, and the midsize 40mm allen bolts & washers (H1) on the bottom hole. Tighten bolts using provided Allen Key (H5). When fixing the siderail (C) to the headboard (A), have a second person hold and stabilize the other end of the siderail.

Fix the other end of the siderail (C) to the footboard (B) using the shortest 20mm allen bolts & washers (H2) on the top hole, and the midsize 40mm allen bolts & washers (H1) on the bottom hole. Tighten bolts using provided Allen Key (H5). When fixing the siderail (C) to the footboard (B), have a second person hold and stabilize the other end of the siderail.


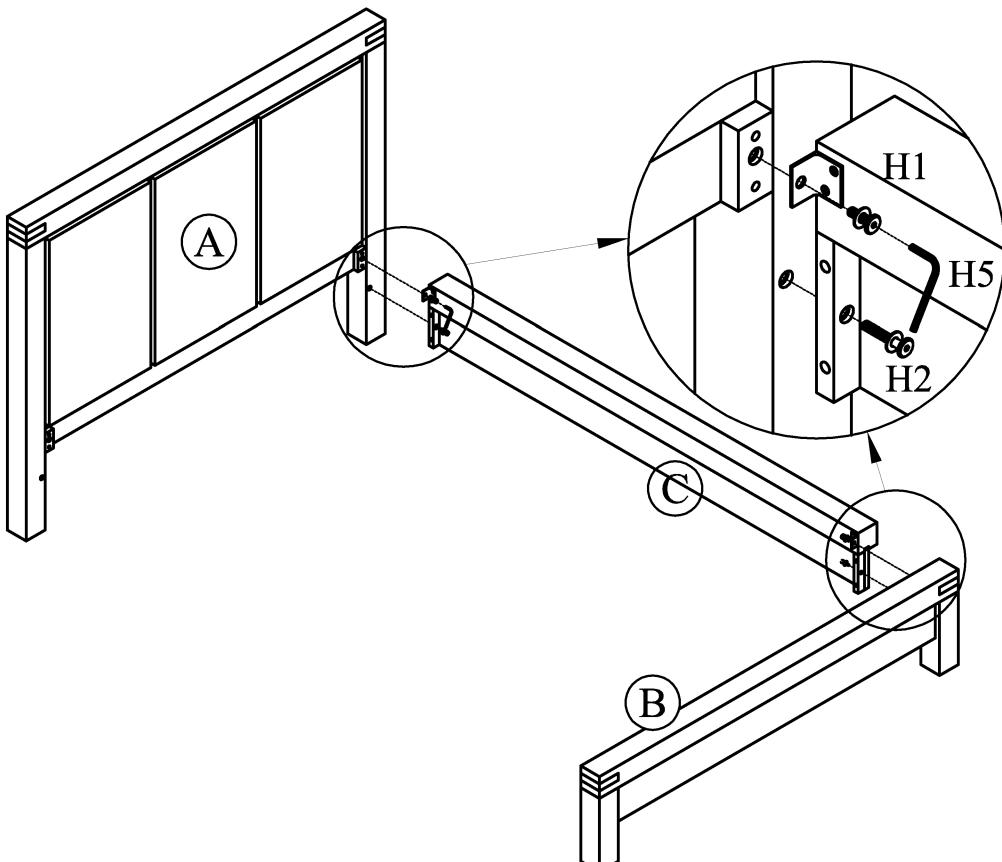


STEP 2:

Repeat steps 1 and 2 to fix the other siderail (C) to the headboard (A) and footboard (B).

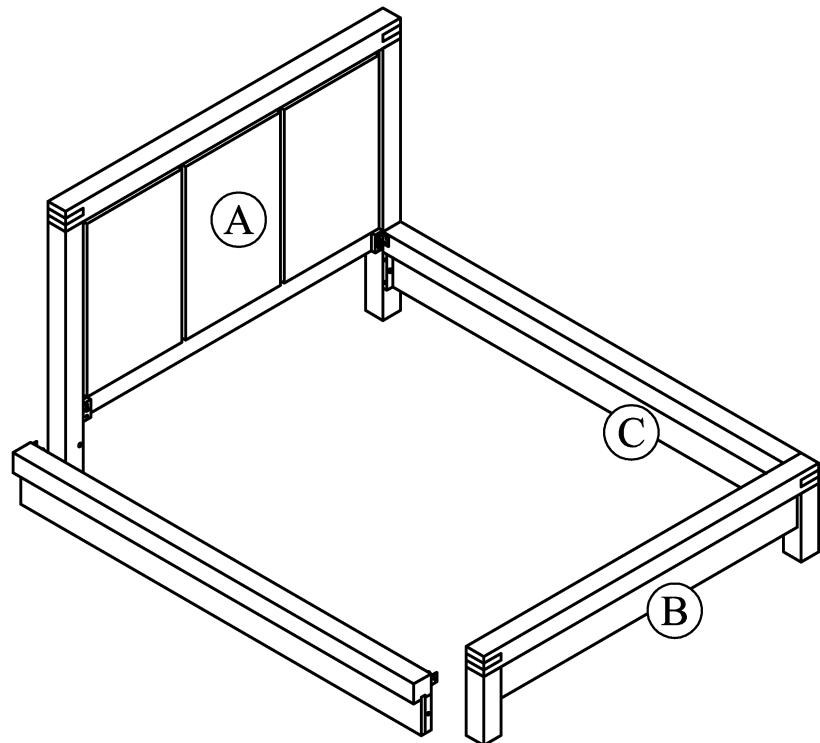**STEP 3:**

Attach the legs (E) to the center support (D). Screw the longest (50mm) allen bolts (H3) using the allen key (H5) through center support (D) into leg supports (E) using the pilot holes as your reference for easy assembly.

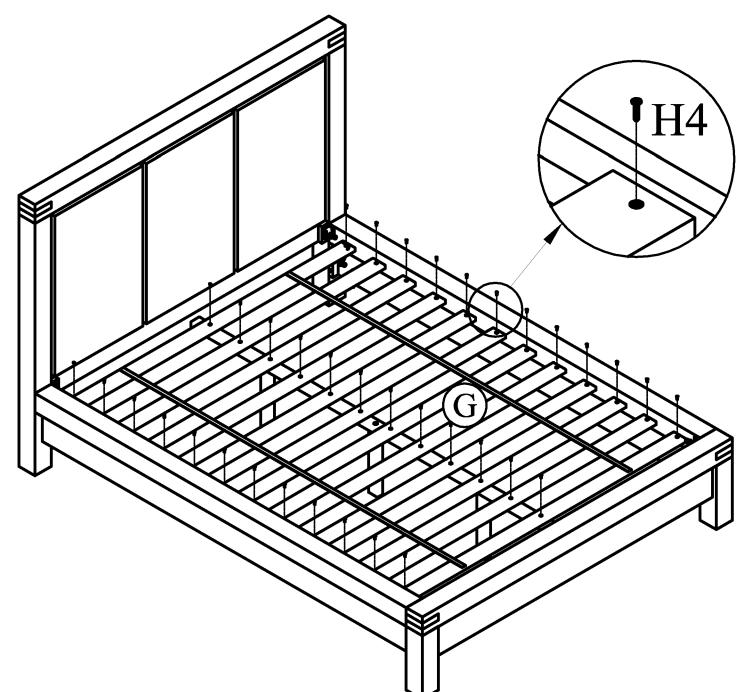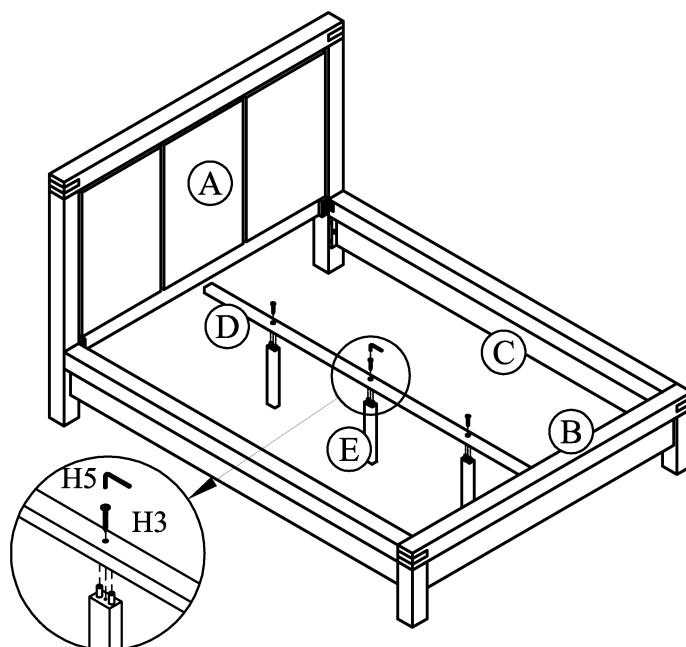**STEP 4:**

Follow the illustration to place the bed slats (G) onto the bed frame and secure the bed slats (G) using the wood screws (H4) provided. Tighten all 36 wood screws with a screwdriver