


CROSLEY






FURNITURE

Upholstered Saddle Seat Bar Stool

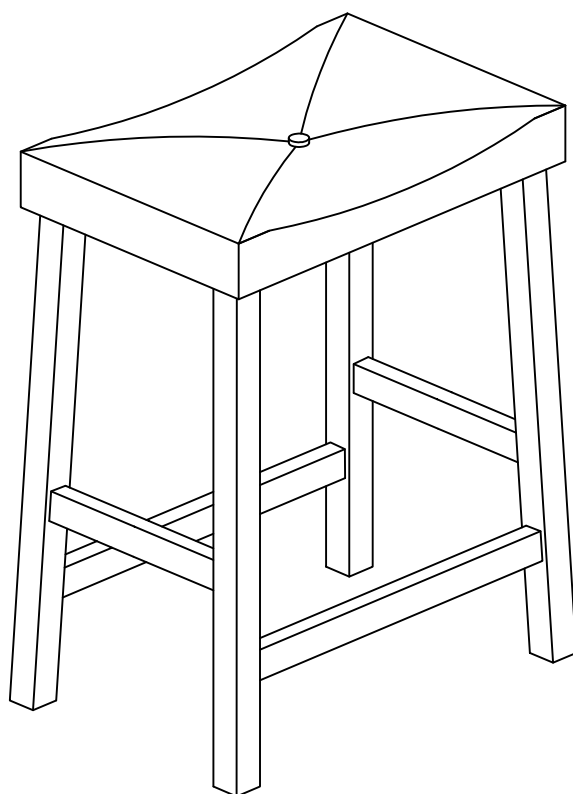




CF500224/CF500229



PART LIST

A		B		C		D		E	
Seat Frame 2 PCS		Left Leg 4 PCS		Right Leg 4 PCS		Side Stretcher 4 PCS		Front Stretcher 4 PCS	

HARDWARE LIST

#1	#2	#3	#4	#5
				
1/4" x 55mm				4 x 38mm
Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Allen Wrench 1 PC	Screw 16 PCS (Extra 1)



ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Step 1. Insert side stretcher (part D) into left leg (part B) and right leg (part C).
 Insert screws (part #5) into predrilled holes of side stretcher (part D) and secure using
 phillips head screwdriver.
 Repeat this step to assemble remaining legs.

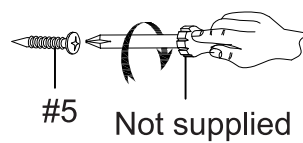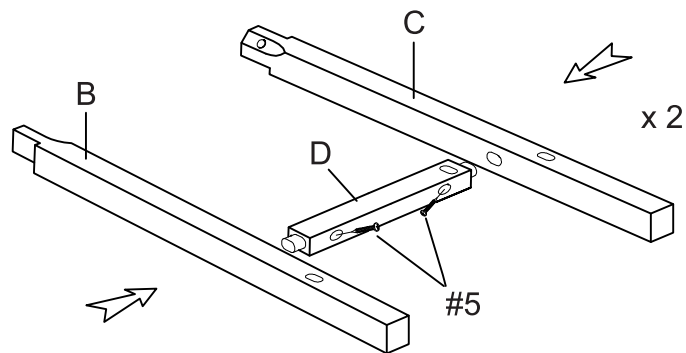


#5  x 4


Step 2. Insert front stretchers (part E) into legs (parts B & C).

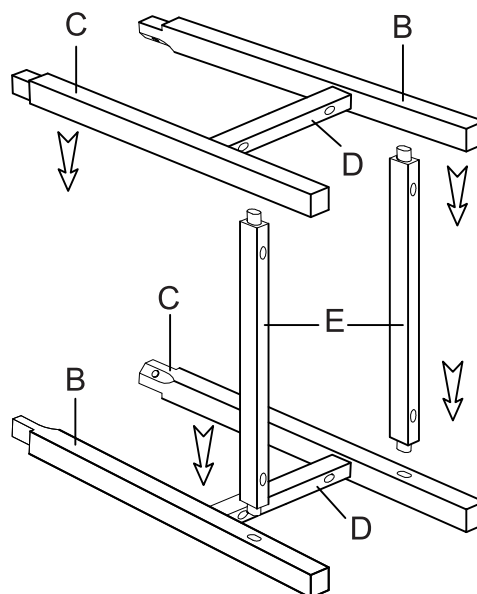

Step 3. Place seat frame (part A) upside down on a soft, flat surface, as shown. Insert legs (parts B & C) into seat frame (part A) and secure using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4). Insert screws (part #5) into front stretchers (part E) and secure using phillips head screwdriver.

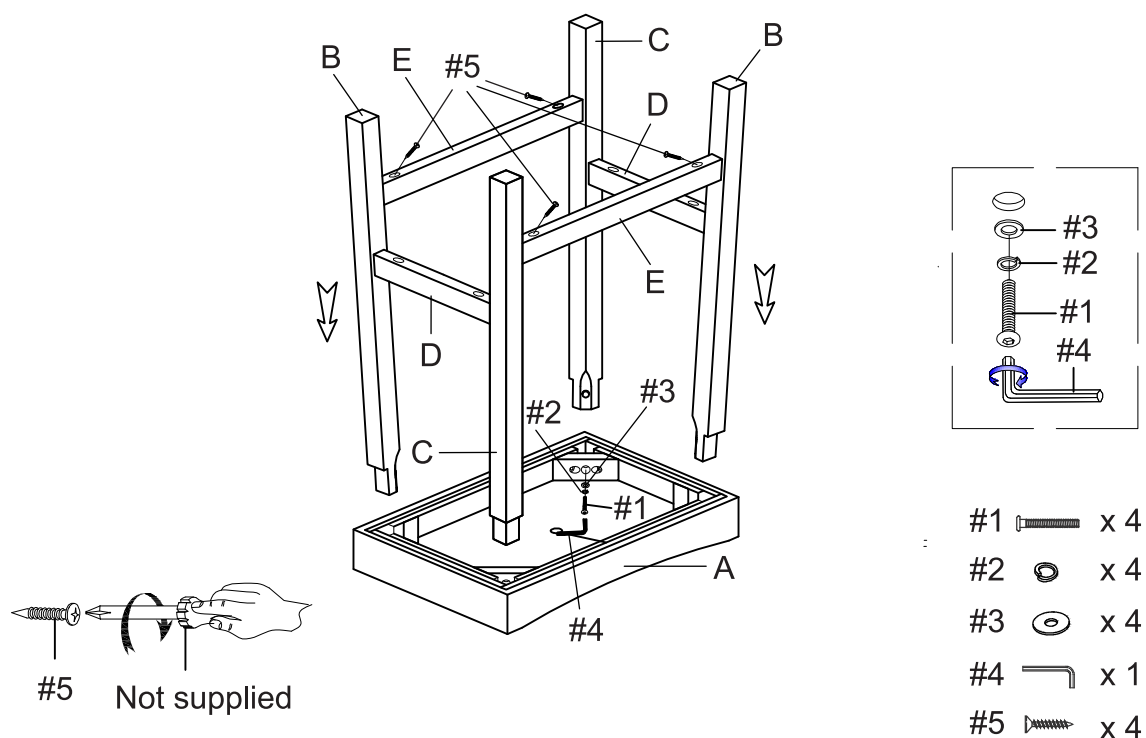

Step 4. Carefully turn unit upright. Repeat steps 1-3 to assemble remaining stool.

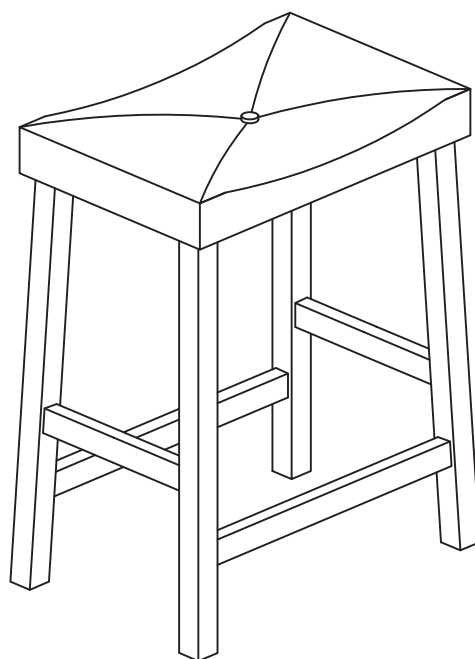

PO#
MODEL#
CF500224/CF500229
MADE IN VIETNAM