

# **KINGSTON**


KITCHEN & BATH

## INSTALLATION INSTRUCTIONS


### **Shower Seat With Swing-Down Legs**

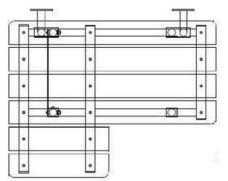

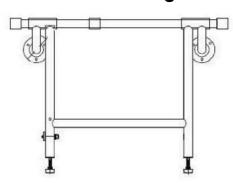

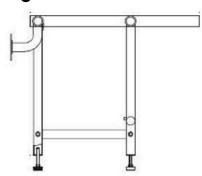

Need Tools:



#### Before Installation:

For your own safety, this seat should be installed by a licensed professional, it is recommended that this seat be properly secured to a 2" x 6" piece of lumber or larger as wood bracing, at all points where the seat is to be secured.

Weight limit on this seat is 265 Lbs. (120 KGS) max.

#### Installation steps:

- 1. Locate the desired seating position. To comply with ADA standards, seat should be mounted at a height where the seating surface in its downward position is at a height of 17" to 19" above finish floor. Please check all State and Local Building codes.
- 2. Place seat at the desired location and using a level adjust the height and level of the seat by inserting or retracting the floor levelers at the bottom of all 4 legs.
- 3. Once you are satisfied that the chair is leveled in all directions and that it does meet the 17" to 19" seat height requirements, mark the location of the screws on the mounting brackets, drill 1/4" pilot holes at the marked location.
- 4. After applying a thin bead of silicone based caulking to the back of the mounting brackets and secure using the #14x 3" screws included in your set, clean any excess caulking.

Maintenance: Dry after every use, clean with mild soap and water.

#### Please Read Disclaimer

The manufacturer or distributor of this product shall not be held liable for installation actions taken or not taken. There are many details of installation that are assumed to be general construction knowledge to experienced installers; which are not included in these instructions. Selection of an experienced installer is the sole responsibility of the home owner or architect.

