

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.










Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Frame back		1X
B	Frame Seat		1X
C	Frame Leg		2X
D	Cushion Seat		1X
E	Screw	 M7x90	2X
F	Screw	 M7x60	4X
G	Bolt + Nut	 M8x60  M8x15	2X
H	Allen key	 LG4	2X

 **SAFAVIEH**  
O U T D O O R

**Weight Capacity : 600 lbs**


**Warning : Do not stand on chair**

**Warning : Do not over torque bolts / screws**



Model# PAT7065-2/2

Product Dimensions: 23.62" W x 22.04" D x 35.23" H

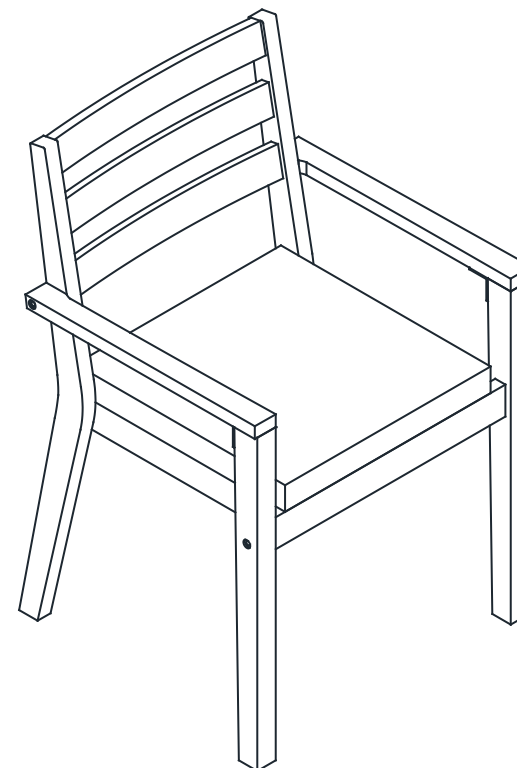


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

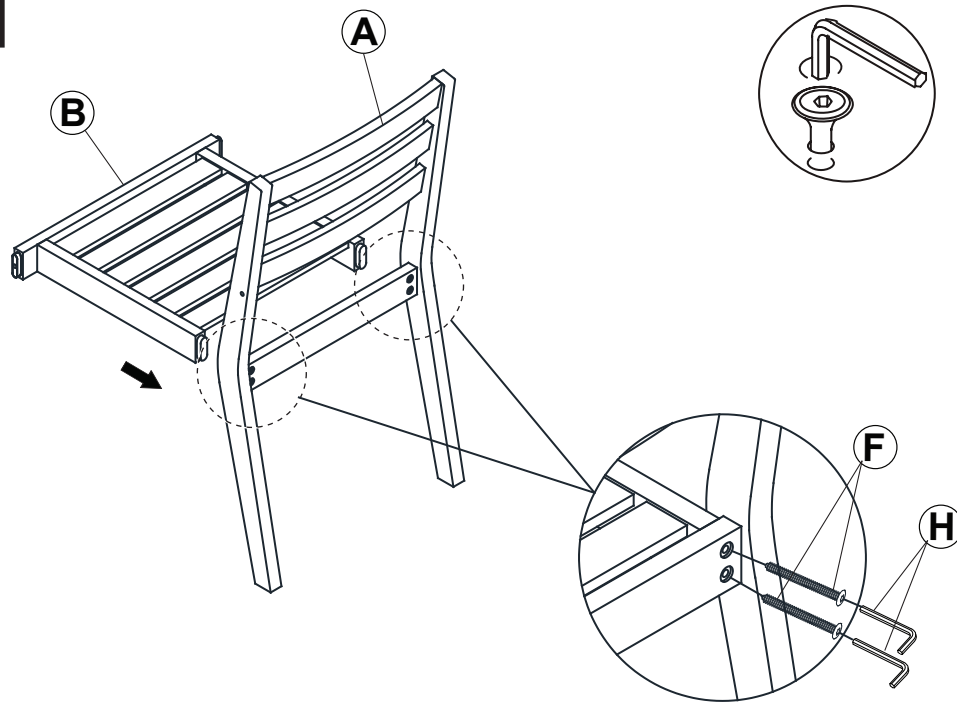

### Step 1

Attach Frame seat (B) to Frame back (A) ,use Screw (F) and tighten with allen key (H).

2

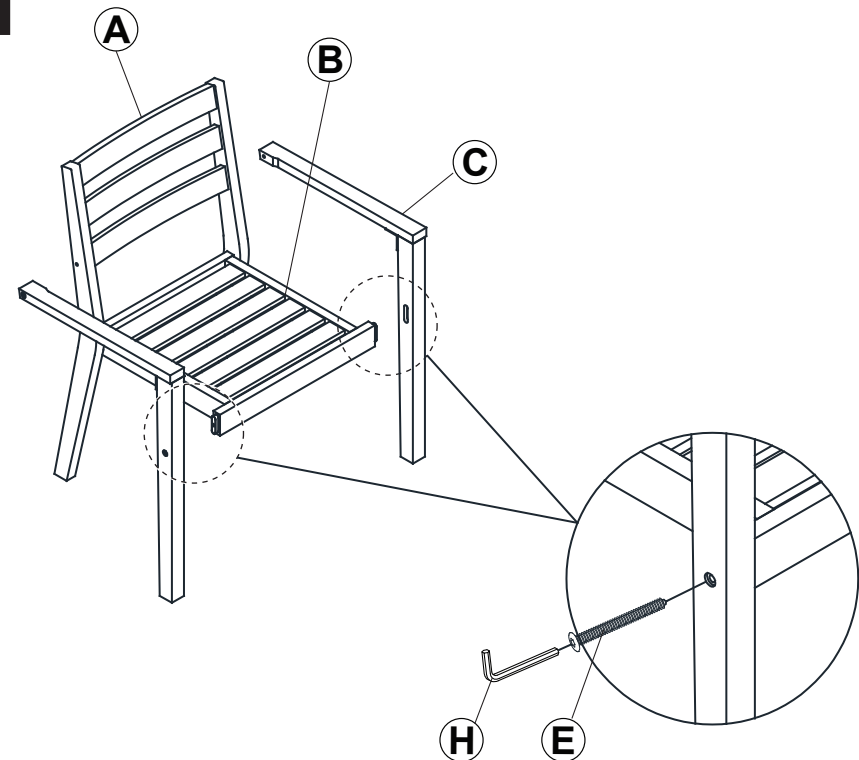

### Step 2

Attach Frame leg (C) to Frame seat (B) ,use Screw (E) and tighten with allen key (H).


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

3

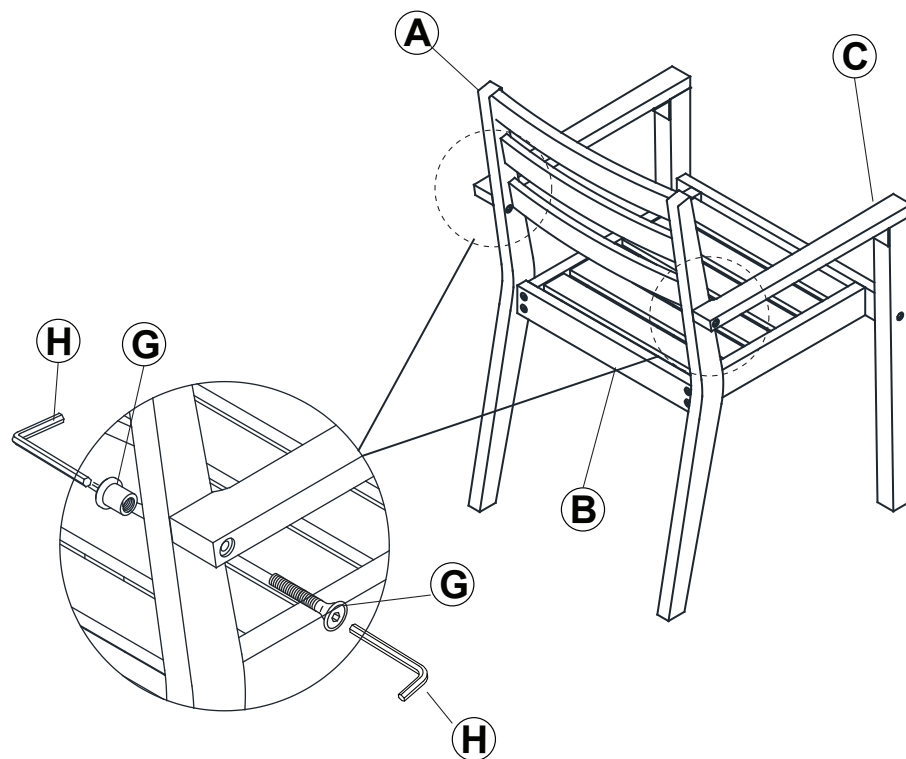

4

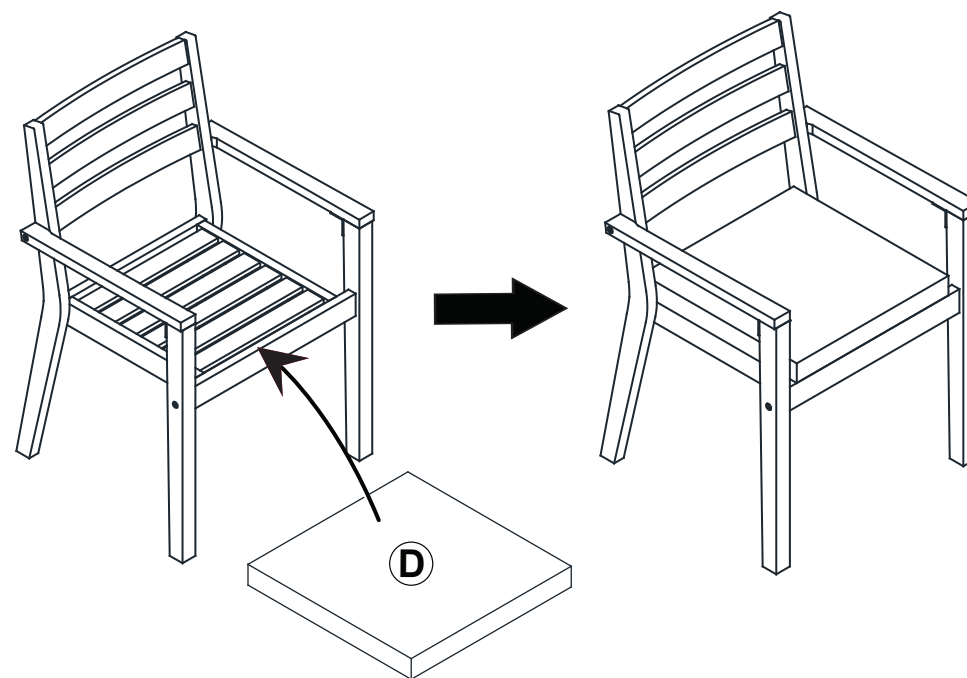

Step 3  
Use Bolt + Nut (G) and tighten with allen key (H).

Step 4  
Attach Pillow (D) and Complete.