

NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

* This item should be assembled on a soft surface to prevent scratching the finish during assembly.

* This item may require periodic tightening.

* If you having difficulty, our friendly Customer Care team is always here to help.

Please email customersupport@safavieh.com

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

* If any part is missing or damaged, do not attempt to assemble the product.

* Estimated Assembly Time: 30 minutes.

* Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Dust with a soft, dry cloth. Do not use abrasive cleaner. To clean mirror, spray a small amount of glass cleaner onto a lint-free cloth and wipe mirror clean.

SAFAVIEH

COUTURE

Item ID: SFV1101A










Product Dimensions: 35.43"W x 13.78"D x 90.55"H

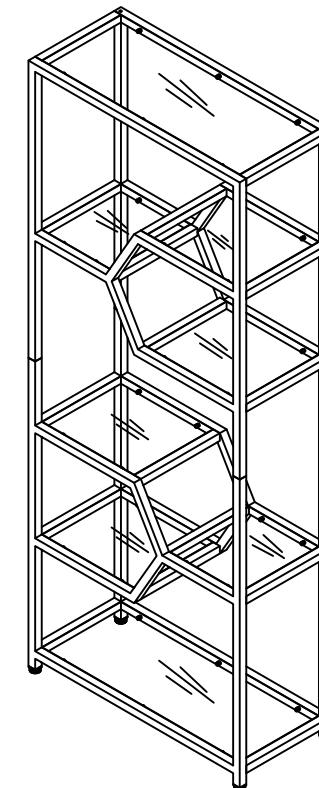

⚠️ WARNING ⚠️


Weight Capacity - 33 LBS per shelf
Warning : Do not stand on Bookcase.
Warning : Do not over torque bolts.

Part List and Hardware List

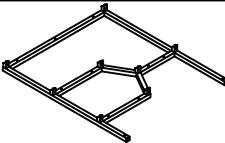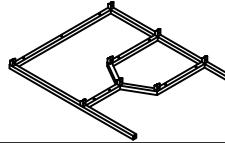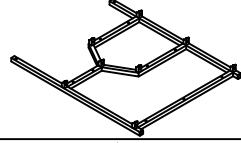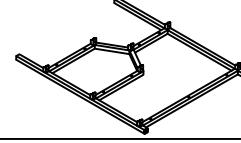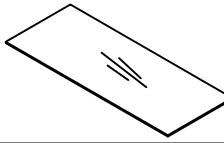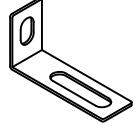PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top-Front Frame		1X	HW1	Allen Key 4mm		1X
B	Top-Back Frame		1X	HW2	Socket Screw 1/4" x 1.2mm x 12mm		42X
C	Bottom-Front Frame		1X	HW3	Phillips Screw 4 x 1.2mm x 38mm		2X
D	Bottom-Back Frame		1X	HW4	Leveler		4X
E	Cross Tube		16X	HW5	Glass Holder		36X
F	Inner Tube		4X	HW6	Rubber Tube		36X
G	Large Glass		2X	HW7	L-Shape Bracket		2X
H	Middle Glass		4X	HW8	Flat Washer φ13mm		2X
I	Small Glass		2X	HW9	Anchor		2X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

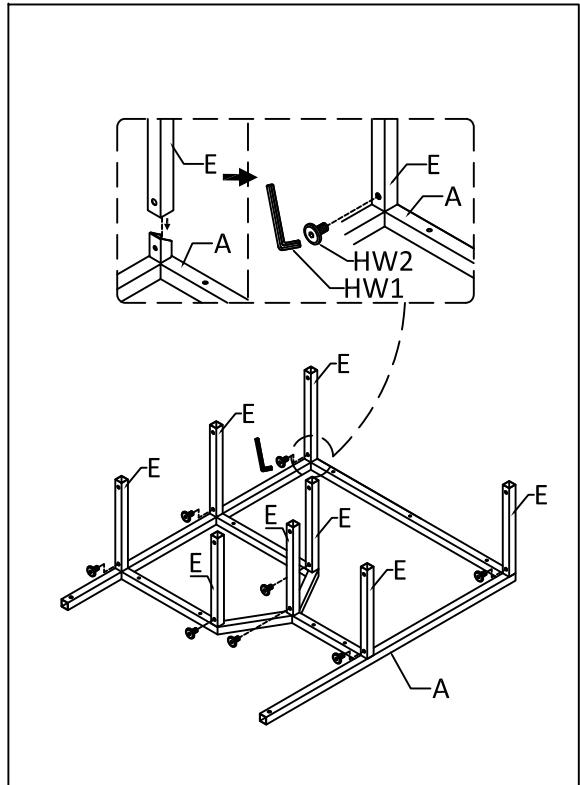


STEP1:

Insert the U-connector on the top-front frame (A) into the cross tube (E). Assemble cross tube (E) to top-front frame (A) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.

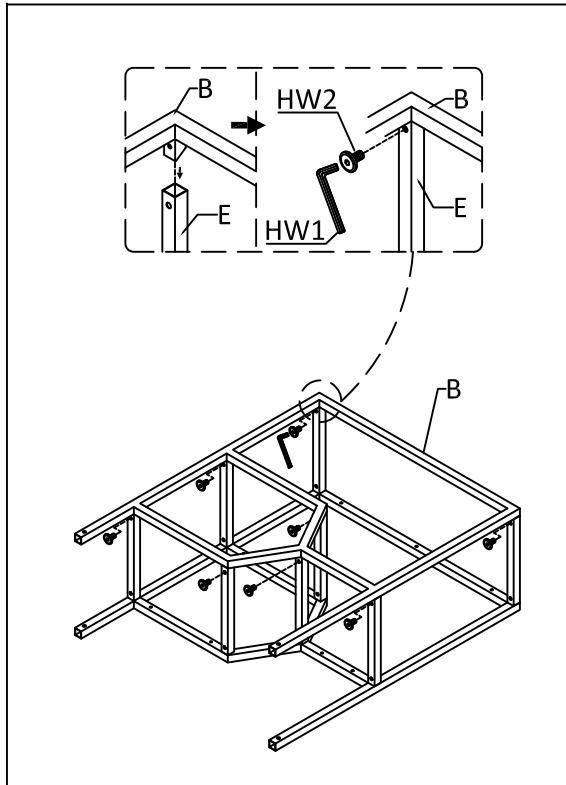

STEP2:

Insert the U-connector on the top-back frame (B) into the cross tube (E). Assemble cross tube (E) to top-back frame (B) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.

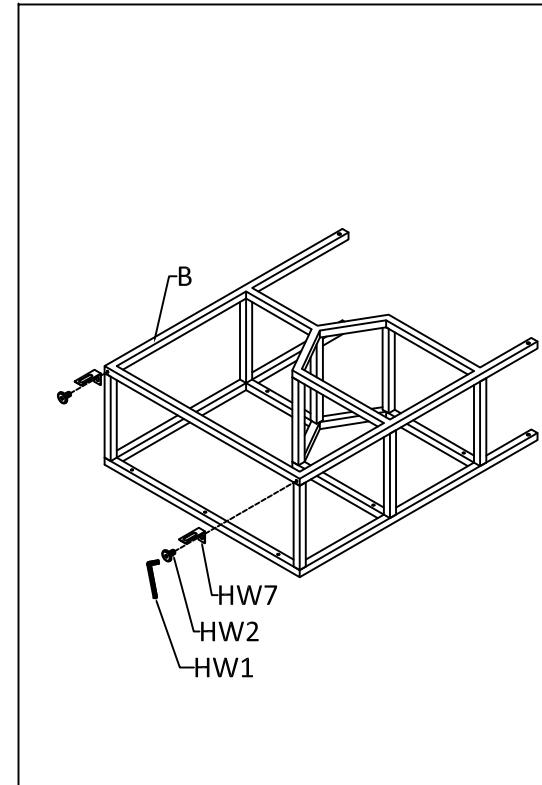


STEP3:

Assemble L-shape bracket (HW7) to top-back frame (B) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

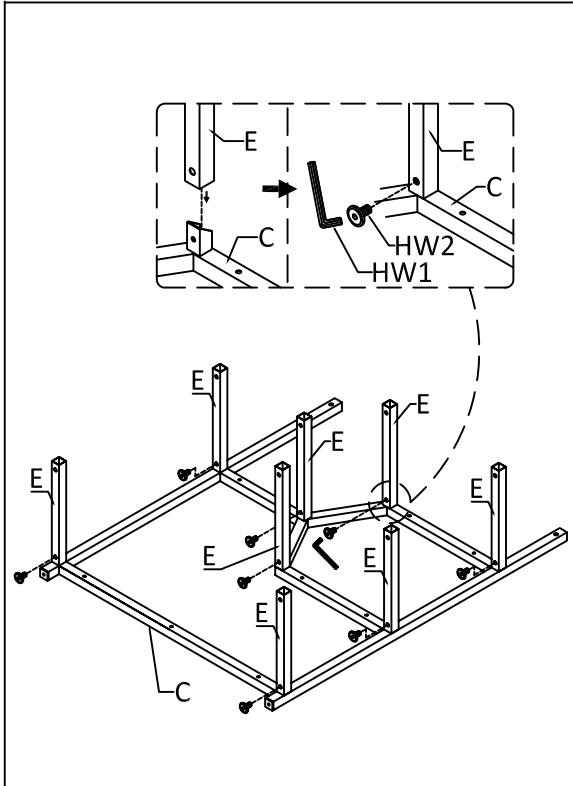


STEP4:

Insert the U-connector on the bottom-front frame (C) into the cross tube (E). Assemble cross tube (E) to bottom-front frame (C) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.

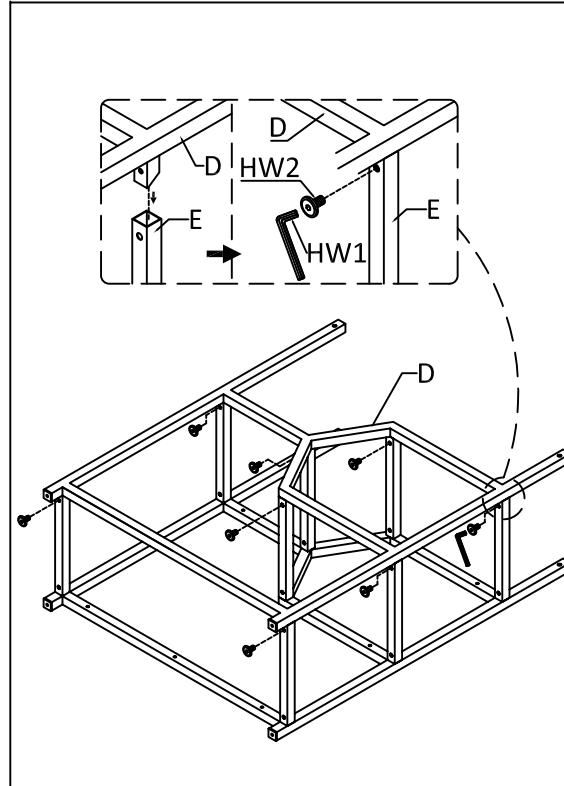

STEP5:

Insert the U-connector on the bottom-back frame (D) into the cross tube (E). Assemble cross tube (E) to bottom-back frame (D) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.

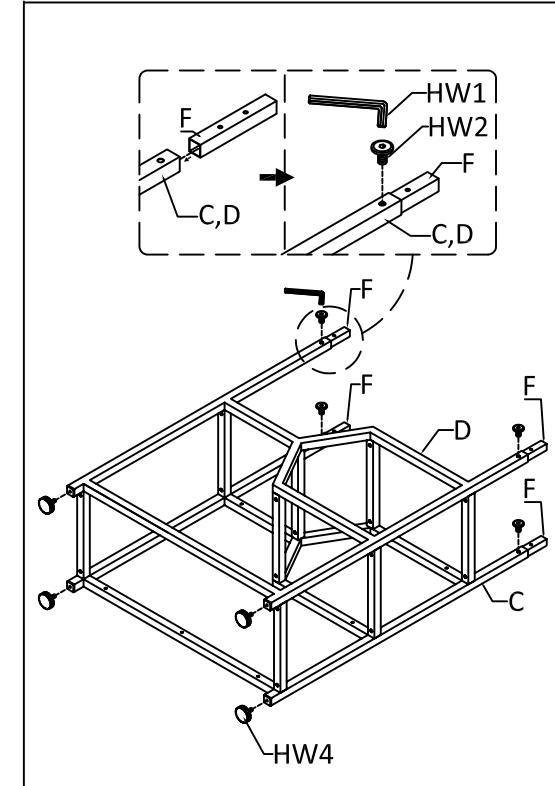


STEP6:

Insert inner tube (F) into the bottom frame (C,D), then assemble inner tube (F) to bottom frame (C,D) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.
Screw in leveler (HW4) into threaded nut on the tube end of bottom frame (C,D).


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

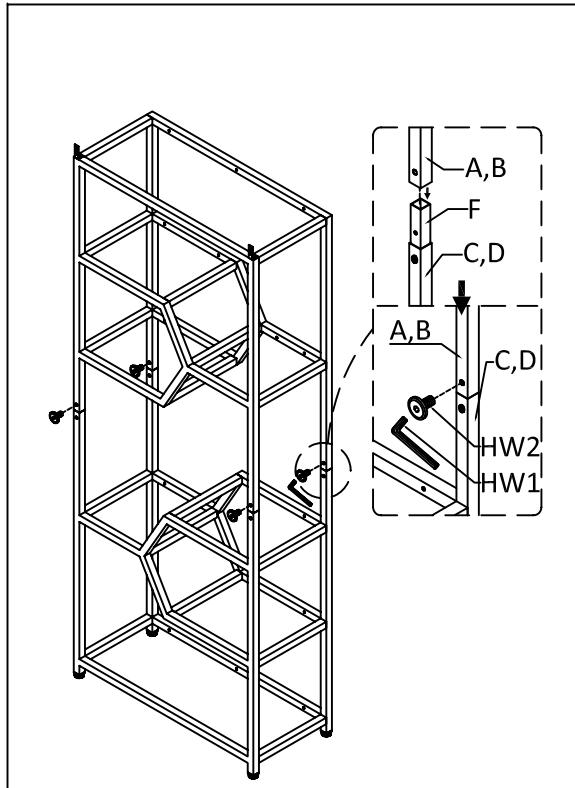


STEP7:

Insert the top assembled frame (A,B) into the bottom assembled frame (C,D). Then, assemble top frame (A,B) to bottom frame (C,D) with bolts (HW2) by use of Allen key (HW1) as shown in drawing.

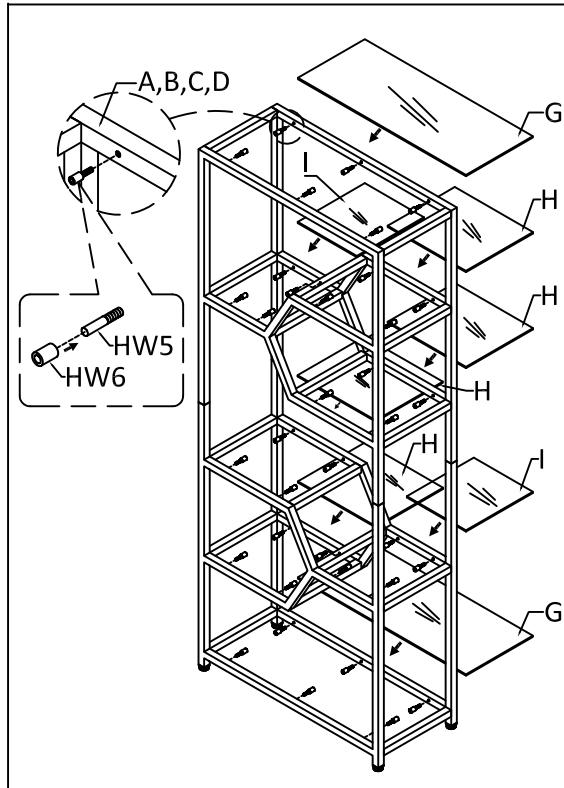

STEP8:

Insert glass holder (HW5) and rubber tube (HW6) in the threaded holes on the top frame (A,B), bottom frame (C,D) as shown in drawing and place glass (G,H,I) onto the frames.

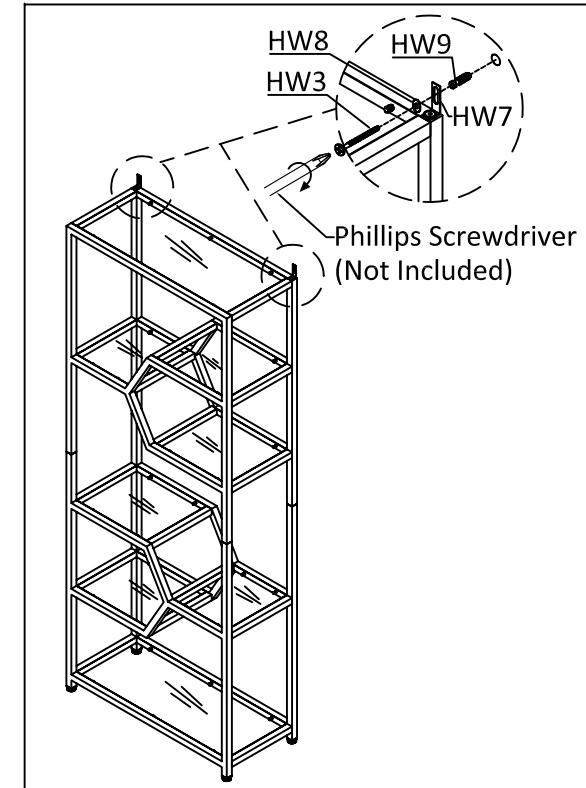

STEP9:

Drill pilot hole on the wall, tap anchors (HW9) into pilot holes. Fasten L-shape bracket (HW7) to wall with screw (HW3), flat washer (HW8) by use of Phillips screwdriver as shown in drawing.