



Before beginning the assembly of the product , make sure all parts are present .  
 Compare the parts with package contents list and hardware contents list .  
 If any parts are missing or damaged,do not attempt to assemble the product .  
 Tool required for assembly ( included ) : Allen key

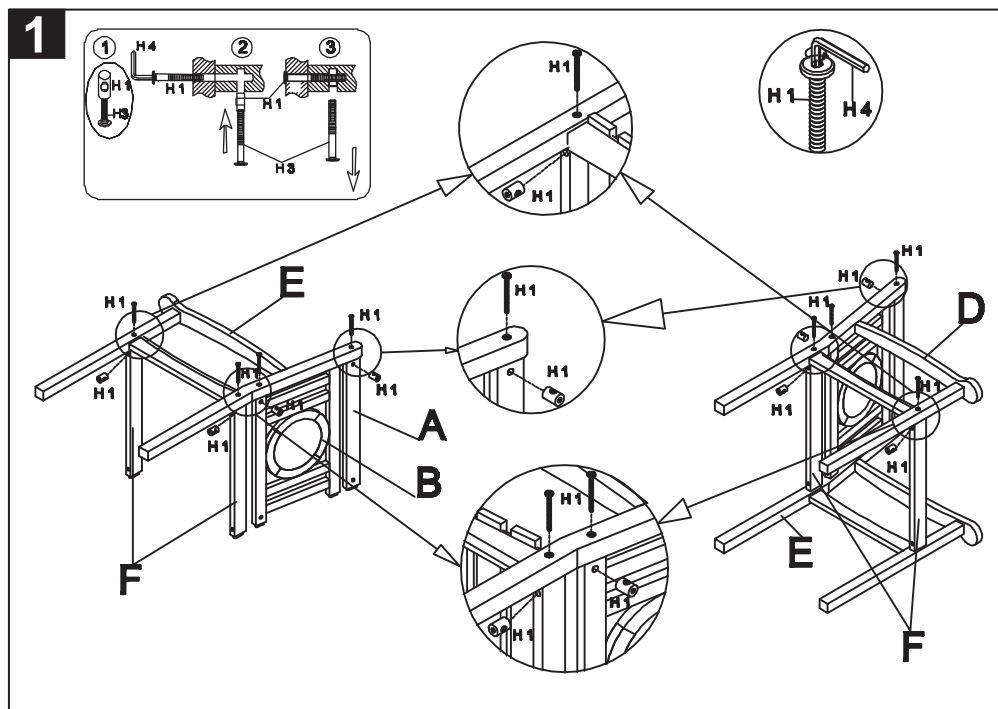

Step 1: attach left side (E) to back (B) with support 1 (A) and support 2 (F) as shown on picture,using bolt (H1) and tighten with the Allen key (H4) .  
 Then continue with left side ( E ) with same way .  
 Make sure tighten all bolt (H1 ) before continue step 2

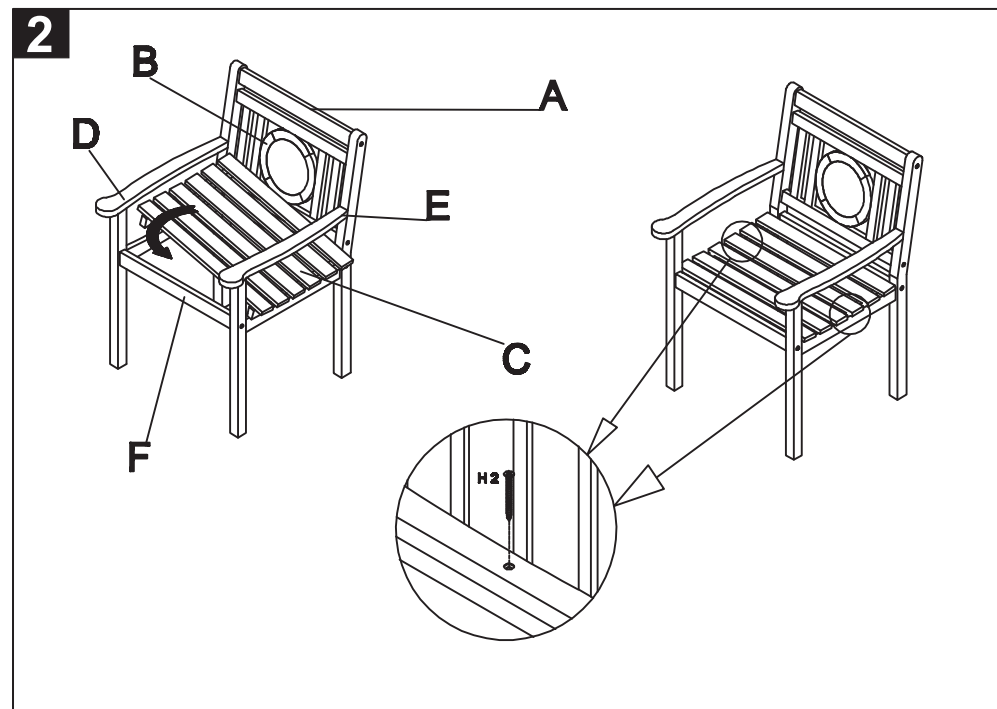

Step 2: put the seat (D) inside chair and using screw (H2) as shown on picture,tighten with screwdriver.











## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use .  
Dust regularly with small brush or vacuum .Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge

## NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
<b>A</b>	Support 1		<b>1 X</b>
<b>B</b>	Back		<b>1 X</b>
<b>C</b>	Seat		<b>1 X</b>
<b>D</b>	Right side		<b>1 X</b>
<b>E</b>	Left side		<b>1 X</b>
<b>F</b>	Suport 2		<b>2 X</b>
<b>H 1</b>	Allen Bolt	 M6x70	<b>8 X</b>
<b>H 2</b>	Screw	 M4x35	<b>2 X</b>
<b>H 3</b>	Bolt extra	 M6x50	<b>1 X</b>
<b>H 4</b>	Allen Key		<b>1 X</b>

 **SAFAVIEH**  
OUTDOOR LIVING

MODEL : PAT 6721

Product Dimension :24.41"W x24.41"D x34.65"H

Weight capacity : 300 lbs

Warning : Do not stand on the chair

Warning : Do not torque bolts / screws

