

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.











Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Frame back		1X
B	Frame Seat		1X
C	Frame Leg		2X
D	Cushion seat		1X
E	Cushion Back		1X
F	Screw	 M6x80	4X
G	Screw	 M6x50  M6x15	2X
H	Bolt + Nut	 M6x35	2X
M	Allen key	 LG4	2X

 **SAFAVIEH**  
O U T D O O R

Weight Capacity : 600 Ibs


Warning : Do not stand on chair

Warning : Do not over torque bolts / screws



Model# PAT7068

Product Dimensions: 24.8" W x 30.7" D x 29.13" H

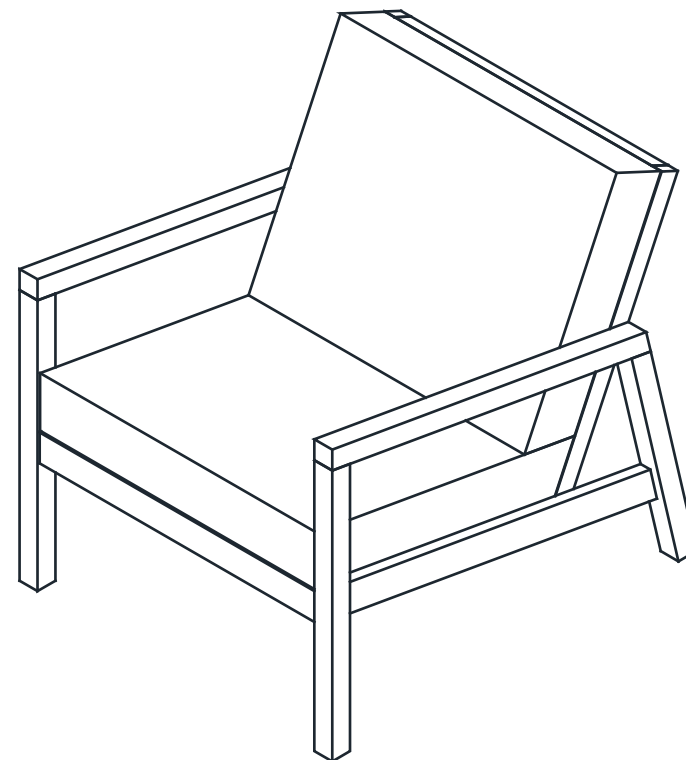


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

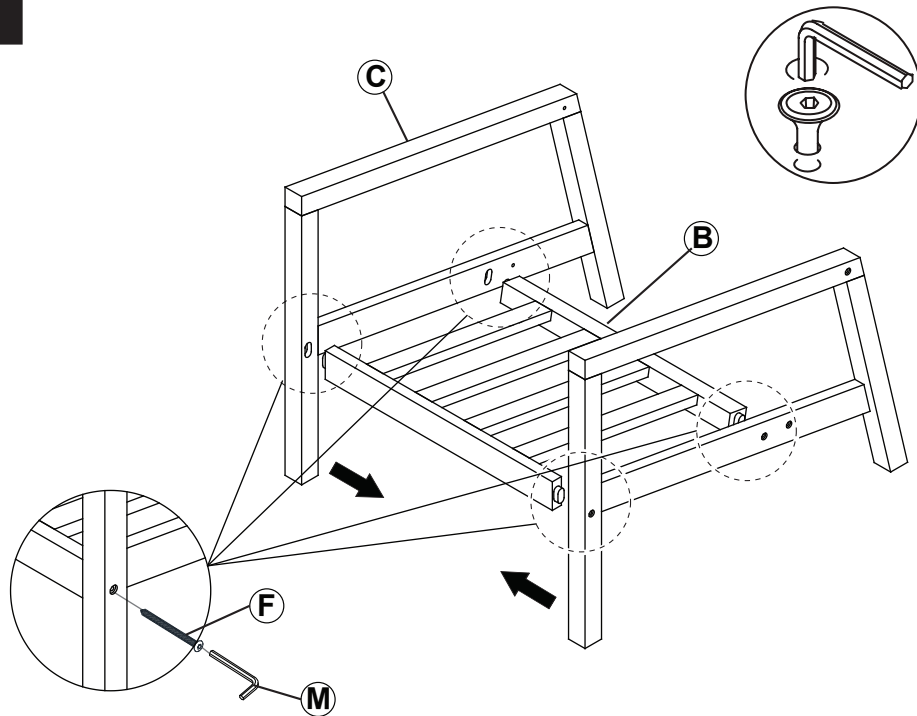

### Step 1

Attach Frame Leg (C) to Frame Seat (B) ,use Screw (F) tighten with allen key (M).

2

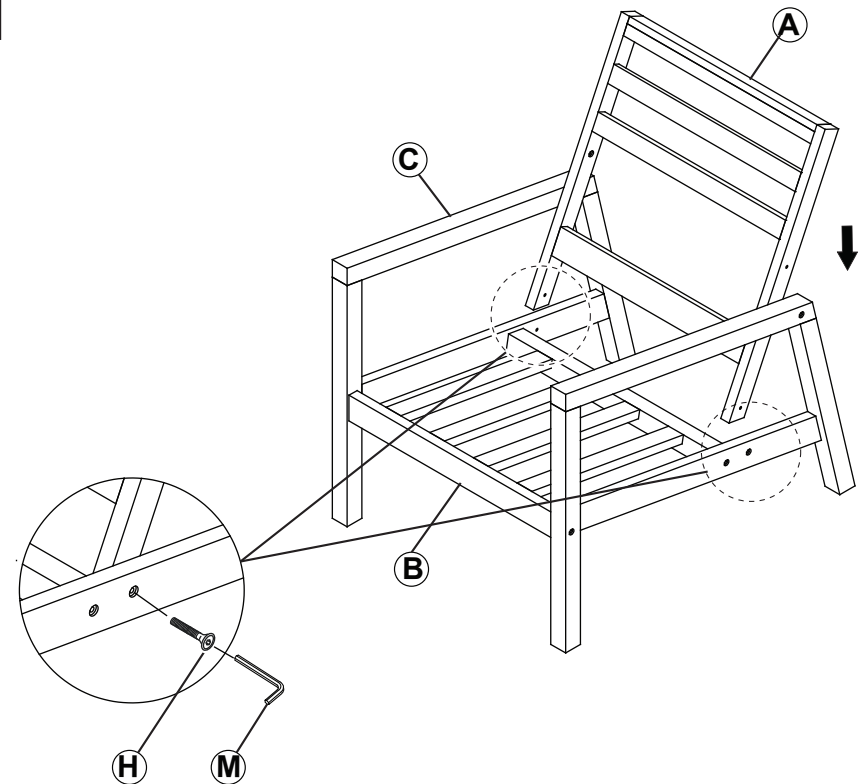

### Step 2

Attach Frame Back (A) to Frame Leg (C) ,use Bolt (H) tighten with allen key (M).


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

3

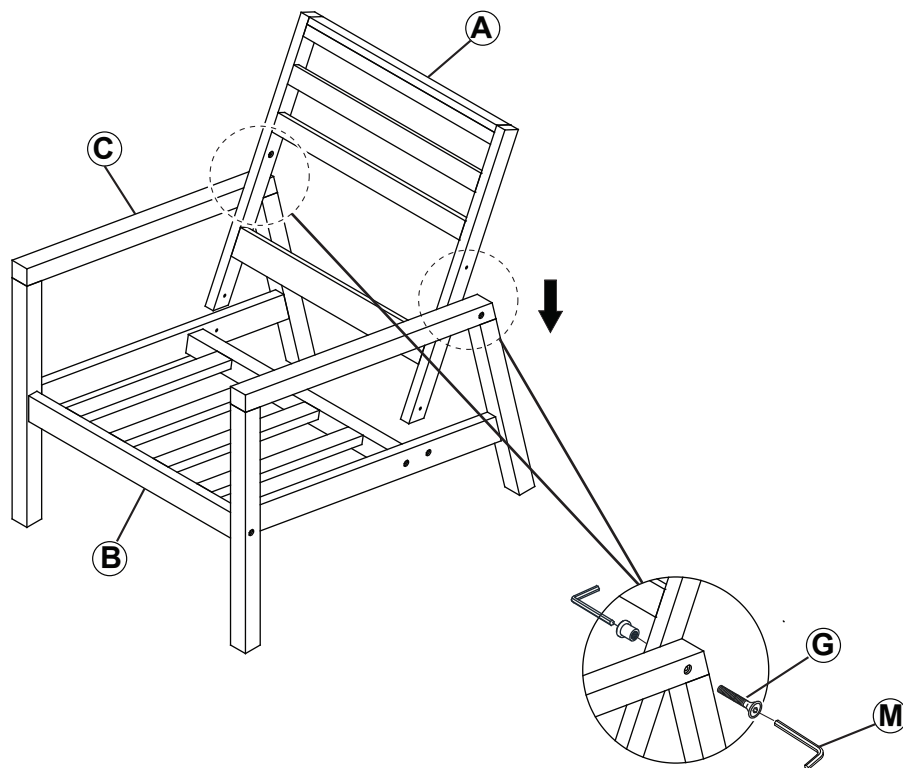

4

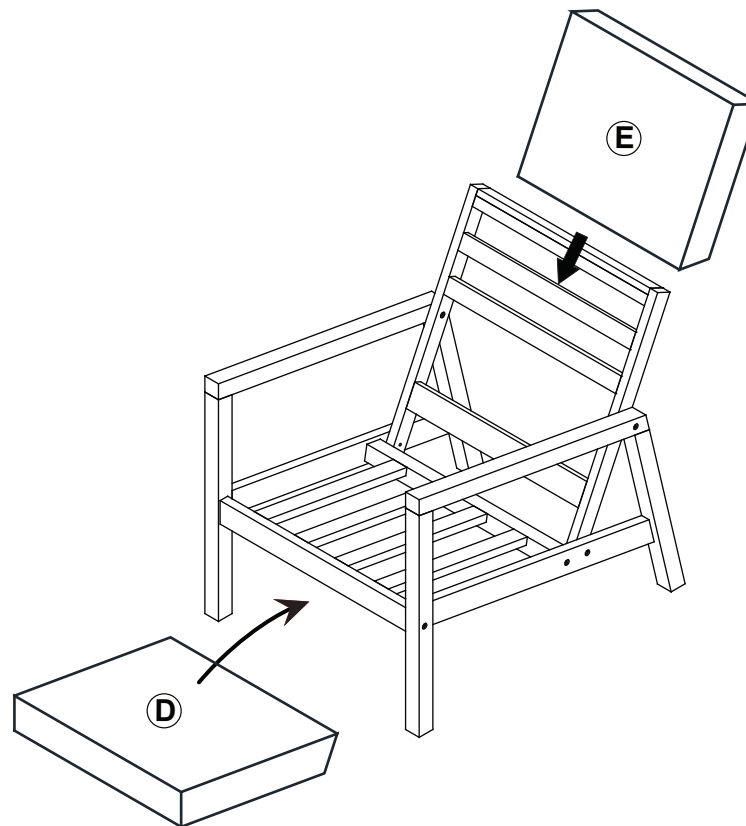

### Step 3

Use Bolt + Nut (G) tighten with allen key (M).

### Step 4

Attach Cushion seat (D) and Cushion back (E).Complete.