# **ASSEMBLY INSTRUCTIONS**

ITEM NO: B2-265-26F/B2-265-30F Don't tighten any bolts until all bolts on a step have been started!

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the HARDWARE LIST below.


NO.	PARTS LIST		PARTS NO	Q'TY
Α		Stool Back	B2-265-26FP1 B2-265-30FP1	1
В		Fabric Seat	B2-265-2630FP2	1
С		Left Leg	B2-265-26FP3 B2-265-30FP3	1
D		Right Leg	B2-265-26FP4 B2-265-30FP4	1
Е		Front Stretcher	B2-265-2630FP5	1
F		Left Stretcher	B2-265-2630FP6	1
G		Right Stretcher	B2-265-2630FP7	1

NO.	HARDWARE LIST		PARTS NO	Q'TY
1	(a)	1/4"*3"	B2-265-2630FP8	4
2	() ()	1/4"*2"		4
3	<b>9</b>	1/4"*1-1/2"		1
4	<b>O</b>	1/4"		9
5		1/4"*19mm		9
6	Outers.	8*38mmL		6
7		Allen Wrench		1




Philips Head Screwdriver required for assembly, but not included.

## STEP 1:

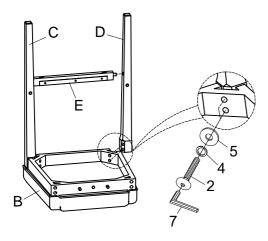


1.Loosely attach the Left leg(C) and Right leg(D) to the Linen Fabric Seat(B), using Bolts(7+2+4+5) to tighten, as shown.

## STEP 2:

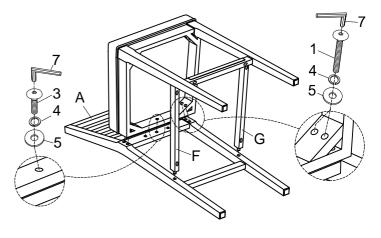


1.Loosely attach the Fabric Seat (B) to the Stool Back(A), using Bolts(7+3+4+5) and Bolts(7+1+4+5) to tighten, as shown.

## STEP 3:

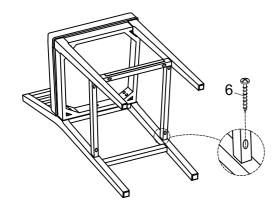

1.Attach the Front stretcher(E) and Right/Left stretcher(F/G) to the legs, using Screw(6) and a Philips head screwdriver to tighten, as shown.

## STEP 4:

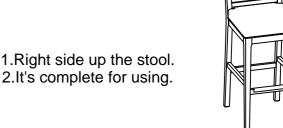

- Caution: 1. All bolts must be tightened mandatorily in the final step.
  - 2. It is also mandatorily recommended to periodically check bolts and retighten as needed.

If you find that your furniture has a missing or damaged part, contact the dealer from which you purchsed this product. They will be happy to help with and issues.

Thank you for making American Woodcrafters a part of your home.