


ASSEMBLY INSTRUCTIONS


HOUSE FULL BED WITH TRUNDLE

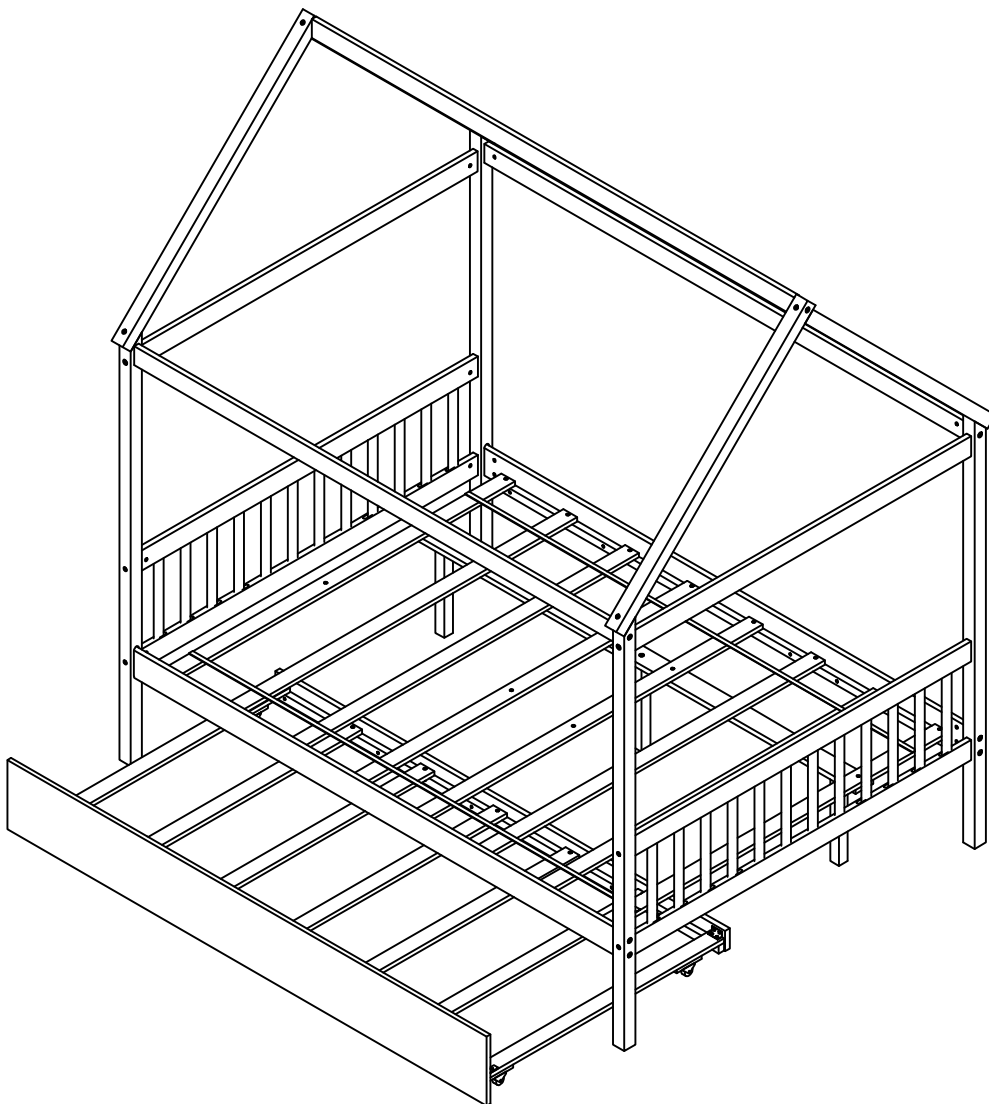

YX5514











(W69740993-W69740994-W69740995-W69740996)

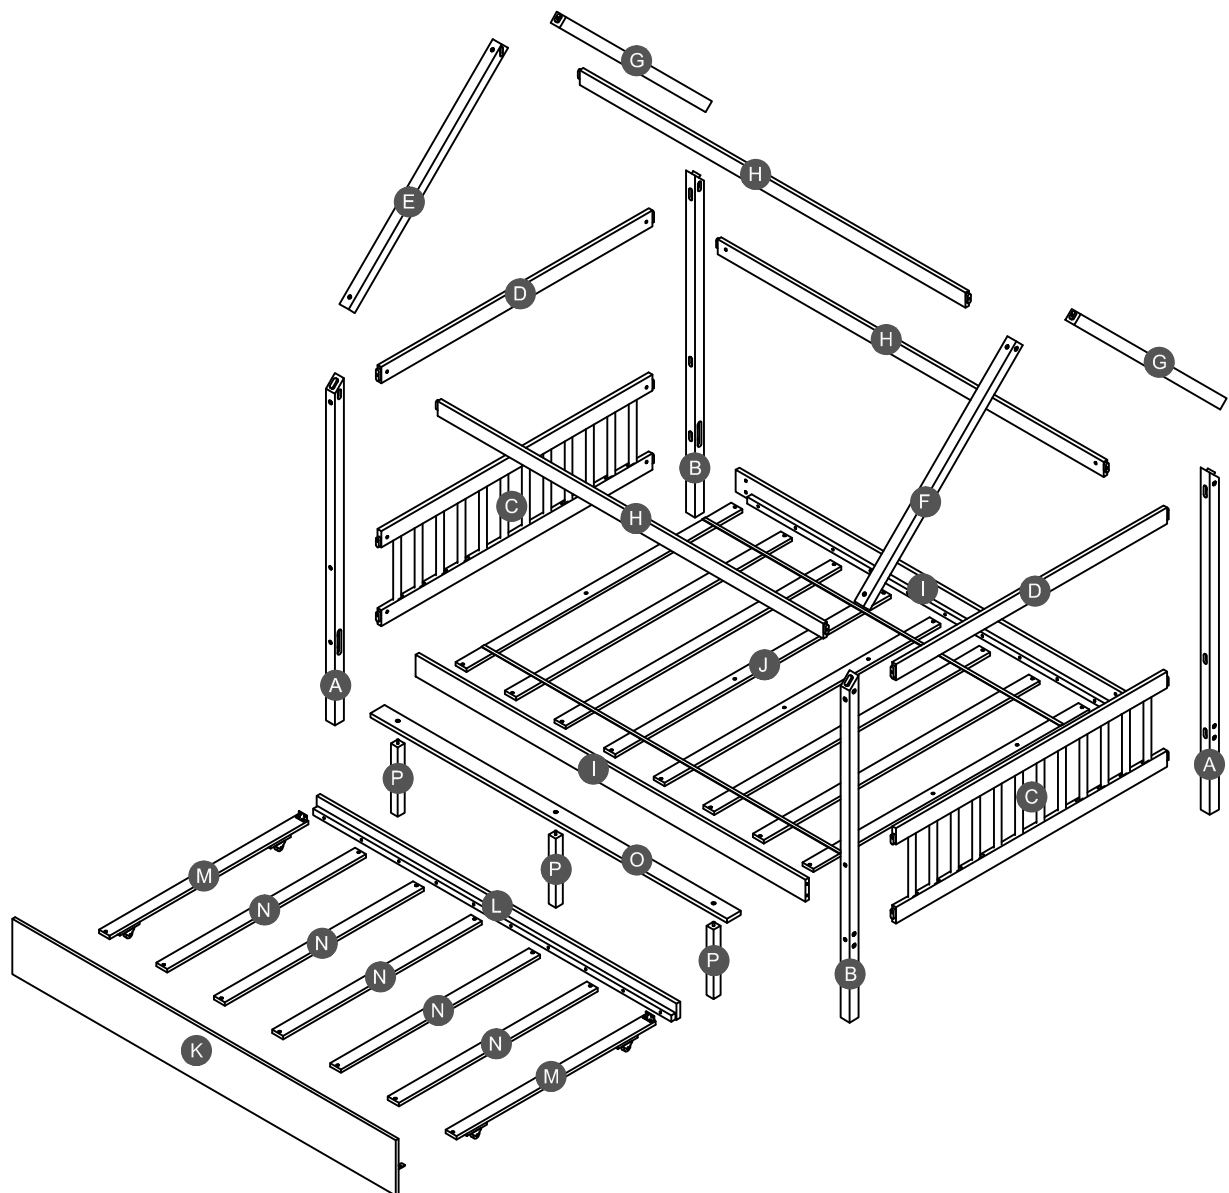Detail View









Part List











Hardware List YX5514 (1-2)

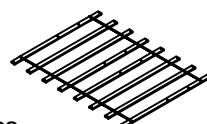A  Leg Left Front / Right Back-2pcs	B  Leg Left Back / Right Front-2pcs	H  Upper horizontal - 3pcs
I  Side rail - 2pcs	K  Trundle front panel - 1pc	L  Trundle back panel - 1pc
M  Trundle slats - 2pcs	N  Slats - 5pcs	O  Lower support slat - 1pc
P  Leg support - 3pcs		


YX5514 (2-2)

C  HB & FB-2pcs	D  Horizontal bar - 2pcs	E  Upper (Left Front) - 1pc
F  Upper (Right Front) - 1pc	G  Upper (Back) - 2pcs	J  Slats - 8pcs

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(26pcs)
4  (Ø12)1/4"*65mm Hex-Head bolts (6pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  Ø4*30mm Wood screws (42pcs)
7  95*95*18*3mm Metal bracket (2pcs)	8  Ø3.5*15mm Wood screws (16pcs)	9  100*63*20mm Wheels (4pcs)
10  40*18*18*2mm Metal bracket (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)






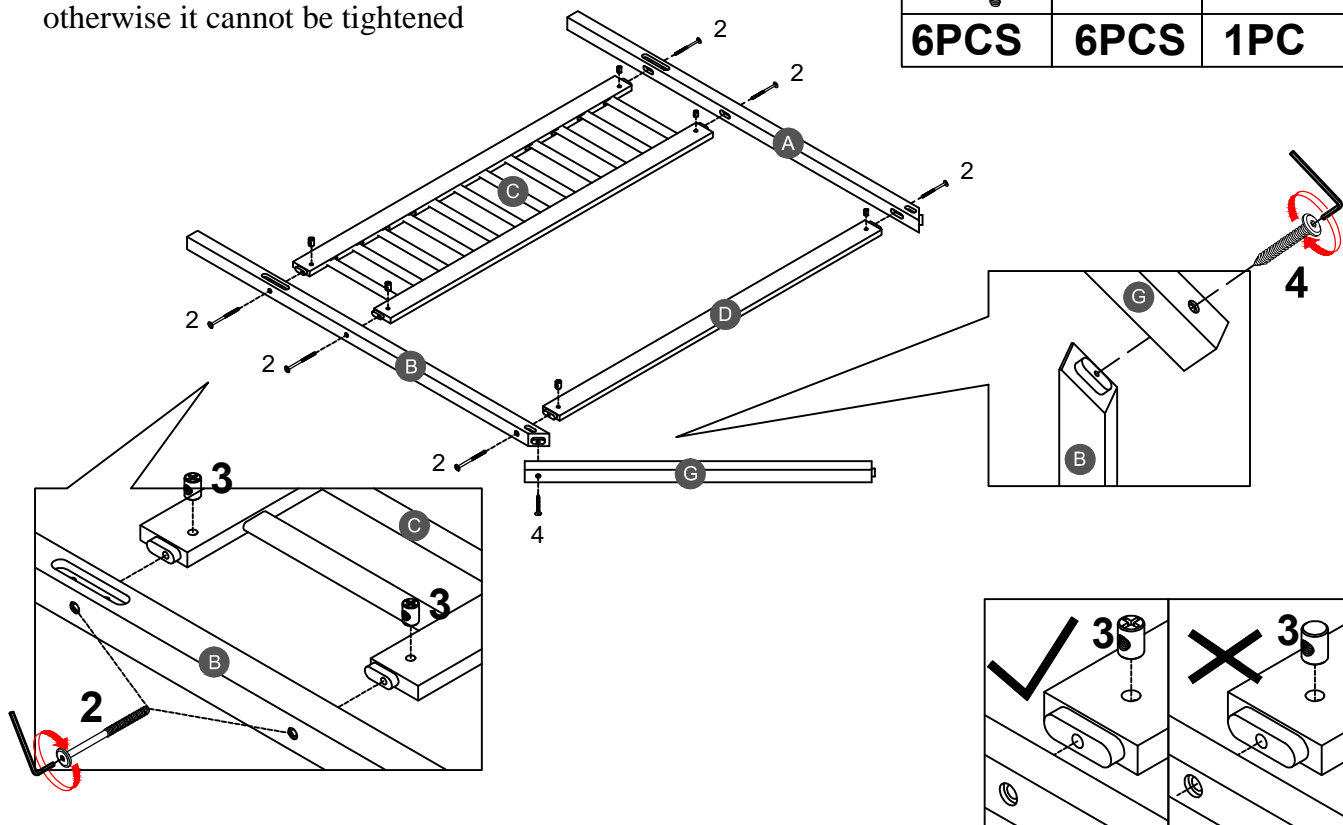
DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.


STEP 1:


Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

2		3		4	
6PCS		6PCS		1PC	






STEP 2:

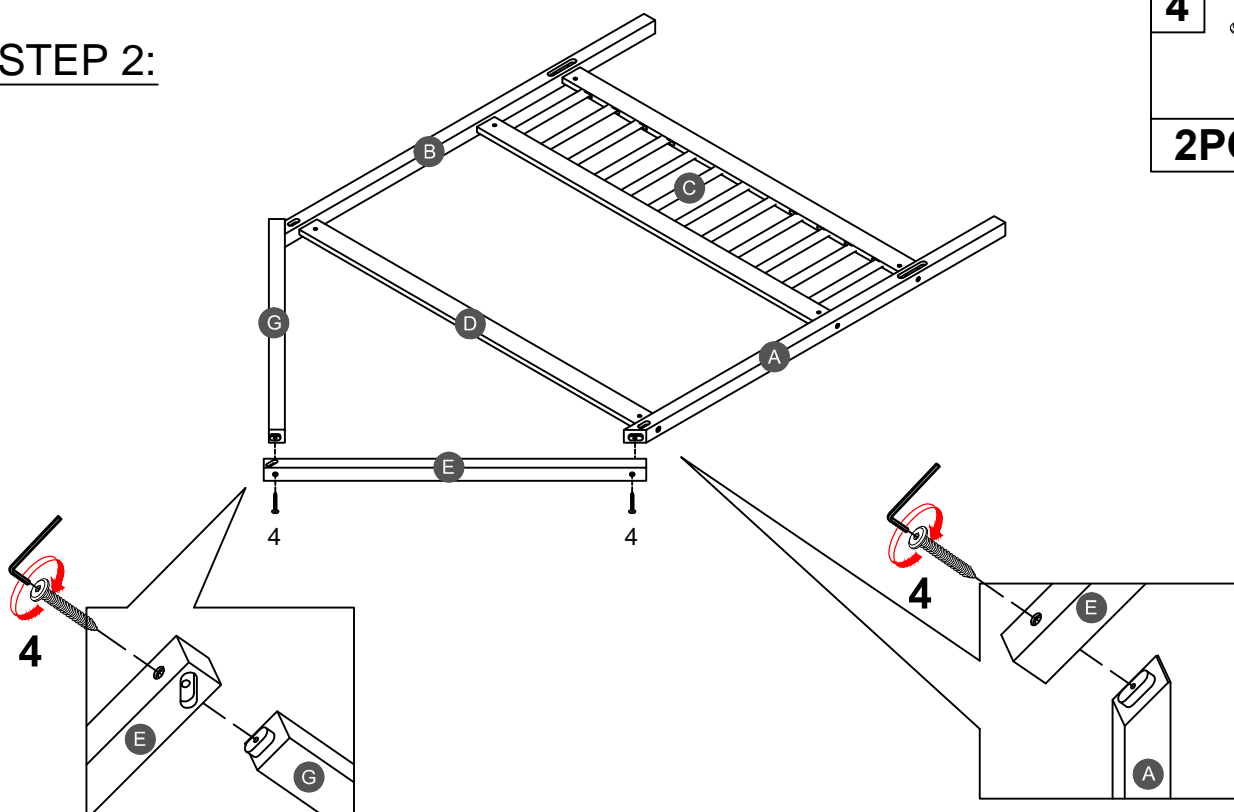
4	
2PCS	




STEP 3:


Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

2		3		4	
6PCS		6PCS		1PC	

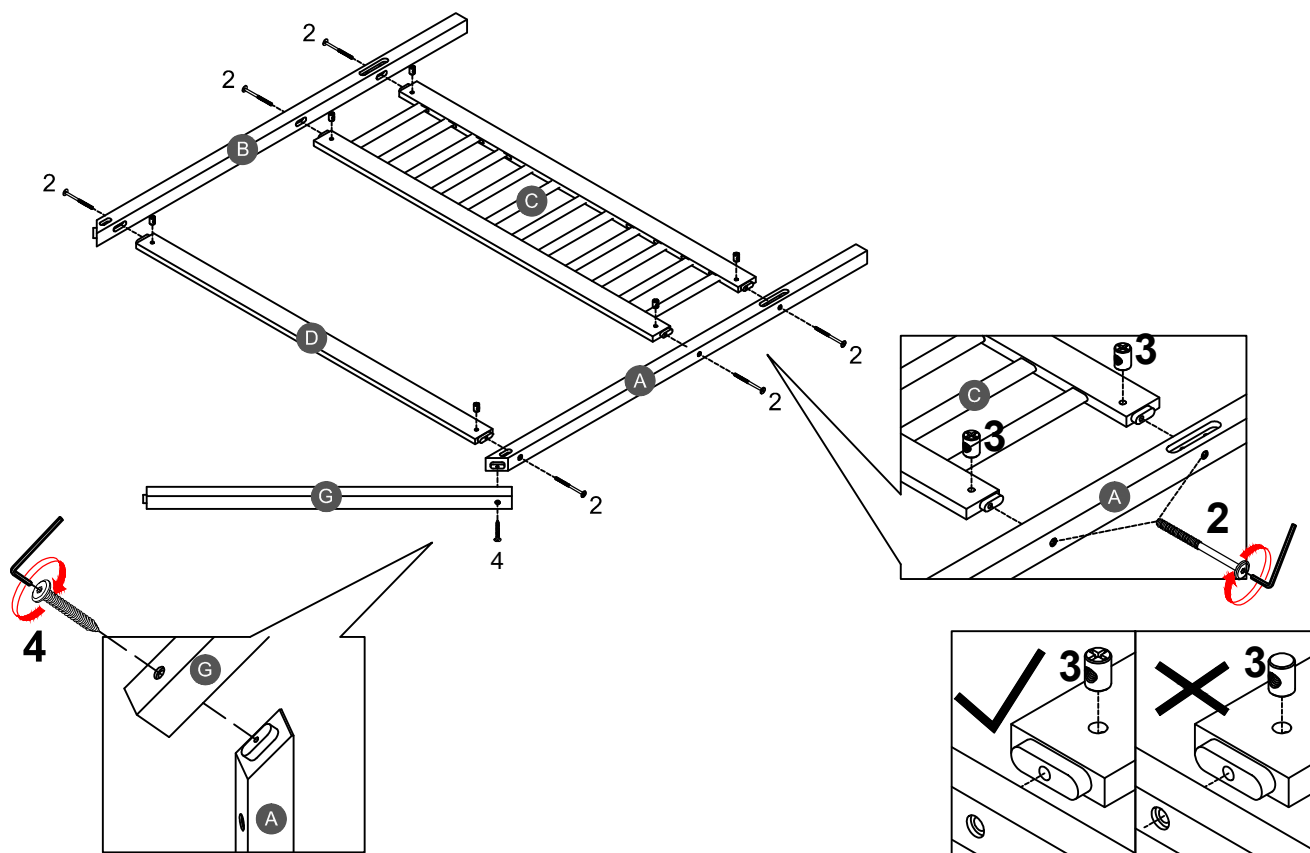


STEP 4:

4	
2PCS	


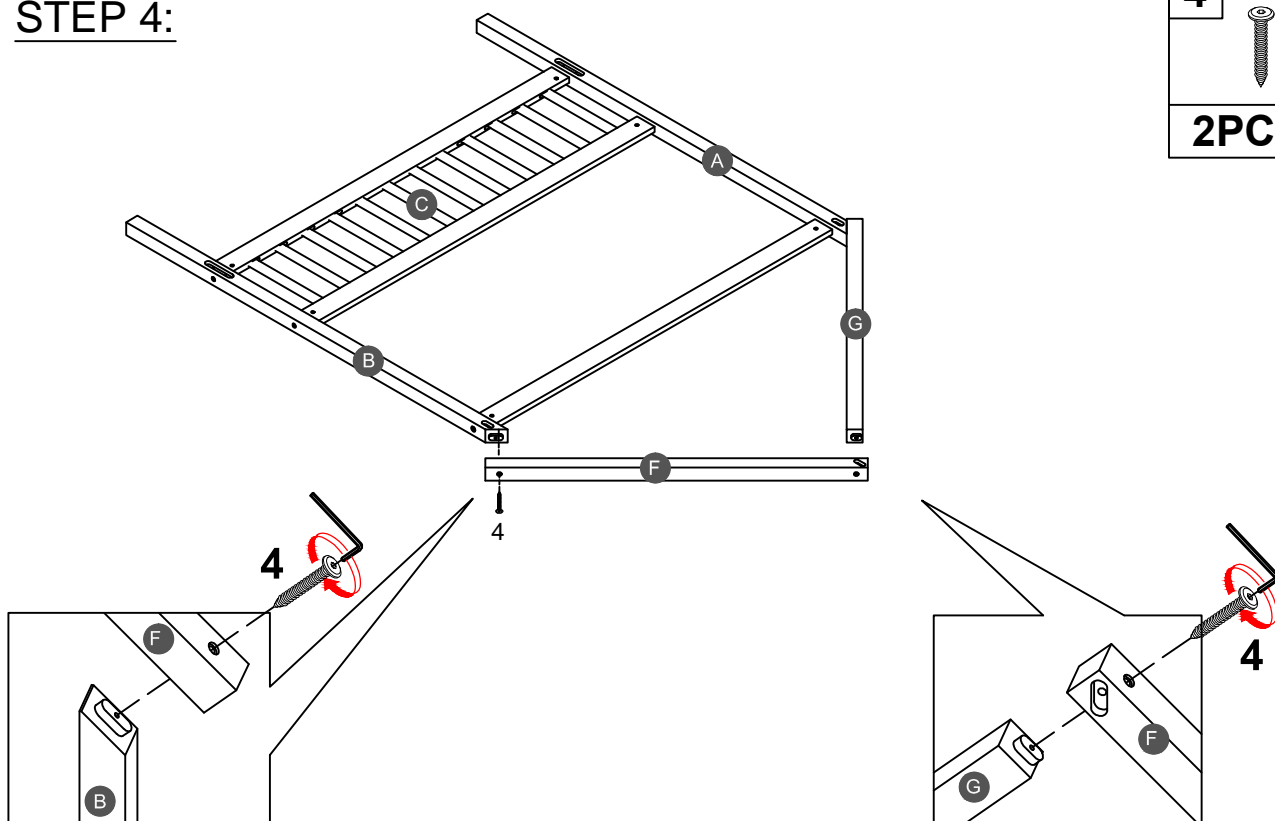


STEP 5:

Remark: Upper horizontal
paste stickers WARNING: DO
NOT HANG ON THIS BAR!

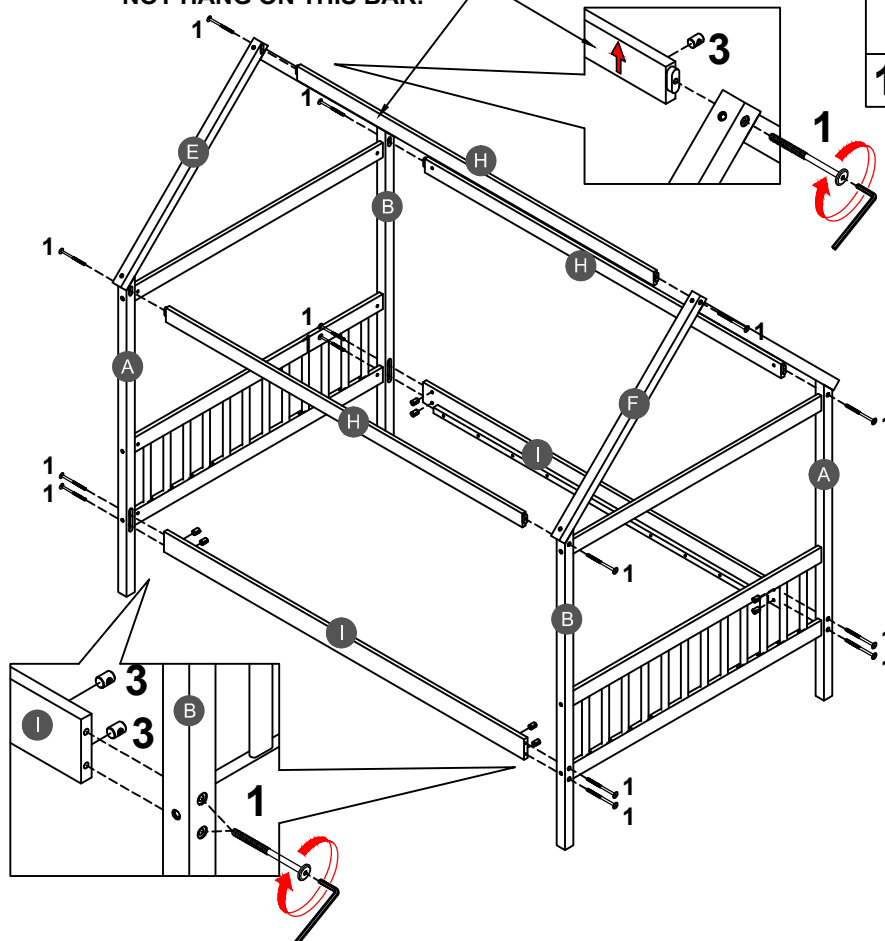

STEP 6:

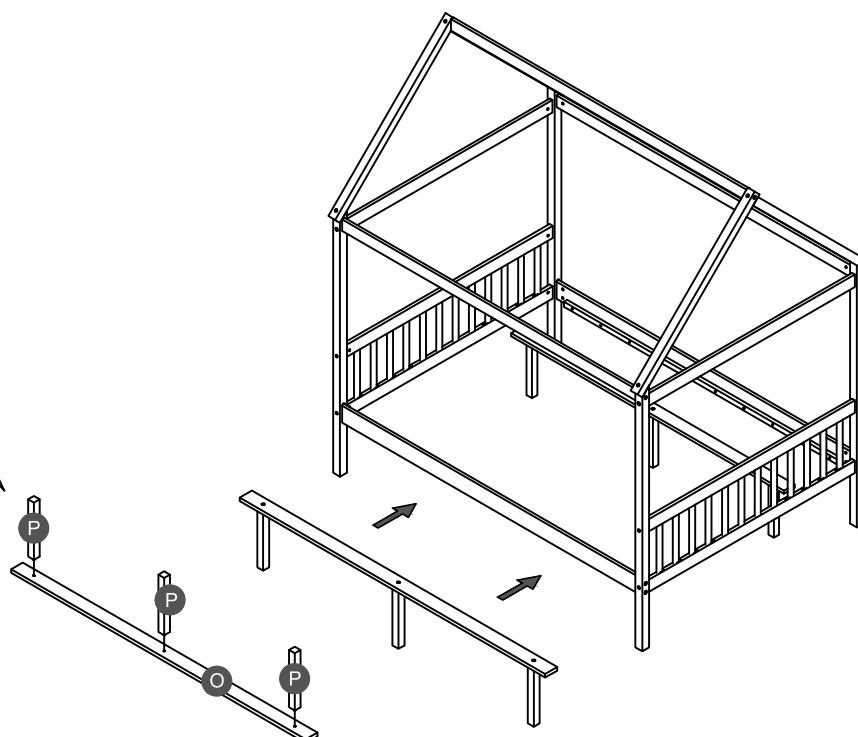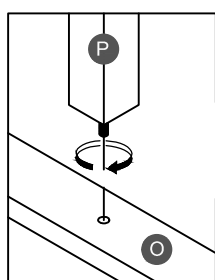




Assembling leg support (P) with lower support slat (O) later
rotate, Move support slat inside Full bunkbed.

STEP 7:

6



20PCS

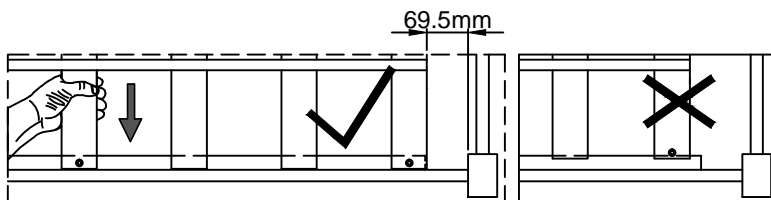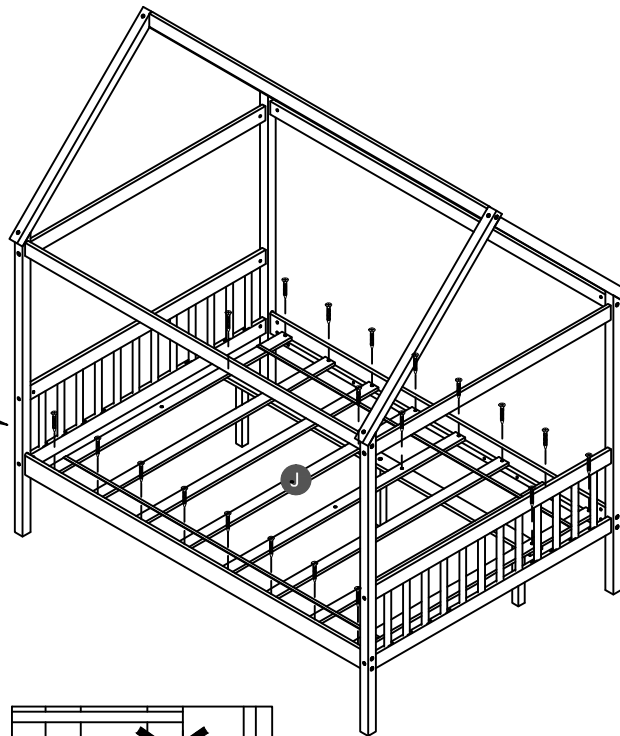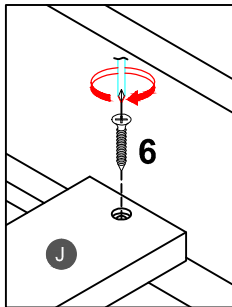

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 8:

9






4PCS

6



8PCS


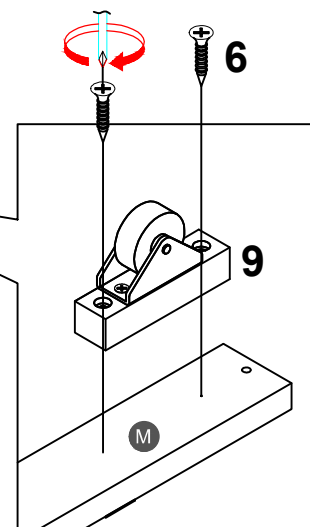
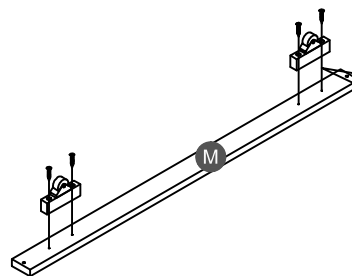
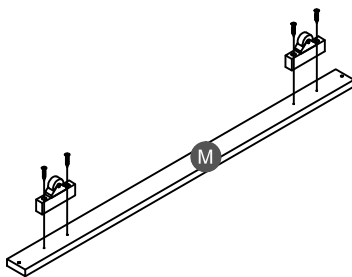


STEP 9:

6



14PCS

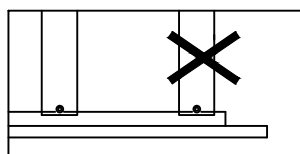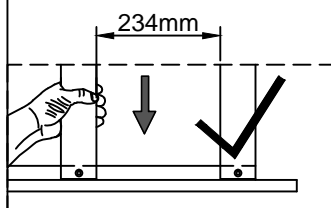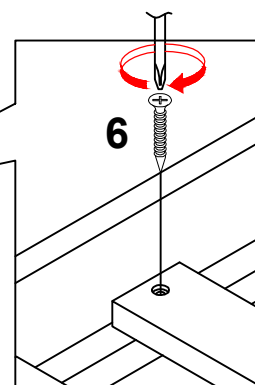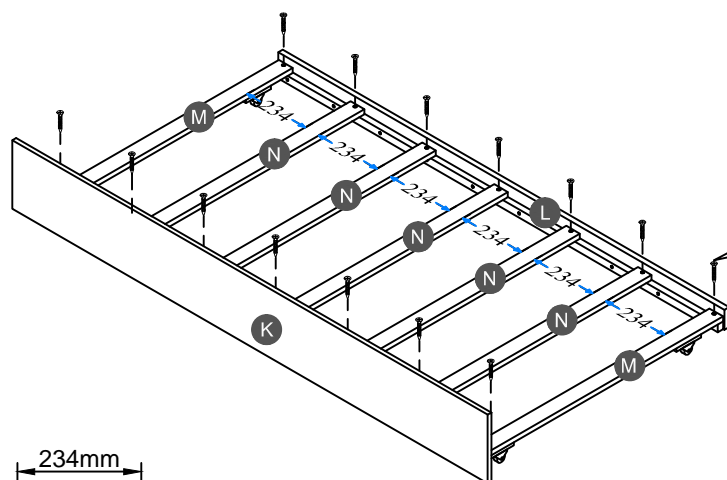

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 10:

7





2PCS



8





8PCS

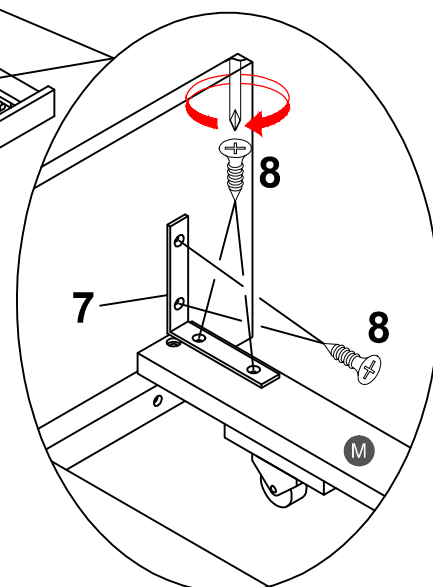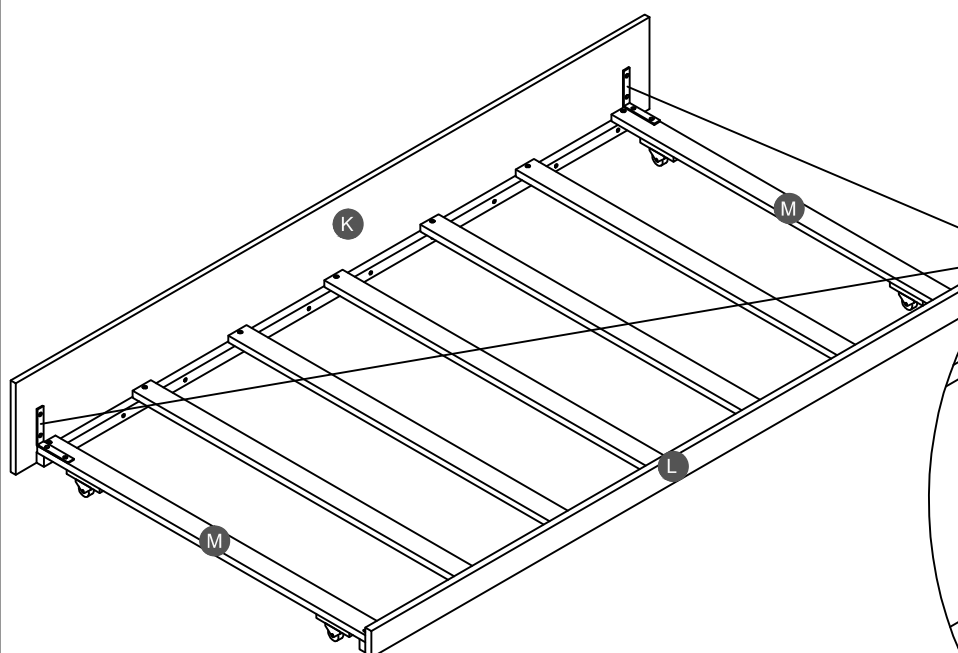


STEP 11:

8	10
	
8PCS	2PCS

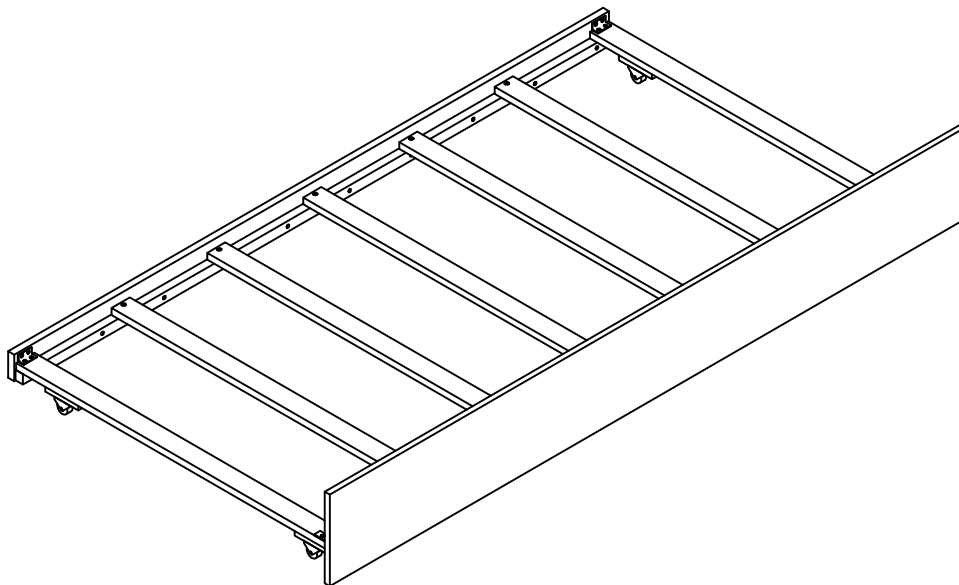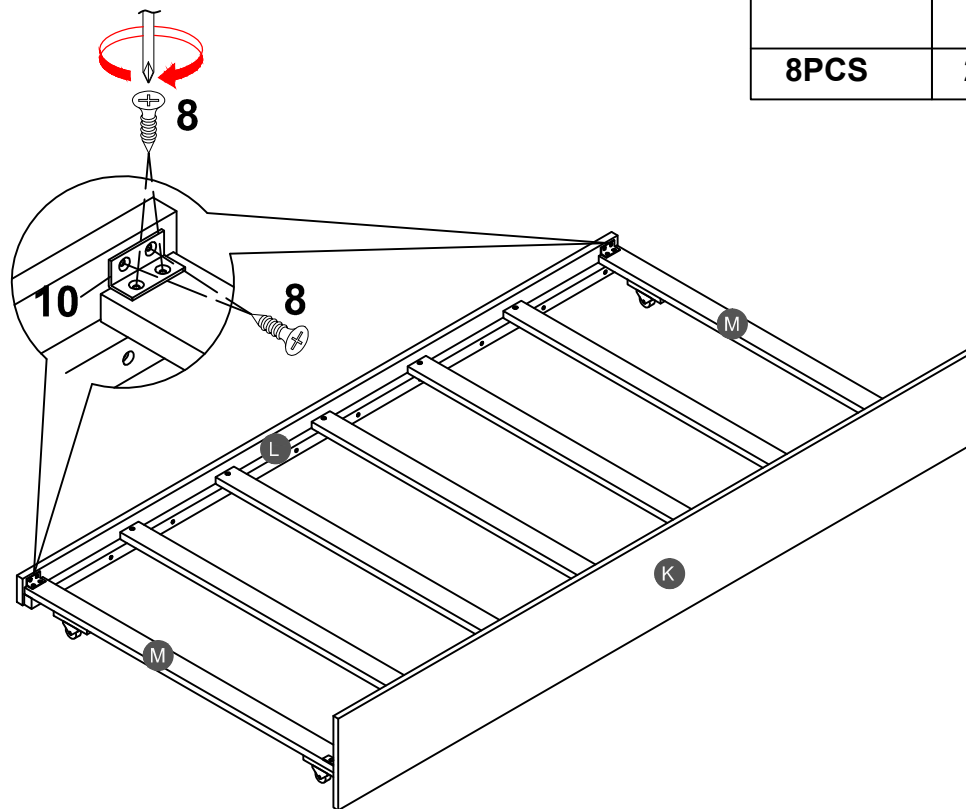

STEP 12:

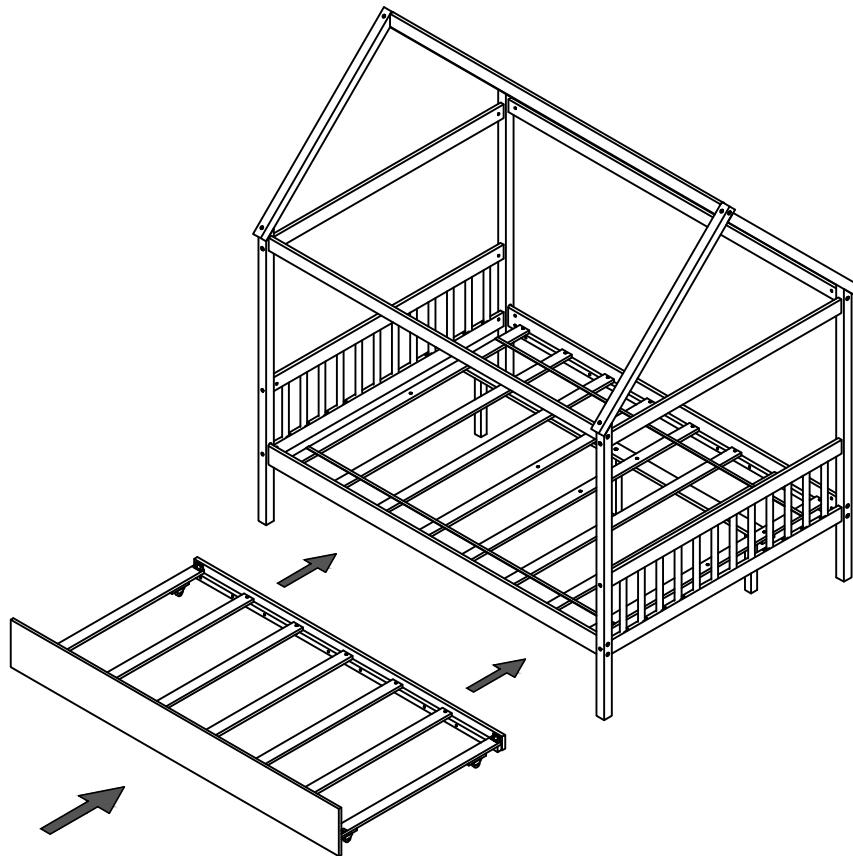

Push Trundle under the bottom of Bunkbed.

