



Manufactured by:  
Backyard Discovery  
3305 Airport Drive, Pittsburg, KS  
66762 800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476  
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990


# GRANADA GAZEBO WITH BAR

## MODEL # : 2206090



### WARNING

Cancer and Reproductive Harm  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

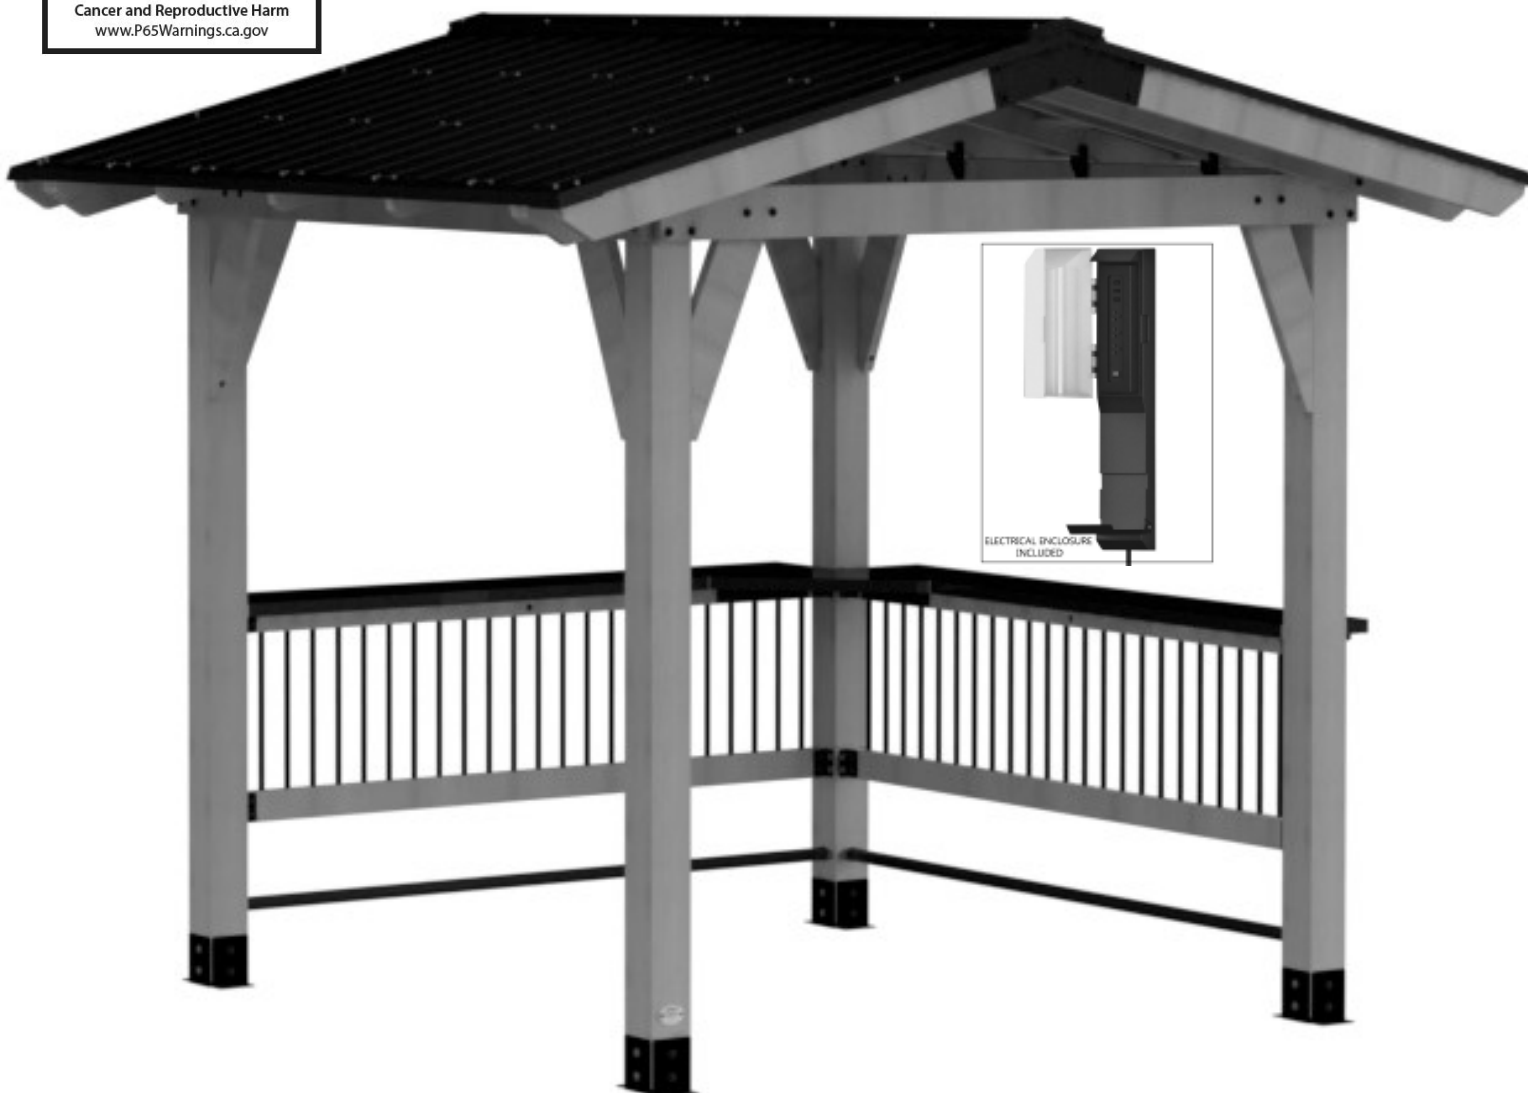

Please visit [www.backyarddiscovery.com](http://www.backyarddiscovery.com)

For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite*  
[www.backyarddiscovery.com](http://www.backyarddiscovery.com)



EASY STEP-BY-STEP

3D INTERACTIVE INSTRUCTIONS  
DOWNLOAD THE FREE APP



Made in China  
INS-2206090-A-GRANADA GAZEBO WITH BAR-ENG  
10-10-2023

# OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES


It is critically important that you start with square and level footings, concrete pad or deck to attach your structure

- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.


- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

## BELOW MEASUREMENTS BASED ON ANGLE TABLE CONFIGURATION, STANDARD BAR HEIGHT

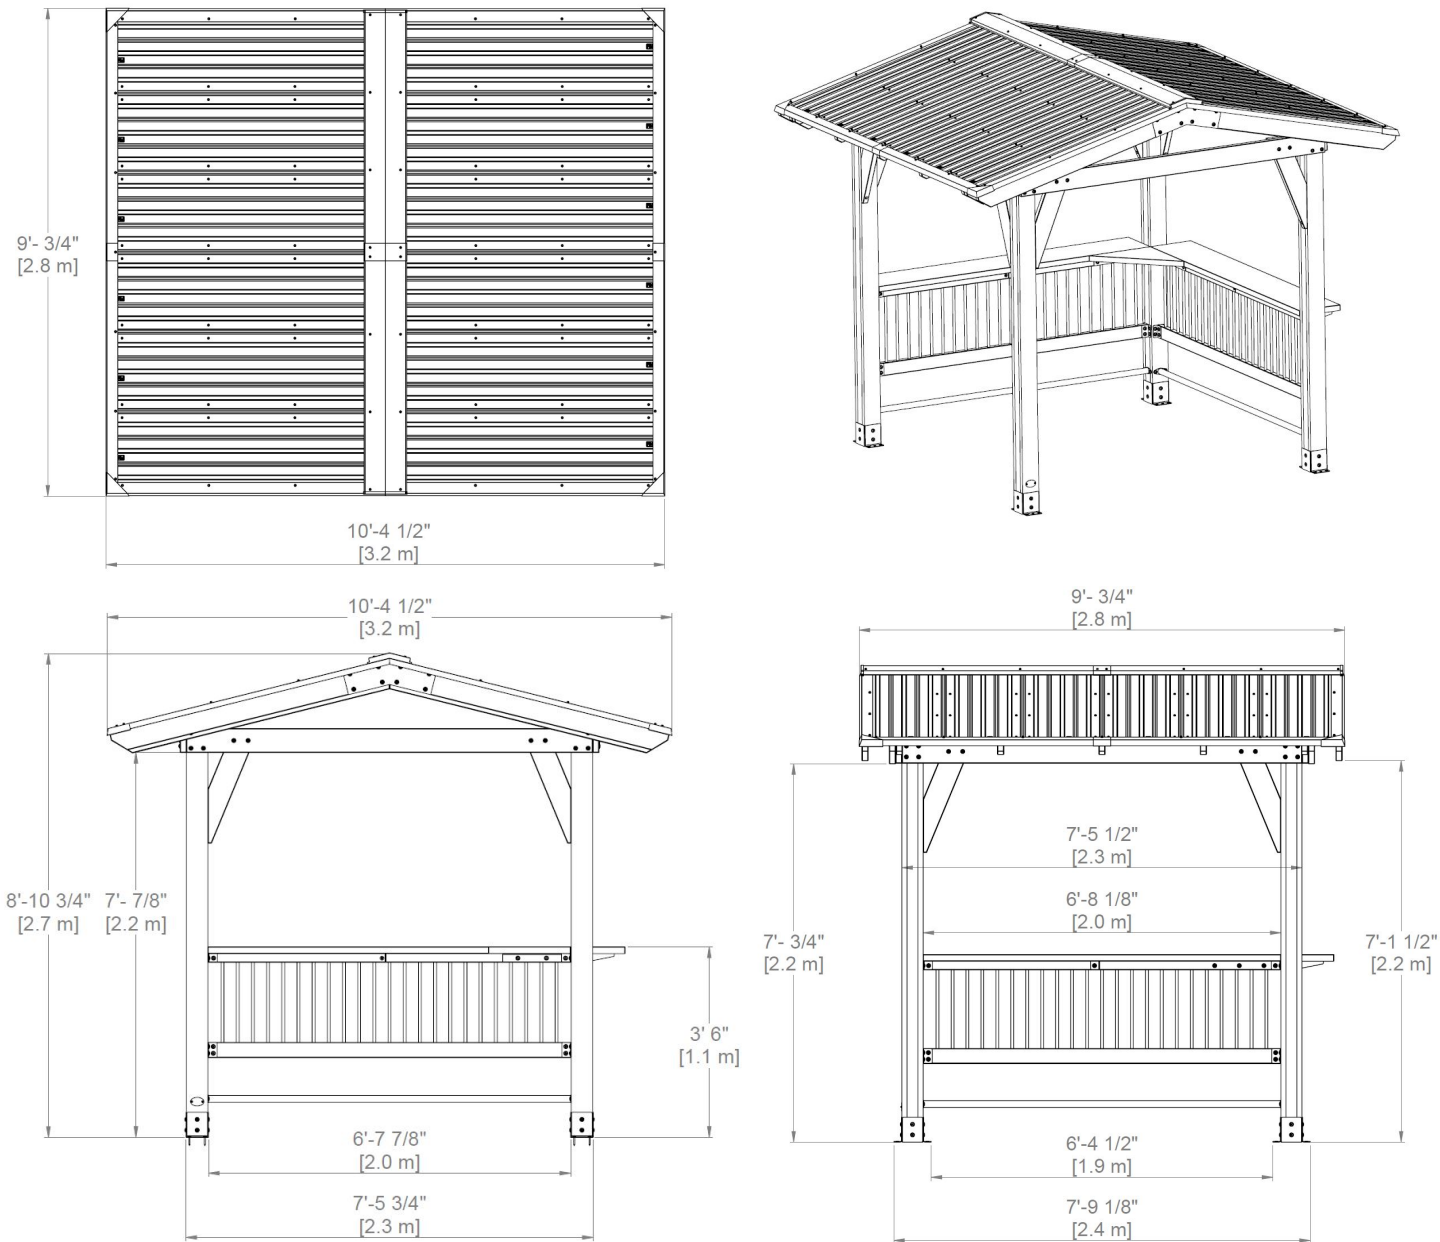




**OWNER'S MANUAL - ANCHORING LAYOUT**

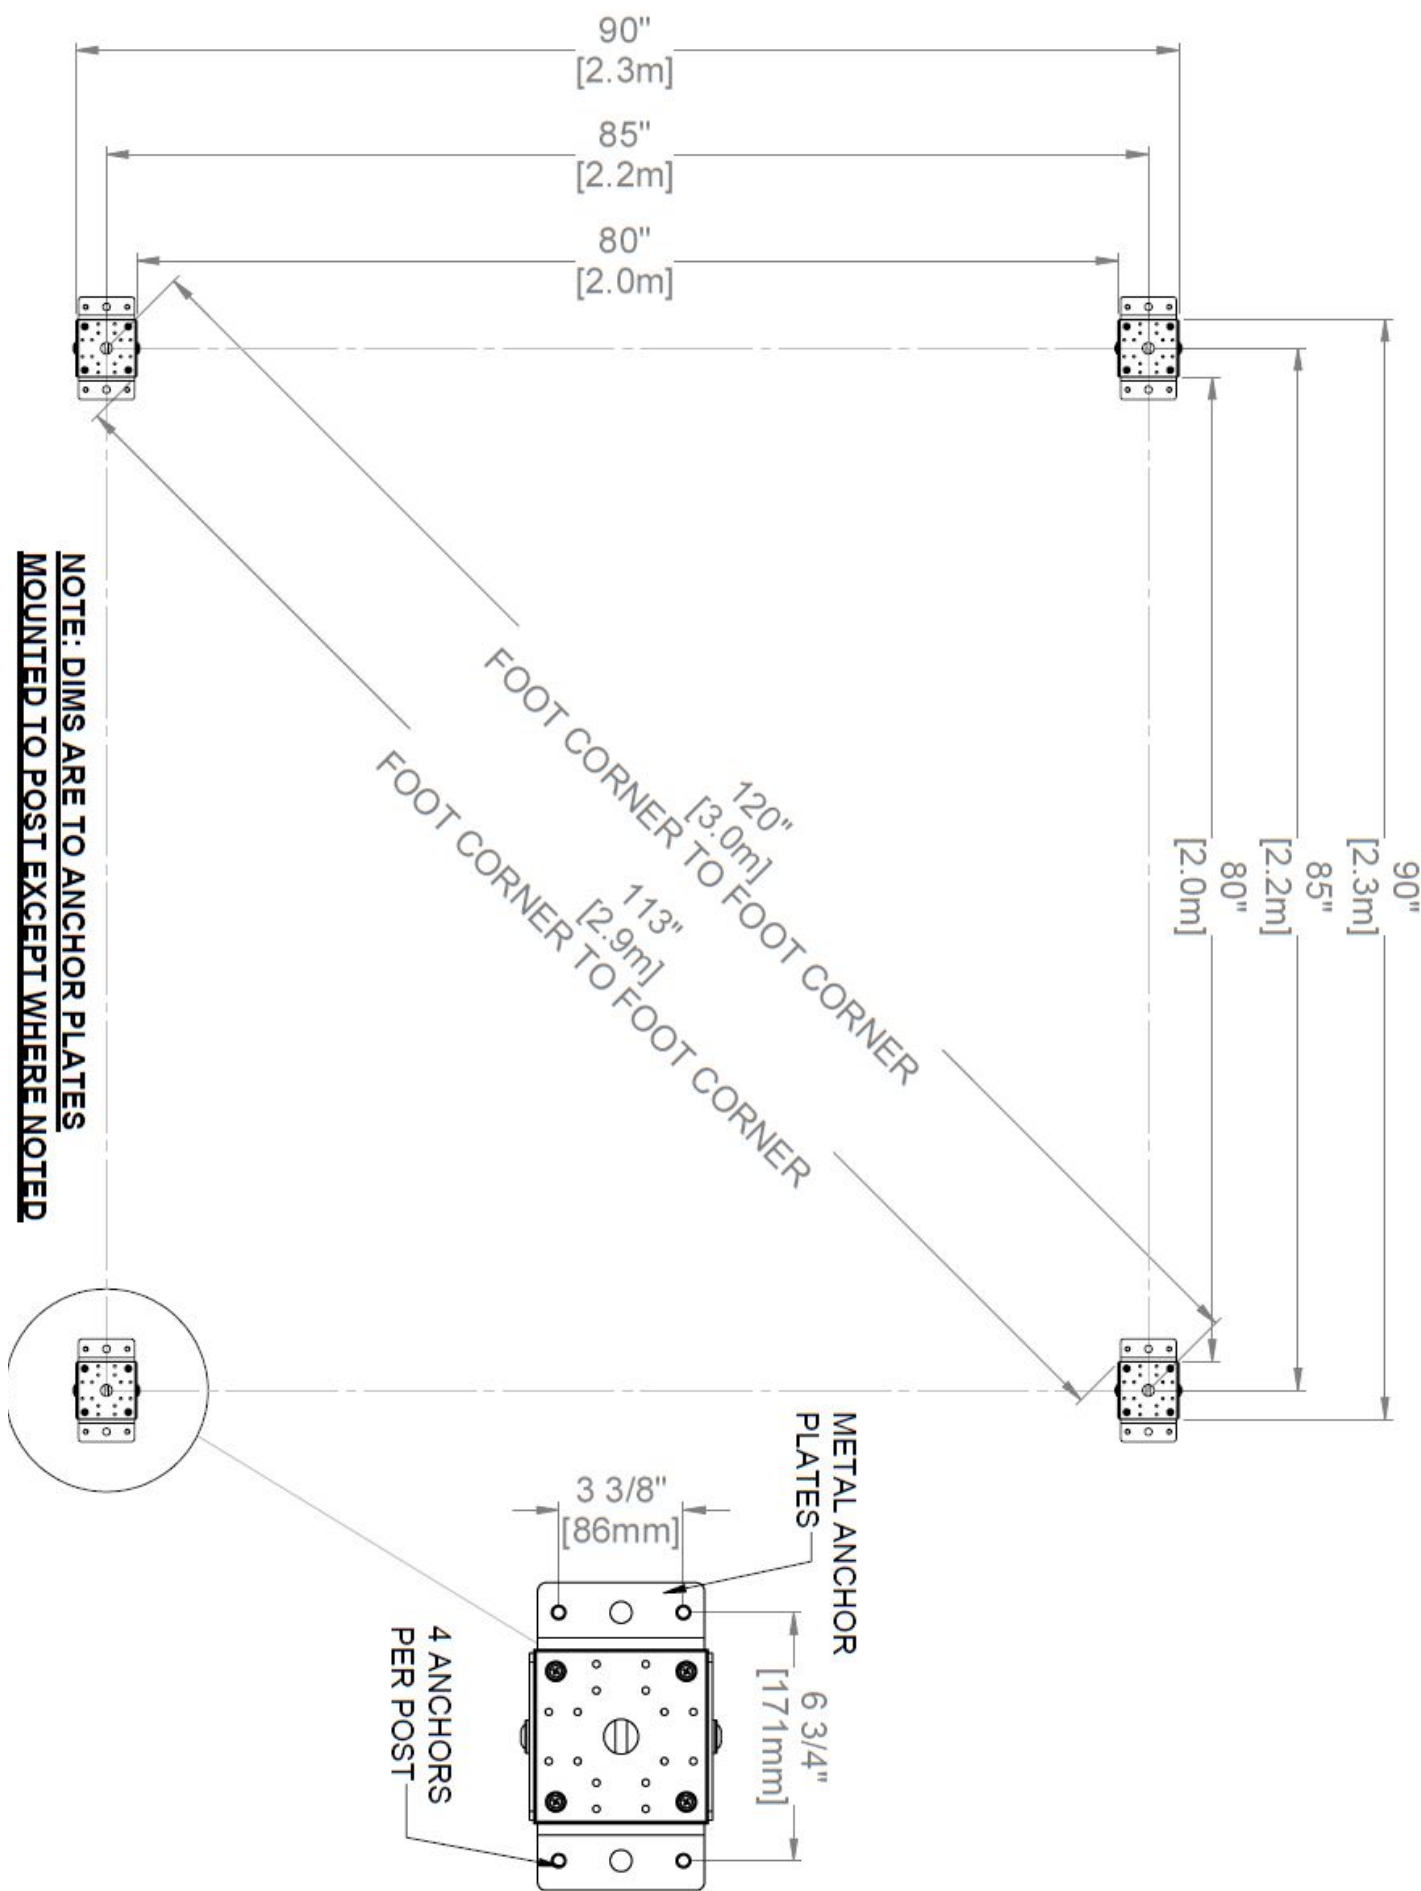

# OWNER'S MANUAL - PARTS IDENTIFICATION


## Wood Components (Not to Scale)



**D1 | BEAM-W4L16358**  
(x2) | 1 7/16"x5 1/4"x89 1/2" (36x134x2274)




**D2 | BEAM-W4L16359**  
(x2) | 1 7/16"x5 1/4"x89 1/2" (36x134x2274)




**D3 | CORBEL-W4L16360**  
(x7) | 1 7/16"x5 1/4"x27 1/2" (36x134x699)




**D4 | RAFTER-W4L16361**  
(x4) | 1 7/16"x5 1/4"x63 9/16" (36x134x1615)



**E1 | RAIL-W4L16362**  
(x2) | 1 7/16"x3 3/8"x80" (36x86x2032)



**E2 | RAIL-W4L16363**  
(x2) | 1 7/16"x3 3/8"x42 7/16" (36x86x1078)



**E3 | RAIL-W4L16364**  
(x2) | 1 7/16"x3 3/8"x39 1/8" (36x86x993)




**G1 | RIDGE BEAM-W4L16365**  
(x1) | 15/16"x5 1/4"x29 1/8" (24x134x740)



**G2 | RIDGE BEAM-W4L16366**  
(x1) | 15/16"x5 1/4"x66 3/8" (24x134x1686)



**D5 | RAFTER-W4L16367**  
(x4) | 1 7/16"x5 1/4"x63 13/16" (36x134x1621)



**E4 | RAFTER-W4L16368**  
(x6) | 1 7/16"x3 3/8"x62 5/16" (36x86x1583)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## Wood Components (Not to Scale)



**H1 | PURLIN-W4L16369**  
(x6) | 15/16"x3 3/8"x32 9/16" (24x86x827)



**H2 | PURLIN-W4L16370**  
(x6) | 15/16"x3 3/8"x77 15/16" (24x86x1979)



**H3 | RIDGE SUPPORT-W4L16371**  
(x4) | 15/16"x3 3/8"x47 9/16" (24x86x1208)




**E5 | RAFTER-W4L16372**  
(x4) | 1 7/16"x3 3/8"x62 5/16" (36x86x1583)




**J1 | RIDGE CAP STIFFENER-W4L16373**  
(x2) | 15/16"x2 3/8"x31 7/8" (24x60x810)



**J2 | RIDGE CAP STIFFENER-W4L16374**  
(x2) | 15/16"x2 3/8"x75 3/8" (24x60x1914)



**P1 | POST-W2A03453**  
(x2) | 4 3/4"x4 3/4"x89 1/2" (120x120x2274)































**P2 | POST-W2A03454**  
(x2) | 4 3/4"x4 3/4"x89 1/2" (120x120x2274)



**D6 | CORBEL W/TAG-W2A03459**  
(x1) | 1 7/16"x5 1/4"x27 1/2" (36x134x699)


# OWNER'S MANUAL - PARTS IDENTIFICATION

## Hardware Components (Not to Scale)

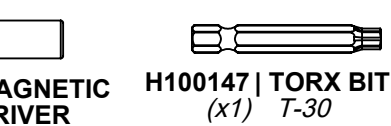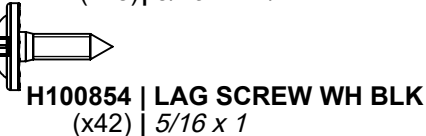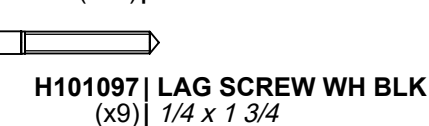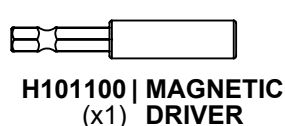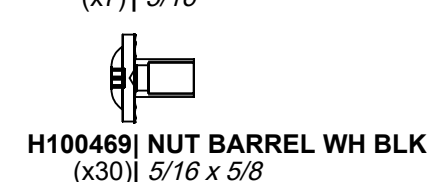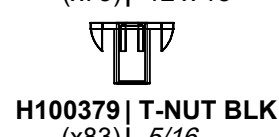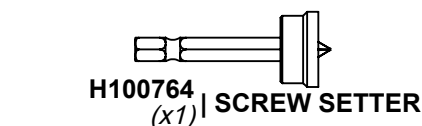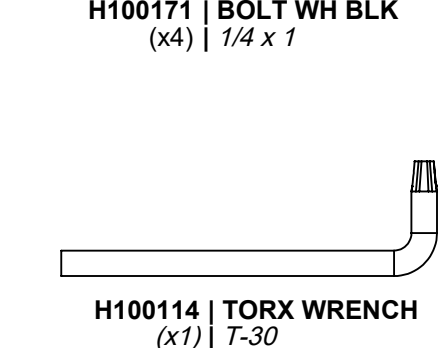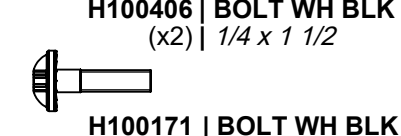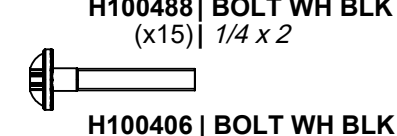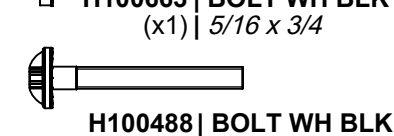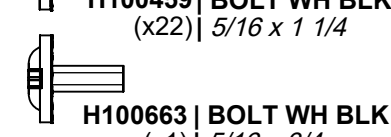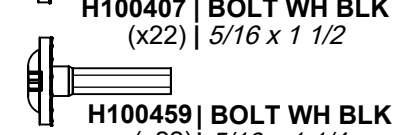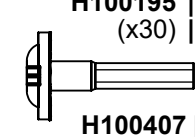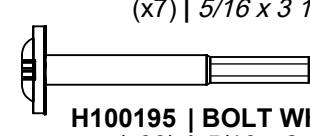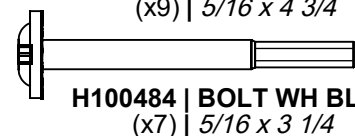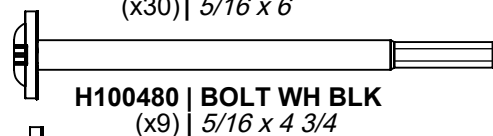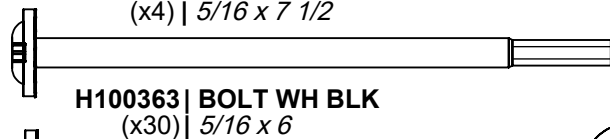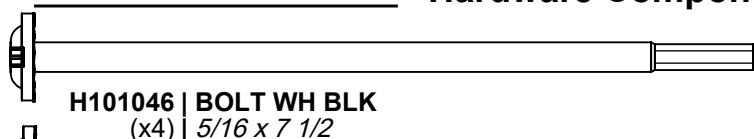


# OWNER'S MANUAL - PARTS IDENTIFICATION

## Accessory Components (Not to Scale)

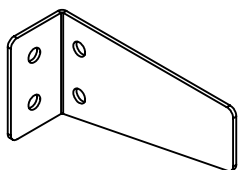

**A4M01223**  
(x4) | L BRACKET

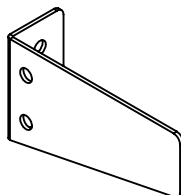


**A4M01224**  
(x2) | L BRACKET



**A4M00855** | L BRACKET  
(x12) | 55x32x82x3.175




**A4M01478**  
(x8) | POST ANCHORING PLATE




**A4M01228**  
(x6) | RAFTER BRACKET




**A4M01477** | POST PLATE  
(x8)




**A6P00500**  
(x4) | PLASTIC POST FOOT

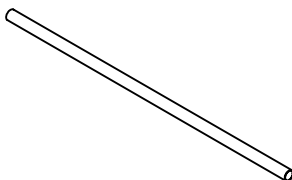


**A4M01225**  
(x46) | METAL TUBE

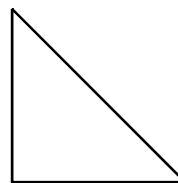


**A4M01475** | CORNER TABLE  
(x1) (ANGLE CONFIGURATION ONLY)

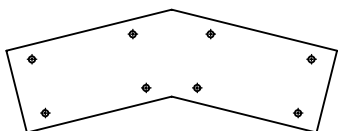

**A4M01508**  
(x2) | GABLE BRACKET

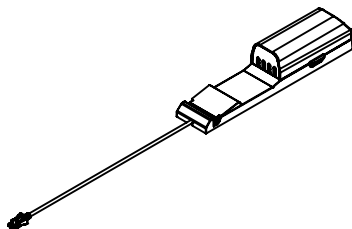


**9205413** | ELECTRICAL  
(x1) ENCLOSURE

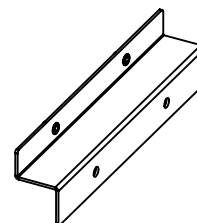


**A4M01662** | TABLE BRACKET W/ INSERTS  
(x2) | (ANGLE CONFIGURATION ONLY)



**A100241** | BYD ID TAG (SMALL) WITHOUT AGES  
(x1)

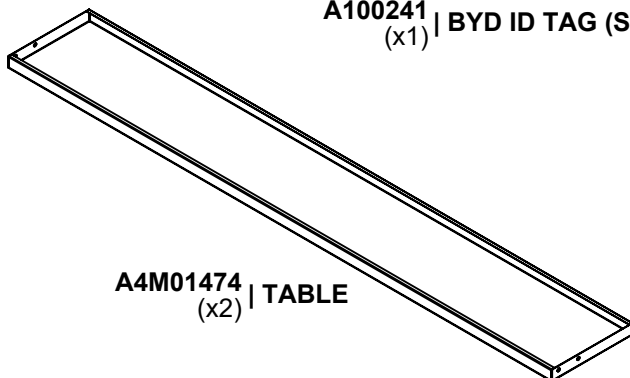


**A4M01474**  
(x2) | TABLE

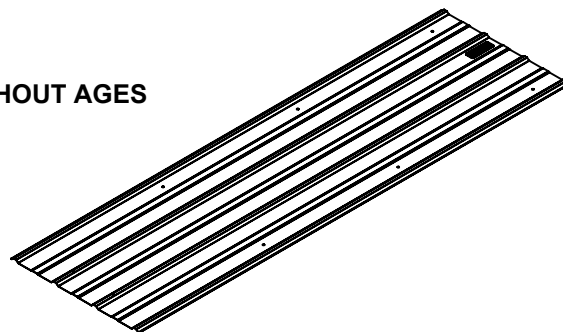


**A4M01547**  
(x12) | 29 GA STEEL SHEETING

# OWNER'S MANUAL - PARTS IDENTIFICATION


## Accessory Components (Not to Scale)




**A4M01550**  
(x4) | CORNER SPLICE TRIM




**A4M01551**  
(x2) | ROOF EDGE TRIM SPLICE




**A4M01553**  
(x2) | RIDGE BRACKET

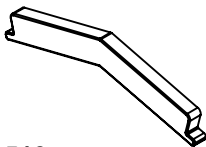


**A6P00513**  
(x2) | RIDGE CAP PROTECTOR

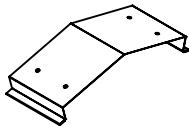


**A4M01556**  
(x1) | RIDGE CAP SPLICE

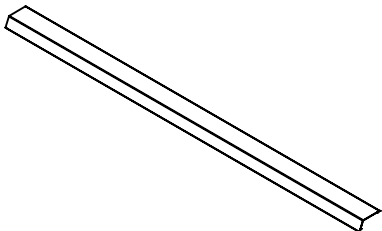


**A4M01548**  
(x4) | ROOF EDGE TRIM

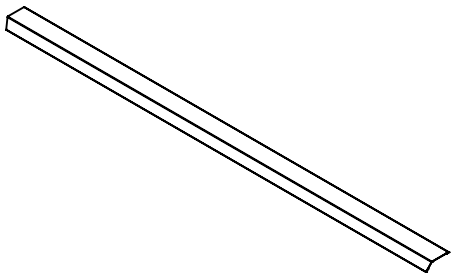

**A4M01549**  
(x4) | ROOF EDGE TRIM

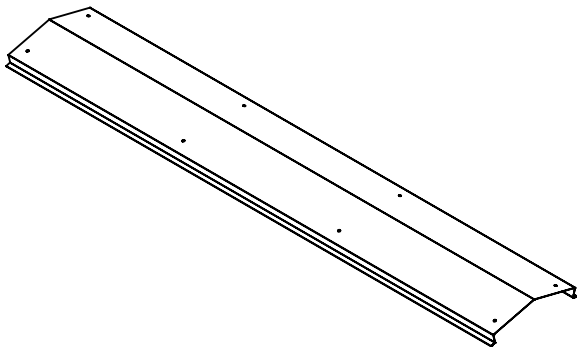

**A4M01557**  
(x2) | RIDGE CAP 29 GA

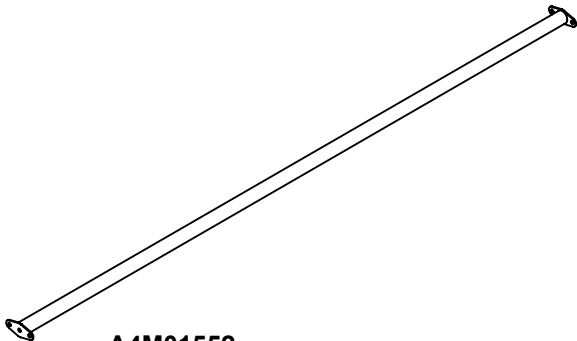

**A4M01552**  
(x2) | FOOT REST RAIL ASSEMBLY



**PRE-ASSEMBLY STEP 1 - TOOLS REQUIRED**



Cordless Drill  
or Electric Drill



Drill  
Attachments:  
Phillips Head




1/8", 3/16", 3/8" &  
7/16" Drill Bits



Open End  
Wrenches  
1/2" & 7/16"



3/8" Drive Ratchet, 1/2" &  
7/16" STD Sockets, 1/2" &  
7/16" Deep Sockets

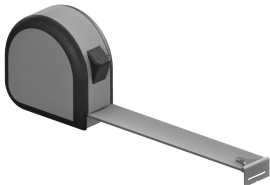


Tape Measure



Claw Hammer




Phillips Screw Driver

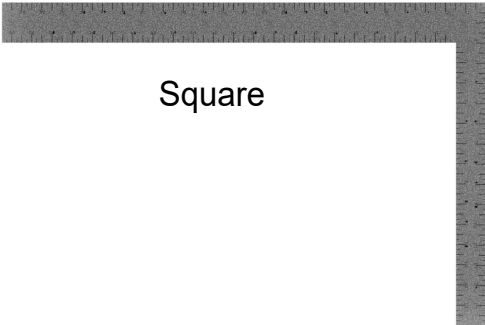


Square



Level 24"

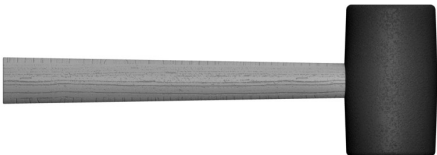

Rubber Mallet  
- Optional

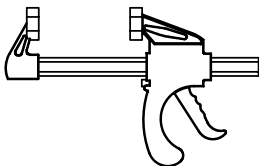

OPTIONAL - QUICK  
RELEASE CLAMP

## PRE-ASSEMBLY STEP 2 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

---

### WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

**NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.**



### HARDWARE PARTS:


- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

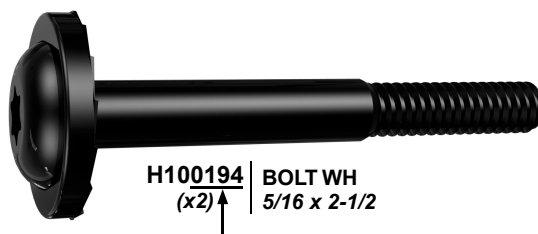

## PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

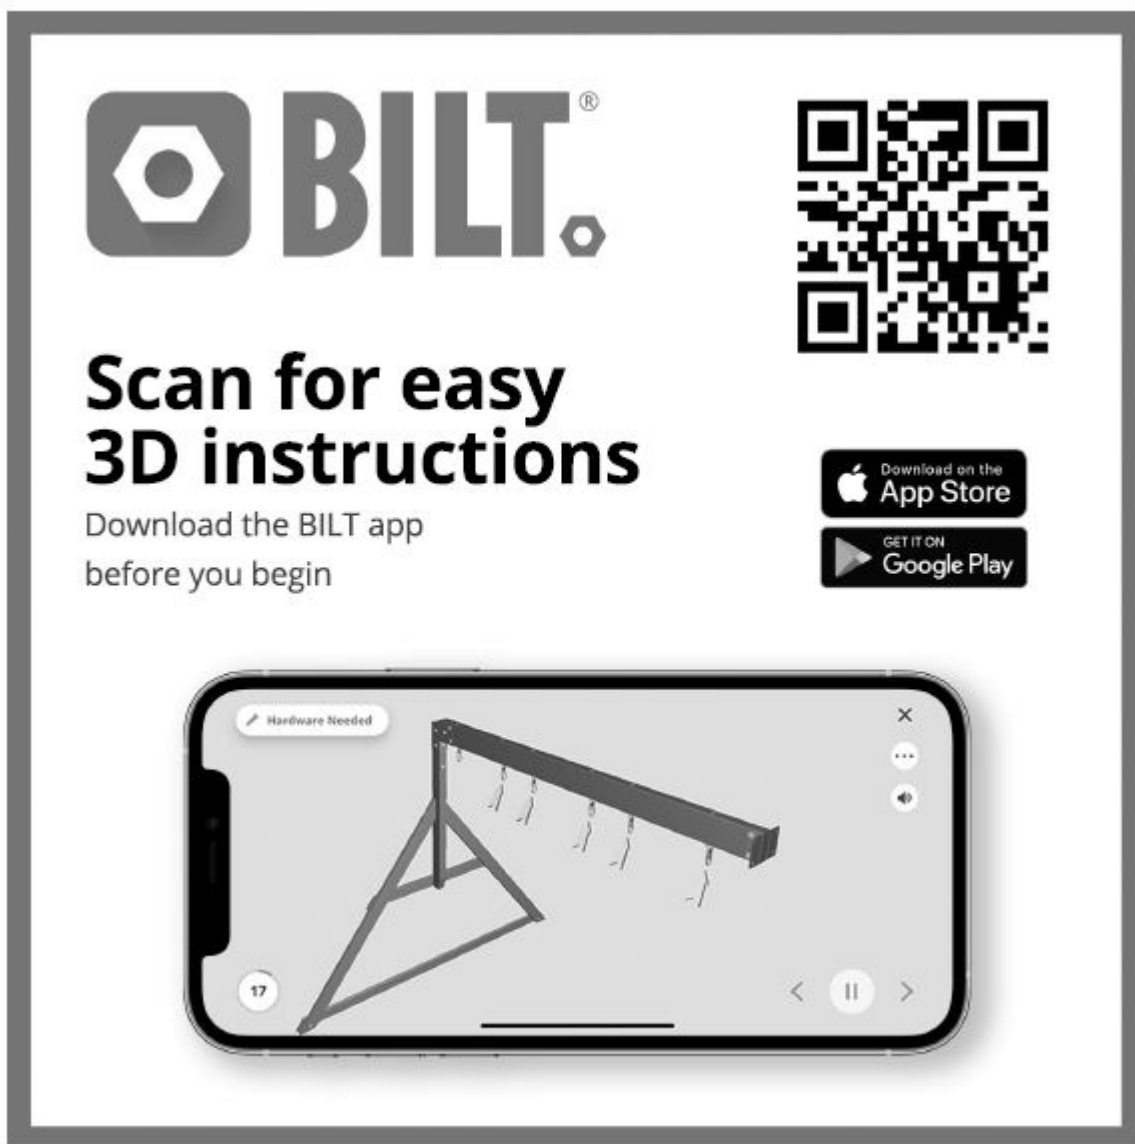


# STEP 1 - GAZEBO ASSEMBLY



**P1 | POST-W2A03453**  
(x2) | 4 3/4"x4 3/4"x89 1/2" (120x120x2274)




**P2 | POST-W2A03454**  
(x2) | 4 3/4"x4 3/4"x89 1/2" (120x120x2274)



**A6P00500**  
(x4) | **PLASTIC POST FOOT**

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 16  | H100200     | SCREW PFH 8x1 1/2 BLK |

COMPLETE THIS STEP TWICE

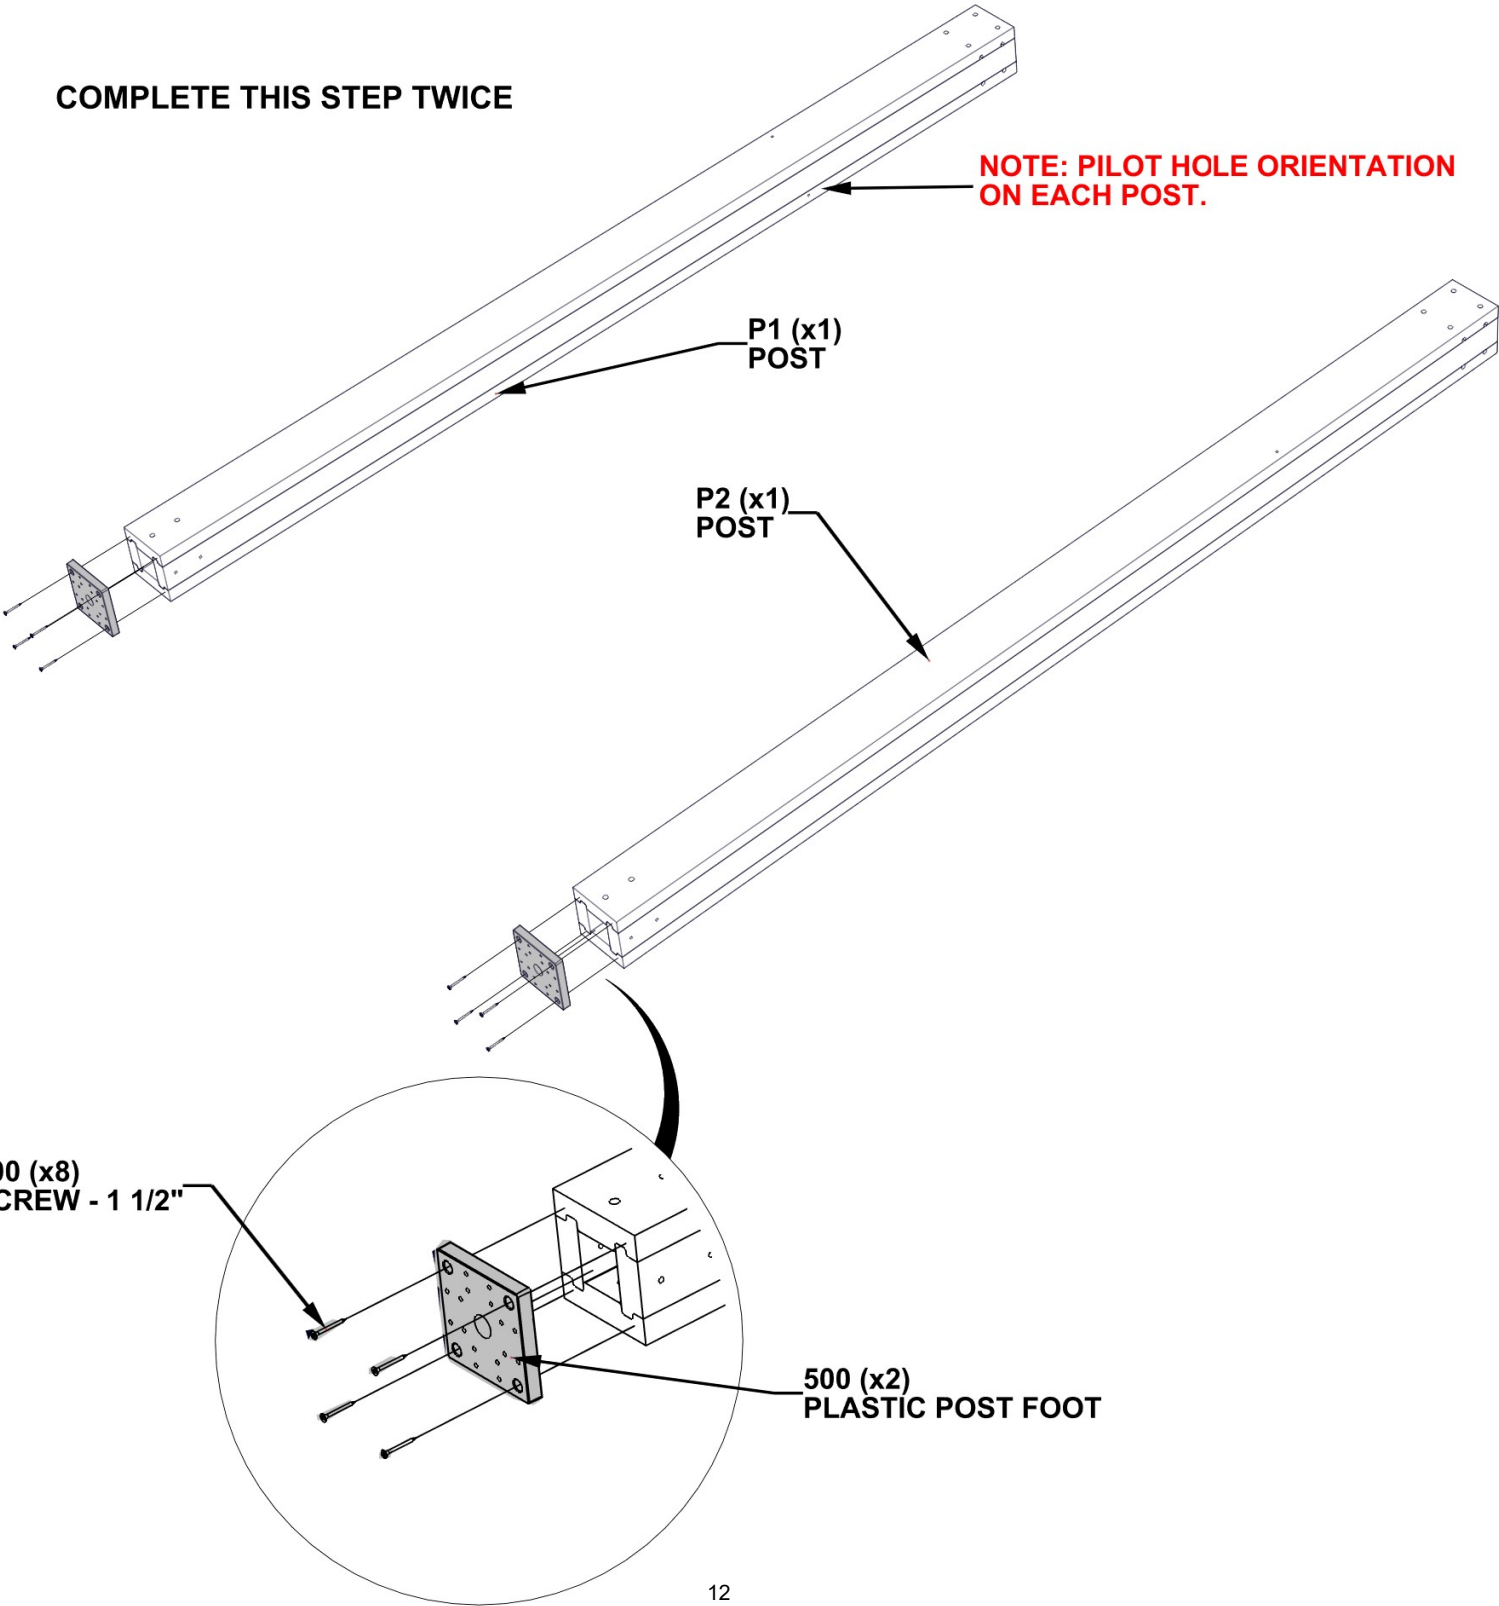


# STEP 2 - GAZEBO ASSEMBLY



D2 | BEAM-W4L16359  
(x2) | 1 7/16"x5 1/4"x89 1/2" (36x134x2274)

| QTY | PART NUMBER | DESCRIPTION          |
|-----|-------------|----------------------|
| 12  | H100363     | BOLT WH 5/16x6 BLK   |
| 12  | H100198     | WASHER LOCK EXT 8x19 |
| 28  | H100379     | T-NUT 5/16 BLK       |

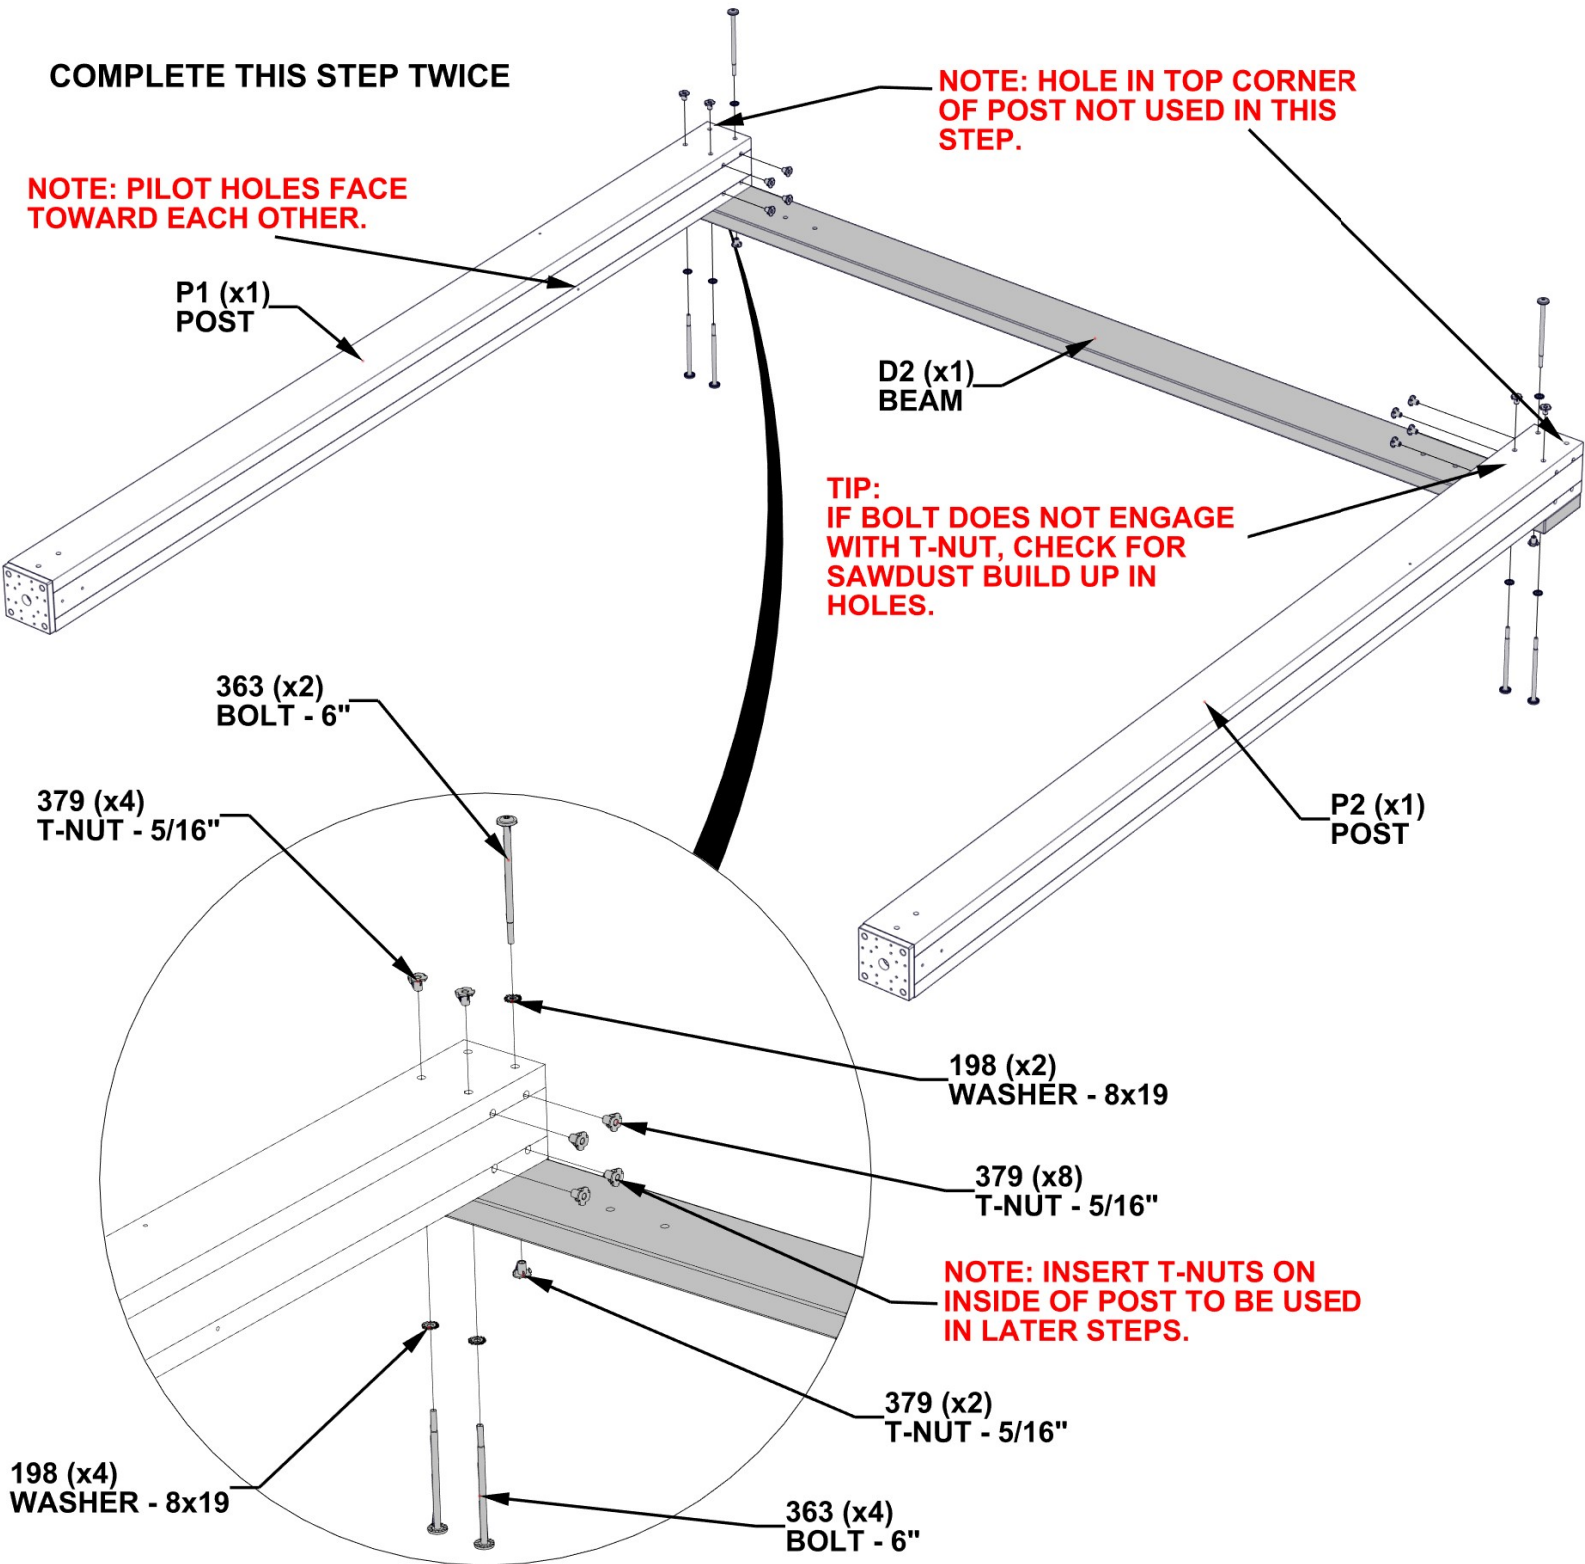


# STEP 3 - GAZEBO ASSEMBLY



**D3 | CORBEL-W4L16360**  
(x4) | 1 7/16"x5 1/4"x27 1/2" (36x134x699)

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 4   | H101097     | LAG SCREW WH 1/4x1 3/4 BLK |
| 4   | H100405     | WASHER LOCK EXT 6x15       |
| 8   | H100379     | T-NUT 5/16 BLK             |
| 8   | H100195     | BOLT WH 5/16x2 3/4 BLK     |
| 8   | H100198     | WASHER LOCK EXT 8x19       |

COMPLETE THIS STEP TWICE.

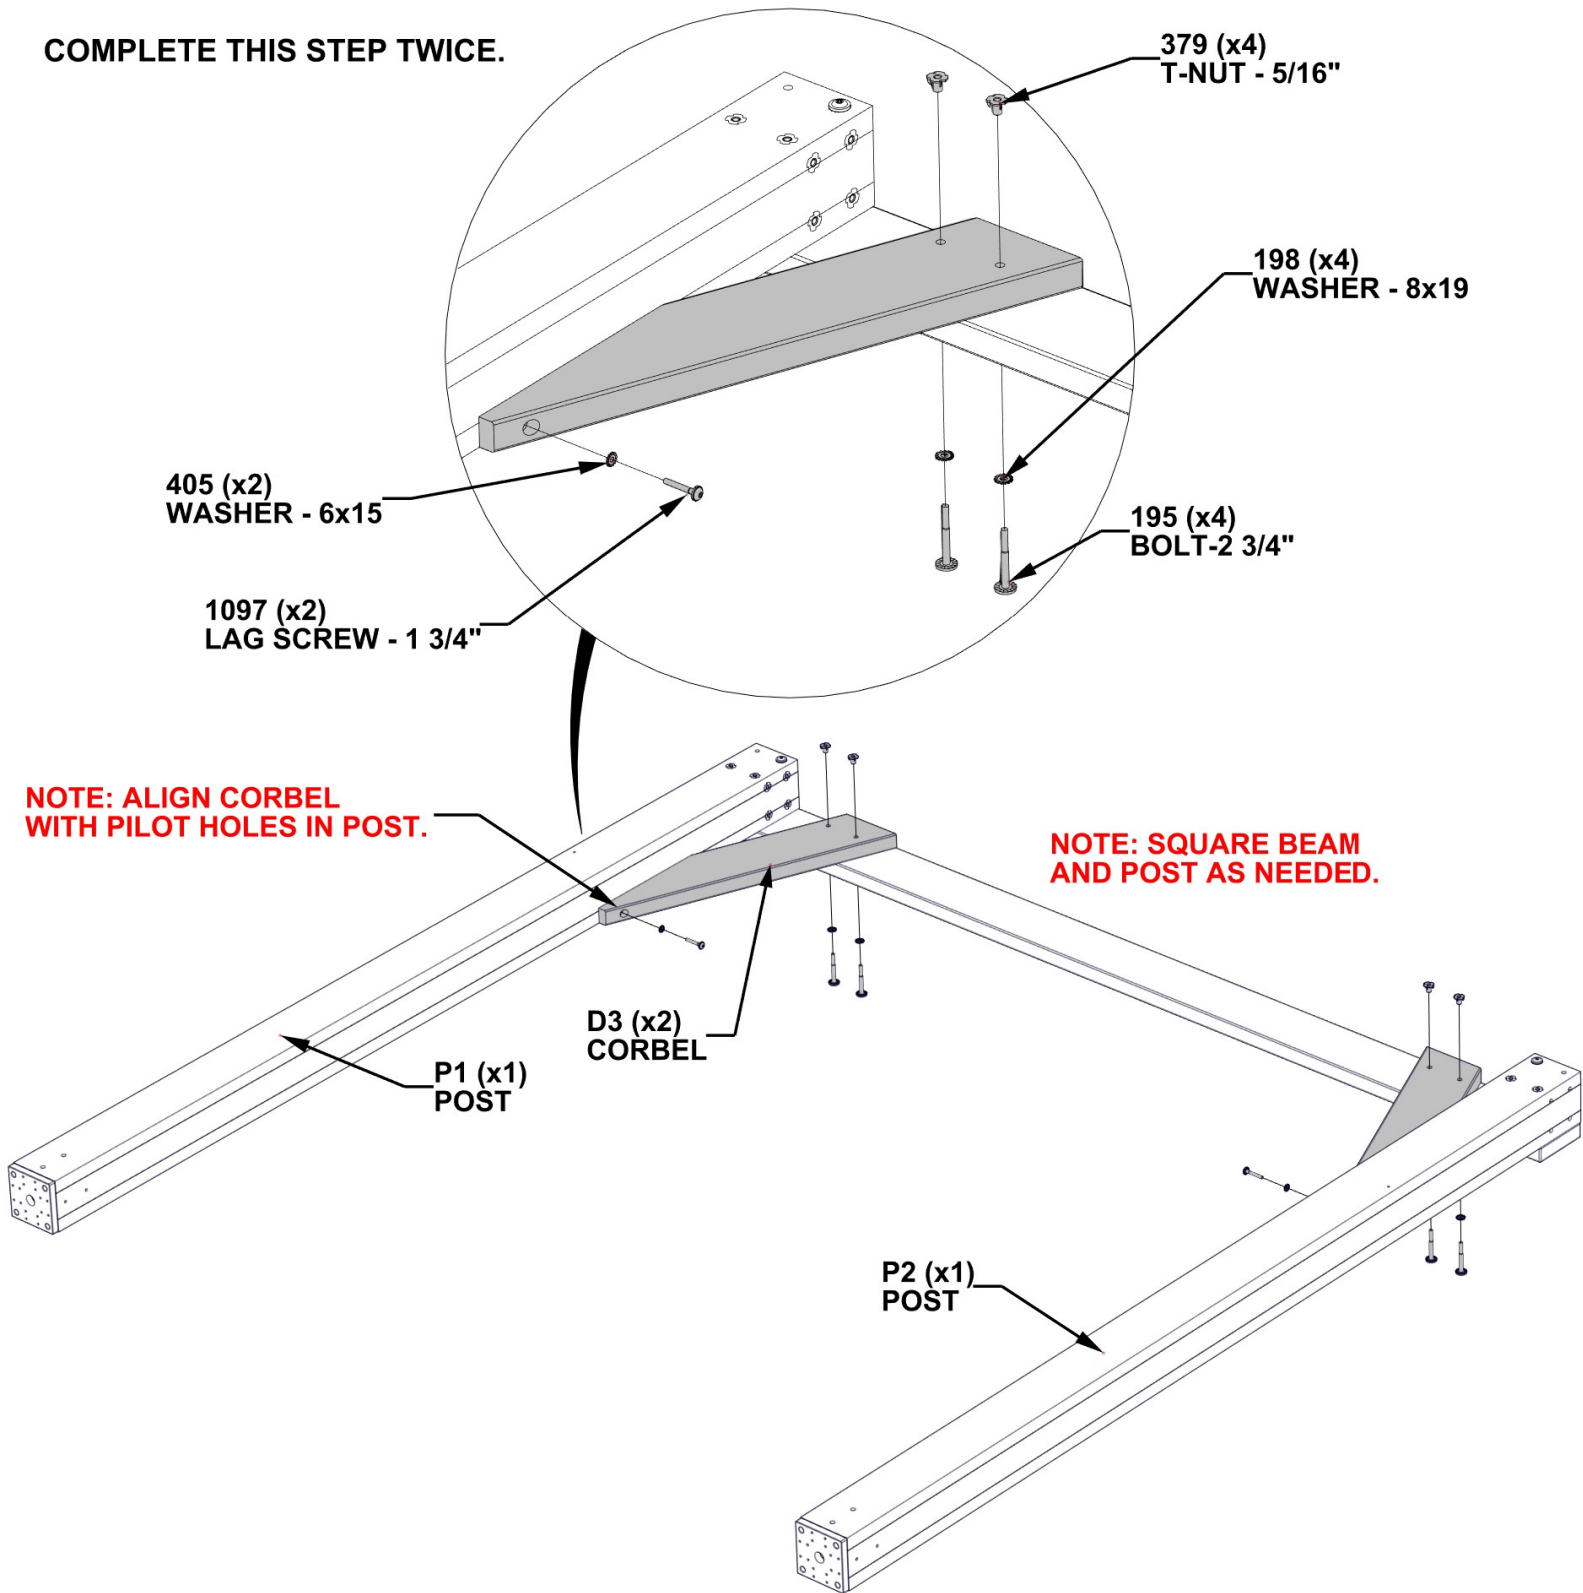




STEP 4 - GAZEBO ASSEMBLY



D3 | CORBEL-W4L16360  
(x1) | 1 7/16"x5 1/4"x27 1/2" (36x134x699)




D6 | CORBEL W/TAG-W2A03459  
(x1) | 1 7/16"x5 1/4"x27 1/2" (36x134x699)




D1 | BEAM-W4L16358  
(x1) | 1 7/16"x5 1/4"x89 1/2" (36x134x2274)


| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 4   | H100379     | T-NUT 5/16 BLK         |
| 4   | H100195     | BOLT WH 5/16x2 3/4 BLK |
| 4   | H100198     | WASHER LOCK EXT 8x19   |

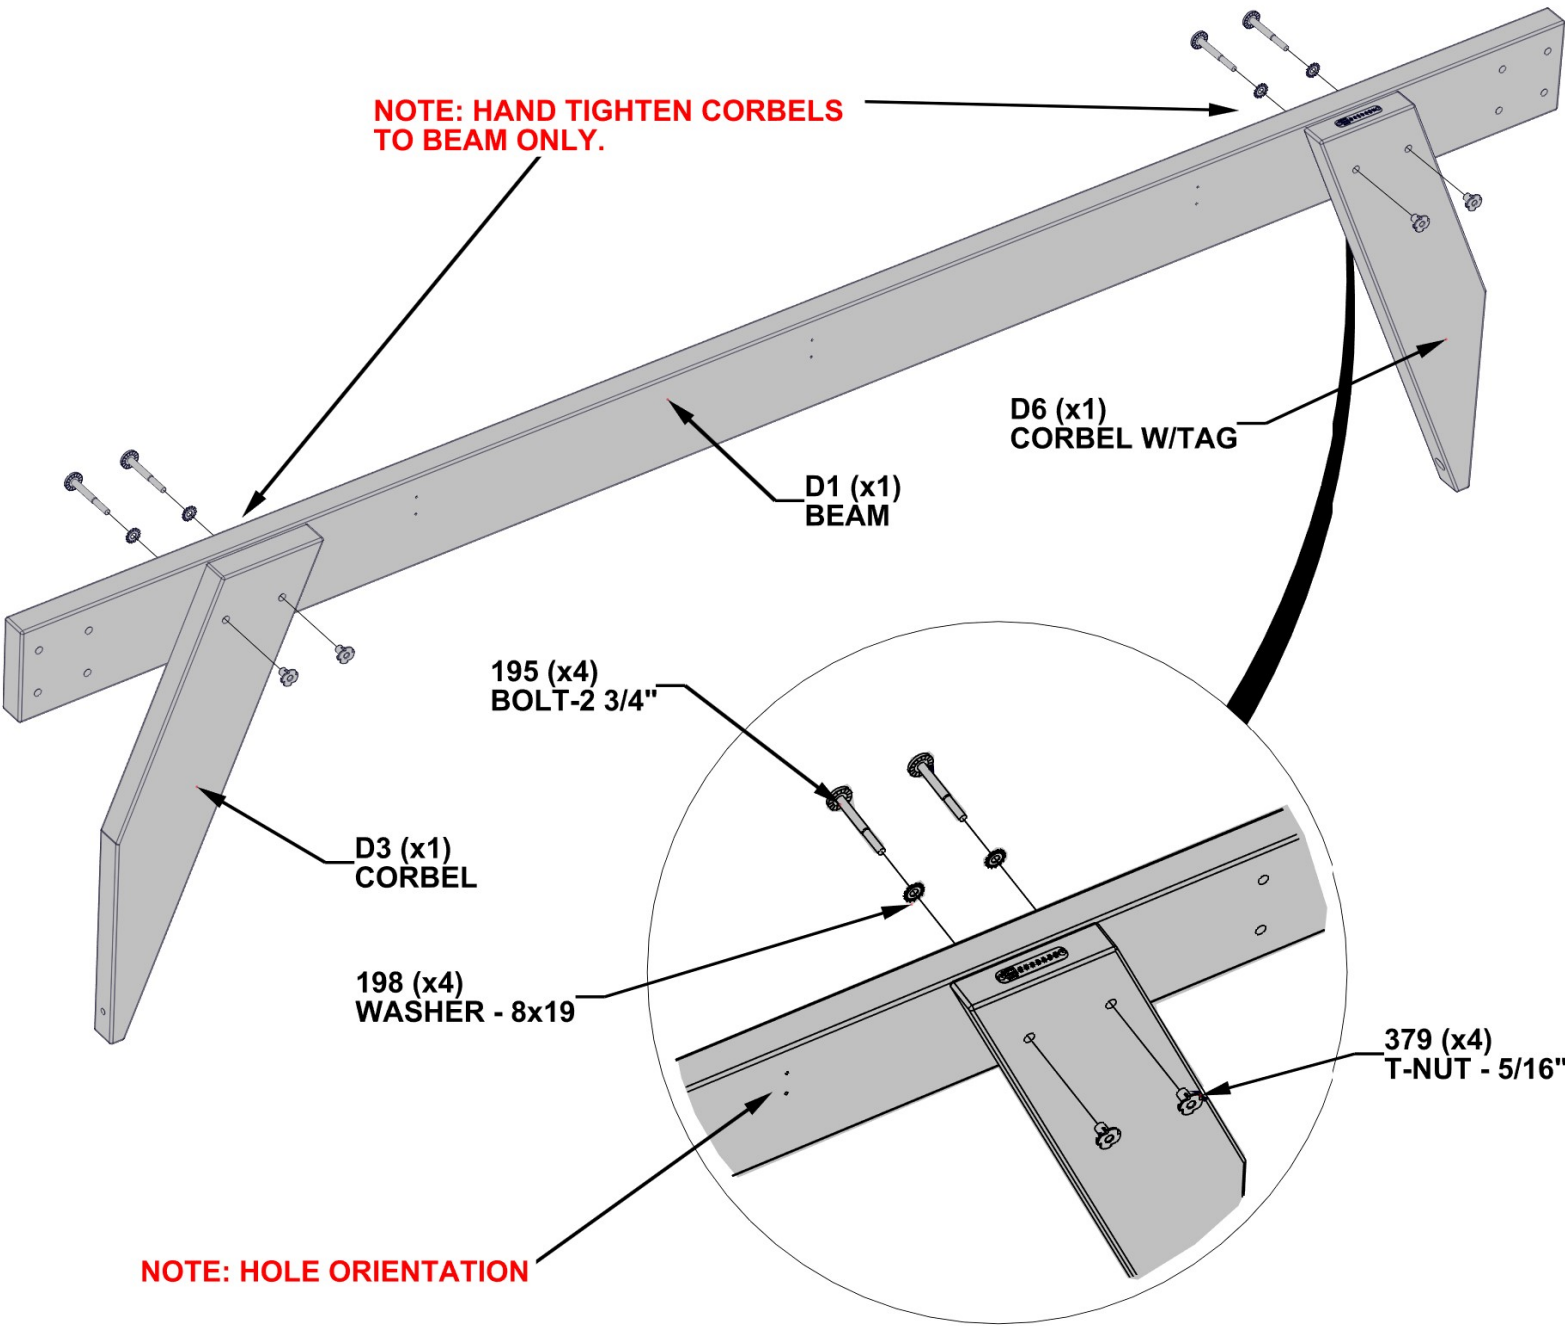

STEP 5 - GAZEBO ASSEMBLY




D1 | BEAM-W4L16358  
(x1) | 1 7/16"x5 1/4"x89 1/2" (36x134x2274)




D3 | CORBEL-W4L16360  
(x2) | 1 7/16"x5 1/4"x27 11/16" (36x134x699)

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 4   | H100379     | T-NUT 5/16 BLK         |
| 4   | H100195     | BOLT WH 5/16x2 3/4 BLK |
| 4   | H100198     | WASHER LOCK EXT 8x19   |

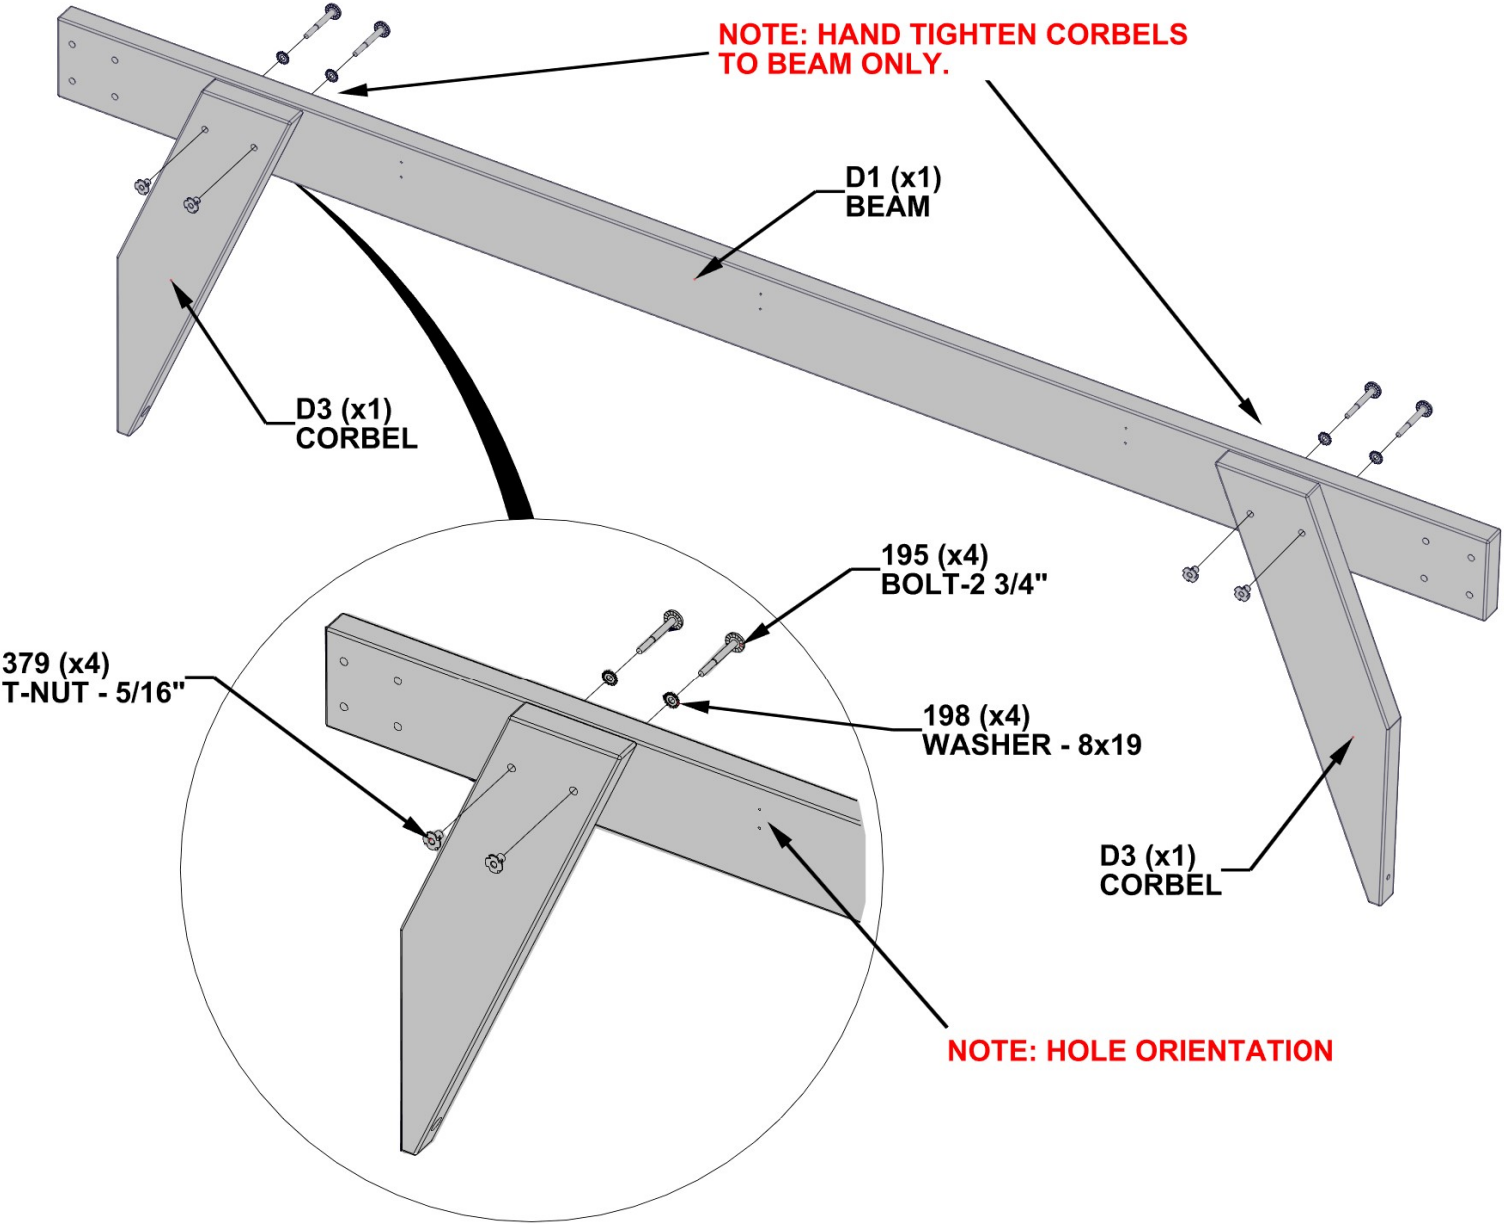



# STEP 6 - GAZEBO ASSEMBLY

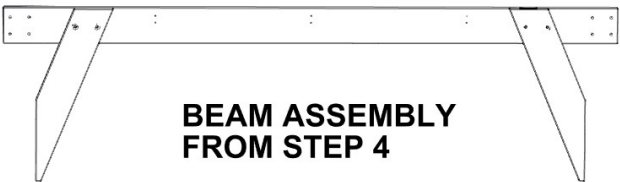

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H101097     | LAG SCREW WH 1/4x1 3/4 BLK |
| 2   | H100405     | WASHER LOCK EXT 6x15       |
| 8   | H100363     | BOLT WH 5/16x6 BLK         |
| 8   | H100198     | WASHER LOCK EXT 8x19       |

**TIP:**  
IF BOLT DOES NOT ENGAGE  
WITH T-NUT, CHECK FOR  
SAWDUST BUILD UP IN  
HOLES.

**NOTE: ALIGN BEAM ASSEMBLY  
FROM STEP 4, WITH HOLES IN POST.  
SQUARE AS NEEDED BEFORE  
TIGHTENING ALL FASTENERS FROM  
PREVIOUS STEP.**

BEAM ASSEMBLY  
FROM STEP 4

405 (x2)  
WASHER - 6x15


1097 (x2)  
LAG SCREW - 1 3/4"

363 (x8)  
BOLT - 6"


198 (x8)  
WASHER - 8x19

**NOTE: T-NUTS  
FROM STEP 2.**


# STEP 7 - GAZEBO ASSEMBLY

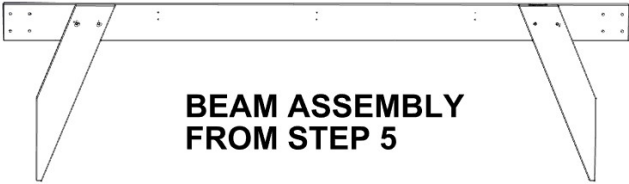


| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H101097     | LAG SCREW WH 1/4x1 3/4 BLK |
| 2   | H100405     | WASHER LOCK EXT 6x15       |
| 8   | H100363     | BOLT WH 5/16x6 BLK         |
| 8   | H100198     | WASHER LOCK EXT 8x19       |

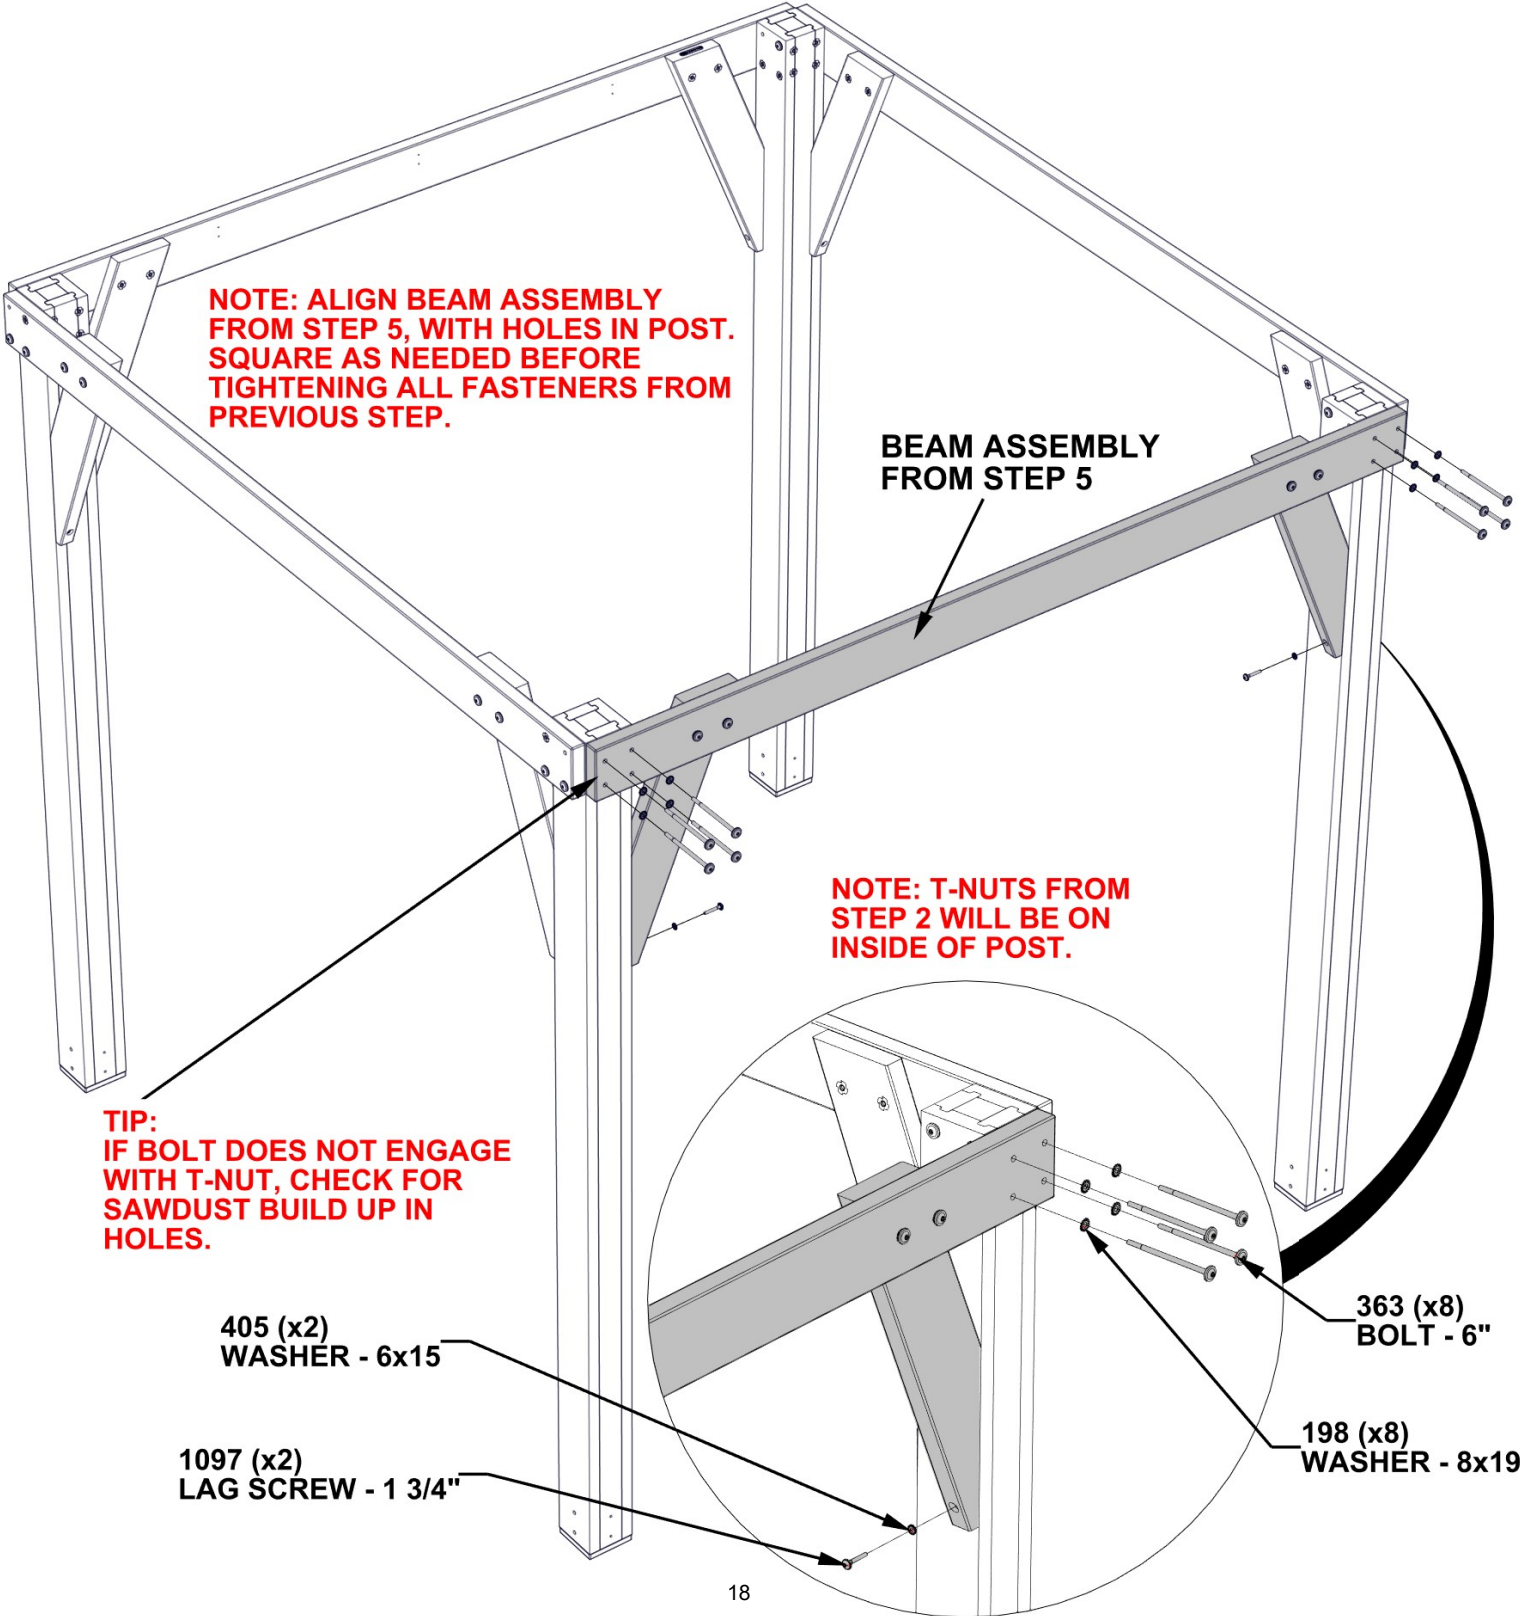

# STEP 8 - GAZEBO ASSEMBLY



A4M01553  
(x2) | RIDGE BRACKET




D4 | RAFTER-W4L16361  
(x4) | 1 7/16"x5 1/4"x63 9/16" (36x134x1615)

| QTY | PART NUMBER | DESCRIPTION          |
|-----|-------------|----------------------|
| 8   | H100653     | NUT LOCK 1/4 BLK     |
| 8   | H100405     | WASHER LOCK EXT 6x15 |
| 8   | H100630     | WASHER FLAT 8x19 BLK |
| 8   | H100488     | BOLT WH 1/4x2 BLK    |
| 12  | H100379     | T-NUT 5/16" BLK      |

COMPLETE THIS STEP TWICE.


INSERT T-NUT INTO RAFTERS.  
THESE CONNECTIONS WILL BE USED  
WHEN ATTACHING ROOF PANELS.

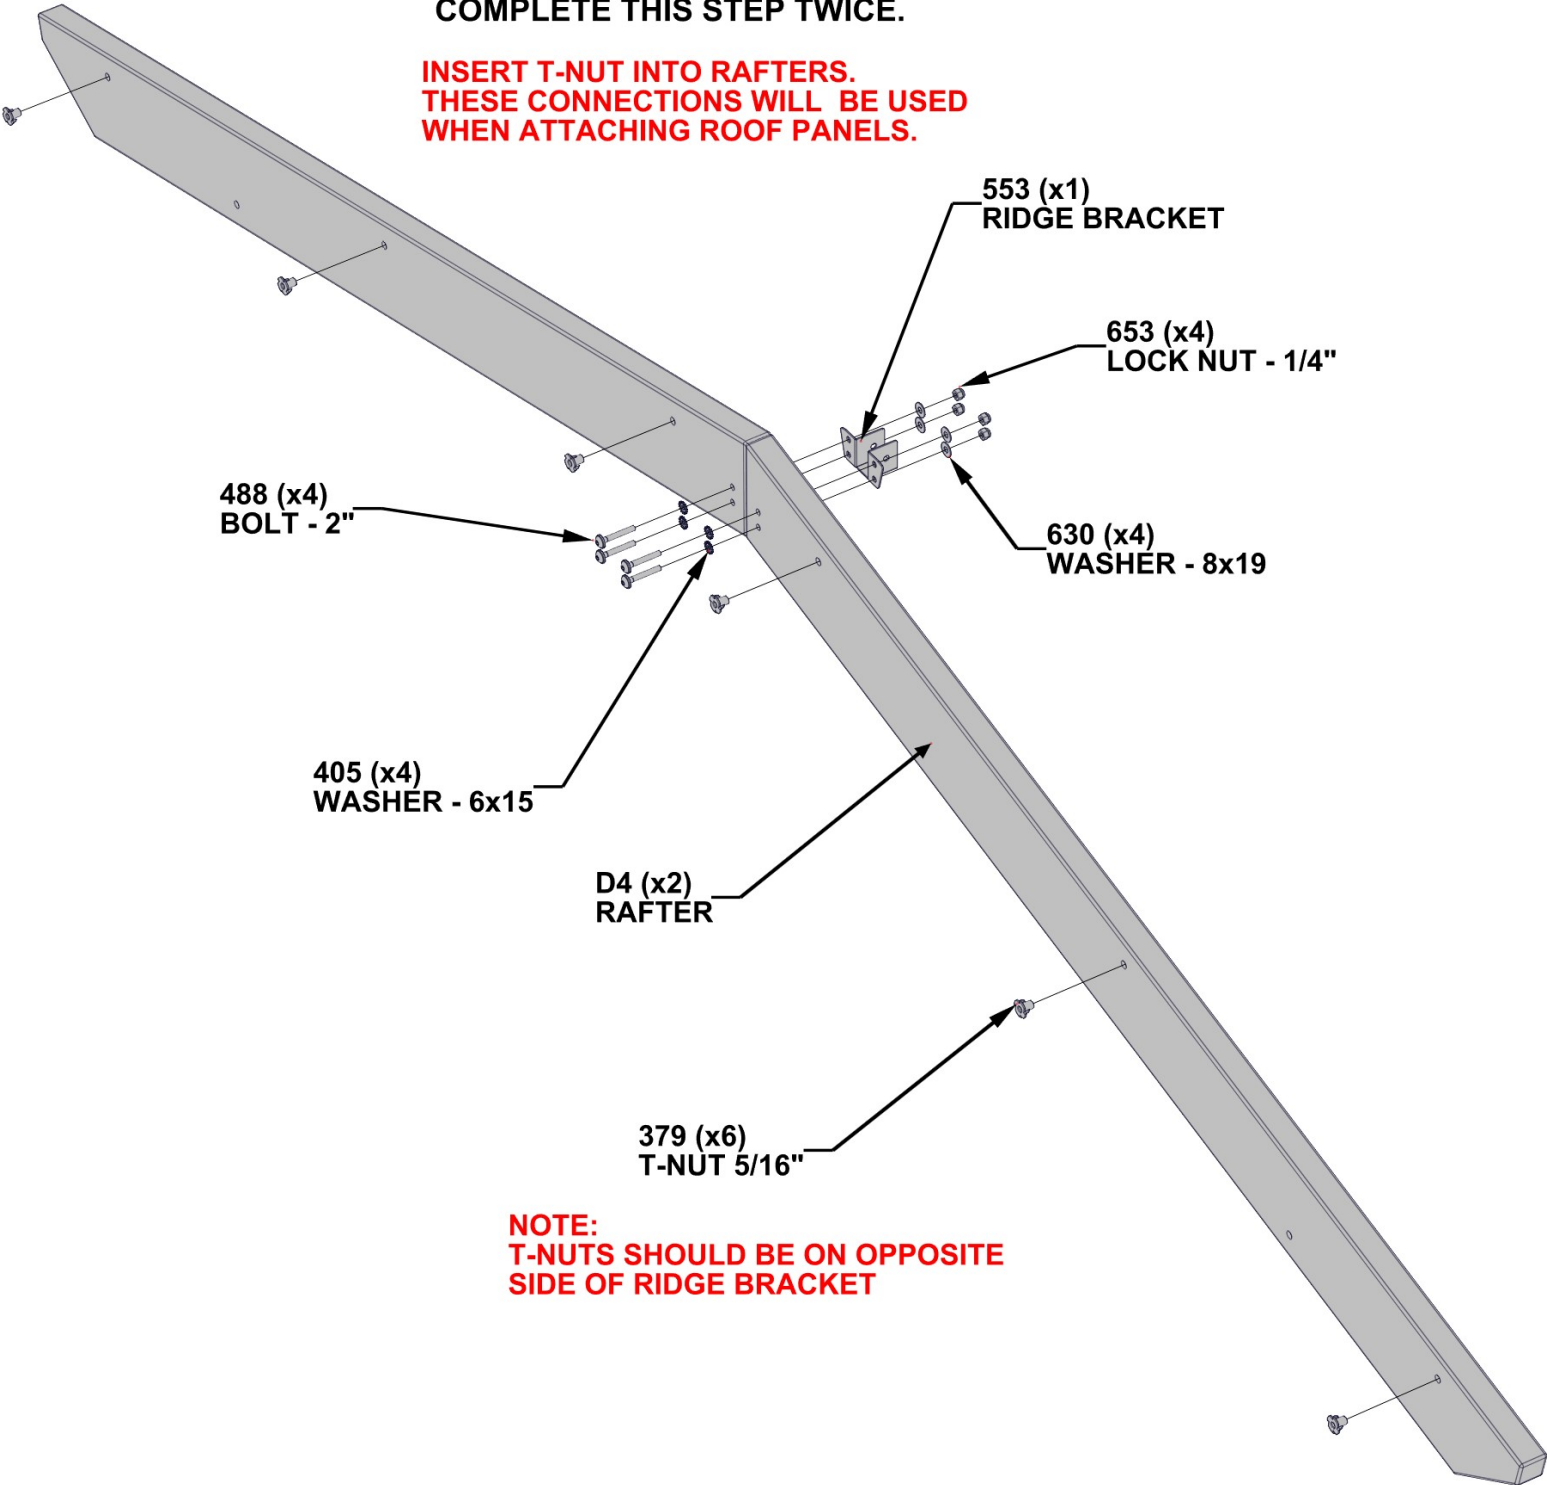

NOTE:  
T-NUTS SHOULD BE ON OPPOSITE  
SIDE OF RIDGE BRACKET



# STEP 9 - GAZEBO ASSEMBLY

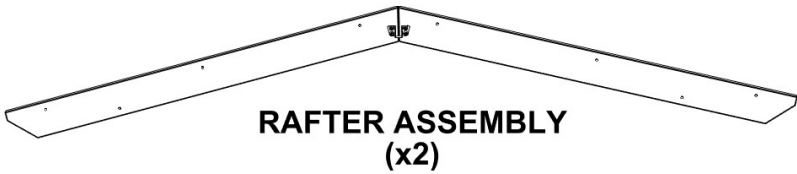

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 4   | H100379     | T-NUT 5/16 BLK         |
| 4   | H101046     | BOLT WH 5/16x7 1/2 BLK |
| 4   | H100198     | WASHER LOCK EXT 8x19   |

**NOTE: ALIGN RAFTER ASSEMBLY FROM PREVIOUS STEP, WITH HOLES IN POST. REPEAT FOR BOTH SIDES.**


**TIP: IF BOLT DOES NOT ENGAGE WITH T-NUT, CHECK FOR SAWDUST BUILD UP IN HOLES.**

1046 (x4)  
BOLT - 7 1/2"


379 (x4)  
T-NUT - 5/16"

198 (x4)  
WASHER - 8x19

**NOTE: ENSURE RIDGE BRACKETS FACE EACH OTHER**

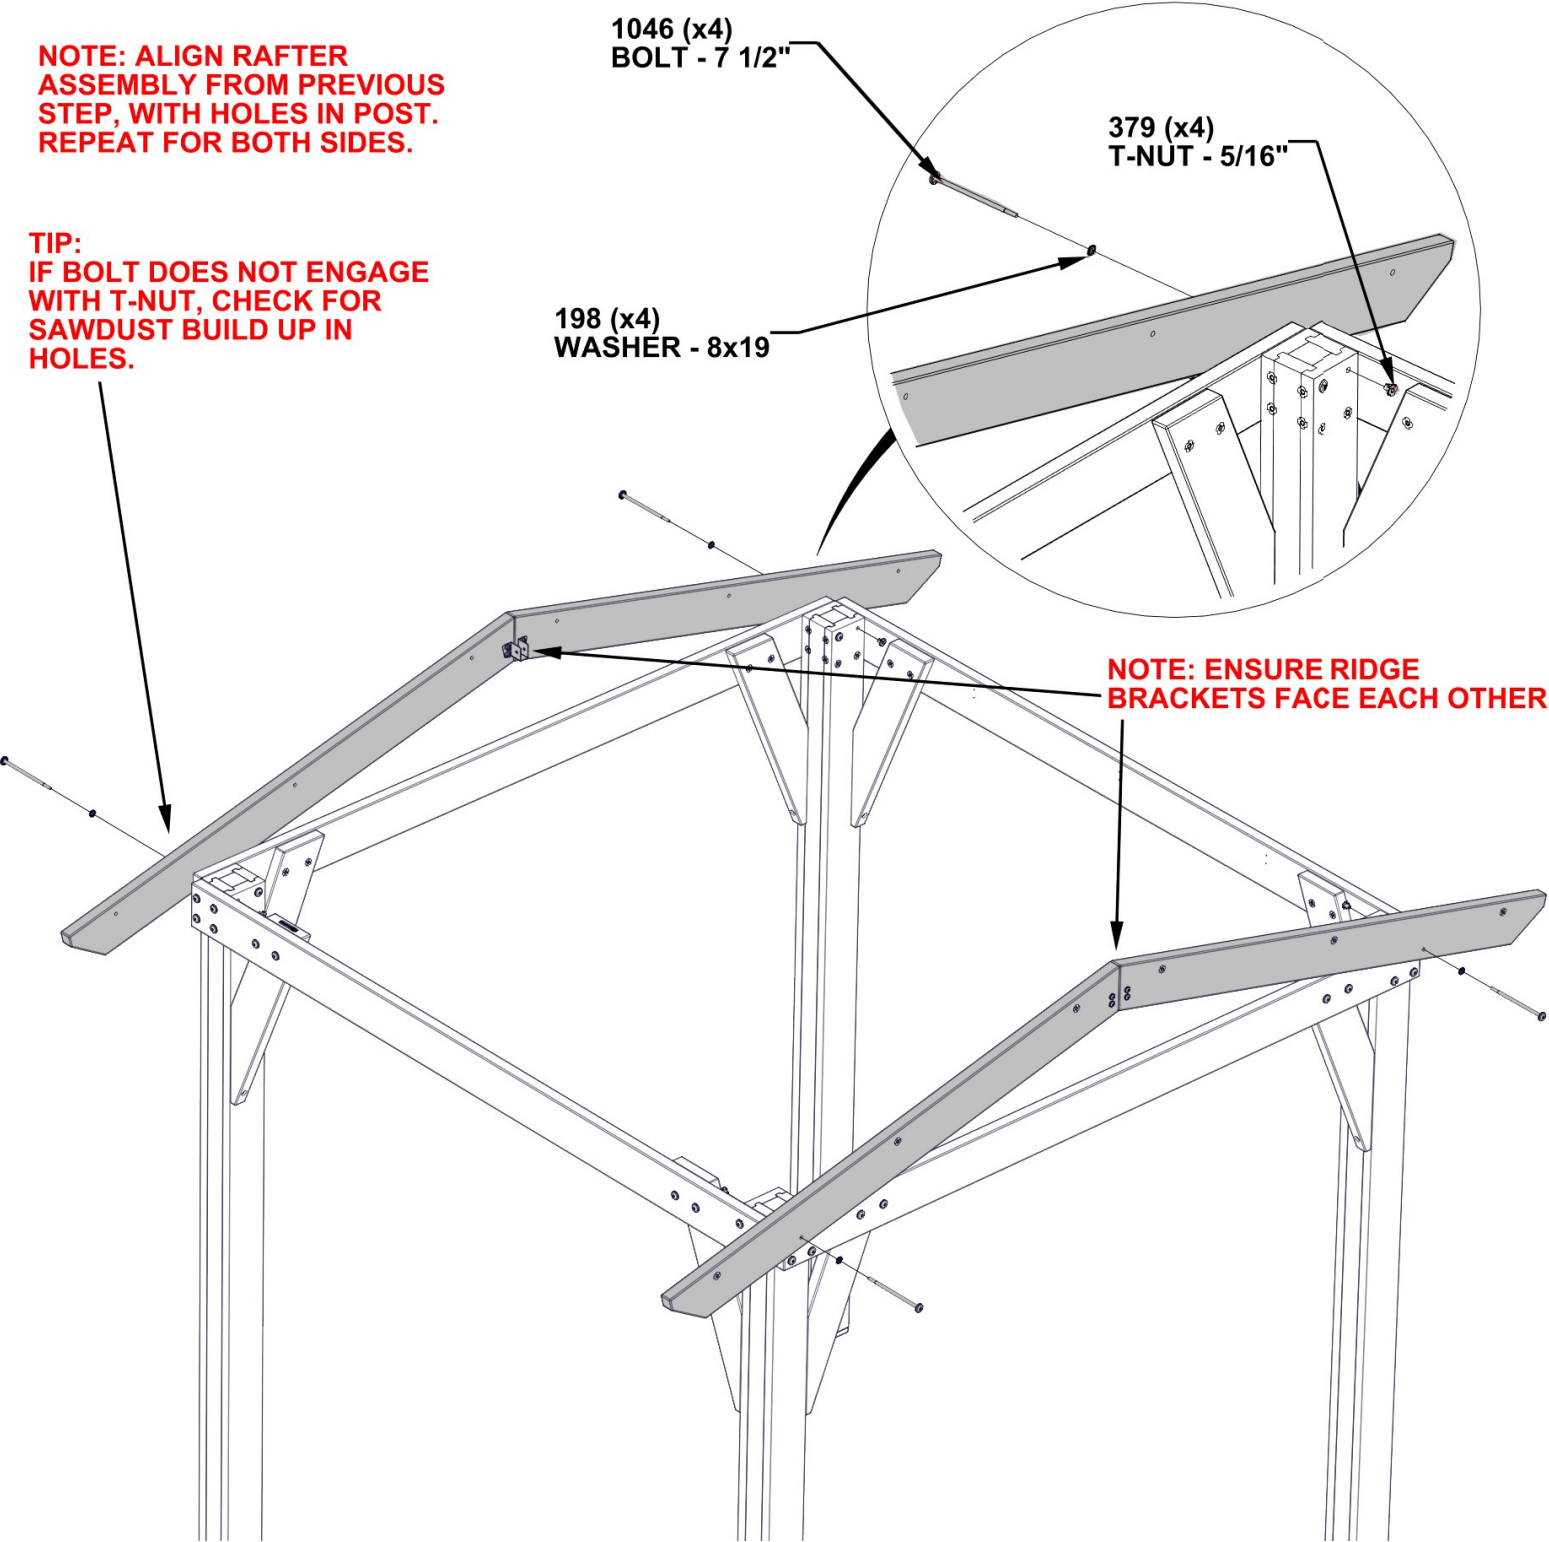

# STEP 10 - GAZEBO ASSEMBLY




**G1 | RIDGE BEAM-W4L16365**  
(x1) | 15/16"x5 1/4"x29 1/8" (24x134x740)



**G2 | RIDGE BEAM-W4L16366**  
(x1) | 15/16"x5 1/4"x66 3/8" (24x134x1686)

| QTY | PART NUMBER | DESCRIPTION          |
|-----|-------------|----------------------|
| 1   | H100379     | T-NUT 5/16 BLK       |
| 1   | H100663     | BOLT WH 5/16x3/4 BLK |
| 1   | H100198     | WASHER LOCK EXT 8x19 |

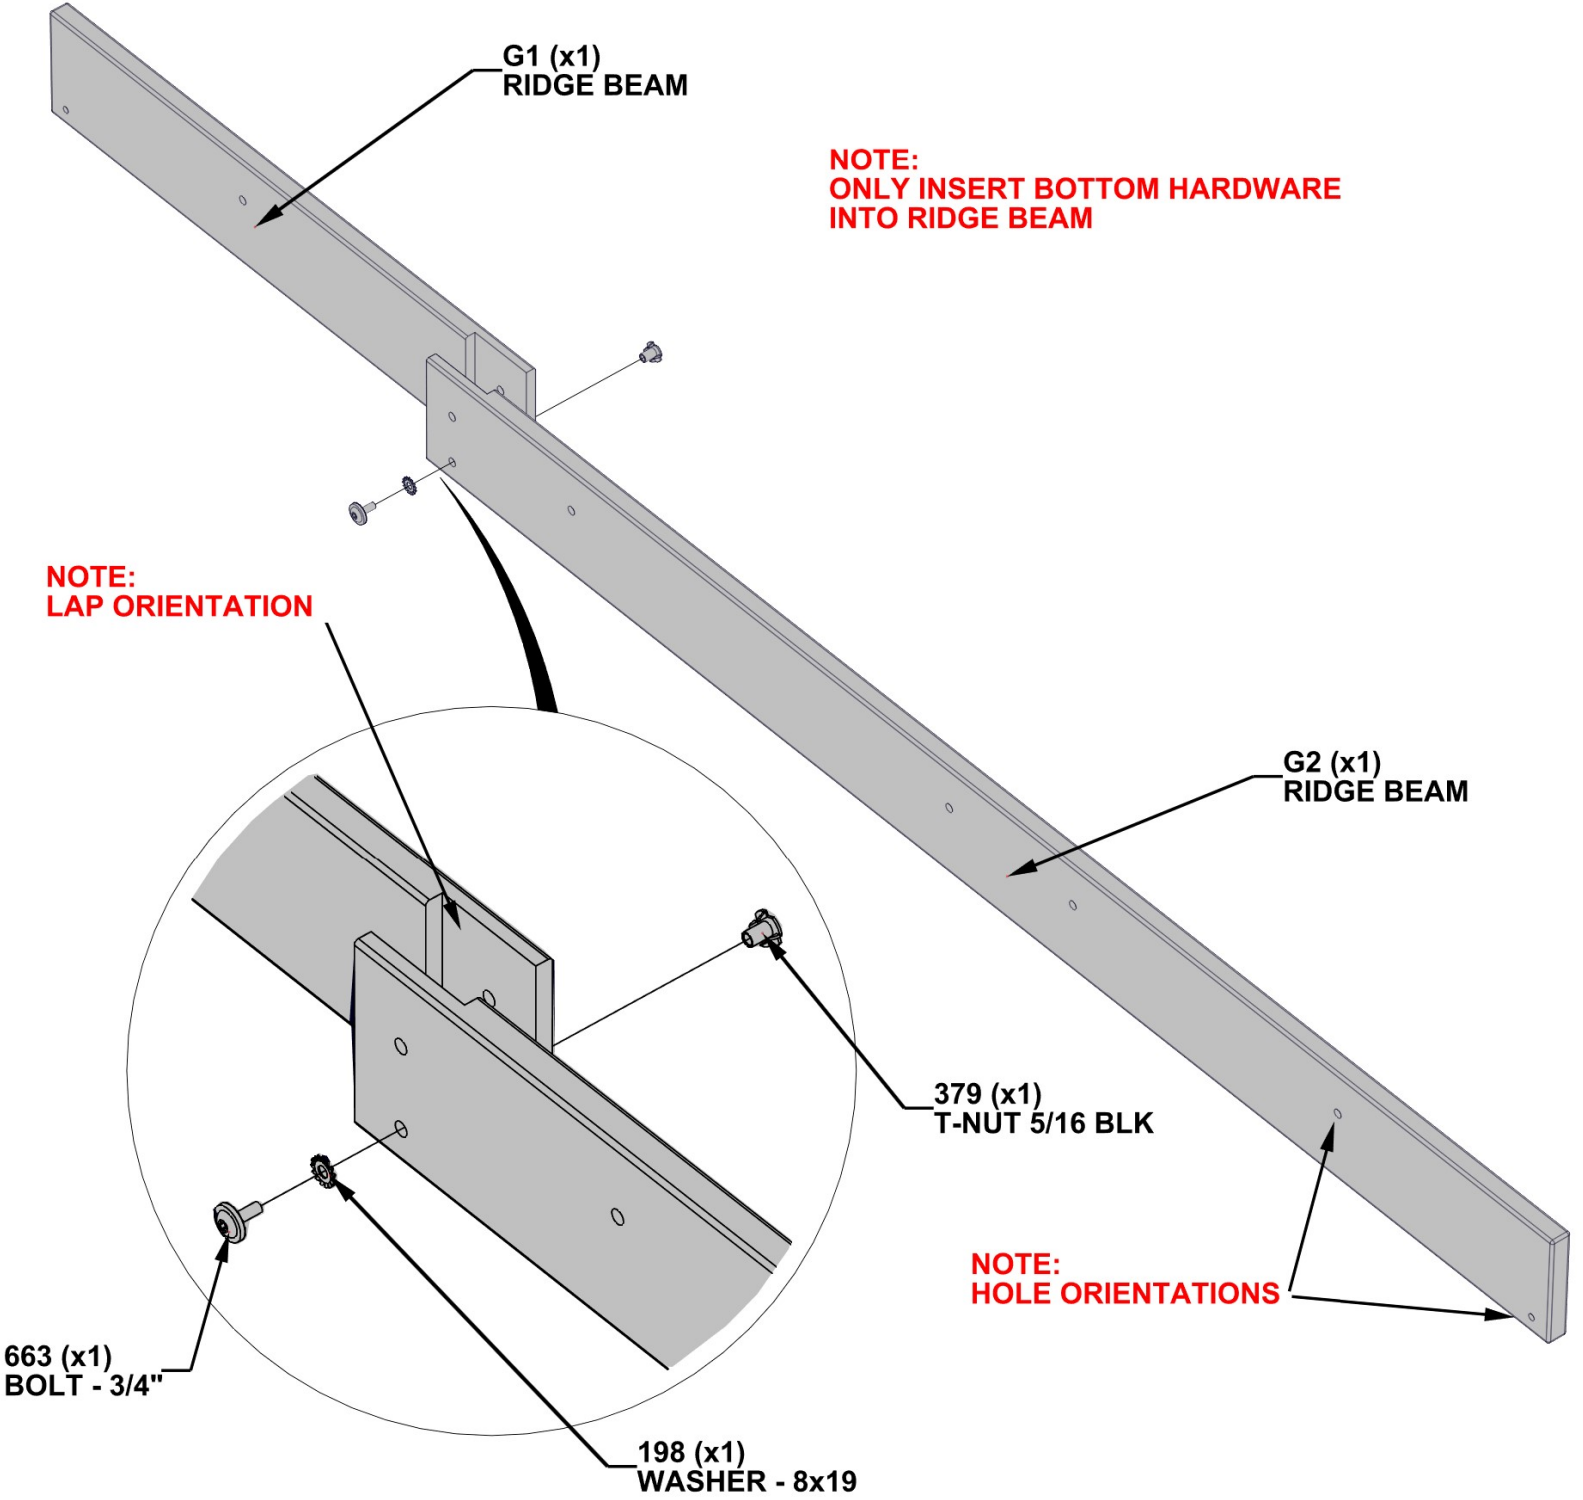

# STEP 11 - GAZEBO ASSEMBLY



RIDGE ASSEMBLY


| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 2   | H100653     | NUT LOCK 1/4 BLK      |
| 2   | H100406     | BOLT WH 1/4x1 1/2 BLK |
| 2   | H100630     | WASHER FLAT 8x19 BLK  |

ALIGN HOLE ON EACH END OF RIDGE ASSEMBLY FROM PREVIOUS STEP WITH RIDGE BRACKET.


406 (x2)  
BOLT - 1 1/2"

653 (x2)  
LOCK NUT - 1/4"


630 (x2)  
WASHER - 8x19

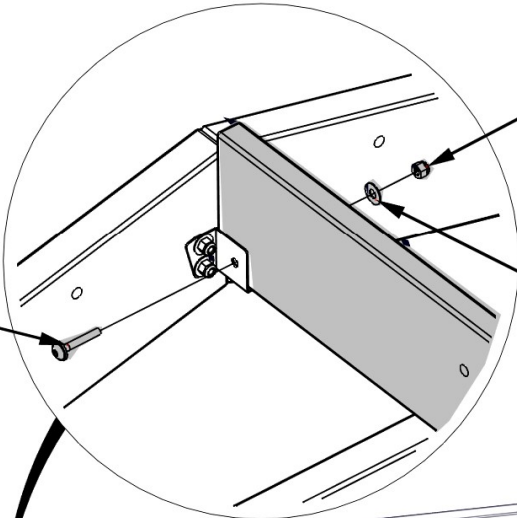


# STEP 12 - GAZEBO ASSEMBLY



**E4 | RAFTER-W4L16368**  
(x6) | 1 7/16"x3 3/8"x62 5/16" (36x86x1583)



**E5 | RAFTER-W4L16372**  
(x4) | 1 7/16"x3 3/8"x62 5/16" (36x86x1583)




**H3 | RIDGE SUPPORT-W4L16371**  
(x4) | 15/16"x3 3/8"x47 9/16" (24x86x1208)

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 20  | H101030     | SCREW CONFIRMAT 7x2 BLK |

LAY RAFTERS FLAT, ALIGNING PILOT HOLES WITH HOLES IN H3 BOARDS.  
BOTTOM EDGE WILL BE FLUSH.

COMPLETE THIS STEP TWICE.

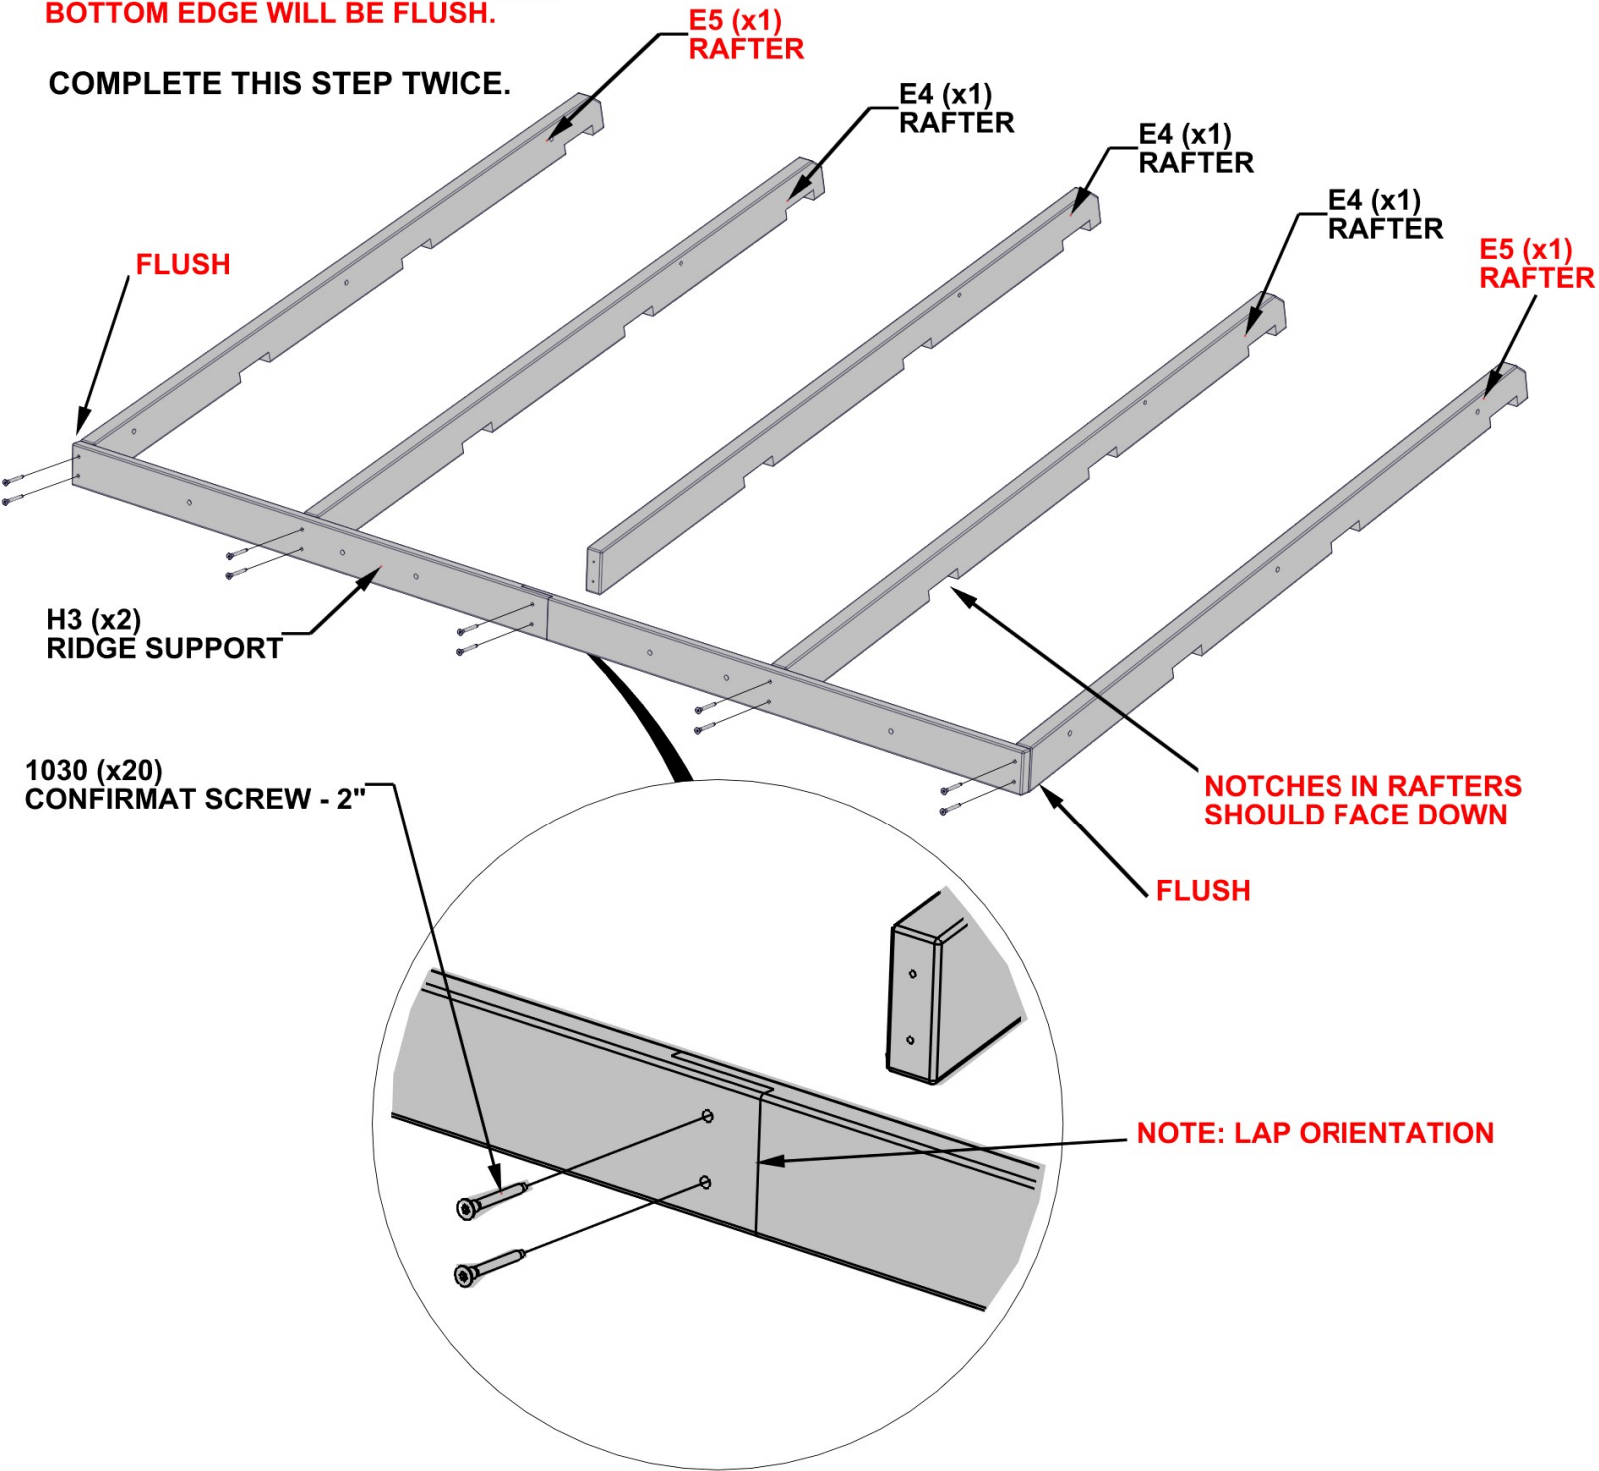



# STEP 13 - GAZEBO ASSEMBLY



**H1 | PURLIN-W4L16369**  
(x2) | 15/16"x3 3/8"x32 9/16" (24x86x827)

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 20  | H100391     | SCREW PFH 8x2 BLK |





**H2 | PURLIN-W4L16370**  
(x2) | 15/16"x3 3/8"x77 15/16" (24x86x1979)

COMPLETE THIS STEP TWICE.

FLIP ASSEMBLY FROM PREVIOUS STEP OVER.  
POSITION H1 AND H2 PURLIN IN PLACE. MEASURE  
DIAGONALLY AND SQUARE AS NEEDED.  
MEASUREMENT SHOULD BE 111 5/8 in [2837 mm].

ONCE SQUARE, INSERT SCREWS.  
RE-MEASURE CORNER TO CORNER.

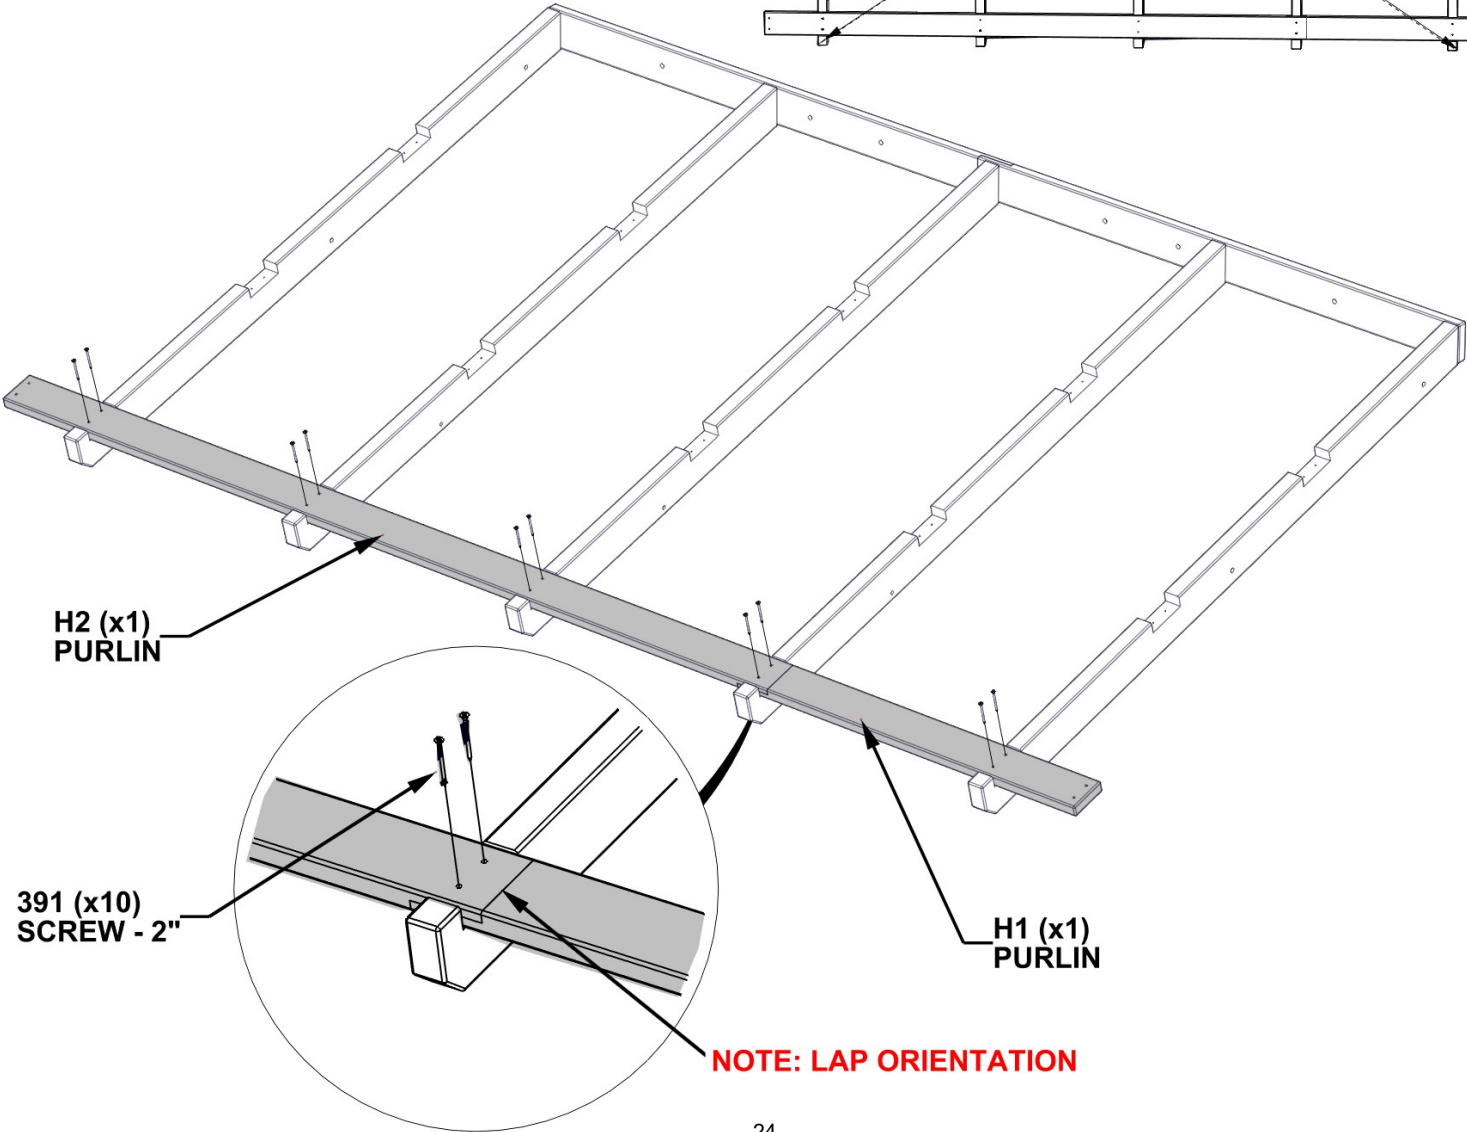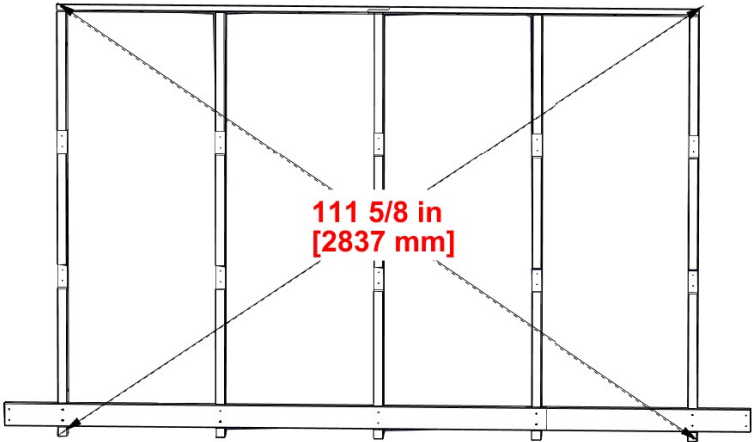

## **STEP 14 - GAZEBO ASSEMBLY**


**H1 | PURLIN-W4L16369**  
(x4) | 15/16"x3 3/8"x32 9/16" (24x86x827)

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 40  | H100391     | SCREW PFH 8x2 BLK |


**H2 | PURLIN-W4L16370**  
(x4) | 15/16"x3 3/8"x77 15/16" (24x86x1979)

**COMPLETE THIS STEP TWICE.**

**NOTE: LAP ORIENTATION**

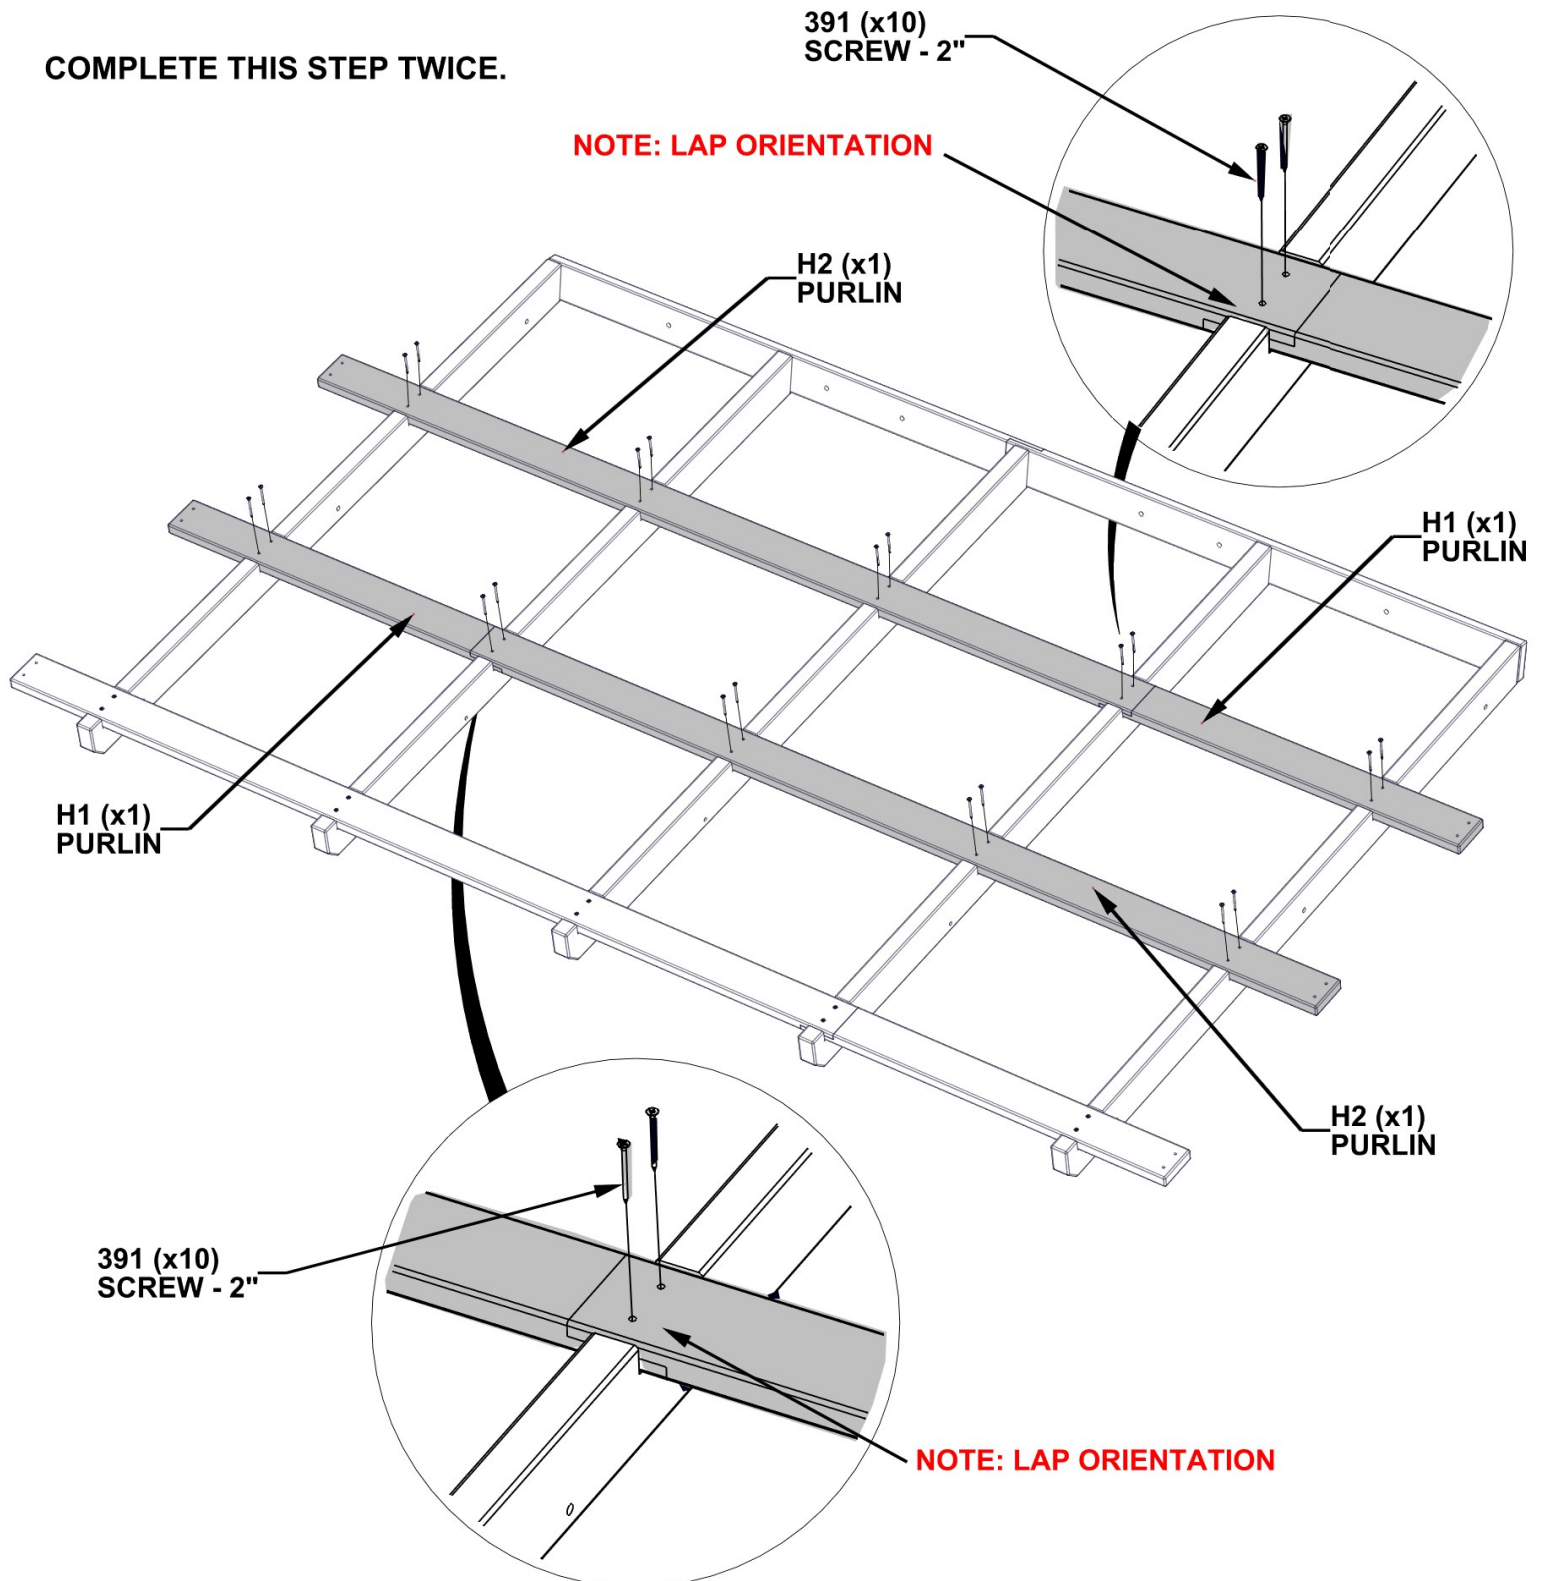

# STEP 15 - GAZEBO ASSEMBLY




**D5 | RAFTER-W4L16367**  
(x4) | 1 7/16"x5 1/4"x63 13/16" (36x134x1621)

| QTY | PART NUMBER | DESCRIPTION     |
|-----|-------------|-----------------|
| 16  | H100379     | T-NUT 5/16" BLK |

COMPLETE THIS STEP TWICE.


INSERT T-NUTS INTO BOTH RAFTERS FOR EACH END OF ROOF ASSEMBLY. THESE CONNECTIONS WILL BE USED WHEN ATTACHING ROOF PANEL TO ASSEMBLY.

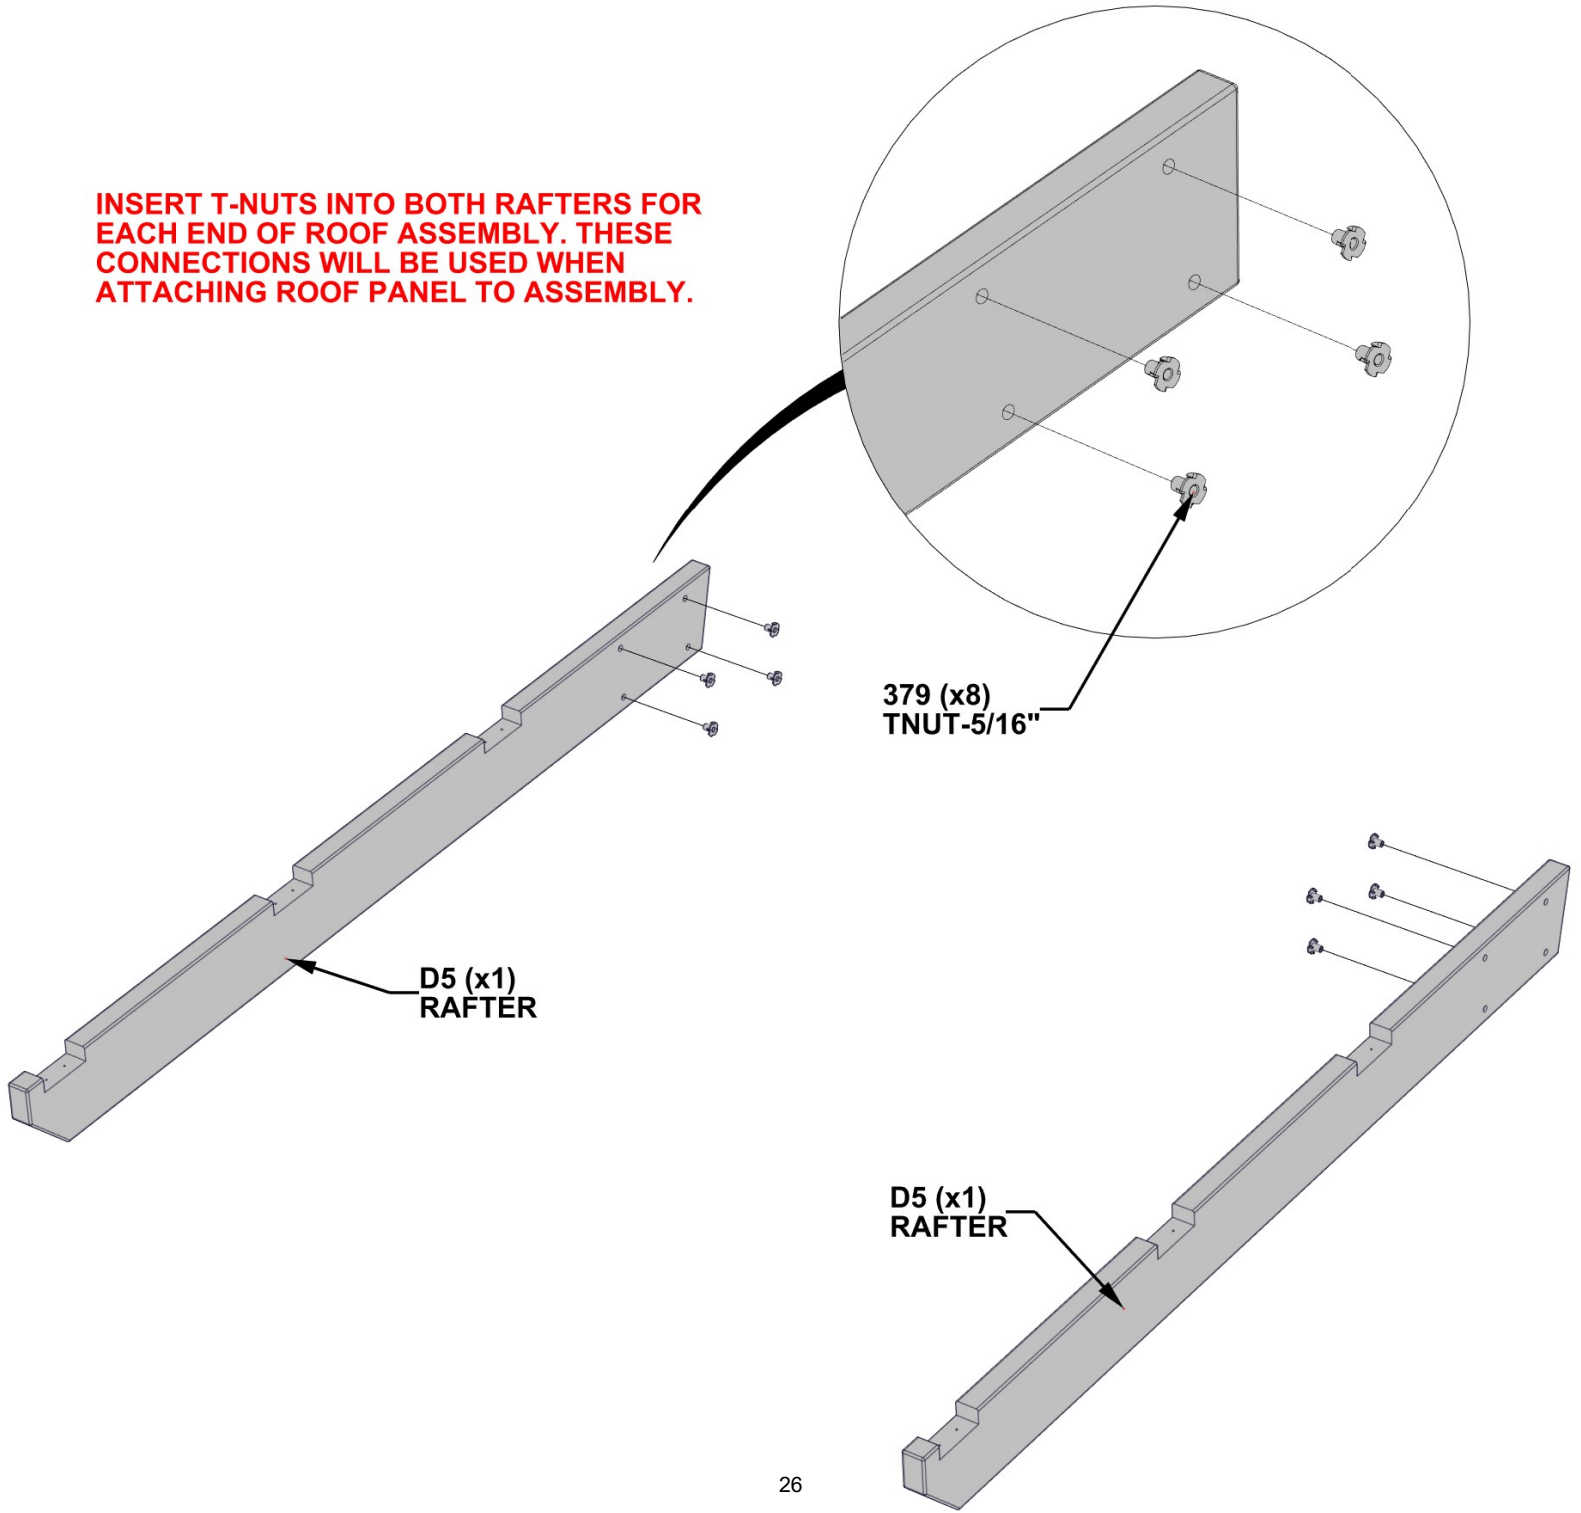

# STEP 16 - GAZEBO ASSEMBLY


| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 24  | H100391     | SCREW PFH 8x2 BLK |

COMPLETE THIS STEP TWICE.

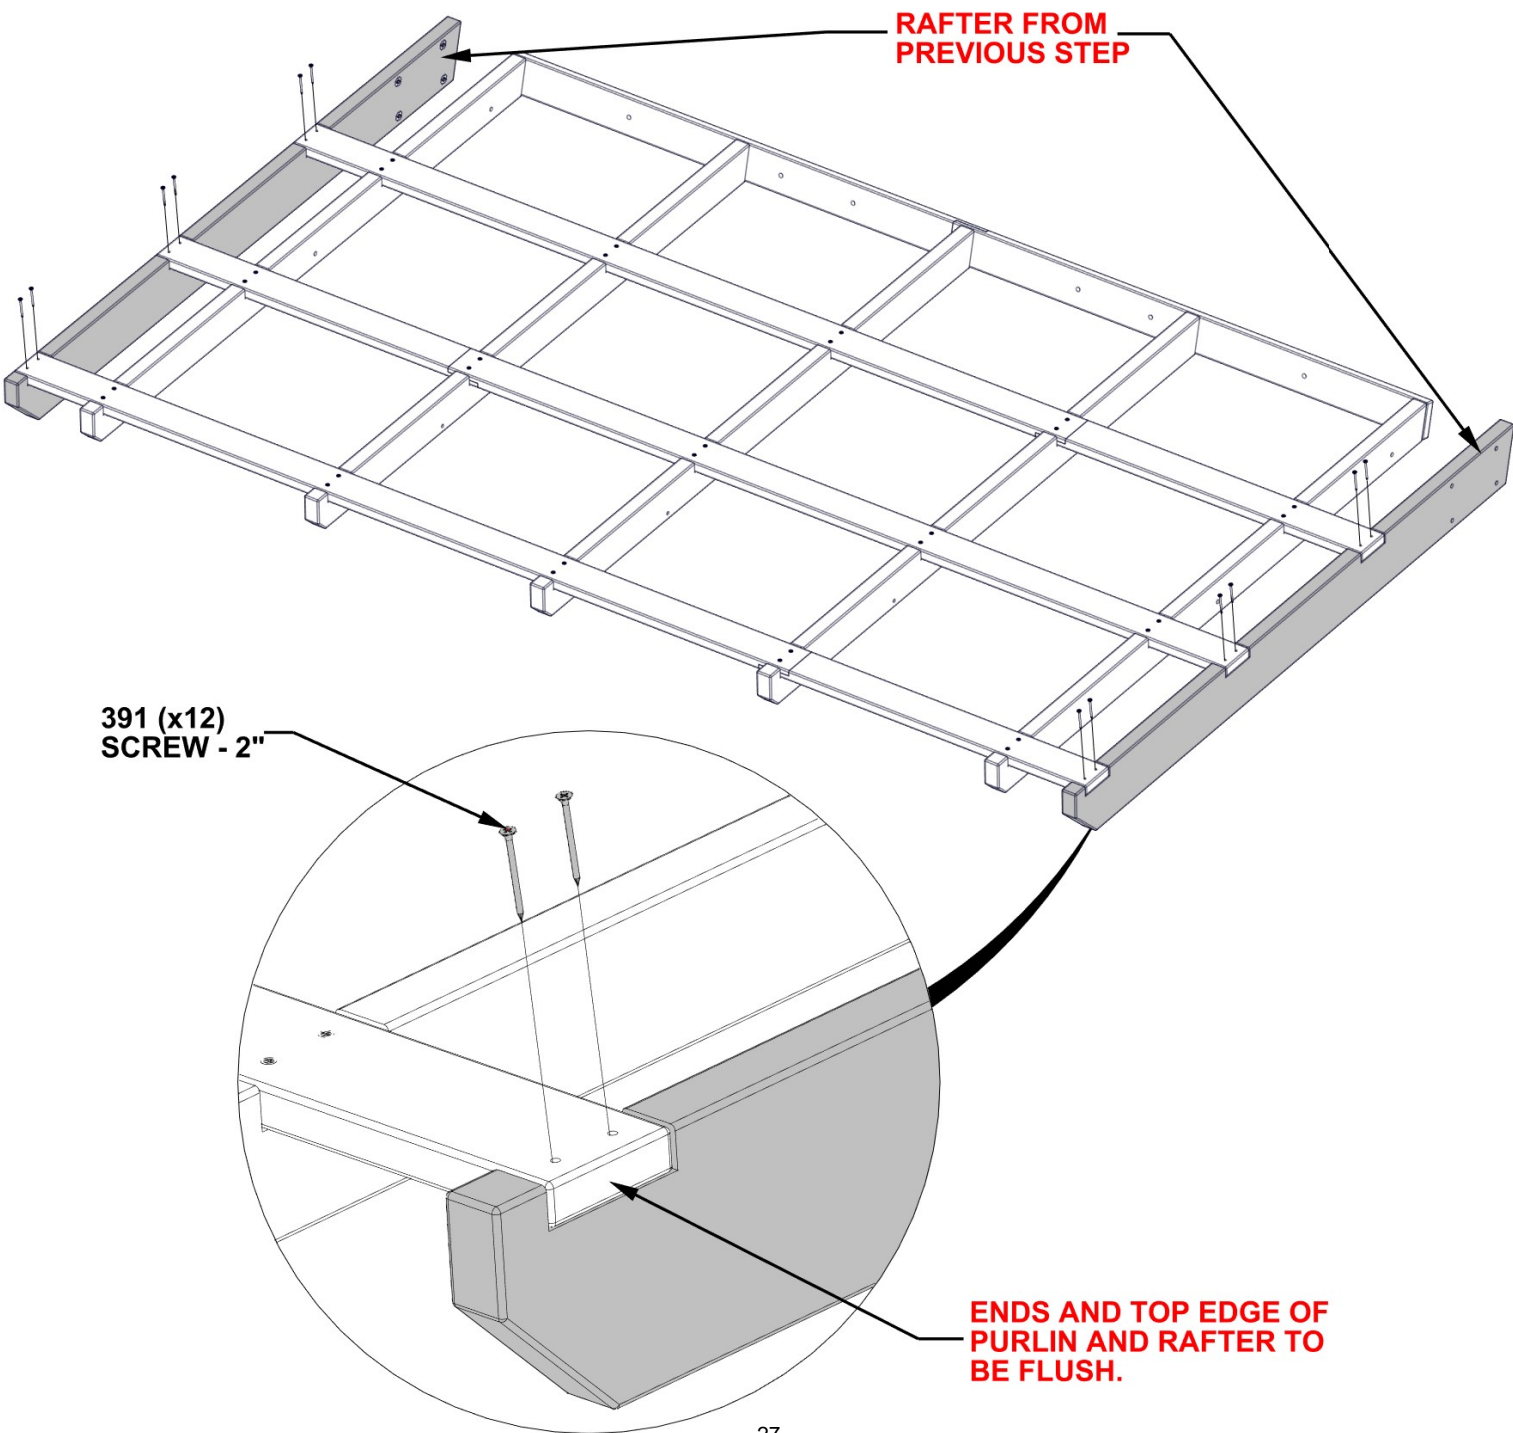



# STEP 17 - GAZEBO ASSEMBLY

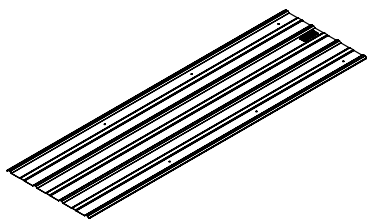


A4M01547  
(x12) | 29 GA STEEL SHEETING

| QTY | PART NUMBER | DESCRIPTION                   |
|-----|-------------|-------------------------------|
| 72  | H101117     | SCREW WOODGRIP 10-16x3/4" BLK |

NOTE:  
WARNING:  
GLOVES SHOULD BE WORN WHEN  
HANDLING ROOF PANELS.  
EDGES ARE SHARP. REMOVE BLUE  
FILM FROM EACH SHEET.

- 1. LOOKING AT THE BACK OF THE UNIT AS PICTURED BELOW,  
PLACE TIN SHEETS DOWN.
- 2. STARTING AT THE LEFT SIDE AND WORKING TOWARD THE  
RIGHT SIDE OVERLAPPING BY ONE RIB.
- 3. FLUSH FRONT EDGE OF SHEETS AND CENTER ON ROOF.  
LEAVE EQUAL GAPS ON BOTH LEFT AND RIGHT SIDES.

COMPLETE THIS STEP TWICE.

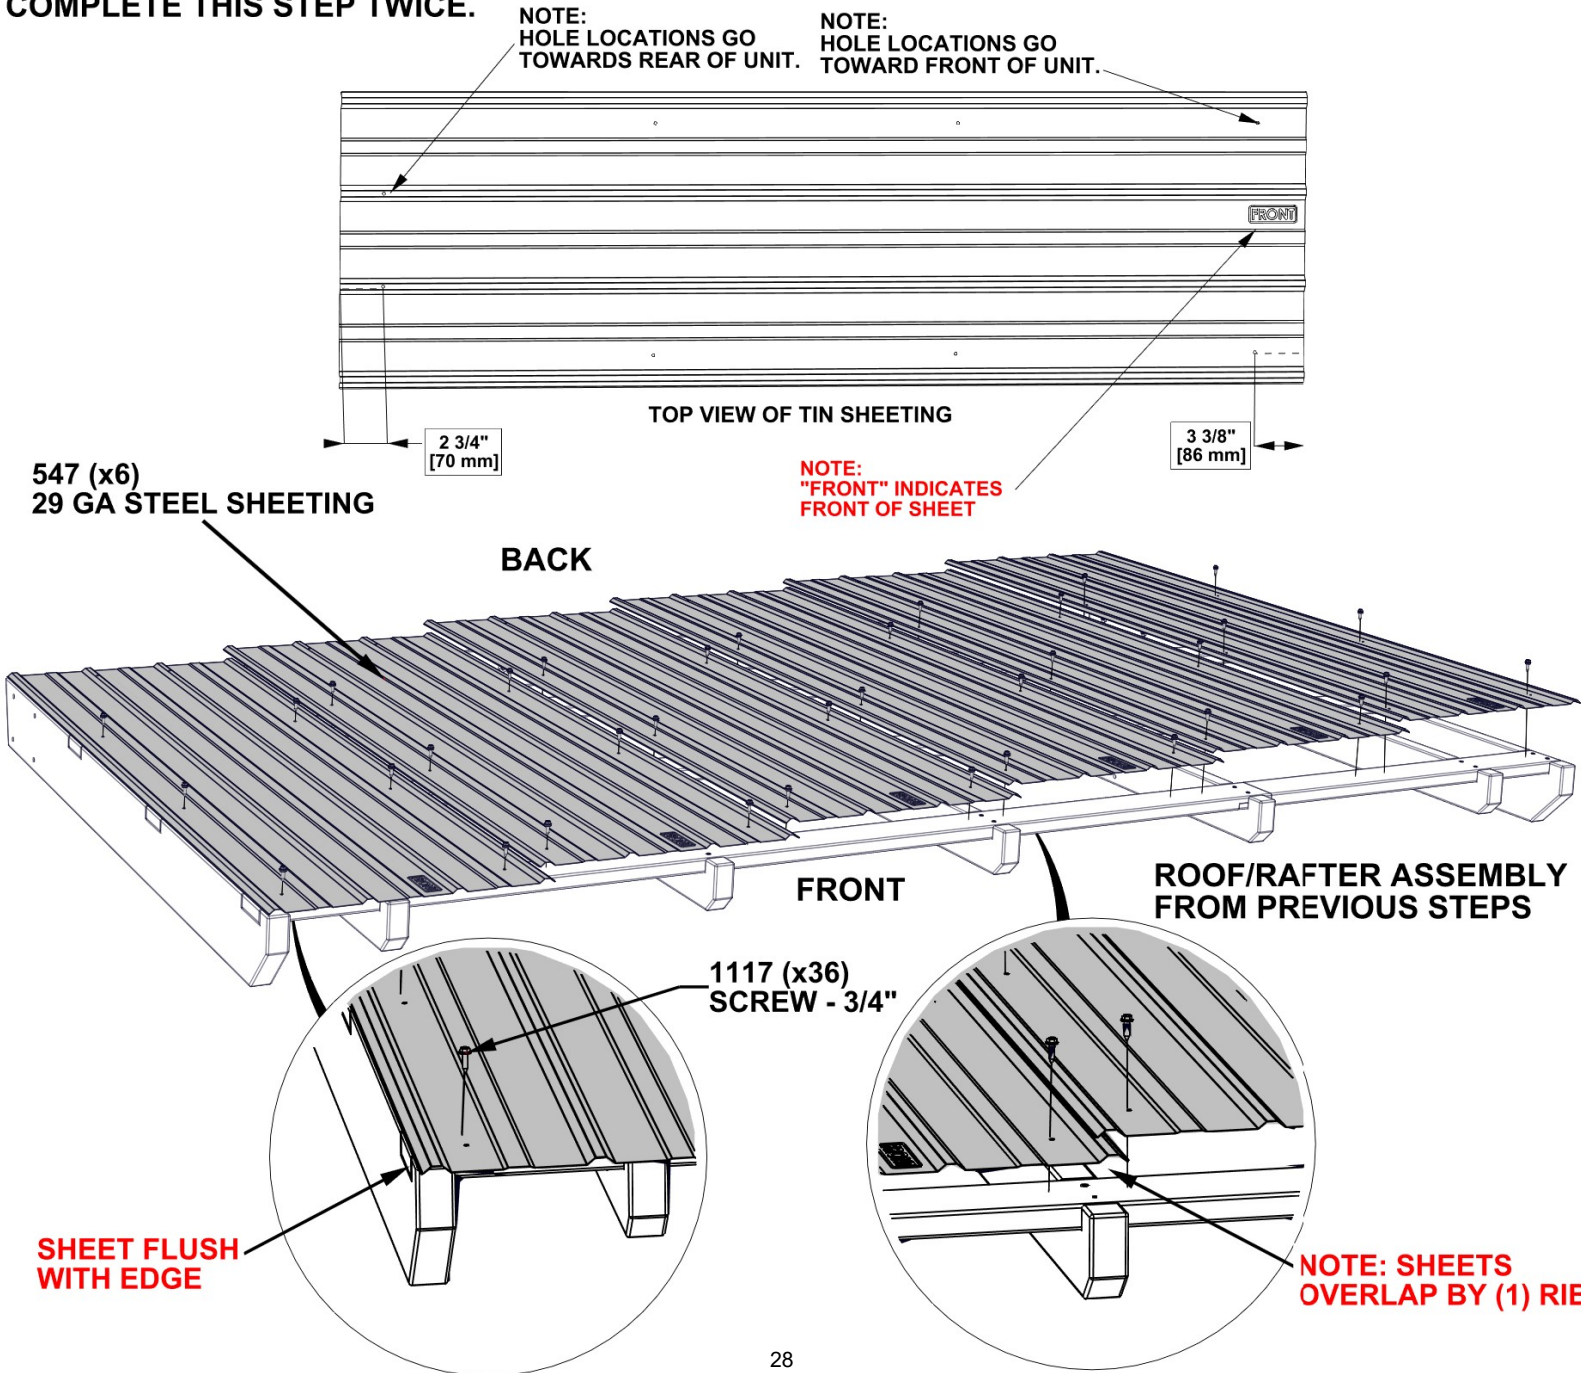


# STEP 18 - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 6   | H100195     | BOLT WH 5/16x2 3/4 BLK |
| 6   | H100198     | WASHER LOCK EXT 8x19   |

- NOTE:**
- 1. BEFORE BEGINNING, MAKE SURE T-NUTS HAVE BEEN INSTALLED FROM STEP 8.
  - 2. WITH AT LEAST TWO PEOPLE, LIFT ASSEMBLED ROOF PANEL AND SLIDE IT ONTO OUTER RAFTERS.
  - 3. CLAMP ROOF PANEL TO RIDGE AS NEEDED TO HOLD IN PLACE.
  - 4. FASTEN BOTH SIDES OF ROOF ASSEMBLY AS SHOWN.

**TIP: USE RIGHT ANGLE DRILL ADAPTER TO INSTALL BOLTS IN THIS STEP.**

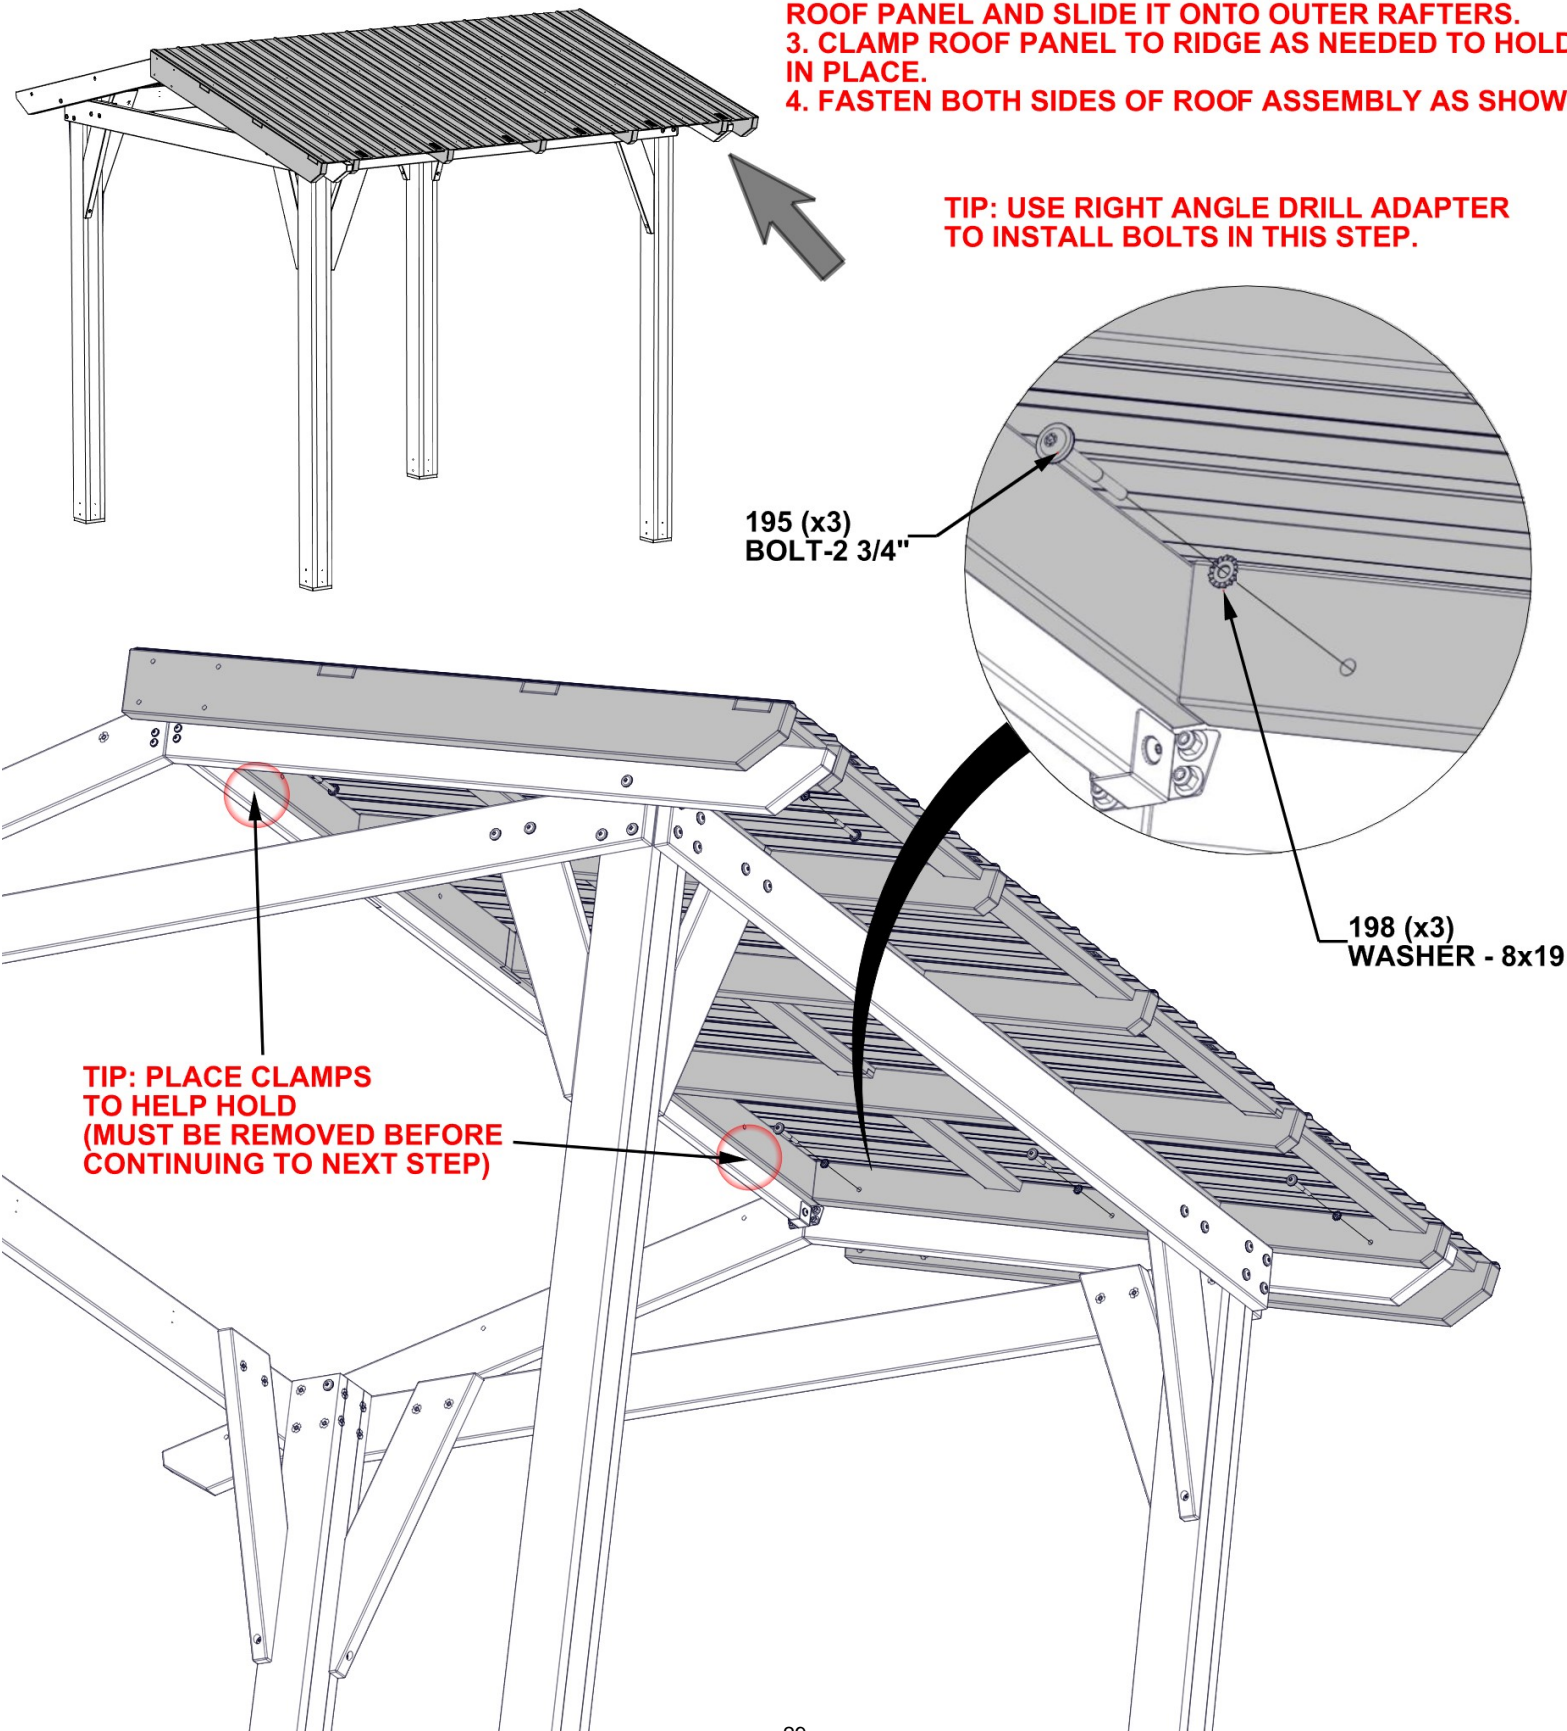




# STEP 19 - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 6   | H100195     | BOLT WH 5/16x2 3/4 BLK |
| 6   | H100198     | WASHER LOCK EXT 8x19   |

- NOTE:**
- 1. BEFORE BEGINNING, MAKE SURE T-NUTS HAVE BEEN INSTALLED FROM STEP 8.
  - 2. WITH AT LEAST TWO PEOPLE, LIFT ASSEMBLED ROOF PANEL AND SLIDE IT ONTO OUTER RAFTERS.
  - 3. CLAMP ROOF PANEL TO RIDGE AS NEEDED TO HOLD IN PLACE.
  - 4. FASTEN BOTH SIDES OF ROOF ASSEMBLY AS SHOWN.

**TIP: USE RIGHT ANGLE DRILL ADAPTER TO INSTALL BOLTS IN THIS STEP.**

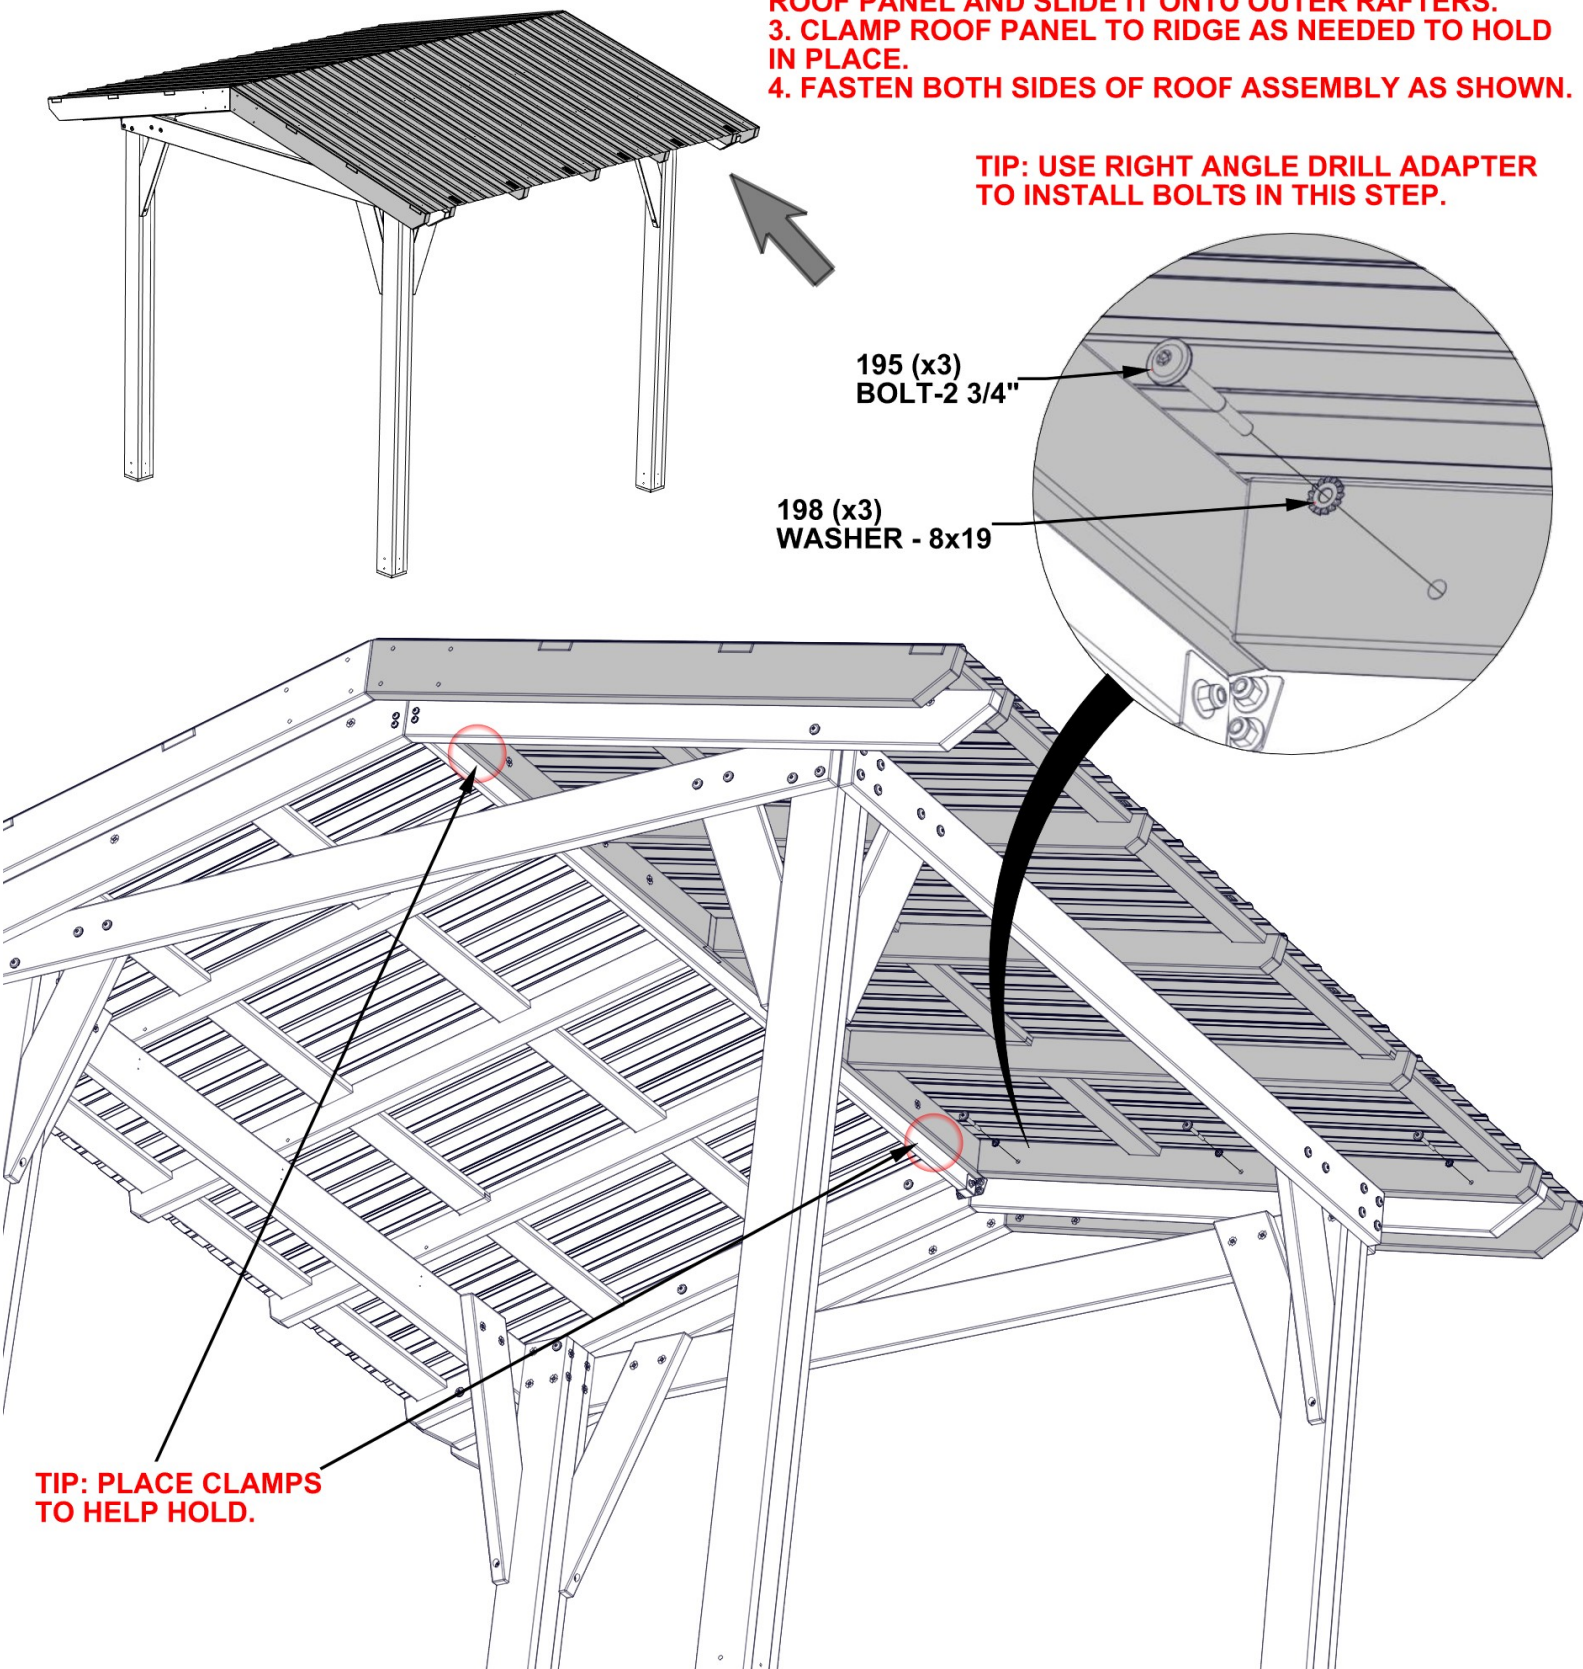




# STEP 20 - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 6   | H100479     | NUT LOCK 5/16 BLK      |
| 6   | H100484     | BOLT WH 5/16x3 1/4 BLK |
| 6   | H100198     | WASHER LOCK EXT 8x19   |
| 6   | H100770     | WASHER FLAT 5/16 BLK   |

TIP: USE RIGHT ANGLE DRILL ADAPTER AS NEEDED TO INSTALL BOLTS IN THIS STEP.

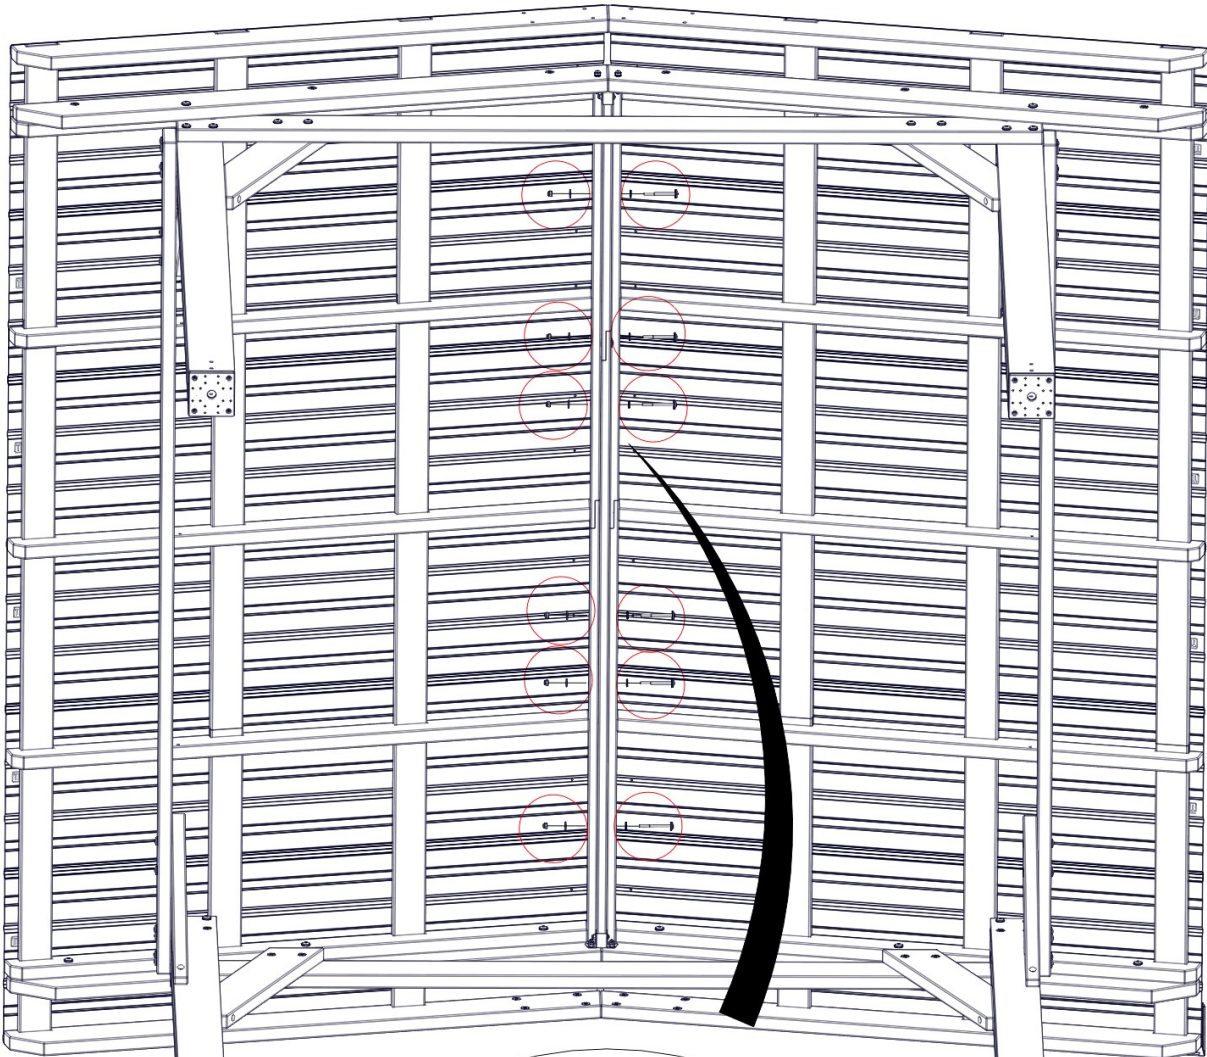


479 (x6)  
LOCK NUT - 5/16"

770 (x6)  
WASHER - 5/16"


198 (x6)  
WASHER - 8x19

484 (x6)  
BOLT - 3 1/4"

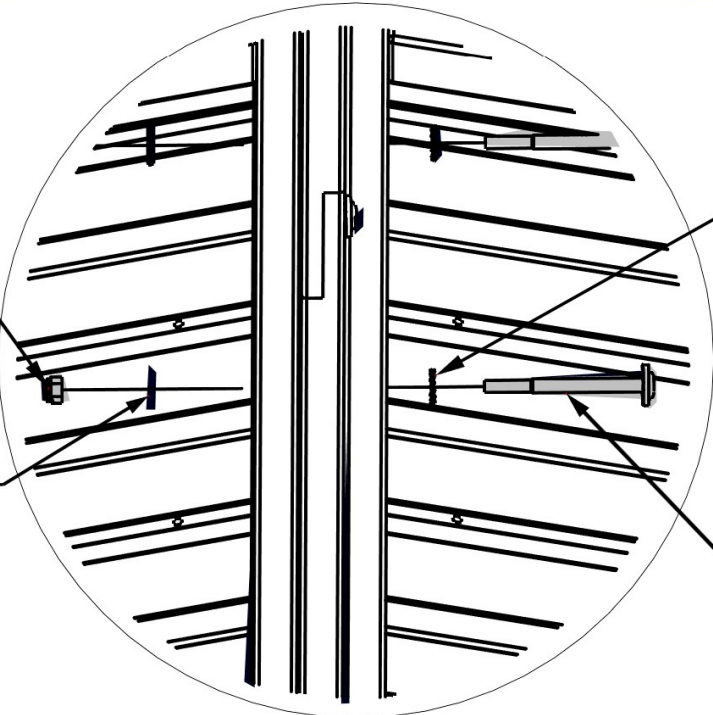



# STEP 21 - GAZEBO ASSEMBLY

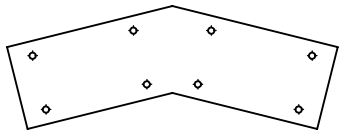



A4M01508  
(x2) | GABLE BRACKET

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 16  | H100407     | BOLT WH 5/16x1 1/2 BLK |


508 (x2)  
GABLE BRACKET

407 (x16)  
BOLT - 1 1/2"

ATTACH GABLE BRACKET TO OUTER  
RAFTERS ON BOTH ENDS OF ROOF.  
BOLTS WILL FASTEN TO T-NUTS THAT  
WERE PREVIOUSLY INSTALLED IN STEP 16.

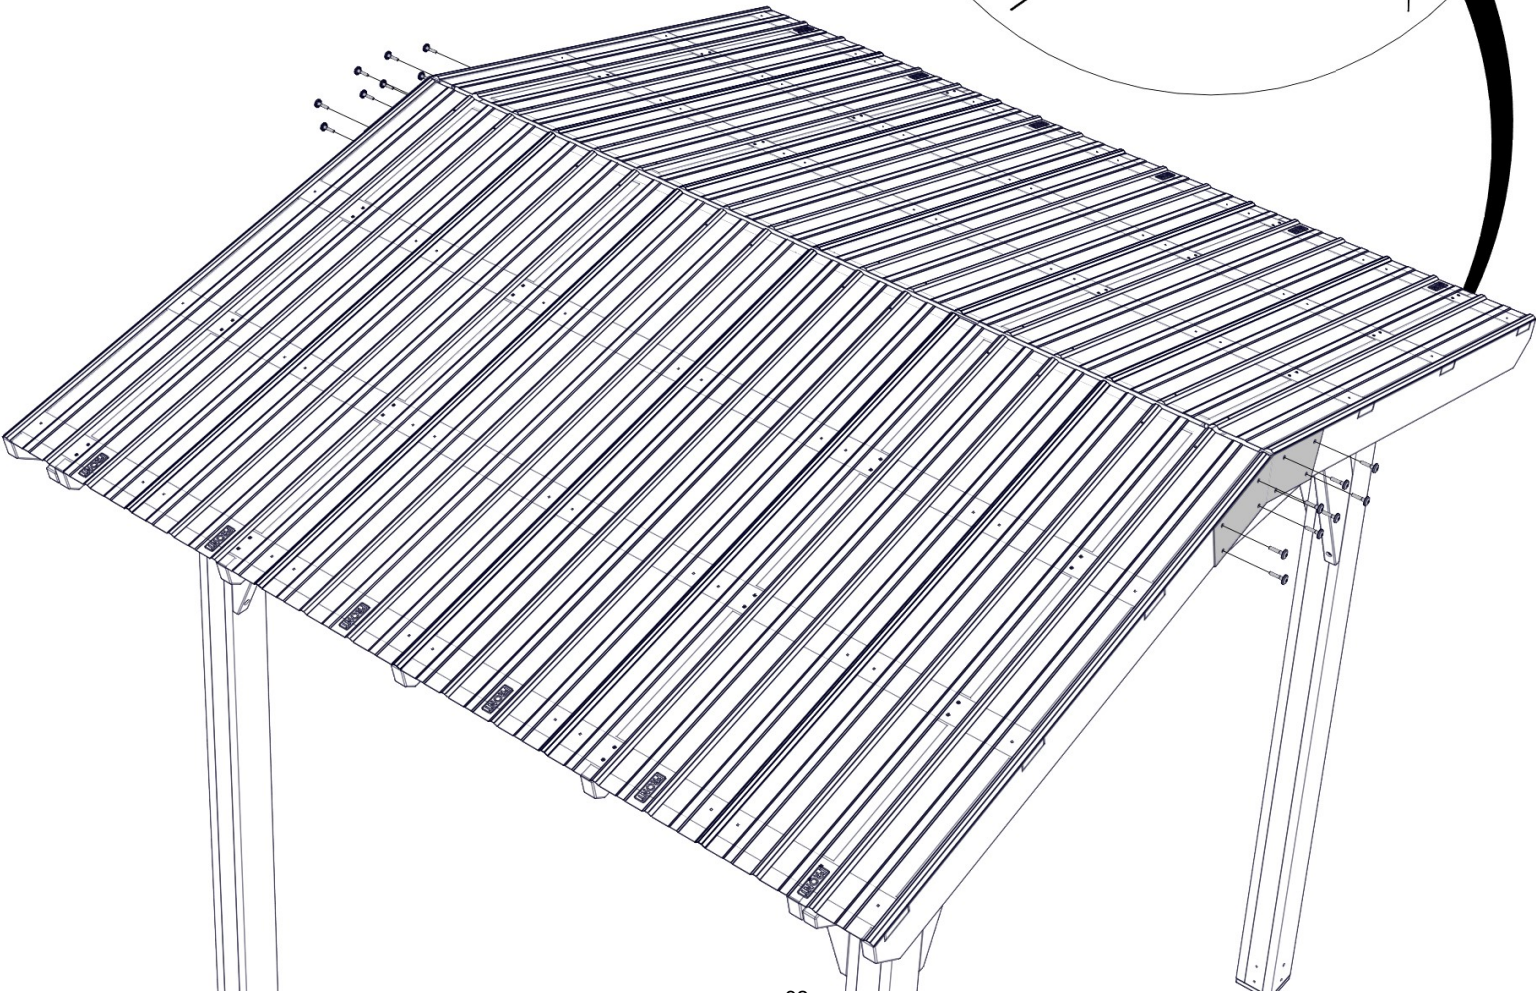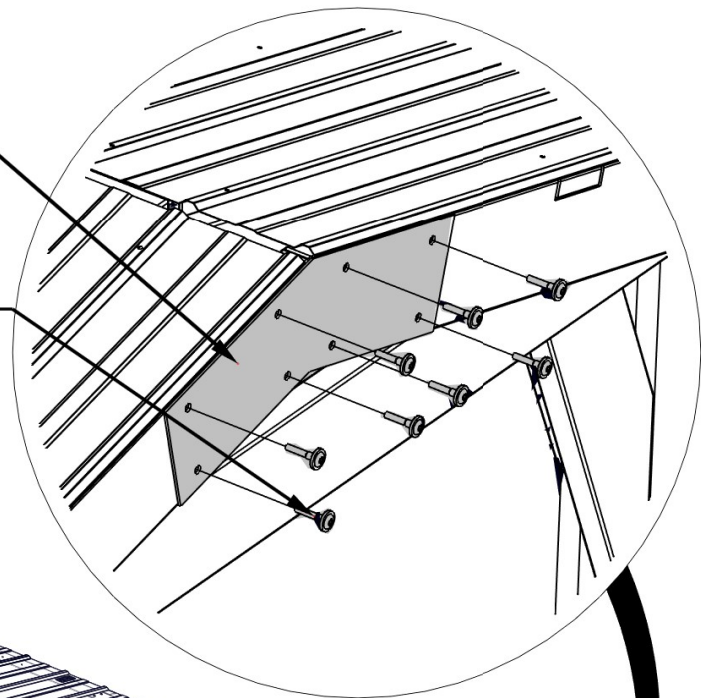


# STEP 22 - GAZEBO ASSEMBLY





A4M01228  
(x6) | RAFTER BRACKET

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 6   | H100653     | NUT LOCK 1/4 BLK      |
| 6   | H100488     | BOLT WH 1/4x2 BLK     |
| 6   | H100630     | WASHER FLAT 8x19 BLK  |
| 12  | H100536     | SCREW PWH 8x1 1/4 BLK |

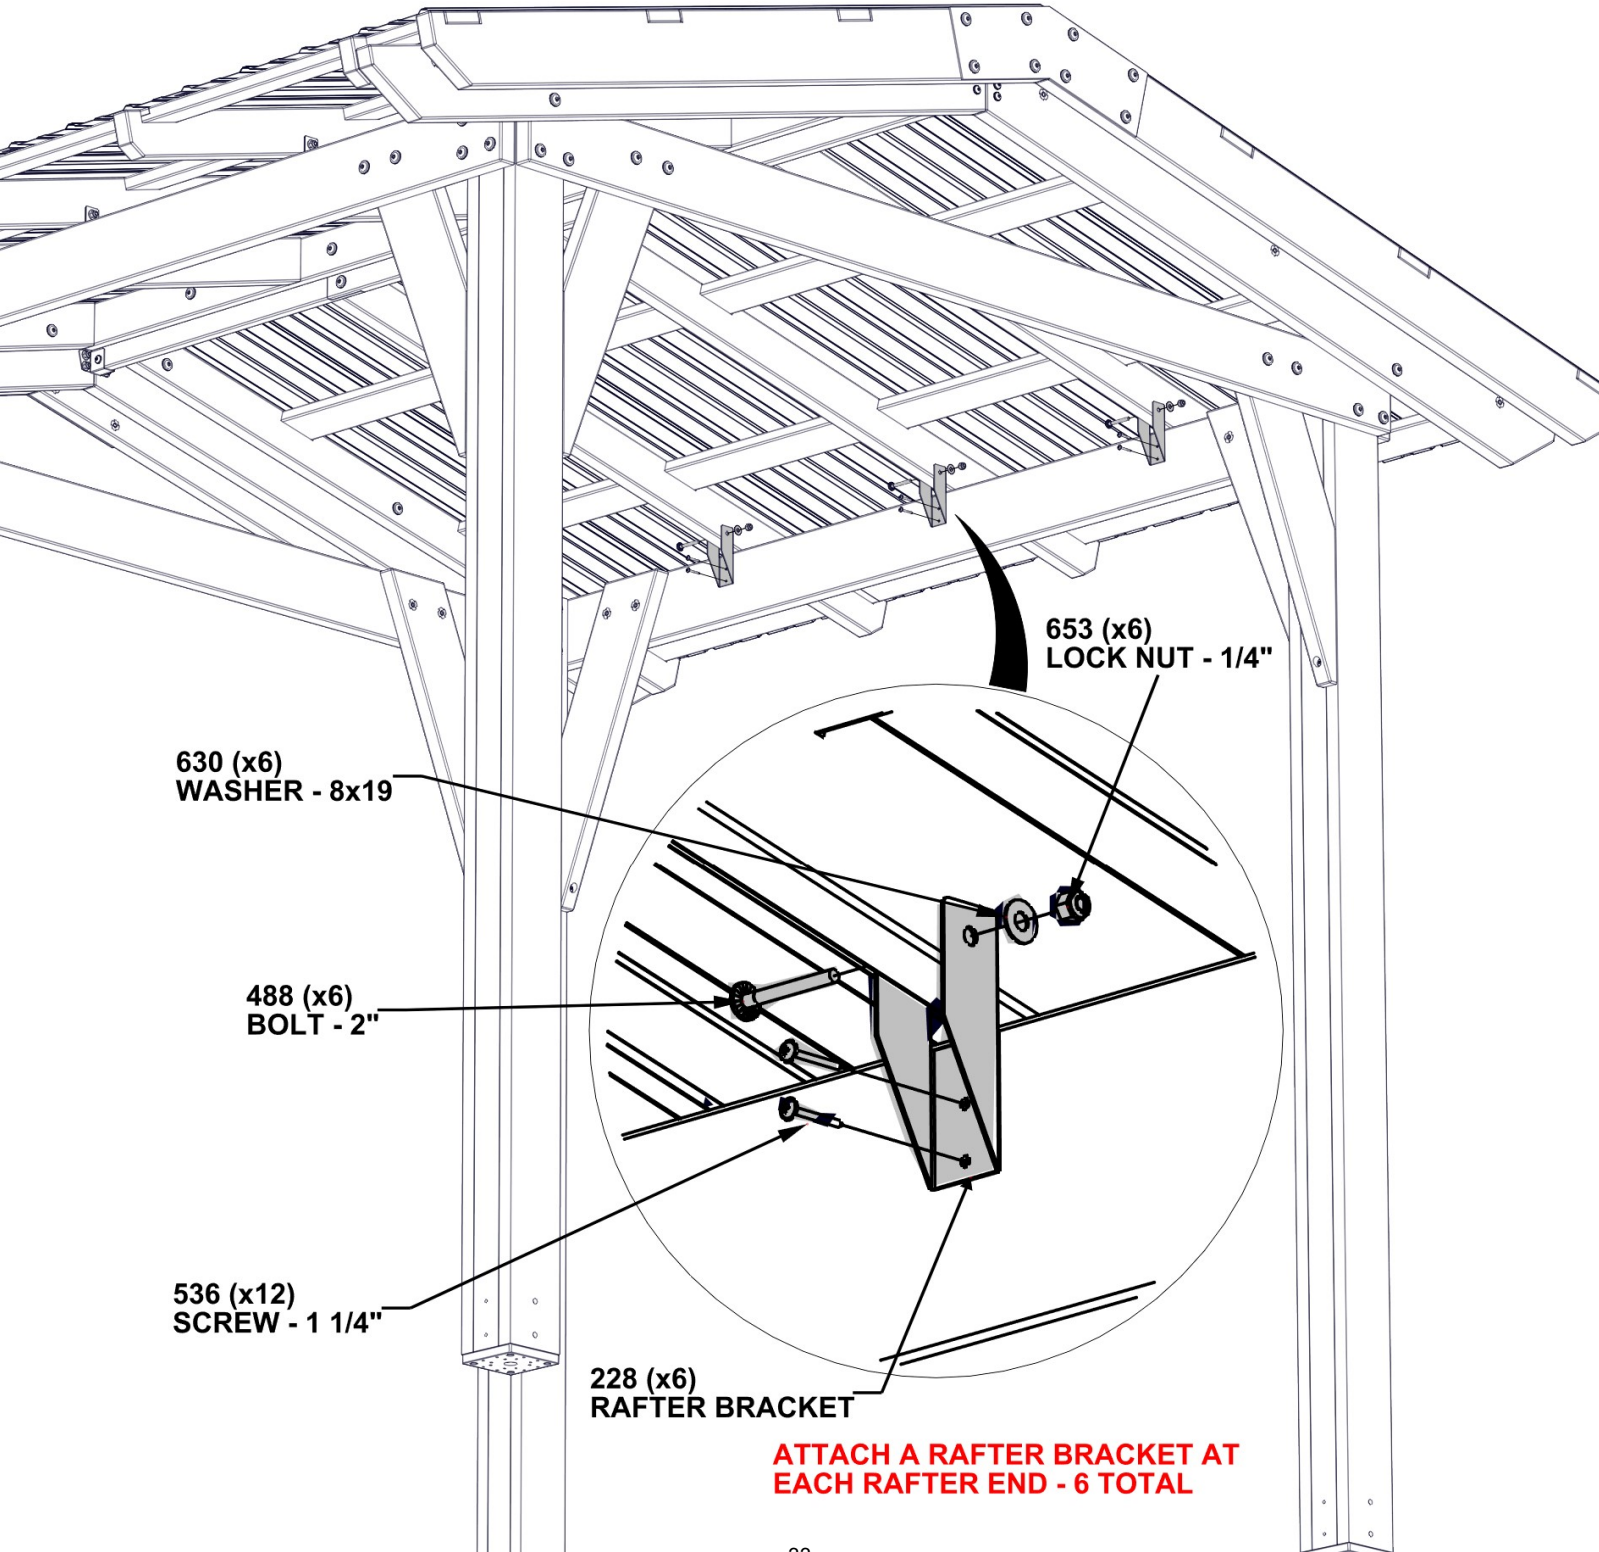



# STEP 23 - GAZEBO ASSEMBLY

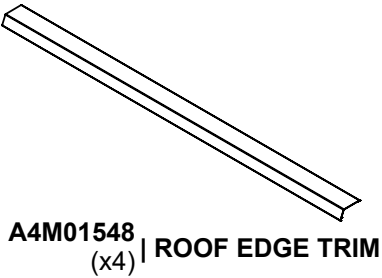

A4M01550  
(x4) | CORNER SPLICE TRIM




A4M01551  
(x2) | ROOF EDGE TRIM SPLICE

| QTY | PART NUMBER | DESCRIPTION                   |
|-----|-------------|-------------------------------|
| 10  | H101116     | SCREW SELF TAPPING 1/4x1" BLK |

REPEAT THIS STEP FOR  
OPPOSITE SIDE


LAYOUT ROOF EDGE TRIM, TRIM SPLICE, AND CORNER  
SPLICE AS SHOWN BELOW. SLIDE TRIM PIECE INTO SPLICE.  
ATTACH CORNER SPLICES BY PRESSING INTO EDGE TRIM.

NOTE: INSERT SCREWS AS SHOWN  
BELOW MAKE SURE SCREWS GO  
INTO TOP OF RIBS. DO NOT OVERTIGHTEN.

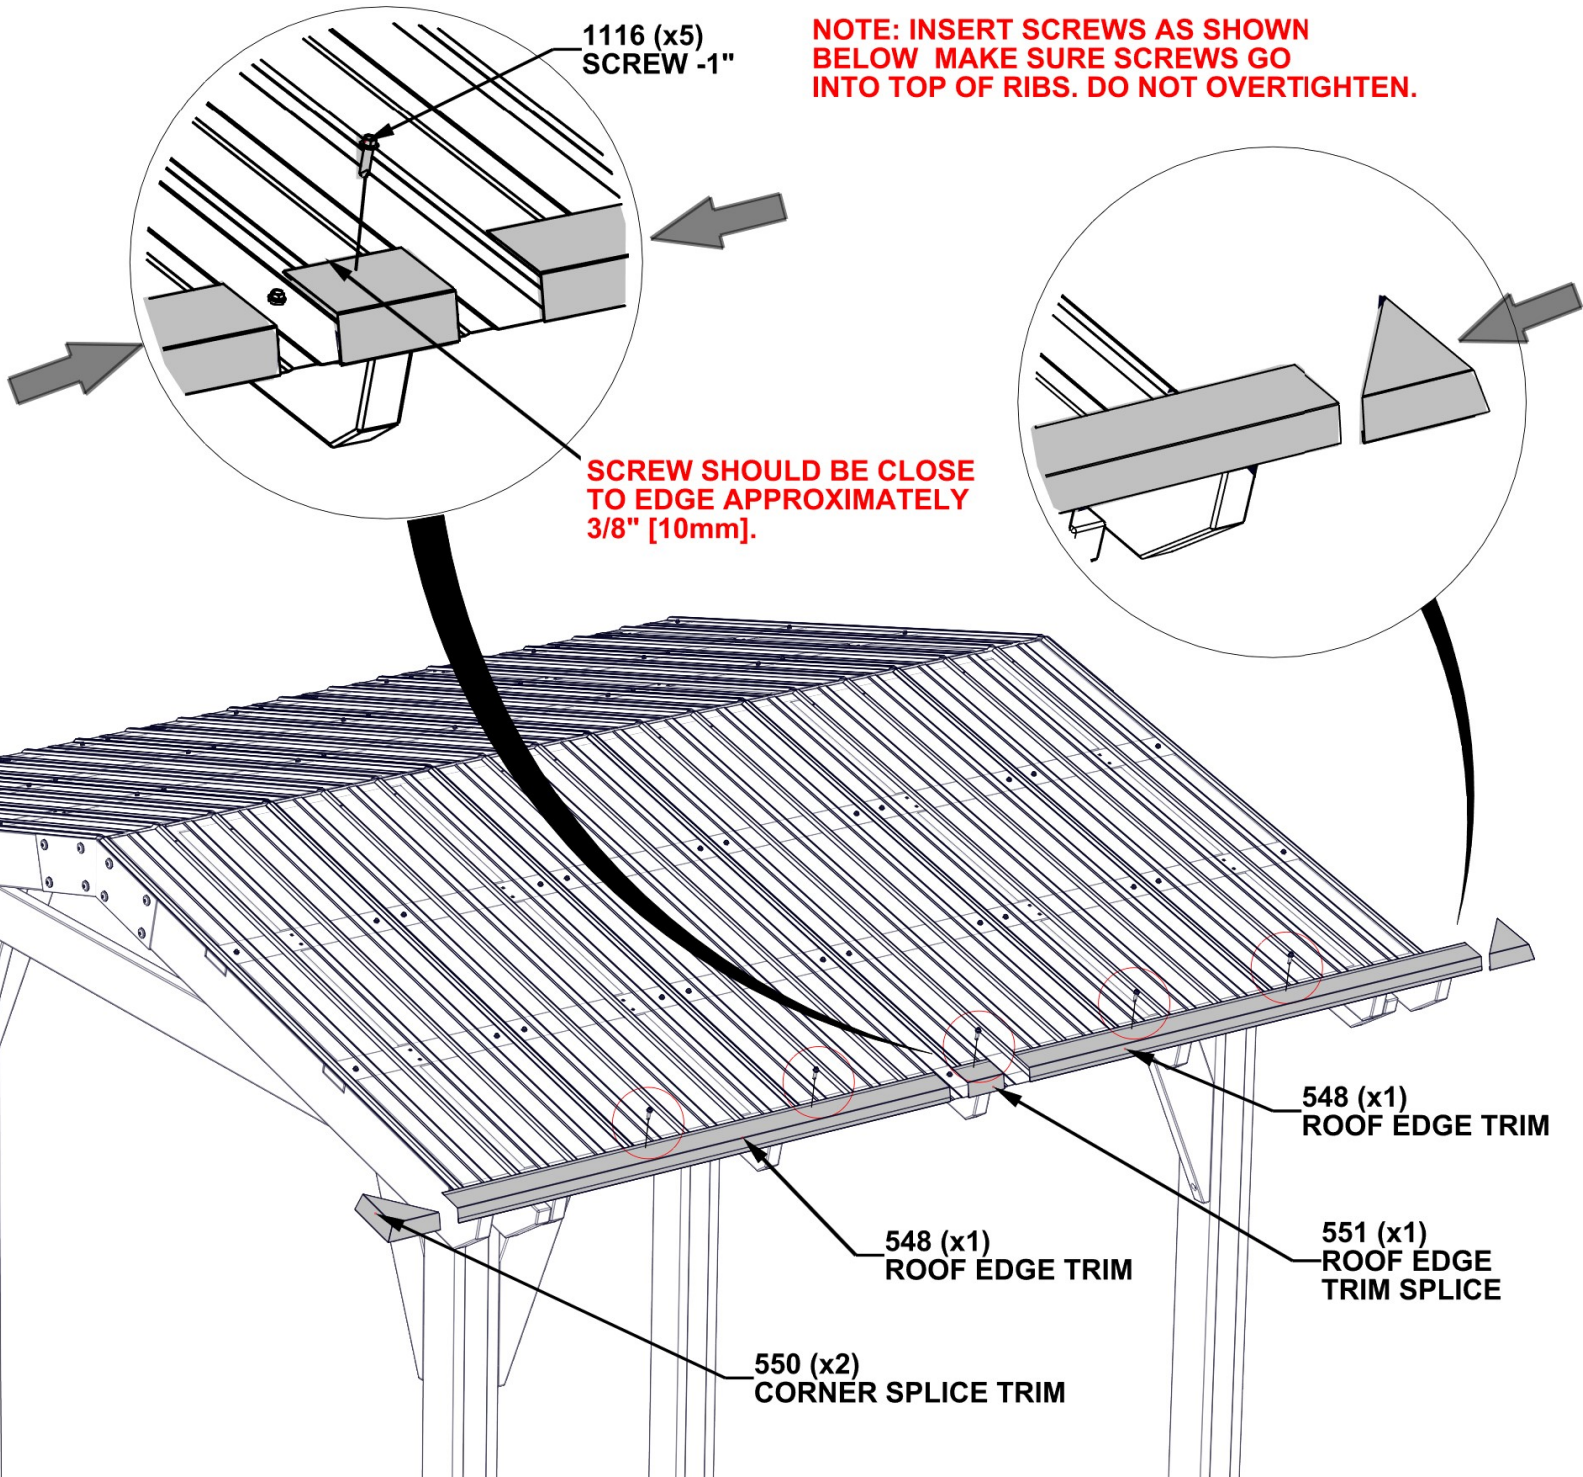




## **STEP 24 - GAZEBO ASSEMBLY**

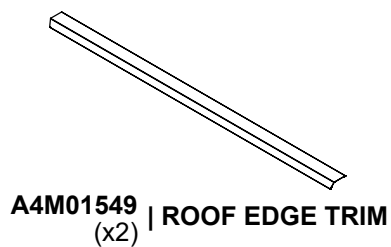

**PLACE ROOF EDGE TRIM ON SIDES OF ROOF. SLIDE EDGE UNDERNEATH CORNER SPLICE.**

**FLUSH BOTH EDGES OF TRIM PIECES AT TOP OF RIDGE.**

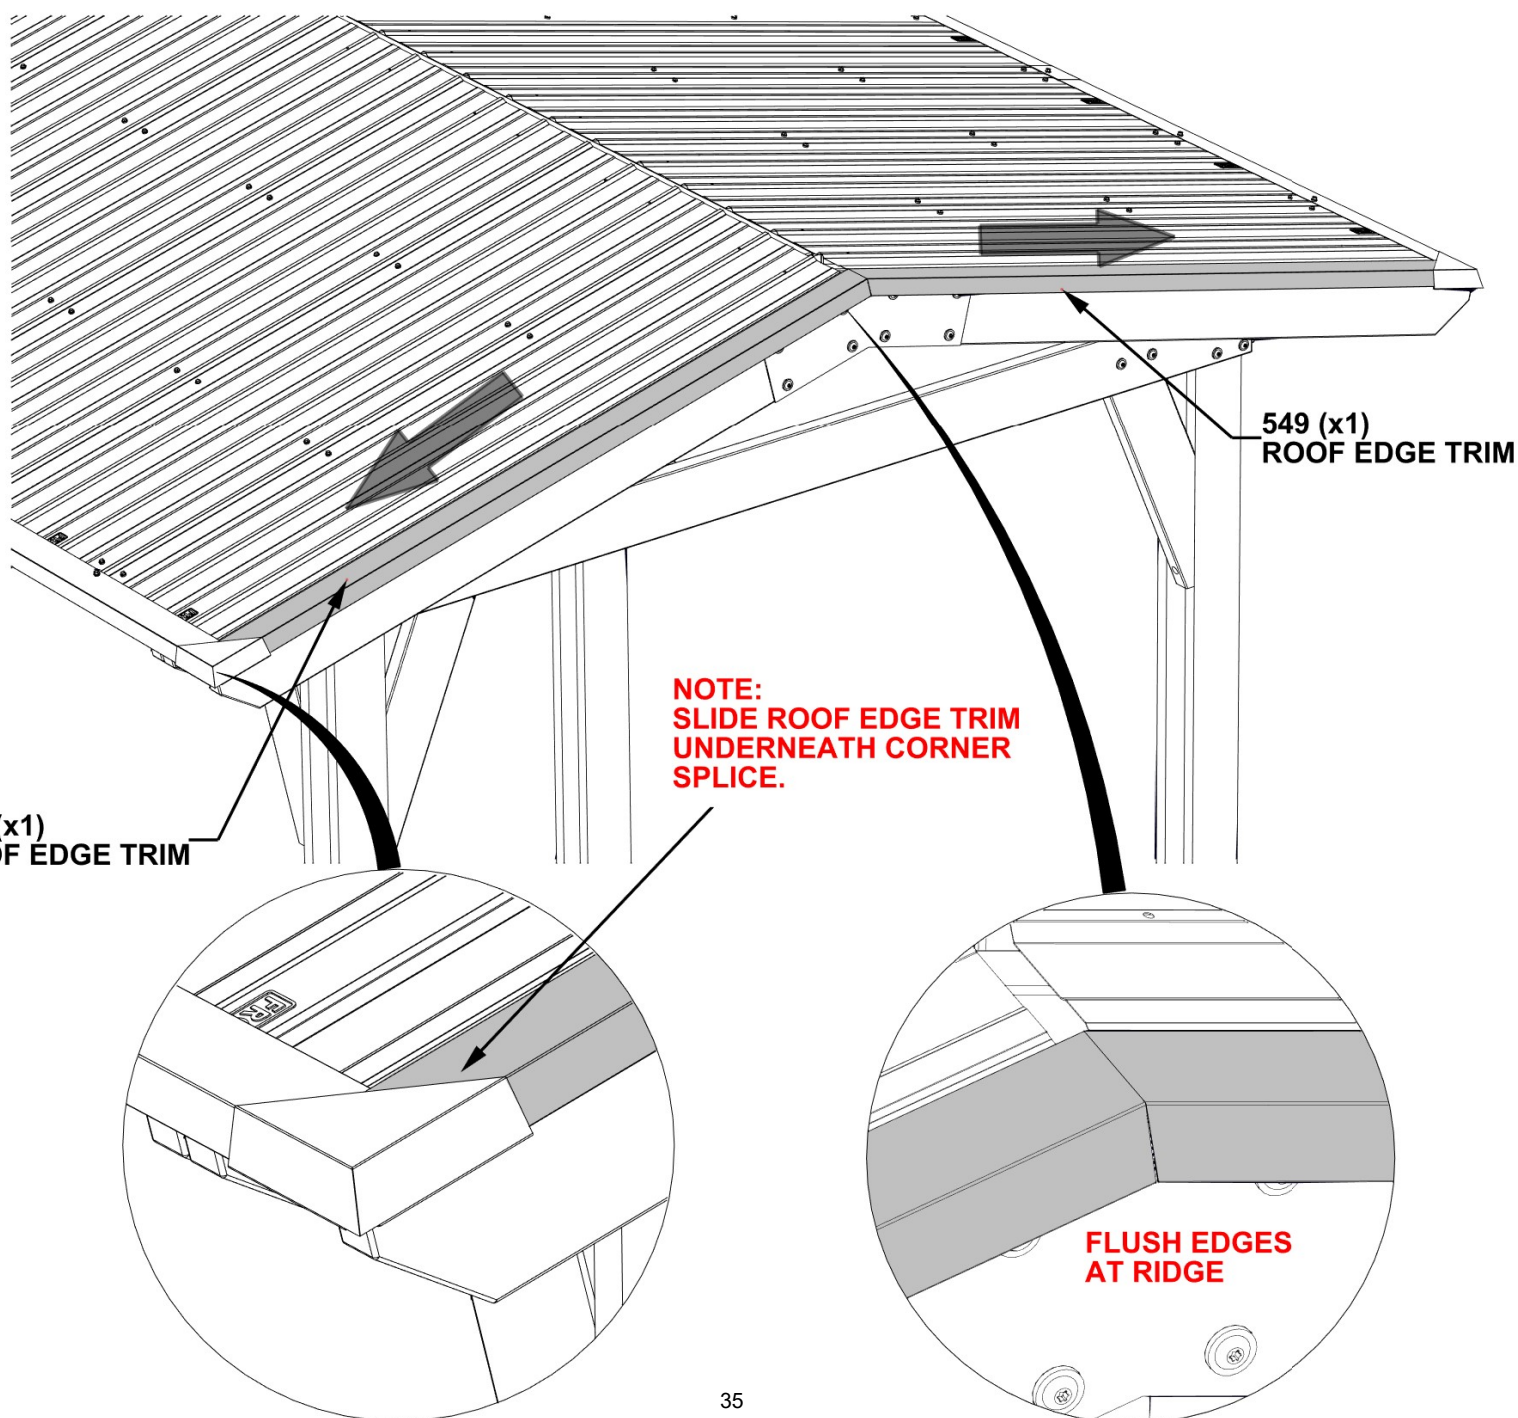


# STEP 25 - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION                   |
|-----|-------------|-------------------------------|
| 6   | H101116     | SCREW SELF TAPPING 1/4x1" BLK |

**NOTE:**  
BEFORE INSTALLING SCREWS, MAKE SURE  
EDGES ARE FLUSH AT TOP OF RIDGE.


**INSERT SCREWS AS SHOWN TO FASTEN  
TRIM PIECES. DO NOT OVERTIGHTEN.**

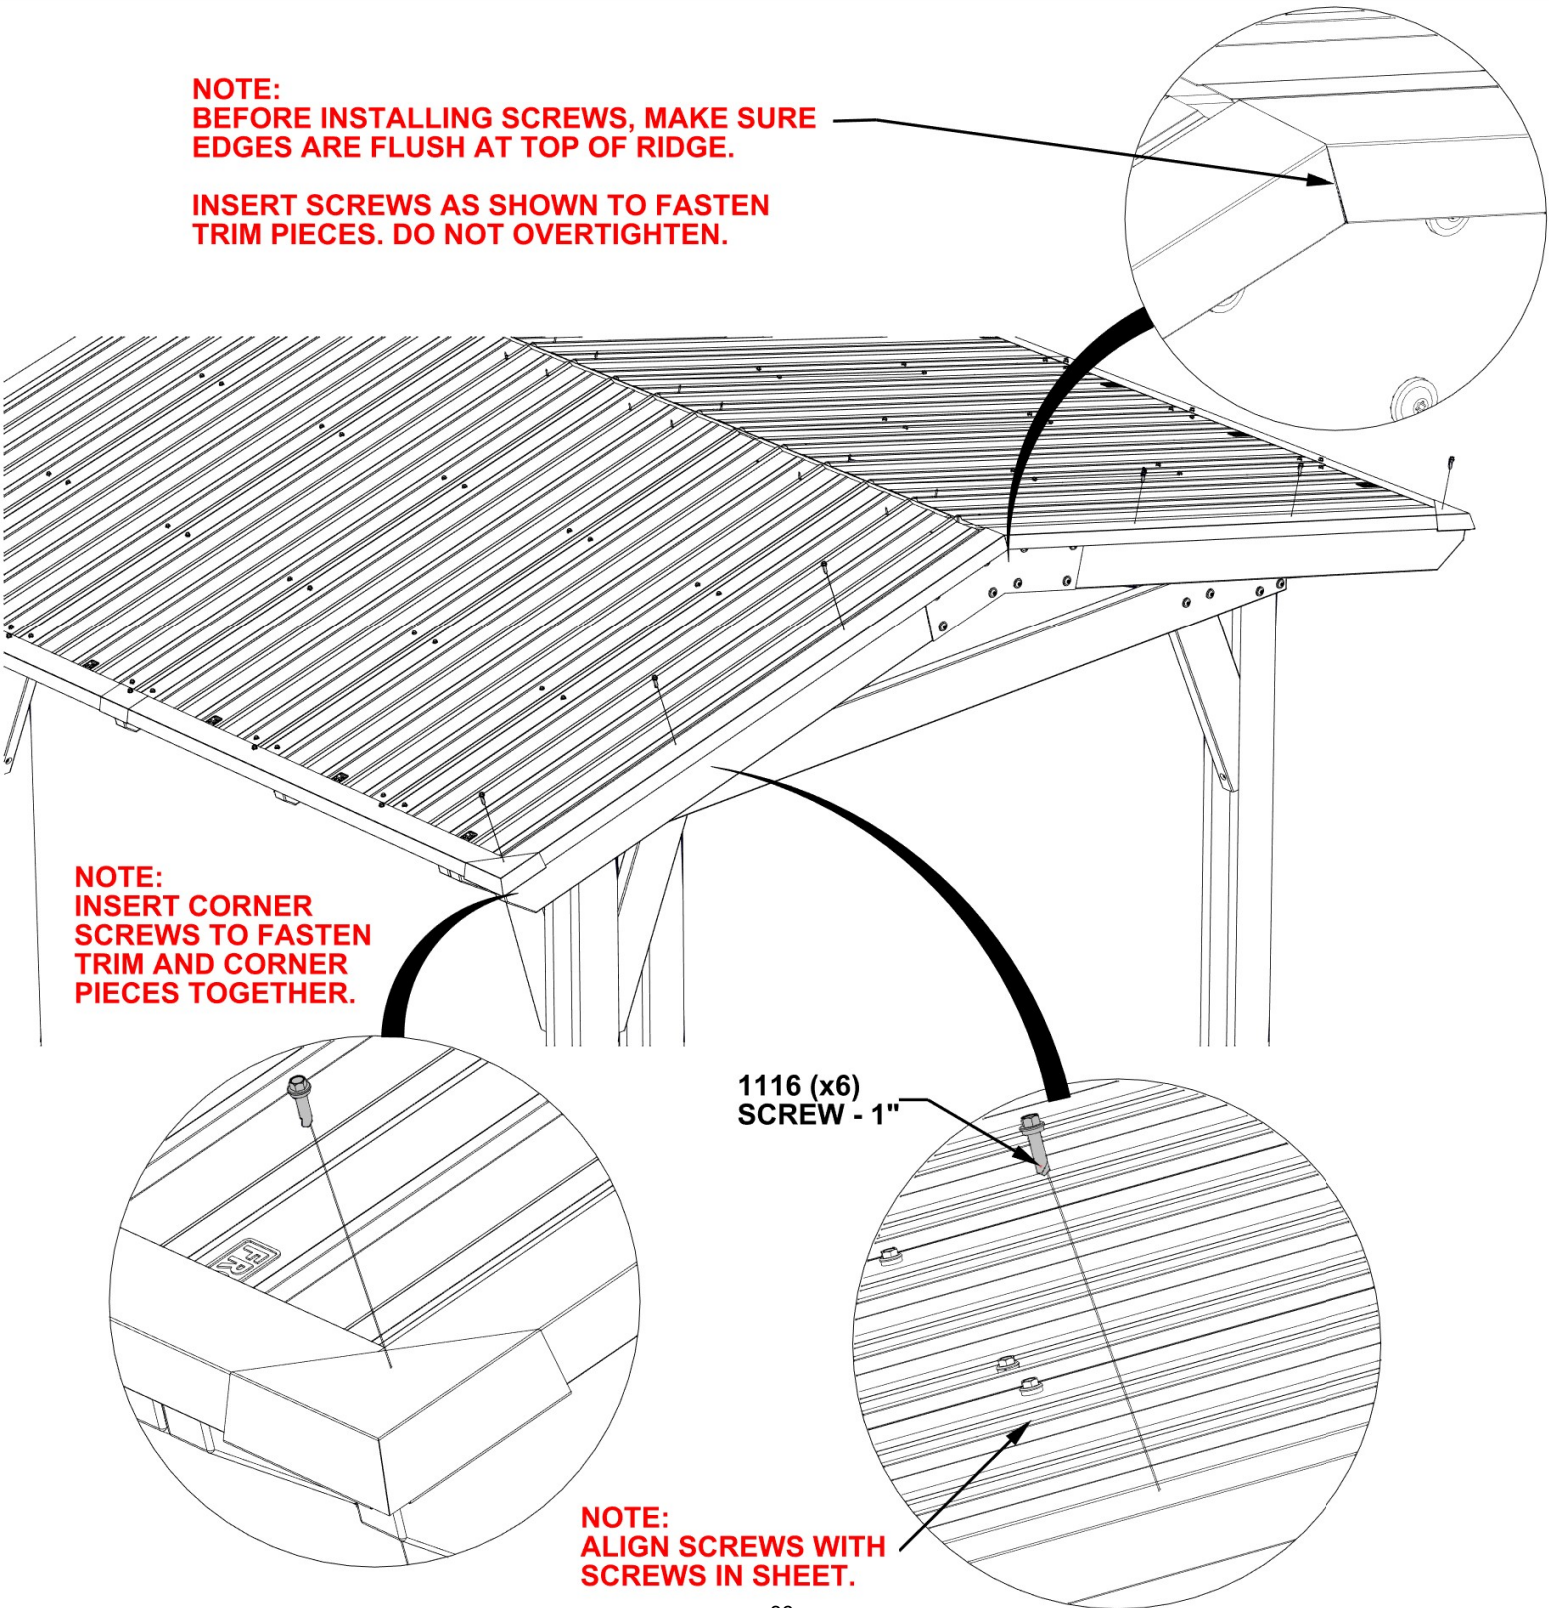


## **STEP 26 - GAZEBO ASSEMBLY**

**REPEAT STEPS 24-25 TO  
INSTALL ROOF EDGE  
TRIM ON OTHER SIDE**

## STEP 27 - GAZEBO ASSEMBLY

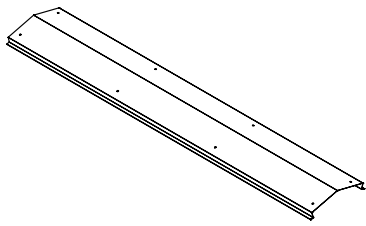


**A4M01557**  
(x2) | RIDGE CAP 29 GA

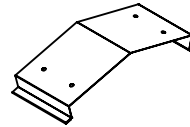

**A4M01556**  
(x1) | RIDGE CAP SPLICE

**SLIDE EACH RIDGE CAP INTO THE RIDGE CAP SPLICE UNTIL CENTERED.**

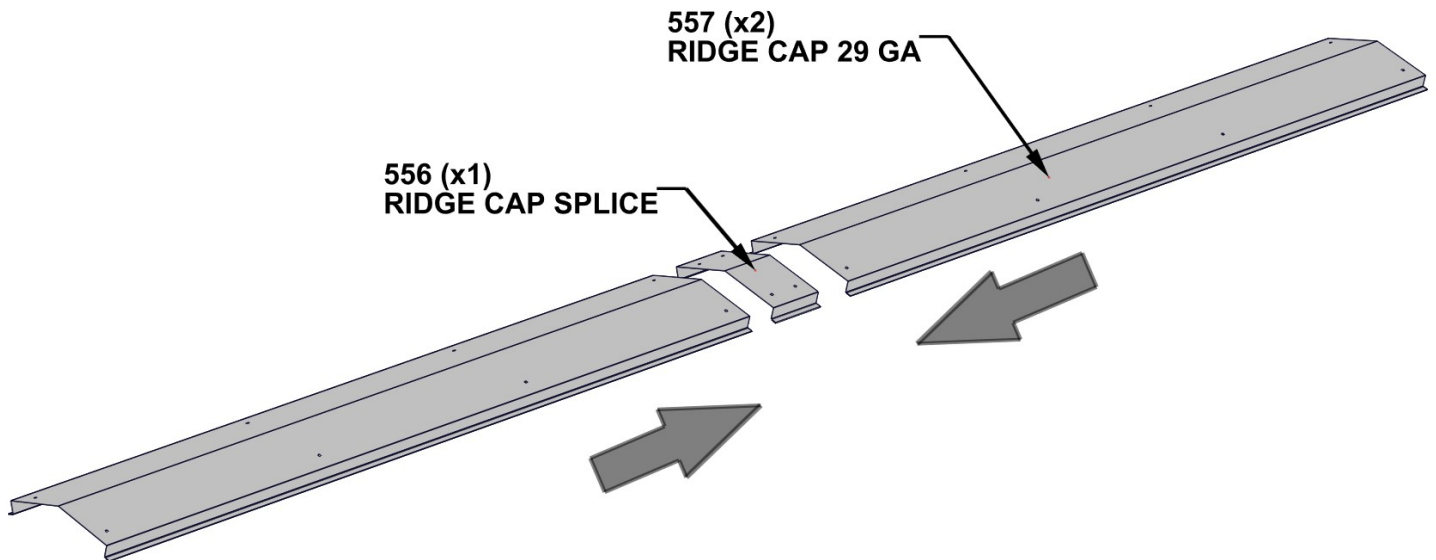




# STEP 28A - GAZEBO ASSEMBLY



J2| RIDGE CAP STIFFENER-W4L16374  
(x2)| 15/16"x2 3/8"x75 9/16" (24x60x1914)



J1| RIDGE CAP STIFFENER-W4L16373  
(x2)| 15/16"x2 3/8"x32 1/8" (24x60x810)

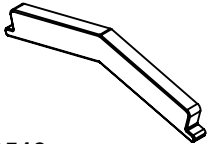

A6P00513  
(x2) | RIDGE CAP PROTECTOR


| QTY | PART NUMBER | DESCRIPTION                   |
|-----|-------------|-------------------------------|
| 16  | H101117     | SCREW WOODGRIP 10-16x3/4" BLK |

ASSEMBLE BY ALIGNING THE HOLES ON EACH RIDGE CAP TO THE HOLES IN THE RIDGE CAP SPLICE

FINAL LENGTH - 8'-11 3/8" [2728 mm]

REMOVE SPACER FROM RIDGE CAP PROTECTOR BEFORE INSTALLING

1117 (x16)  
SCREW - 3/4"

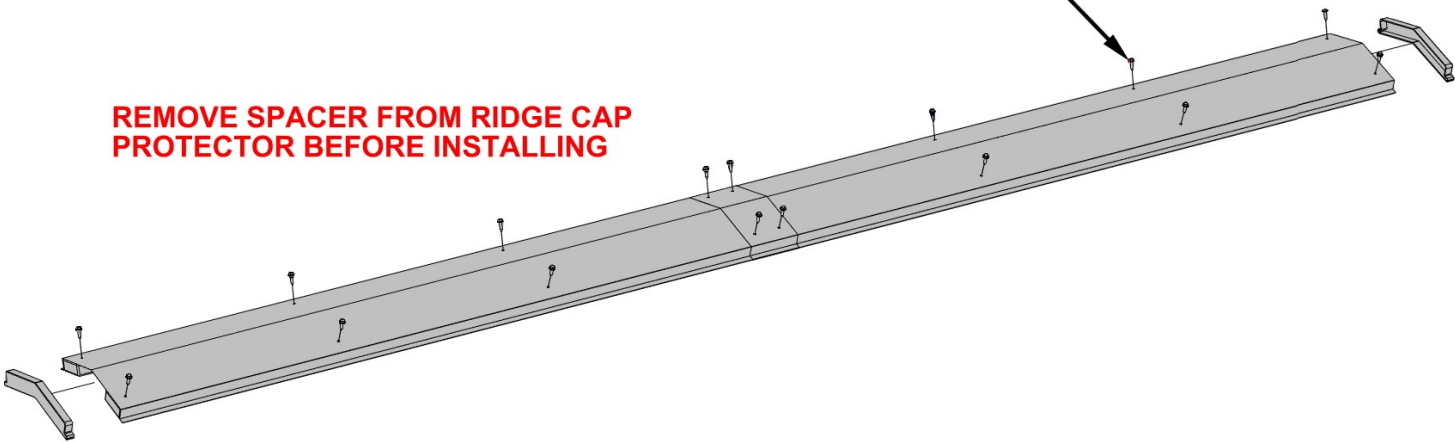

J2 (x1)  
RIDGE CAP STIFFENER


J1 (x1)  
RIDGE CAP STIFFENER

J1 (x1)  
RIDGE CAP STIFFENER

J2 (x1)  
RIDGE CAP STIFFENER


513 (x2)  
RIDGE CAP PROTECTOR

RIDGE CAP MUST BE LIFTED FROM THE MIDDLE TO PREVENT DAMAGE BEFORE INSTALLING

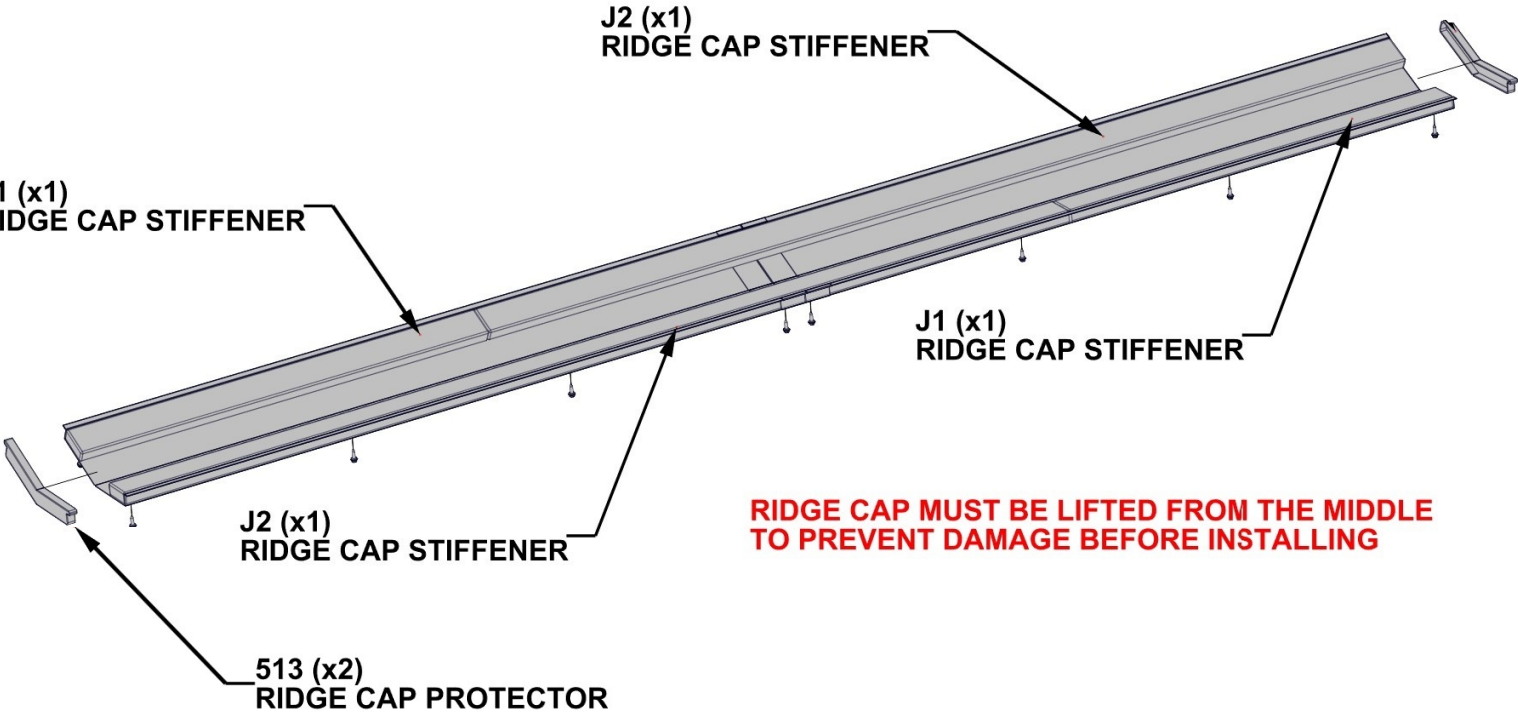



# STEP 28B - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 4   | H100395     | SCREW PFH 8x3/4 BLK |




RIDGE CAP ASSEMBLY FROM PREVIOUS STEP

**PRE-DRILL FOR EACH SCREW USING  
1/8" 3mm DRILL BIT. LOCATE SCREWS  
APPROXIMATELY AS SHOWN. THEN  
REPEAT FOR OTHER END OF THE RIDGE  
CAP ASSEMBLY.**

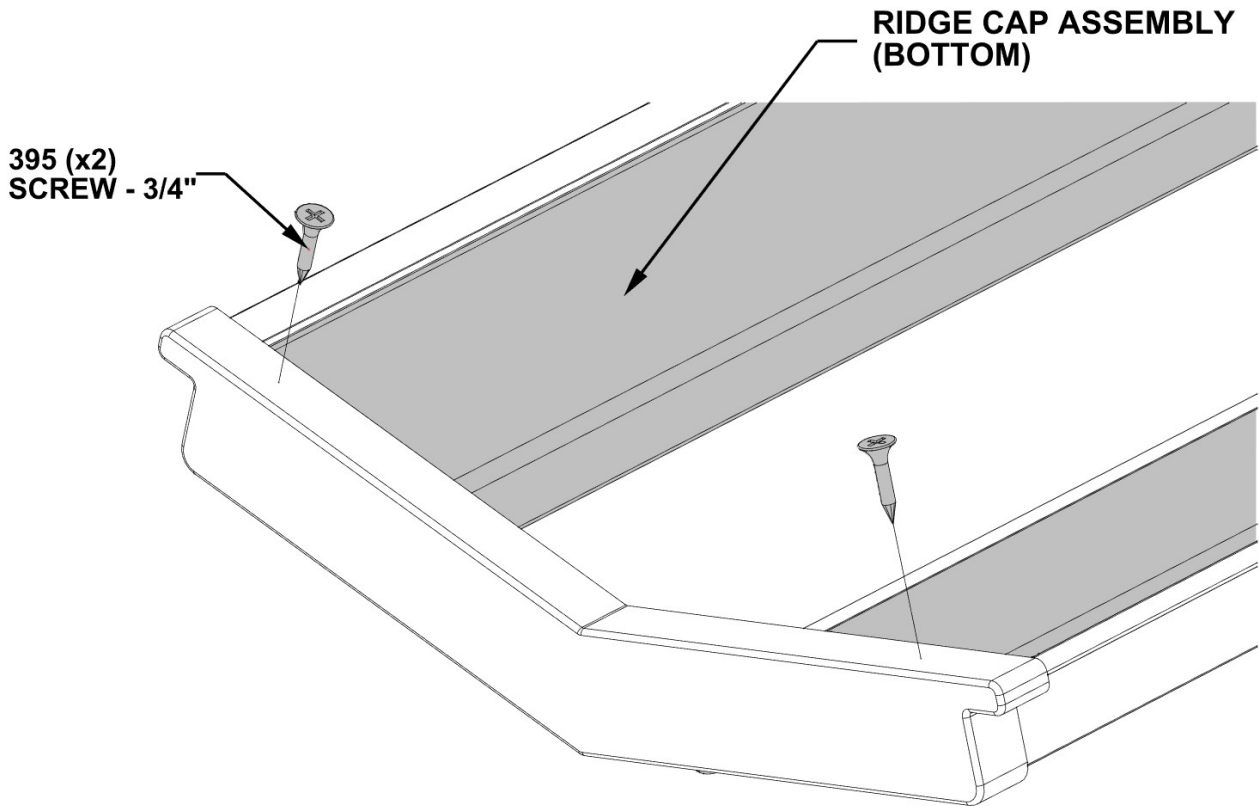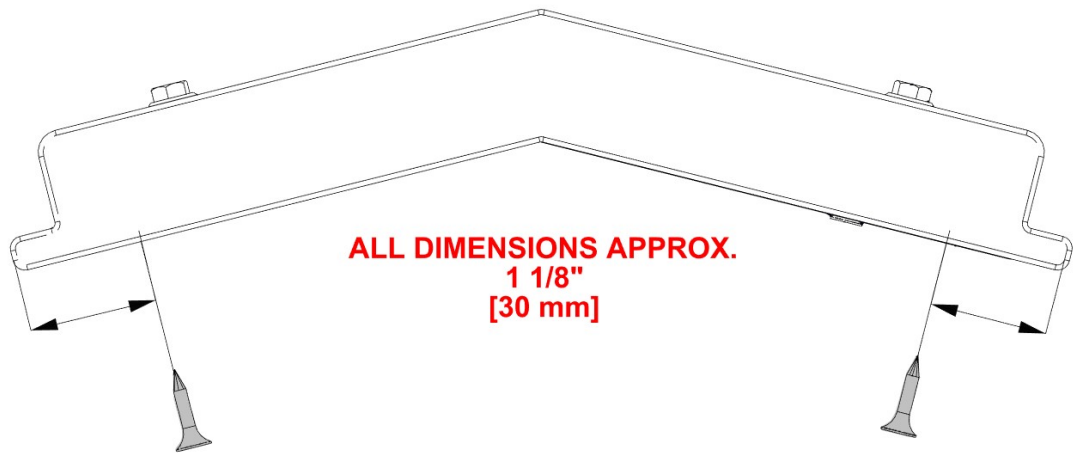



# STEP 29 - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 16  | H100392     | SCREW PWH 8x3/4 BLK |





RIDGE CAP ASSEMBLY FROM PREVIOUS STEP

**DO NOT CLIMB ON ROOF TO INSTALL:  
RIDGE CAP HAS BEEN DESIGNED TO  
INSTALL WITH THE USE OF A LADDER.**

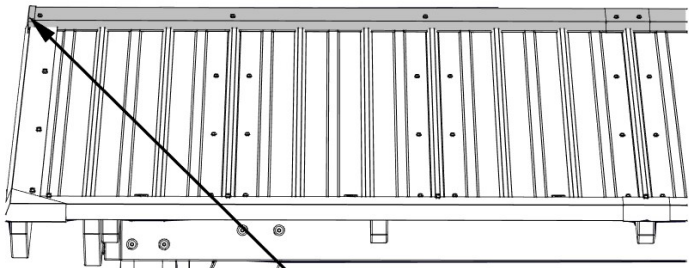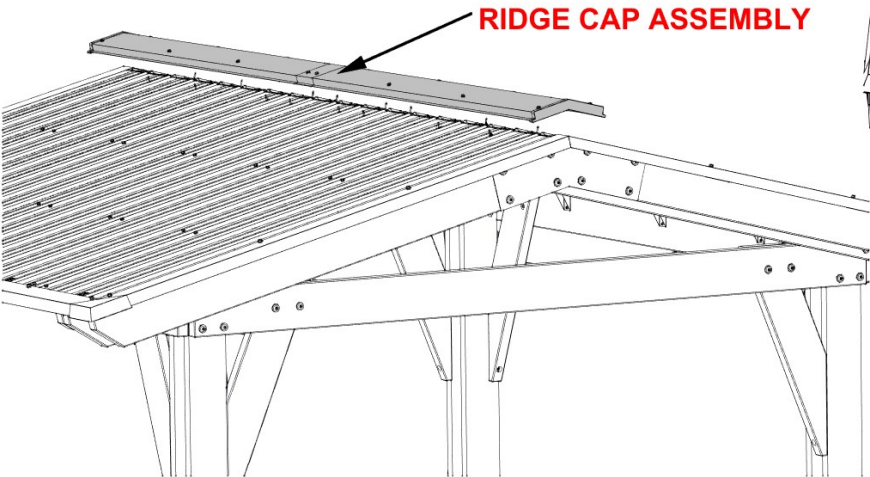

**USING AN ADULT HELPER, SLIDE RIDGE CAP  
ASSEMBLY ACROSS THE ROOF RIDGE UNTIL  
BOTH ENDS ARE FLUSH WITH OUTSIDE EDGE.**

**FOR PROPER INSTALLATION, USE AN ADULT  
HELPER TO KEEP DOWNWARD PRESSURE ON  
THE RIDGE CAP WHILE SCREWING IN SCREWS.**

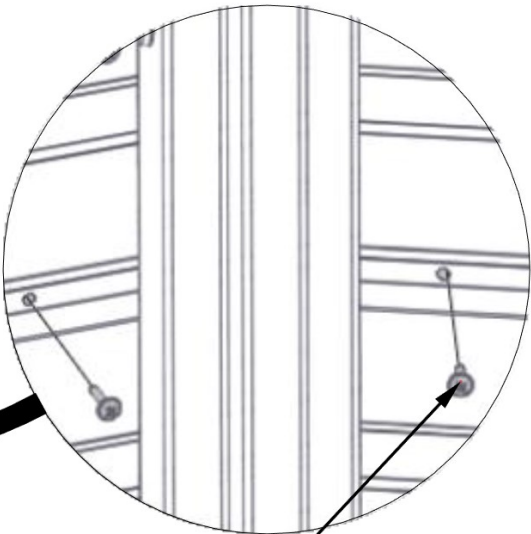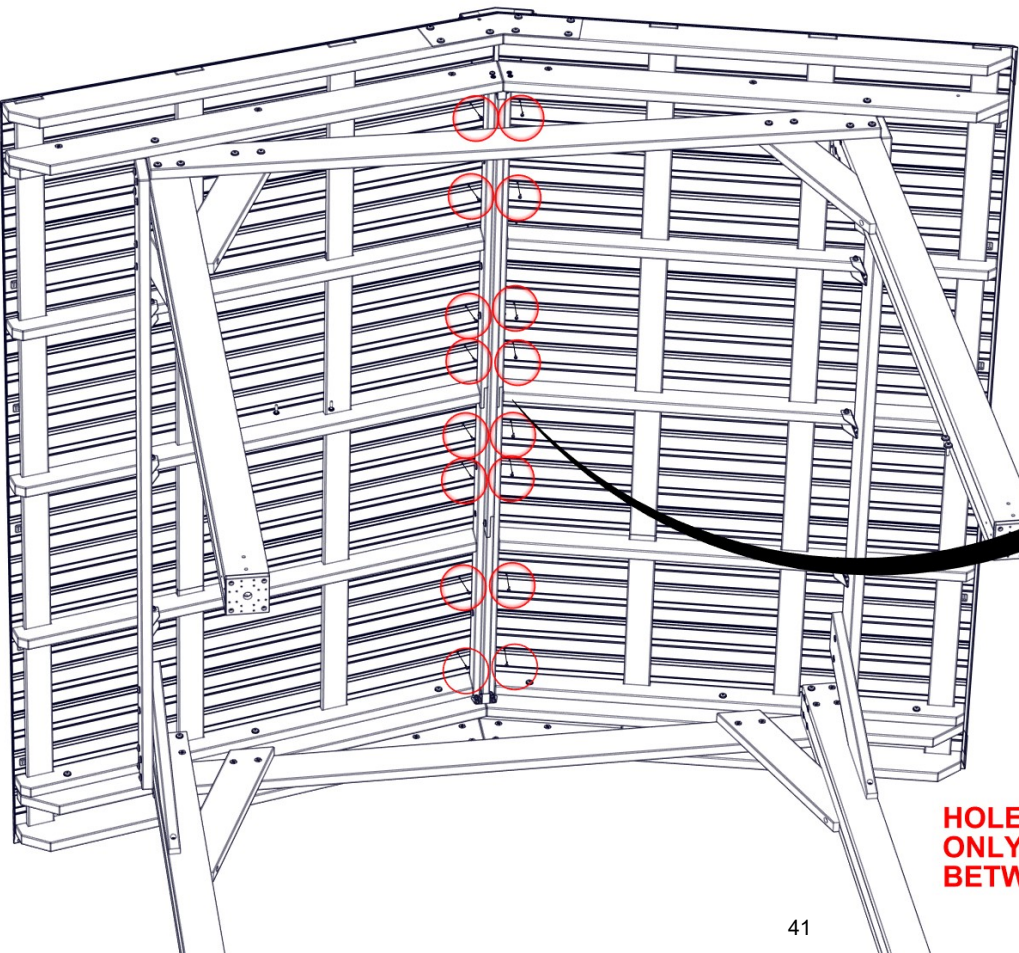

392 (x16)  
SCREW - 3/4"

**HOLES CLOSE TO RAFTERS ARE NOT USED.  
ONLY SCREW INTO HOLES CENTERED  
BETWEEN RAFTERS LIKE SHOWN.**



# STEP 30 - GAZEBO ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION                 |
|-----|-------------|-----------------------------|
| 8   | H100469     | NUT BARREL WH 5/16X5/8 BLK  |
| 8   | H100480     | BOLT WH 5/16x4 3/4 BLK      |
| 16  | H100471     | LAG SCREW WH 5/16x1 1/2 BLK |




A4M01477  
(x8) | POST PLATE



A4M01478  
(x8) | POST ANCHORING PLATE

**NOTES:**  
477 POST PLATES MOUNT ON LEFT AND RIGHT SIDE OF POST.  
478 ANCHORING PLATES MOUNT ON FRONT AND BACK OF POST.

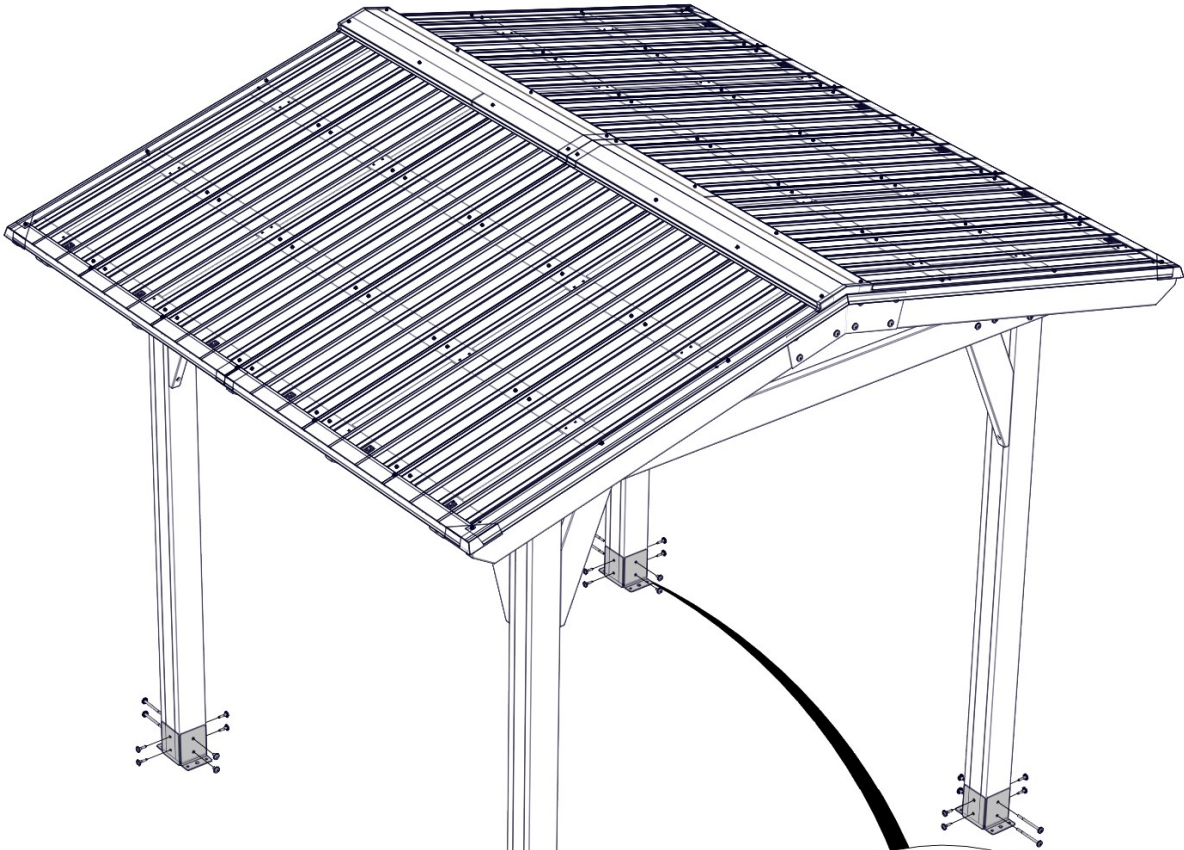

477 (x8)  
POST PLATE

469 (x8)  
BARREL NUT - 5/8"

480 (x8)  
BOLT - 4 3/4"

478 (x8)  
POST ANCHORING PLATE

471 (x16)  
LAG SCREW - 1 1/2"





# STEP 31 - GAZEBO ASSEMBLY



A100241  
(x1) | BYD ID TAG (SMALL) WITHOUT AGES

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 2   | H100392     | SCREW PWH 8x3/4 BLK |

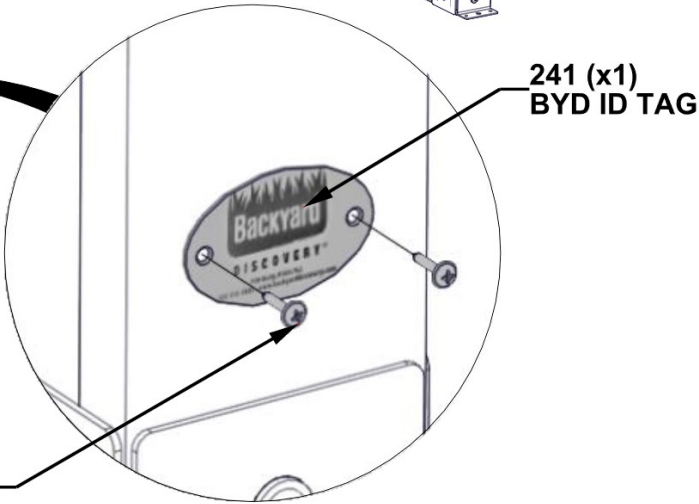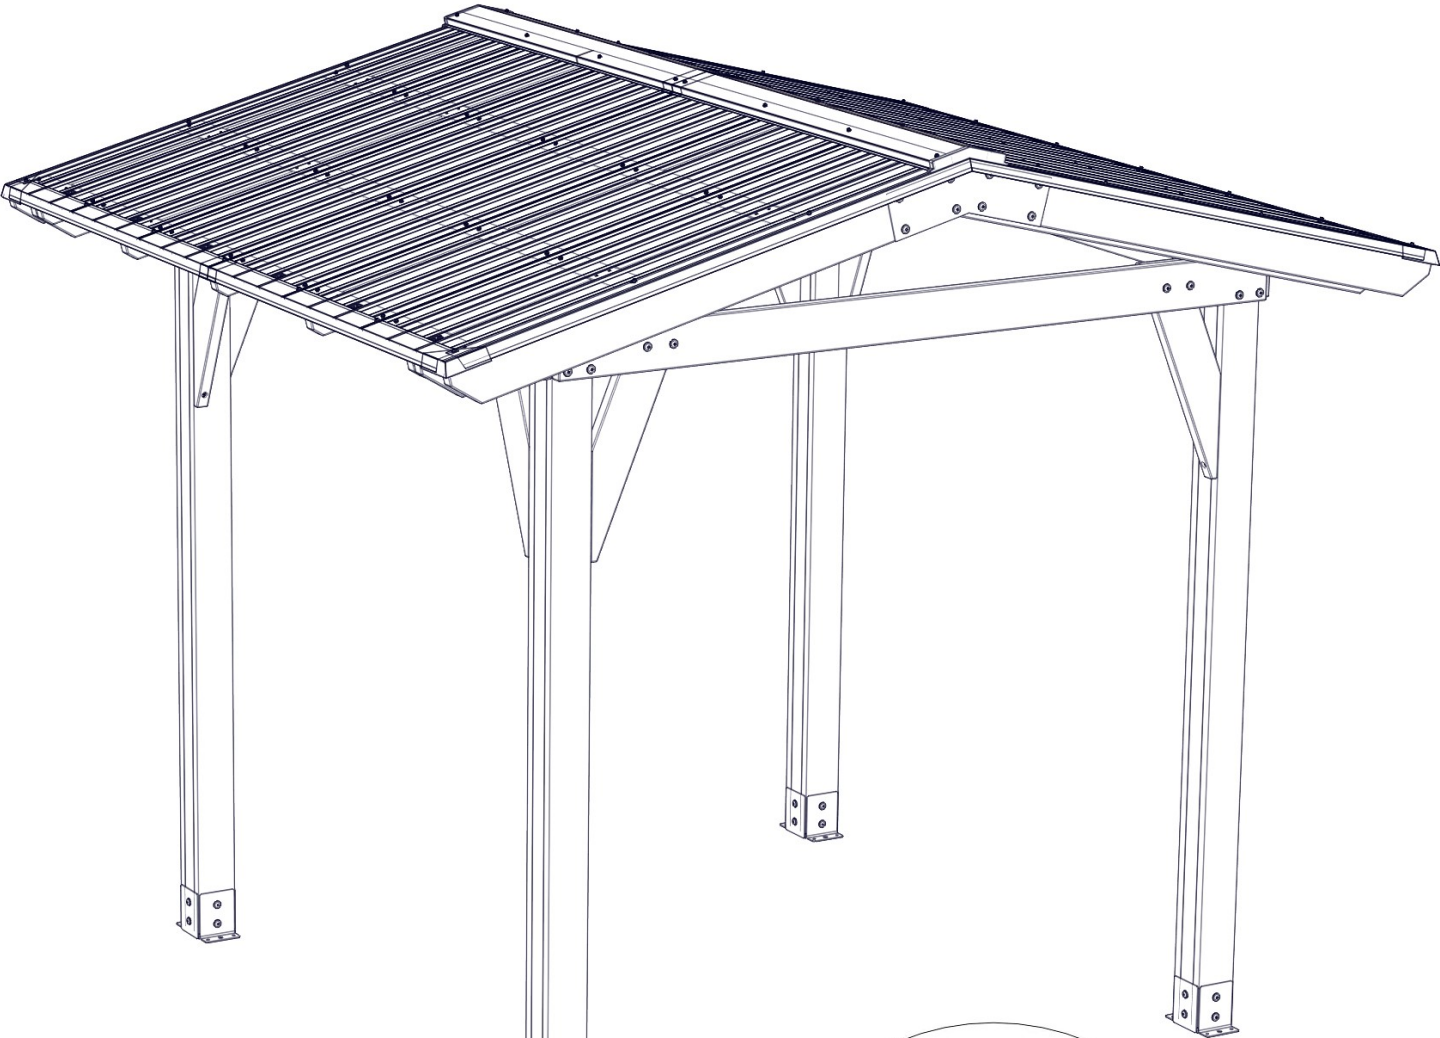

# **CUSTOMIZATION OF YOUR GRILL GAZEBO**

## **STEP 1: CHOOSE TABLE CONFIGURATION**

**ANGLE TABLE  
CONFIGURATION**



**SPLIT TABLE  
CONFIGURATION**




# CUSTOMIZATION OF YOUR GRILL GAZEBO

## STEP 2: CHOOSE TABLE SURFACE HEIGHT

STANDARD BAR  
HEIGHT



STANDARD COUNTERTOP  
HEIGHT

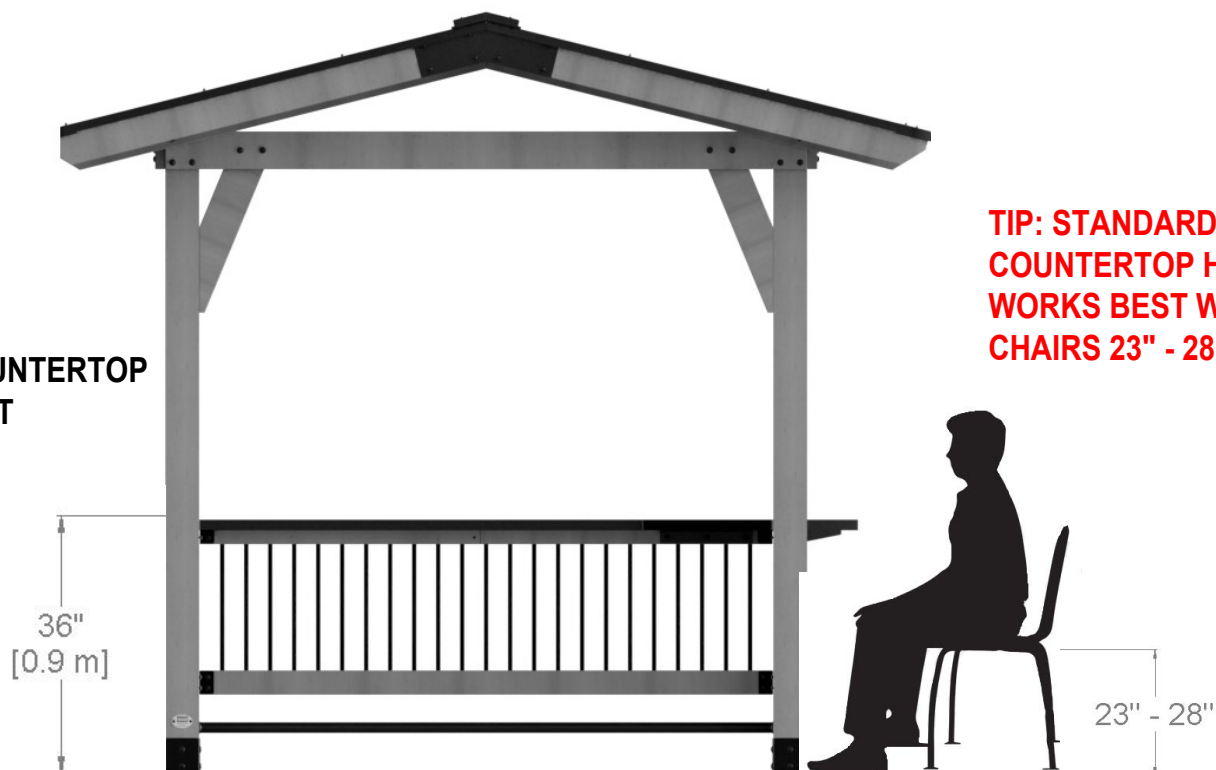


## STEP 3A: CONSUMER DRILL TEMPLATE

USE TEMPLATE TO PRE-DRILL PILOT HOLES ON POST  
**(DON'T DRILL UNTIL STEP 3B)**


- ALL PILOT HOLES SHOULD BE DRILLED USING A **6mm [1/4 in] DRILL BIT AT A DEPTH OF 15mm [5/8 in]**.
- USE FRONT SIDE OF TEMPLATE FOR STANDARD BAR HEIGHT OR BACK SIDE FOR STANDARD COUNTERTOP HEIGHT.
- MAKE SURE YOU ARE USING THE CORRECT DRILL TEMPLATE FOR YOUR SELECTED TABLE HEIGHT.
- PILOT HOLE TEMPLATE WILL REST DIRECTLY ON THE TOP EDGE OF THE METAL POST PLATE.

**NOTE: DRILL TEMPLATE WILL BE USED MULTIPLE TIMES AND MUST BE RETAINED THROUGHOUT ENTIRE ASSEMBLY.**

### STANDARD BAR HEIGHT TEMPLATE

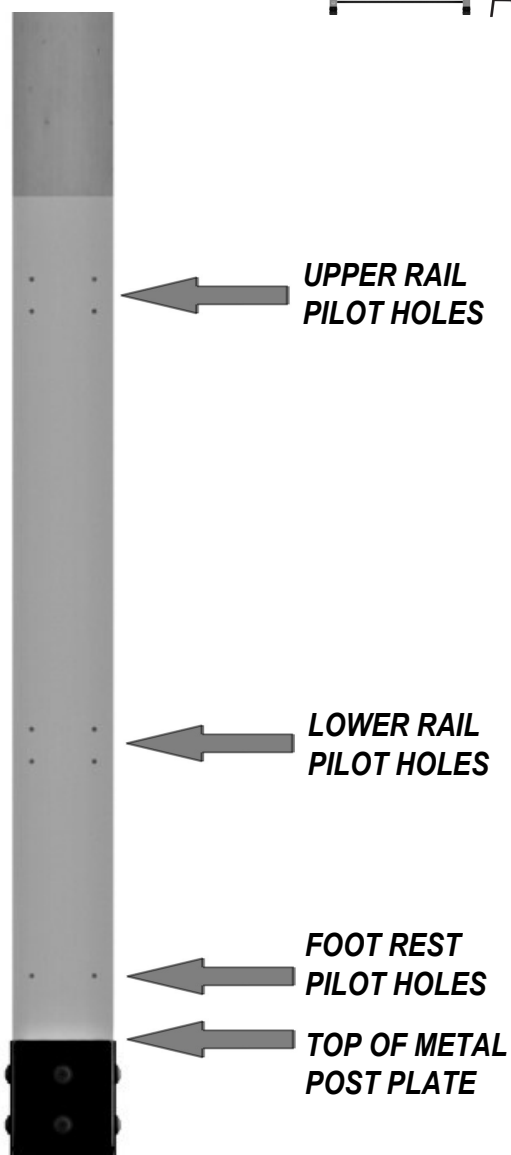

### STANDARD COUNTERTOP HEIGHT TEMPLATE

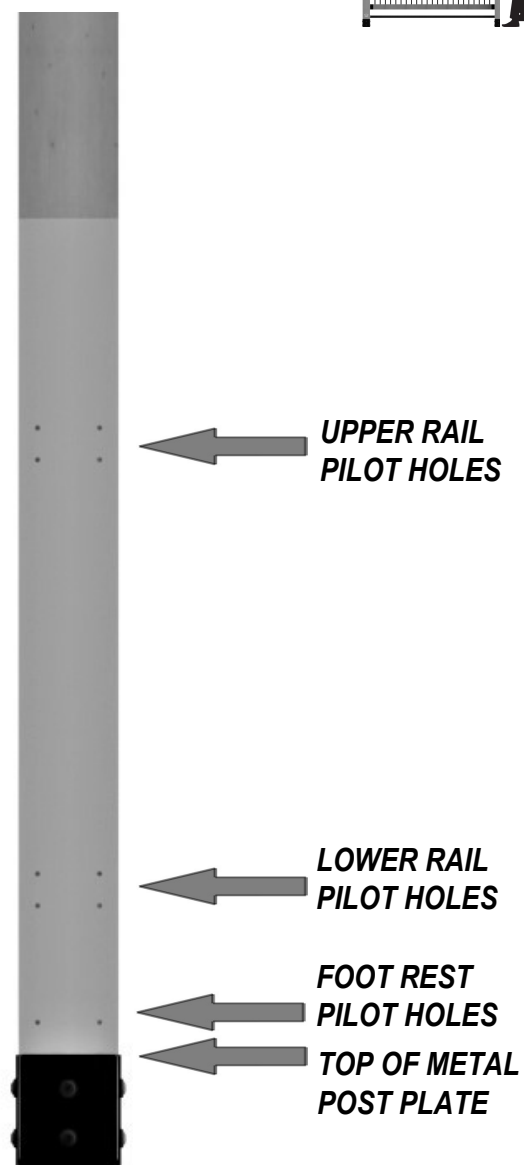




## STEP 3B: CONSUMER DRILL TEMPLATE - AERIAL VIEW


- LOCATE DRILL DIAGRAM FOR THE CONFIGURATION OF YOUR CHOOSING BELOW.
- ALIGN DRILL TEMPLATE AT ARROW LOCATION ON SIDE OF POST OF YOUR CHOOSING. DRILL PILOT HOLES USING A **6mm [1/4 in] DRILL BIT AT A DEPTH OF 15mm [5/8 in]**. REPEAT FOR ALL ARROW LOCATIONS.

**NOTE: ARROW ORIENTATION CAN BE OFF ANY POST FOR EACH CONFIGURATION.**

### ANGLE TABLE CONFIGURATION

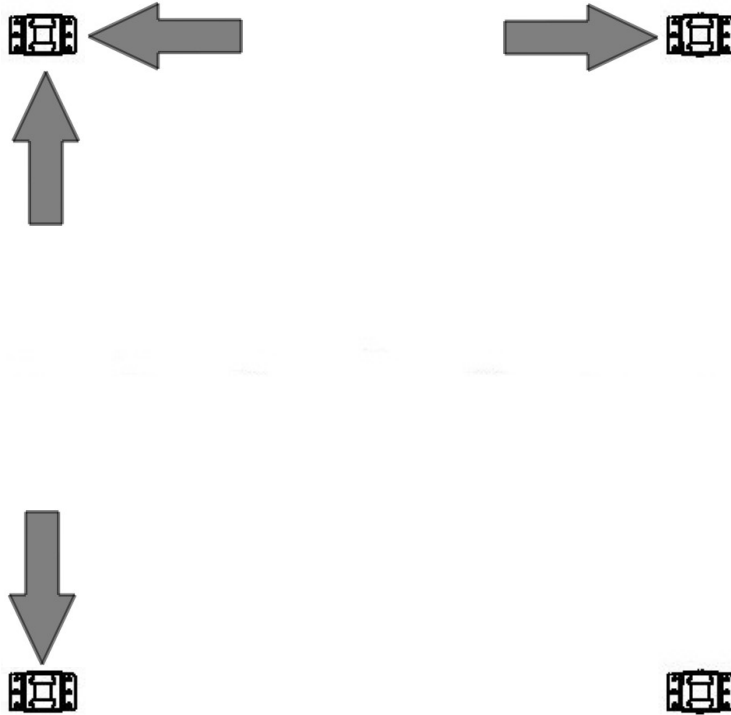

### SPLIT TABLE CONFIGURATION

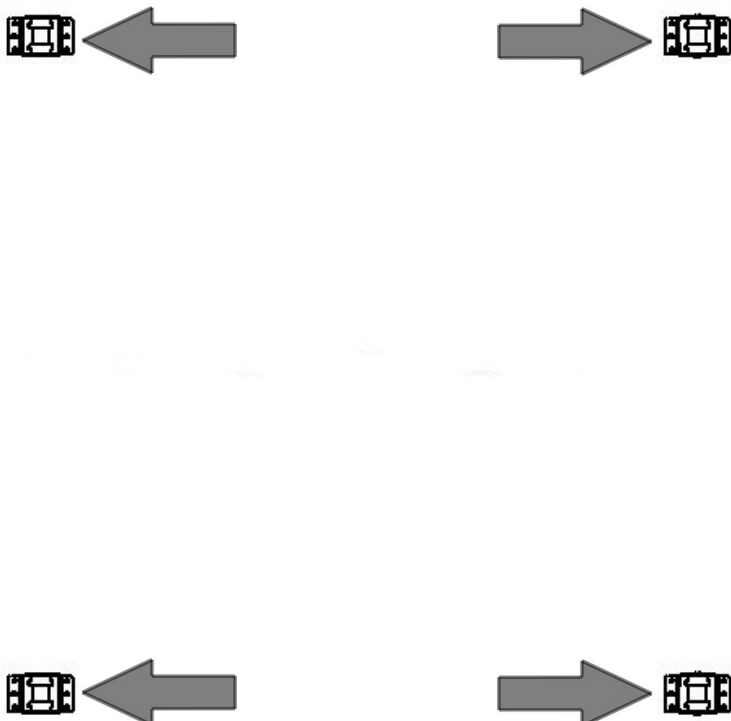

**IF CHOOSING ANGLE TABLE CONFIGURATION, COMPLETE  
STEPS 4-22.**



**IF CHOOSING SPLIT TABLE CONFIGURATION, SKIP TO  
STEPS 23-37.**



# ANGLE TABLE CONFIGURATION


## COMPLETE STEPS 4-22

NOTE: TABLE RAILS CAN BE ORIENTED OFF ANY POST.



STEP 4 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)




E1 | RAIL-W4L16362  
(x2) | 1 7/16"x3 3/8"x80" (36x86x2032)



A4M00855 | L BRACKET  
(x8) | 55x32x82x3.175

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 8   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 8   | H100459     | BOLT WH 5/16x1 1/4 BLK     |


COMPLETE THIS STEP TWICE

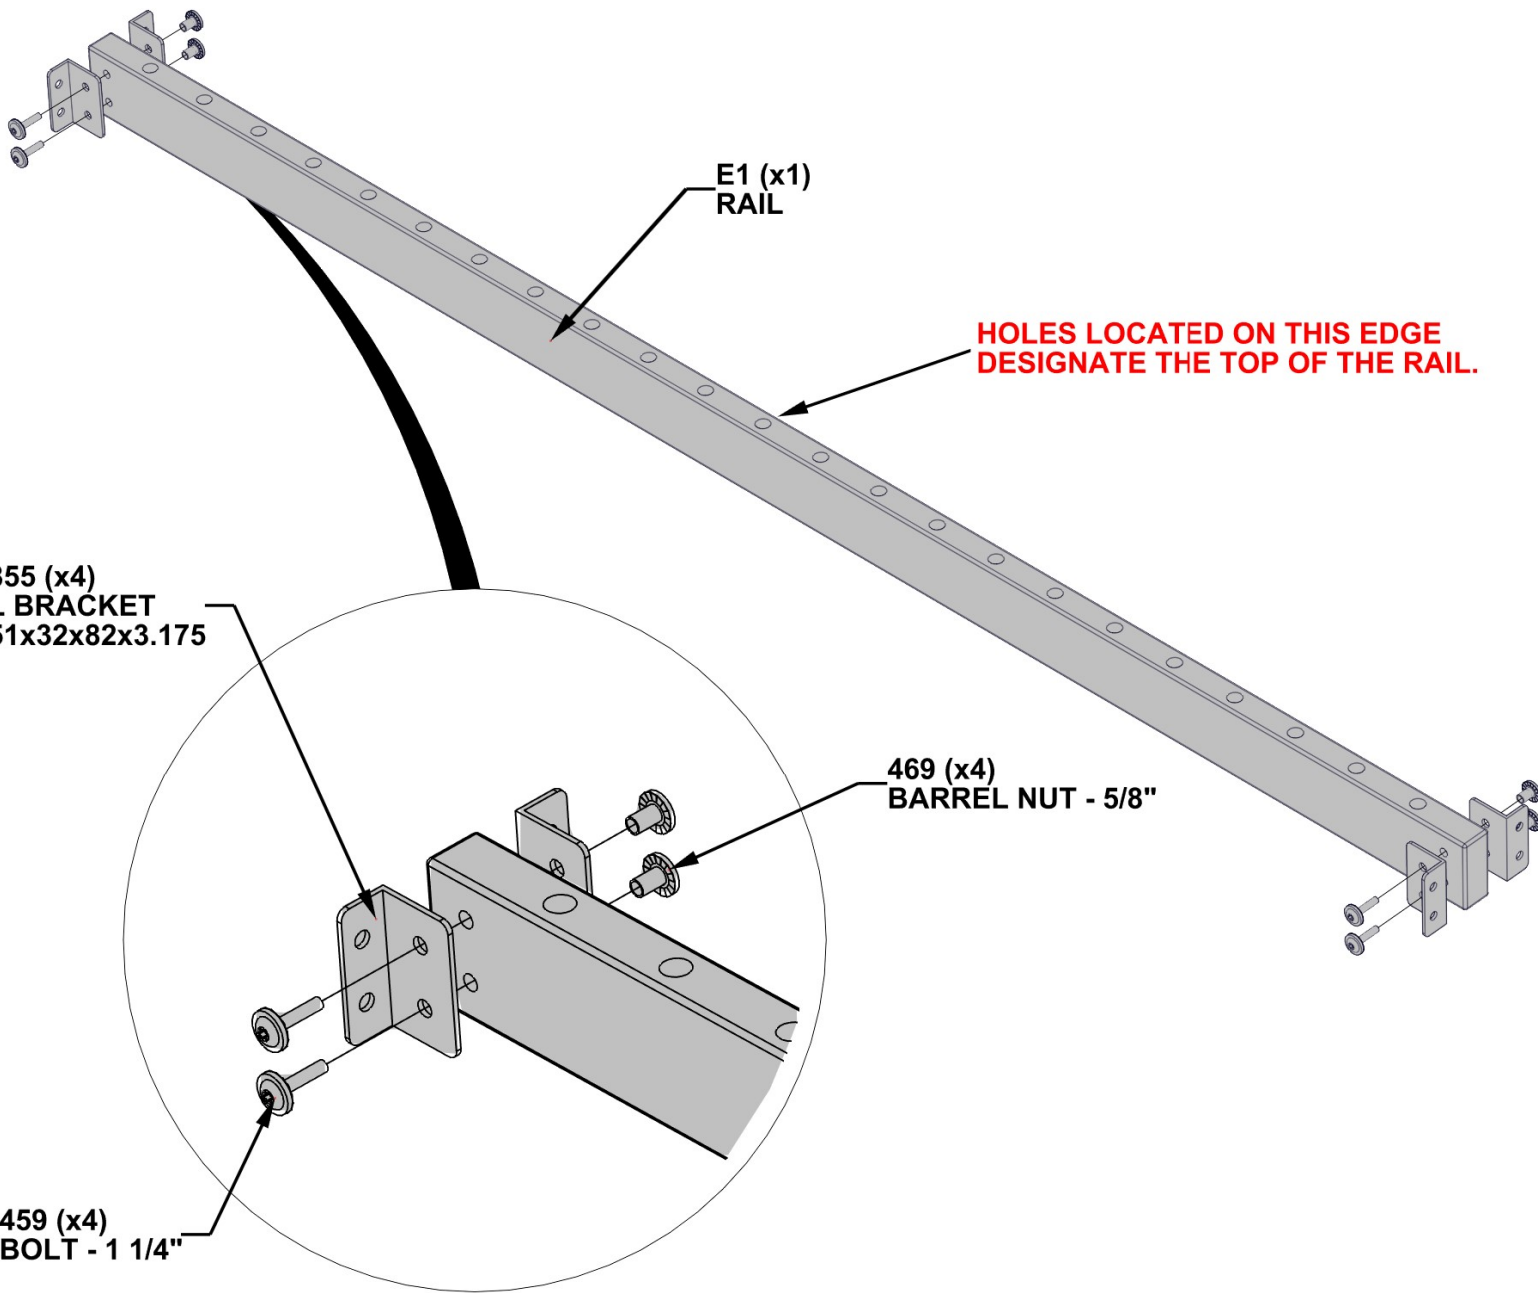




**STEP 5 - GAZEBO ASSEMBLY**

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

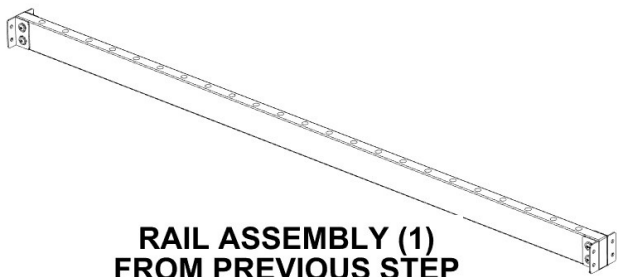


| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 8   | H100854     | LAG SCREW WH 5/16x1 BLK |

**RAIL ASSEMBLY (1)  
FROM PREVIOUS STEP**

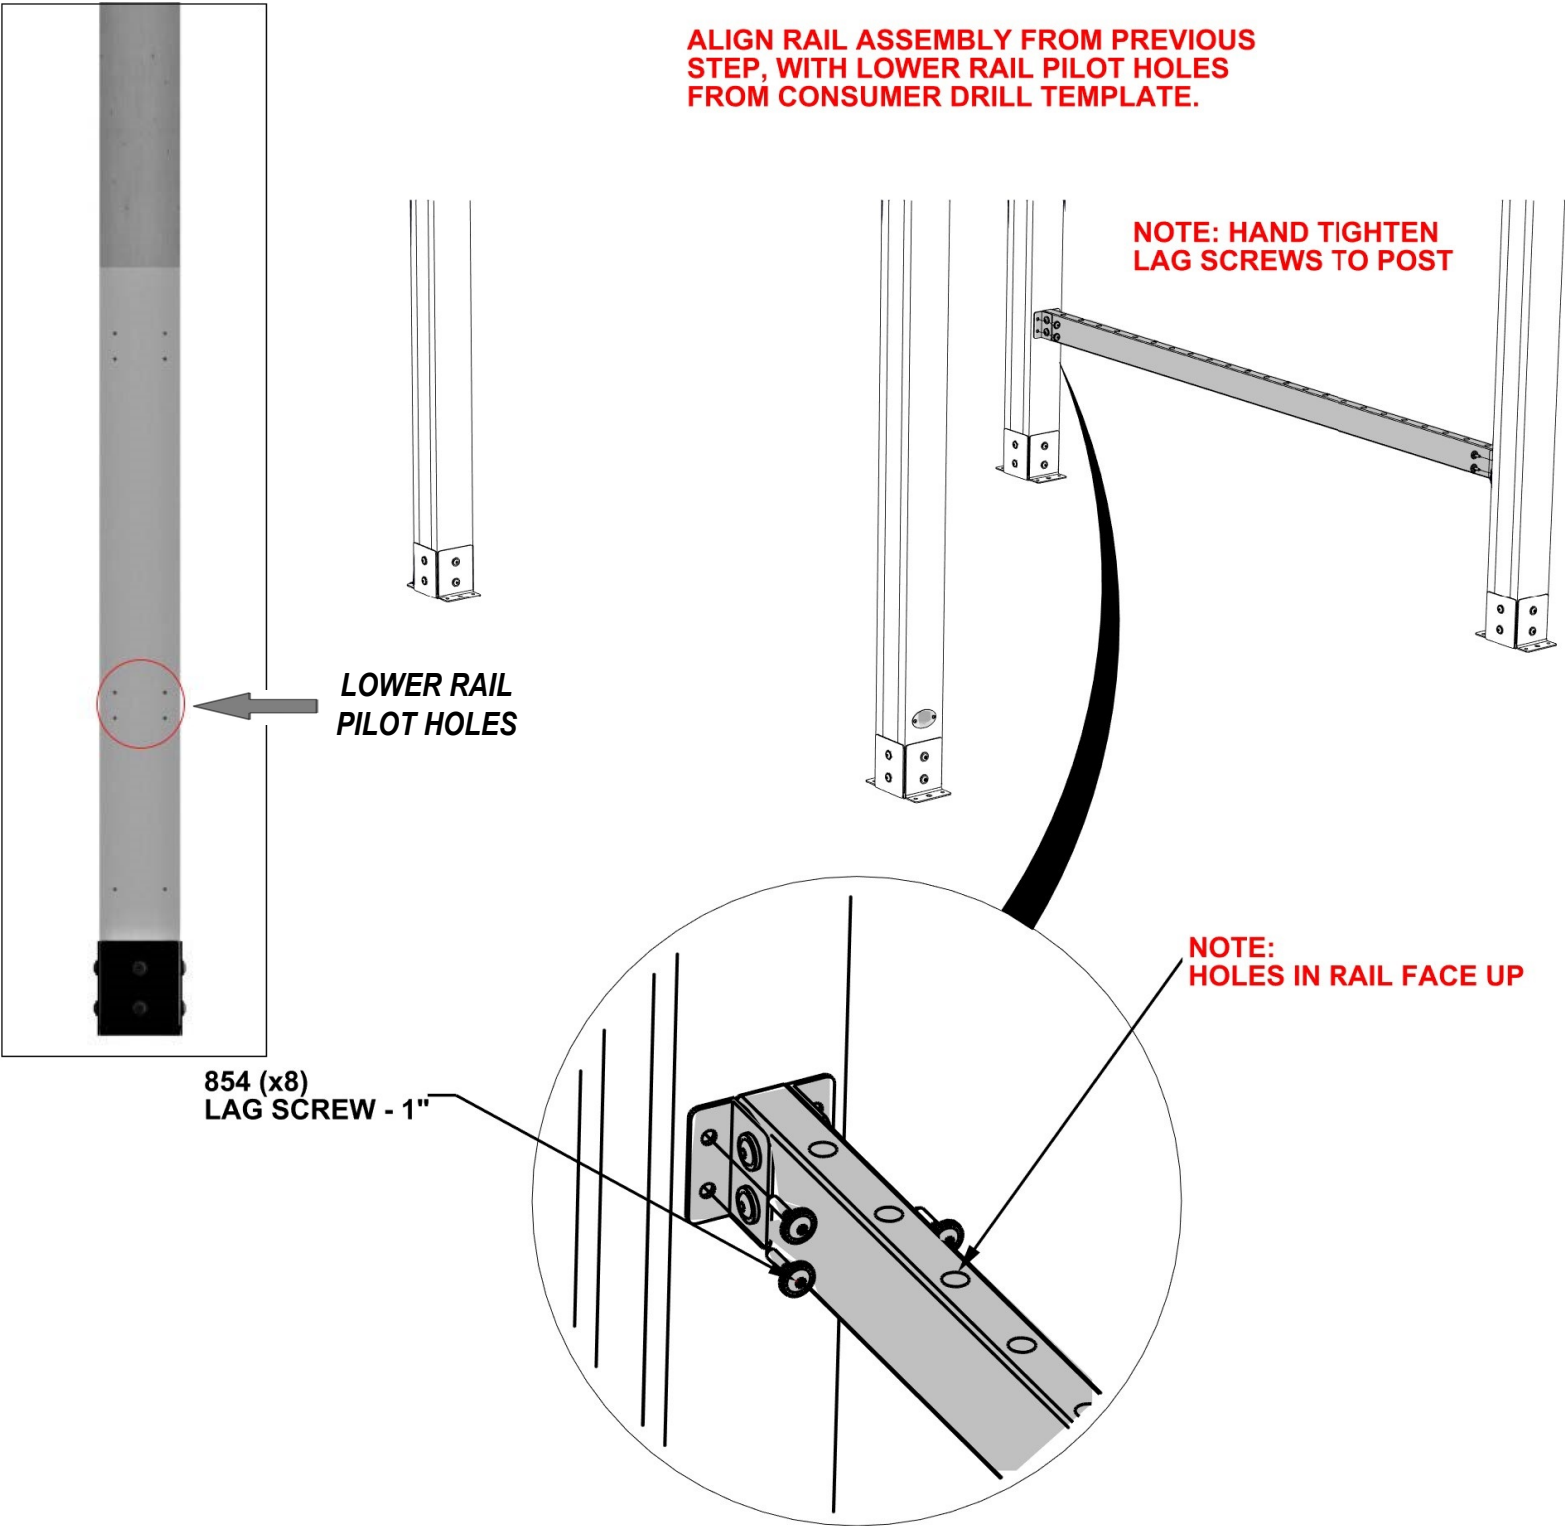


## STEP 6 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

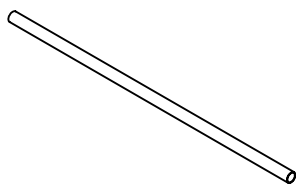


A4M01225  
(x23) | METAL TUBE

PLACE METAL TUBES INTO BOTTOM BOARD OF RAIL ASSEMBLY

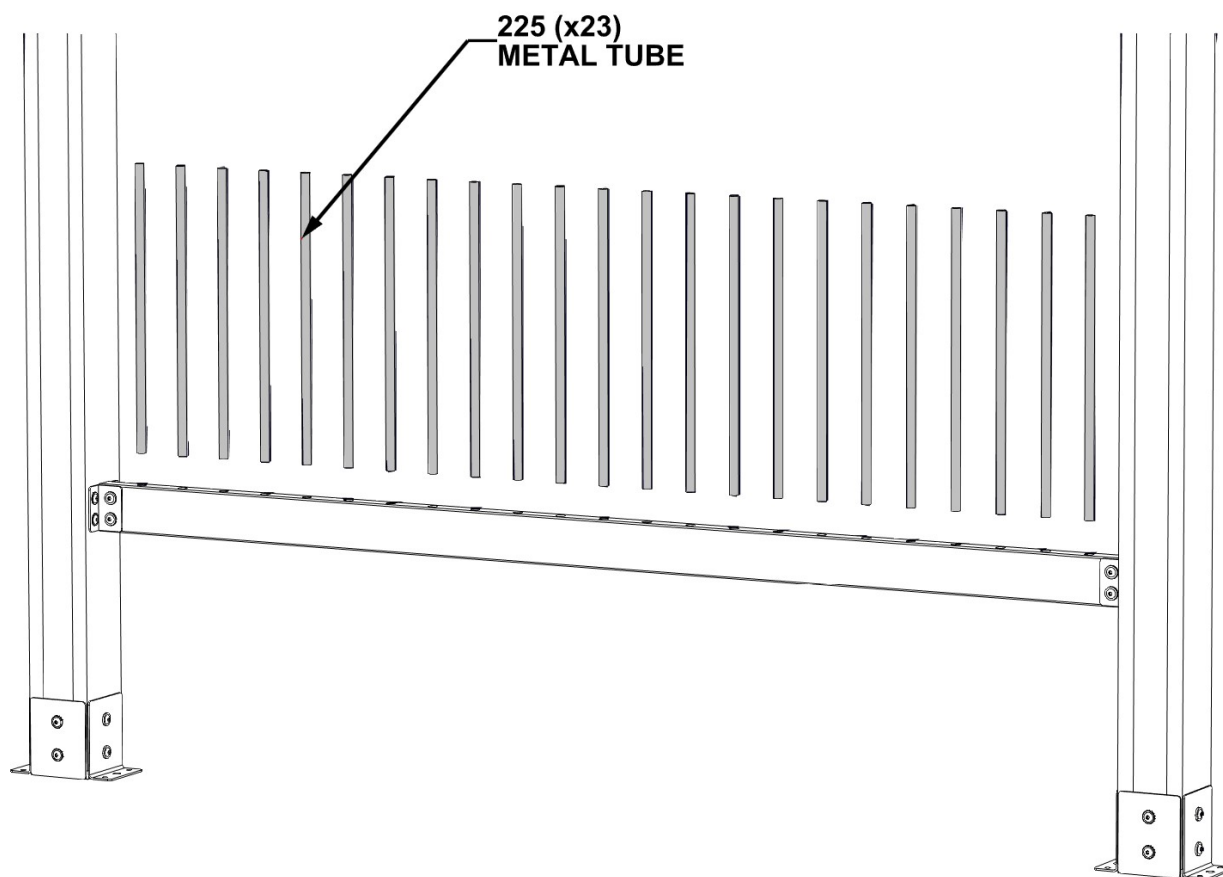


STEP 7 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)




A4M00855 | L BRACKET  
(x1) | 55x32x82x3.175

A4M01223  
(x1) | L BRACKET




E2 | RAIL-W4L16363  
(x1) | 1 7/16"x3 3/8"x42 7/16" (36x86x1078)

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |

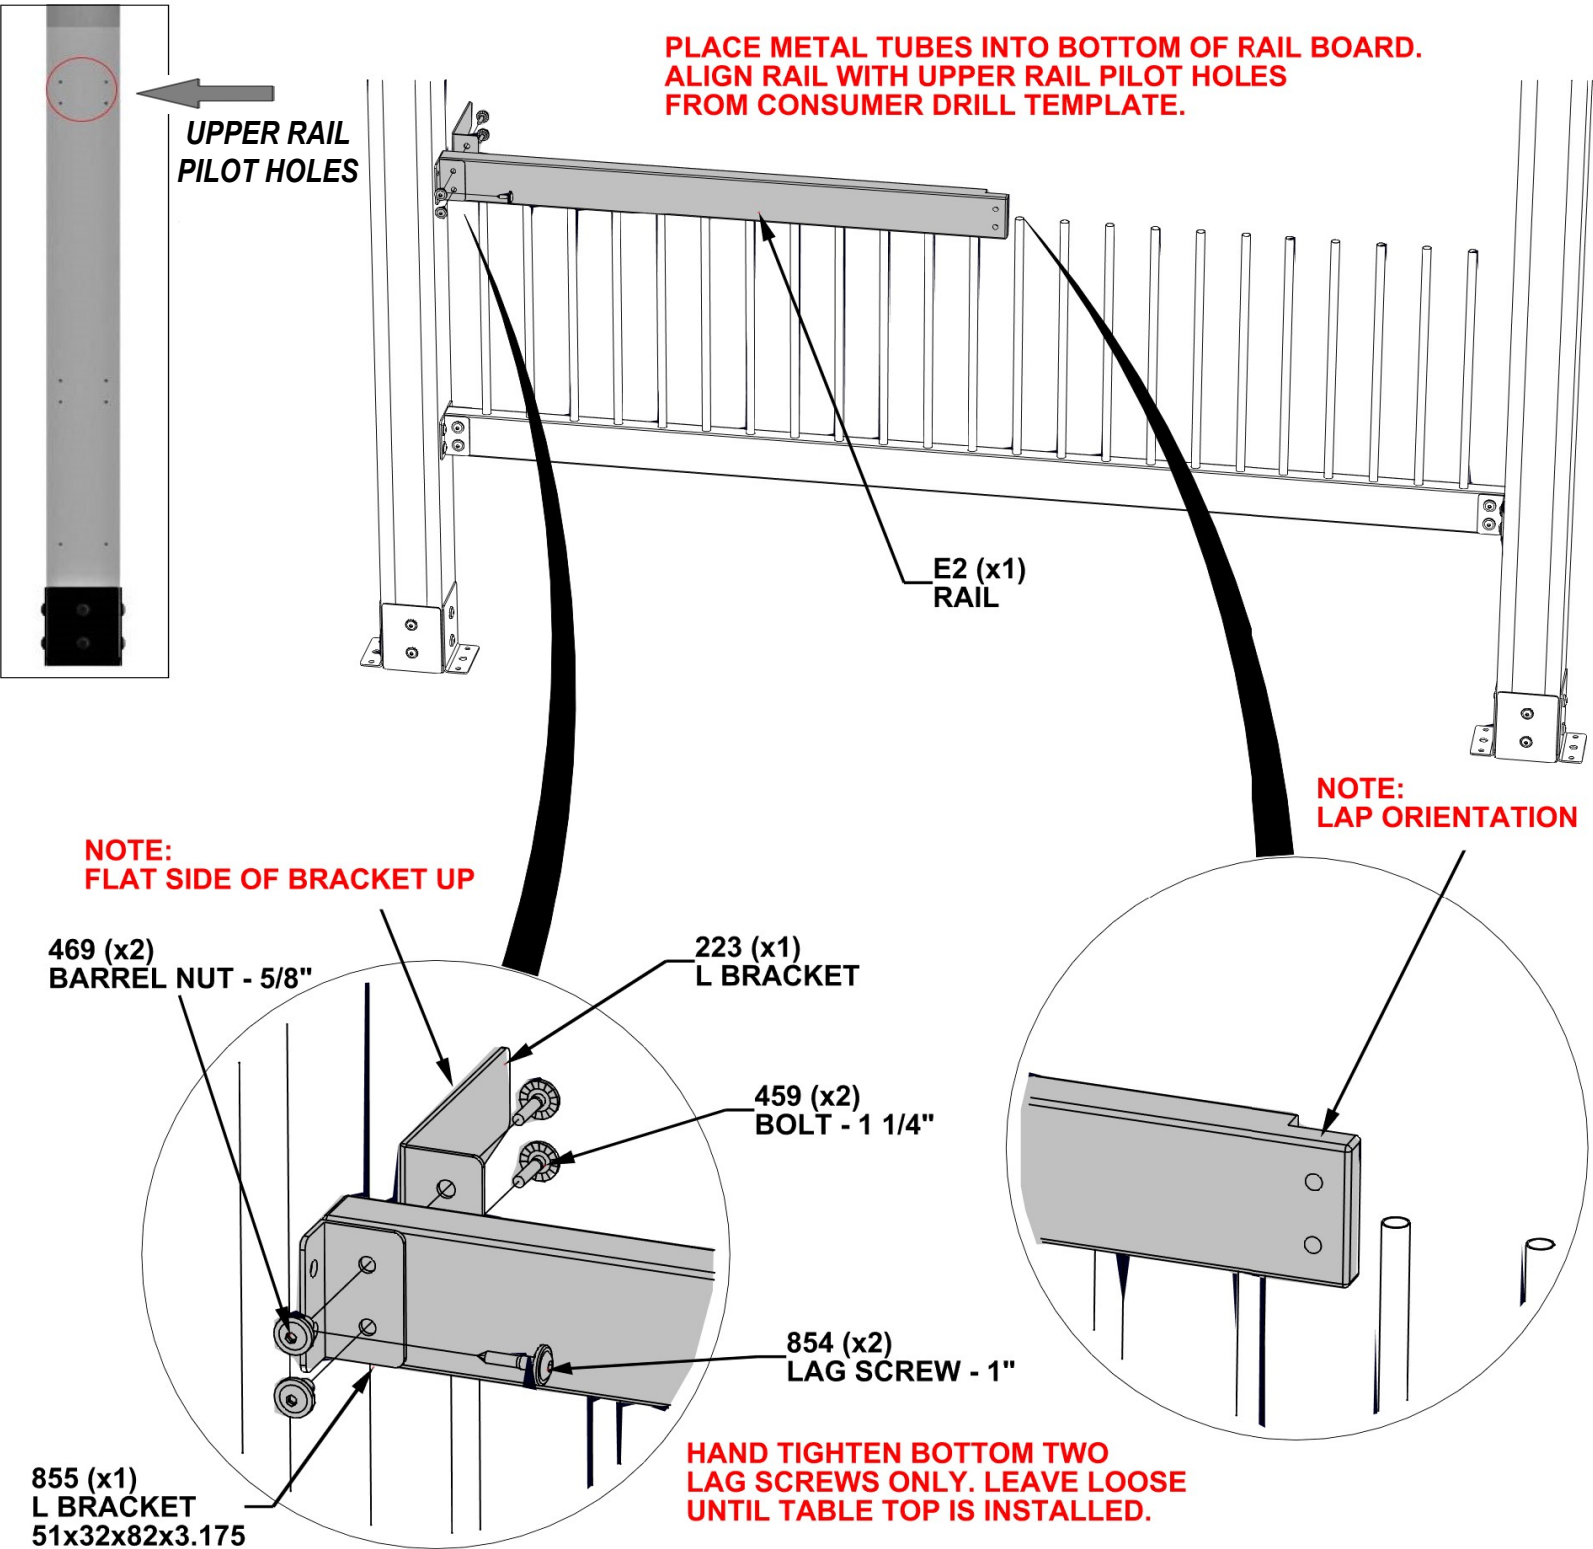

# STEP 8 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)




**E3 | RAIL-W4L16364**  
(x1) | 1 7/16"x3 3/8"x39 1/8" (36x86x993)



**A4M00855 | L BRACKET**  
(x1) | 55x32x82x3.175




**A4M01224**  
(x1) | L BRACKET



**A4M01223**  
(x1) | L BRACKET

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100379     | T-NUT 5/16 BLK             |
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |
| 2   | H100407     | BOLT WH 5/16x1 1/2 BLK     |


**PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES  
FROM CONSUMER DRILL TEMPLATE.**

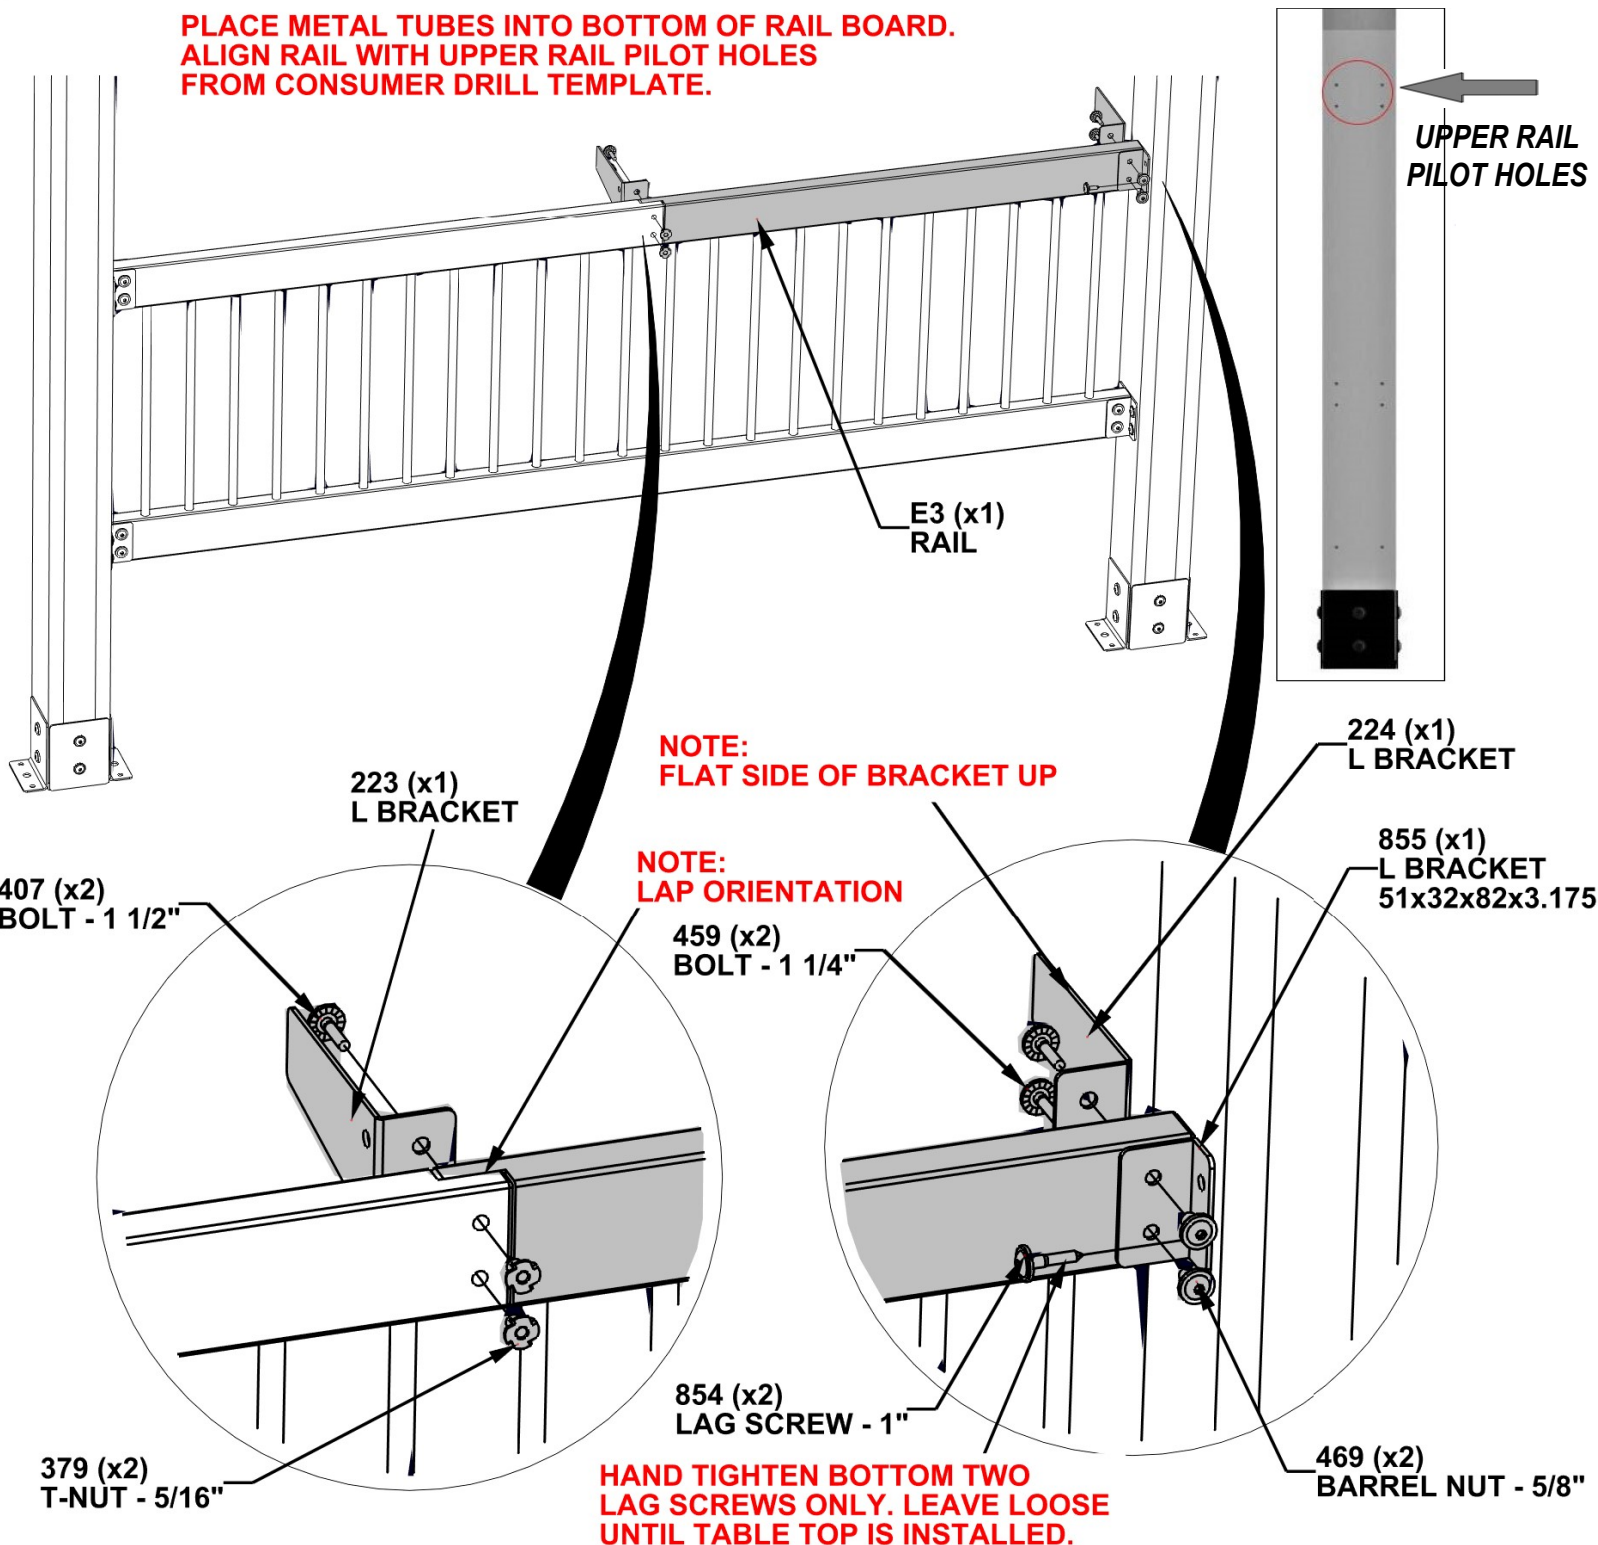





**STEP 9 - GAZEBO ASSEMBLY**

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

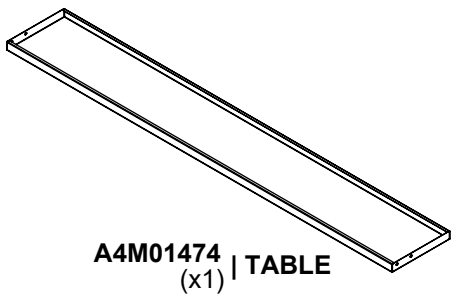


| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

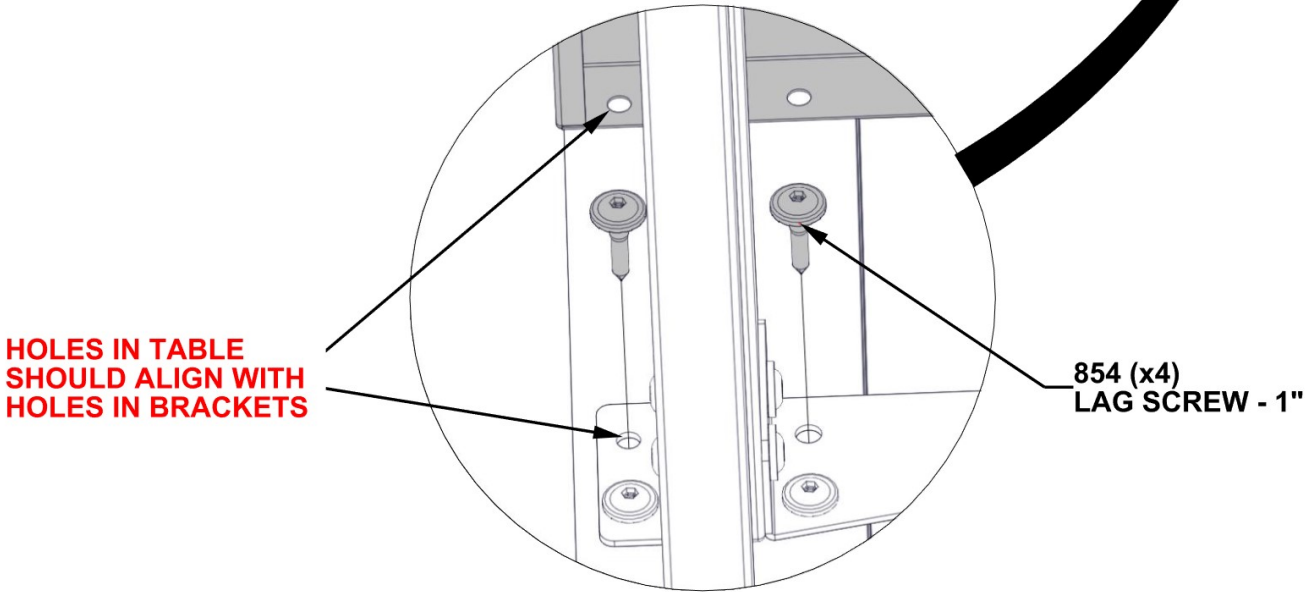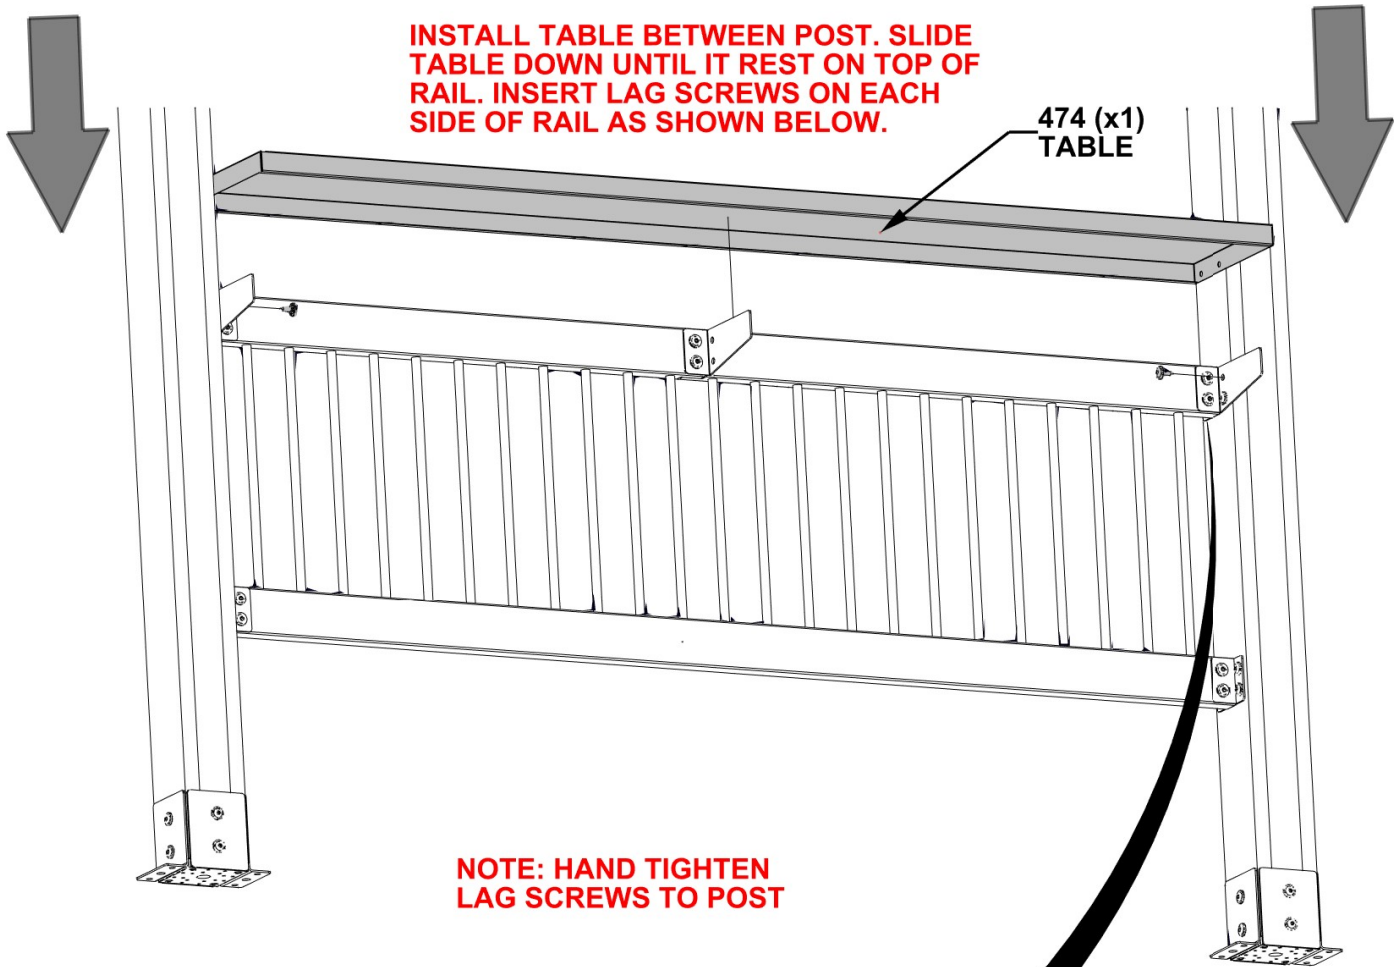


# STEP 10 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

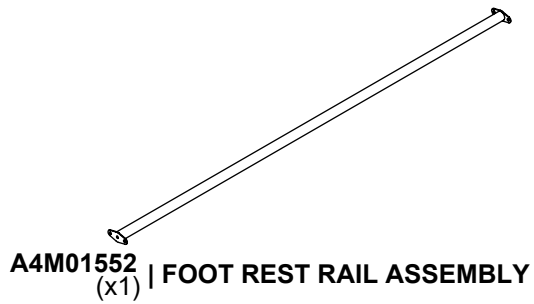


| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

**ALIGN FOOT REST RAIL ASSEMBLY WITH BOTTOM  
TWO PILOT HOLES FROM CONSUMER DRILL  
TEMPLATE.**

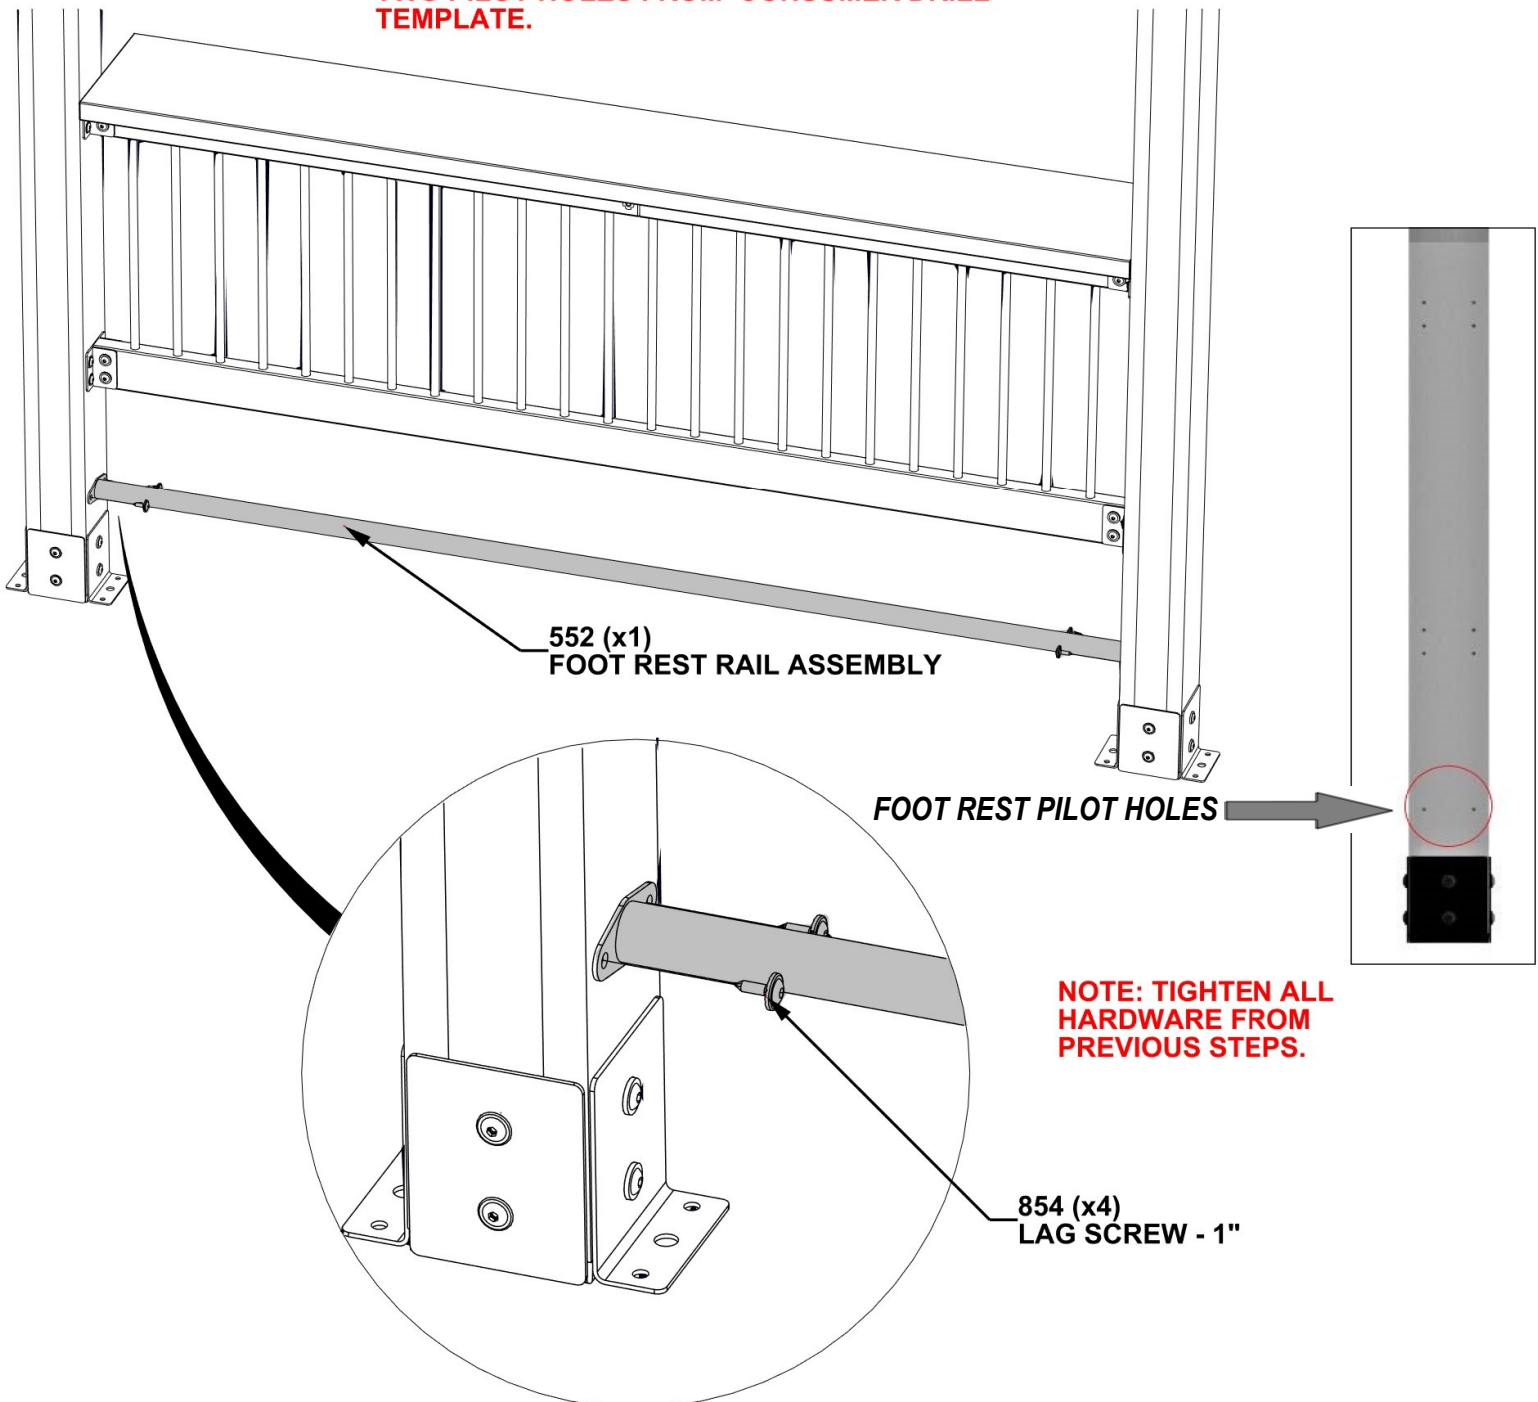

# STEP 11 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

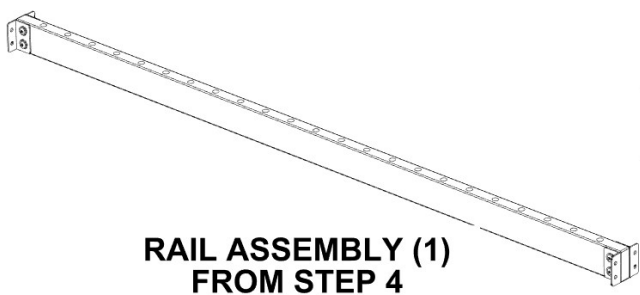

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 8   | H100854     | LAG SCREW WH 5/16x1 BLK |


RAIL ASSEMBLY (1)  
FROM STEP 4

ALIGN RAIL ASSEMBLY FROM STEP 4,  
WITH LOWER RAIL PILOT HOLES  
FROM CONSUMER DRILL TEMPLATE.

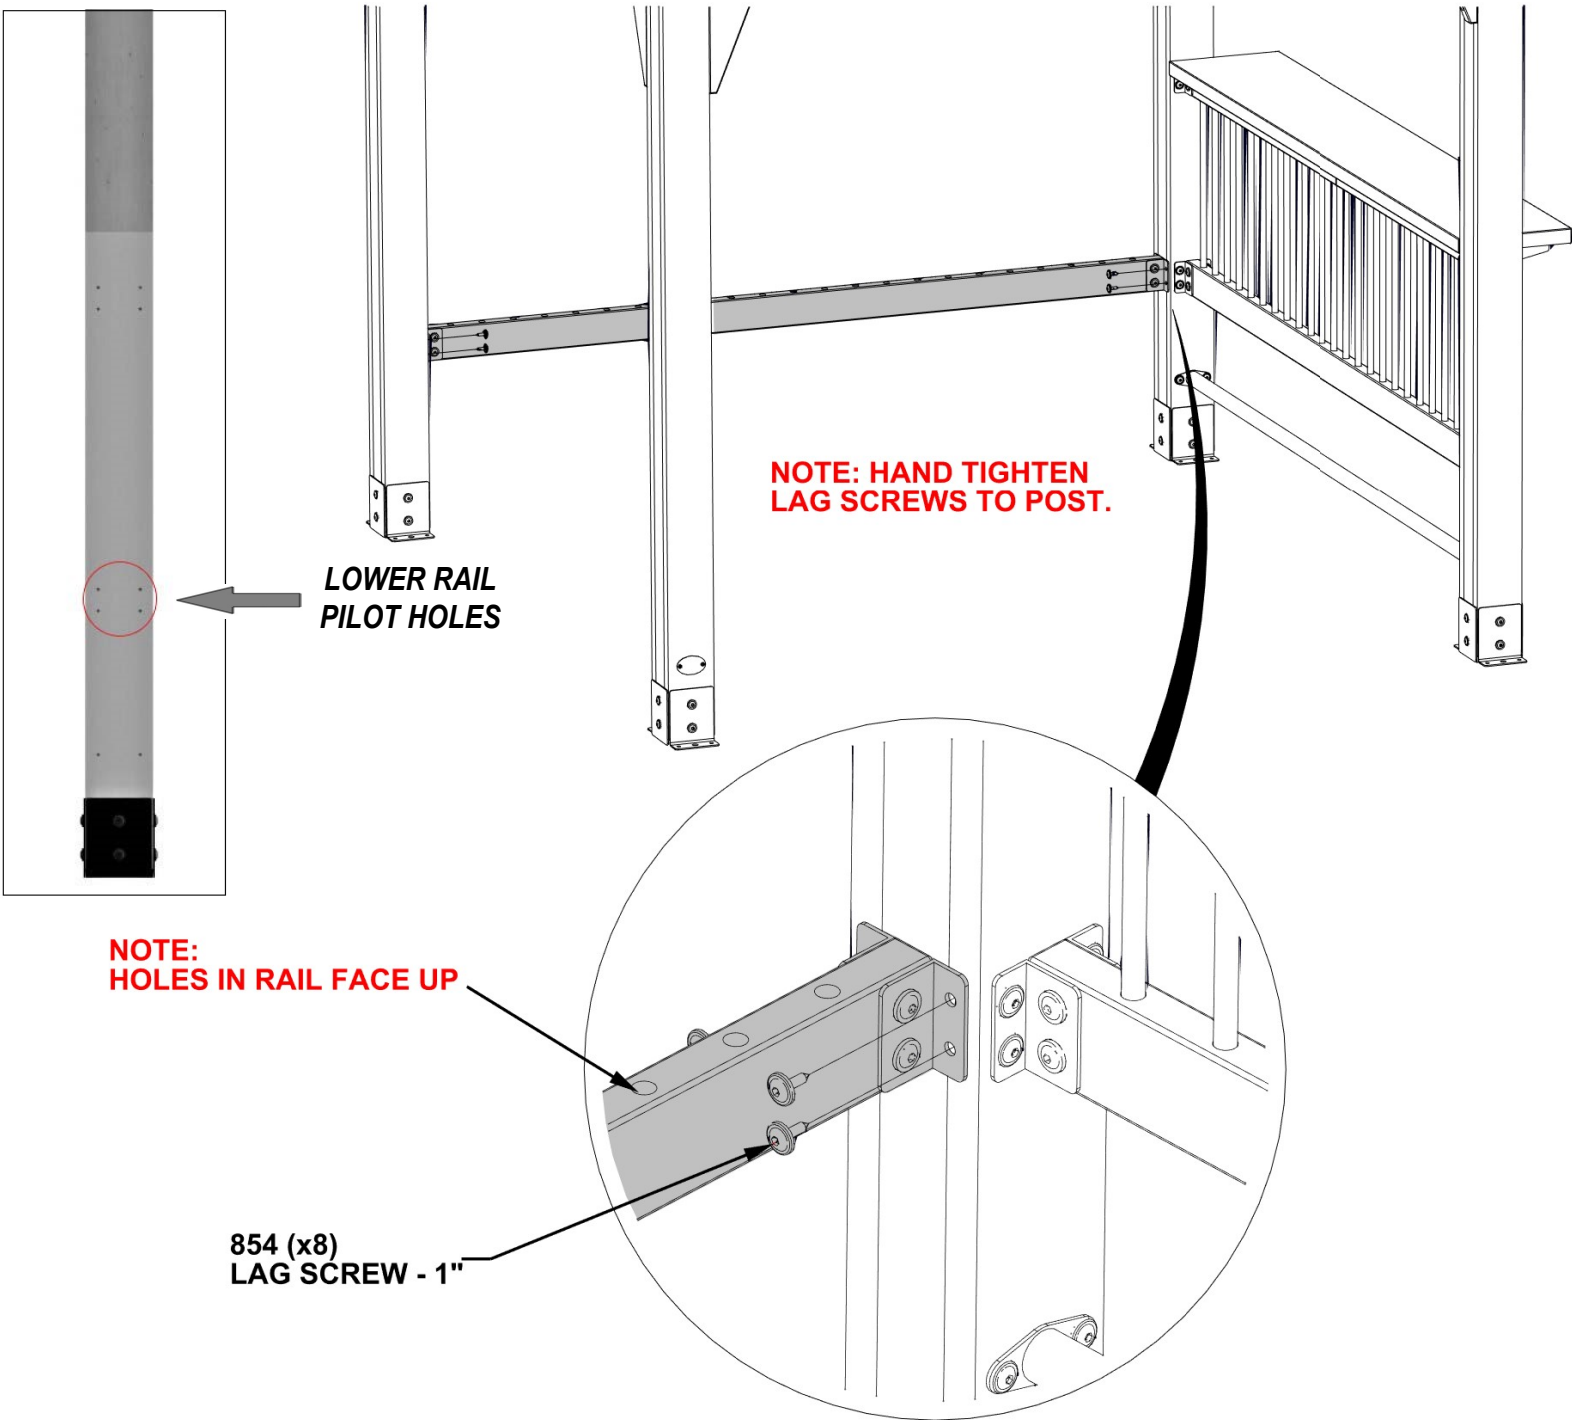


## STEP 12 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

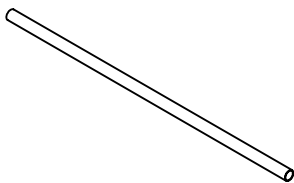

A4M01225  
(x23) | METAL TUBE

PLACE METAL TUBES INTO BOTTOM BOARD OF RAIL ASSEMBLY

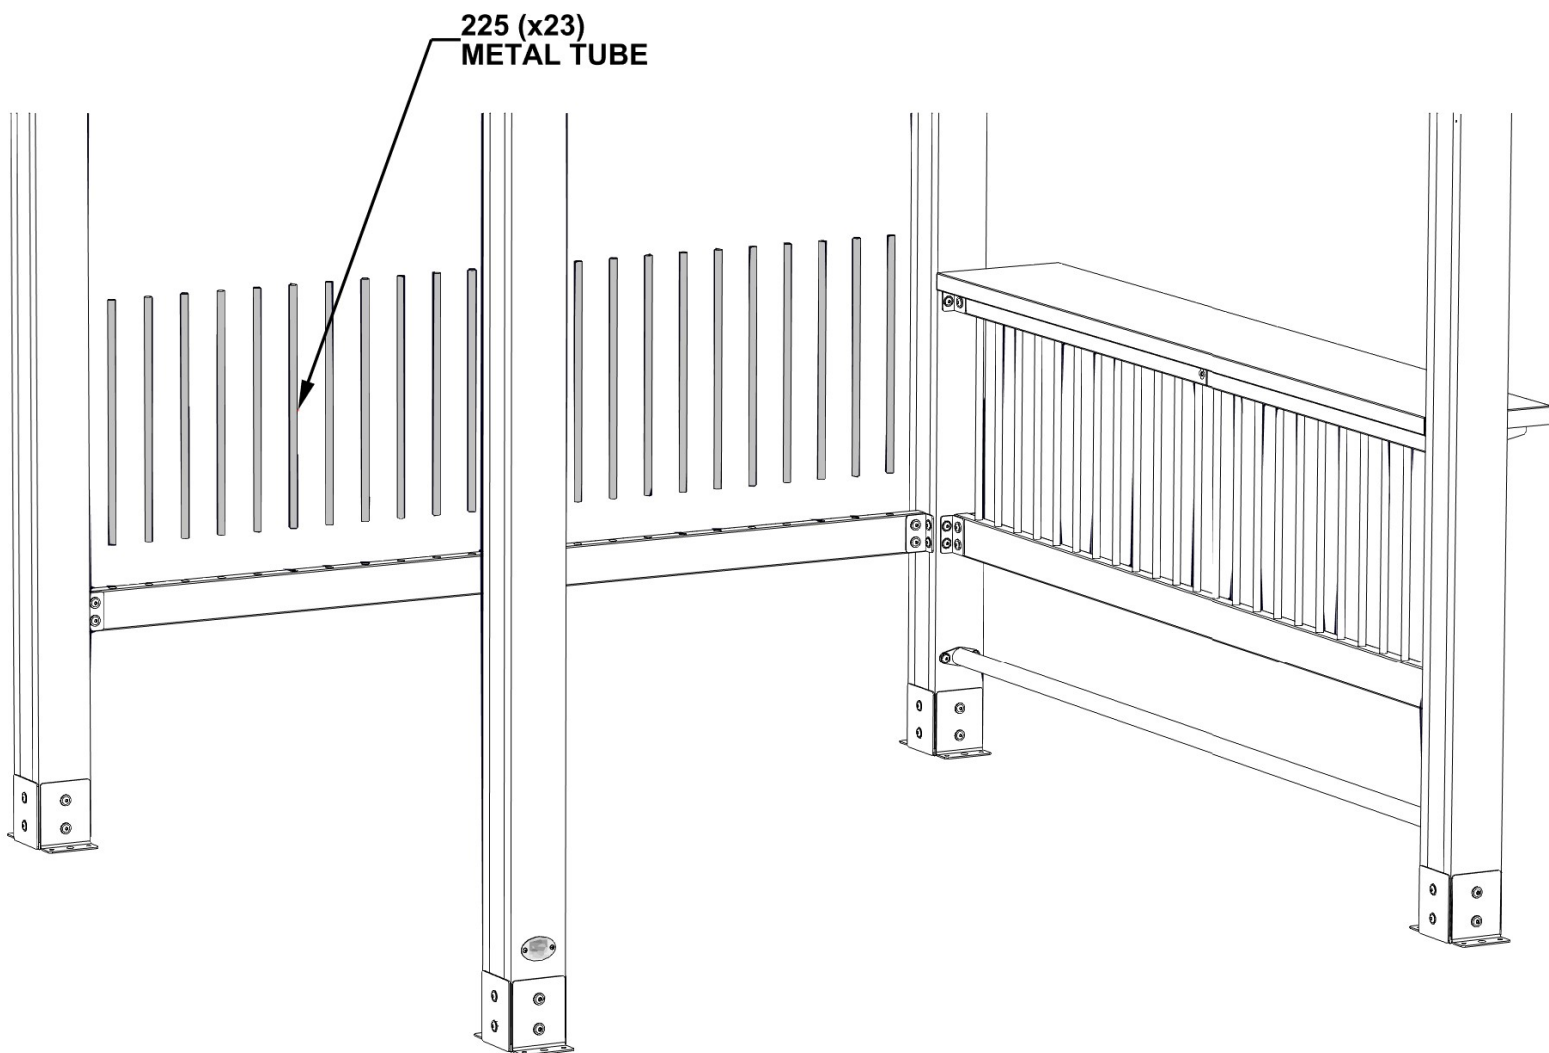



STEP 13 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)



E3 | RAIL-W4L16364  
(x1) | 1 7/16"x3 3/8"x39 1/8" (36x86x993)

A4M01224 (x1) | L BRACKET  
A4M00855 (x1) | L BRACKET 55x32x82x3.175

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |

PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES FROM  
CONSUMER DRILL TEMPLATE.

NOTE: FLAT SIDE OF BRACKET UP

855 (x1)  
L BRACKET  
51x32x82x3.175

224 (x1)  
L BRACKET



459 (x2)  
BOLT - 1 1/4"

469 (x2)  
BARREL NUT - 5/8"

854 (x2)  
LAG SCREW - 1"


HAND TIGHTEN BOTTOM TWO  
LAG SCREWS ONLY. LEAVE LOOSE  
UNTIL TABLE TOP IS INSTALLED.

NOTE:  
LAP ORIENTATION

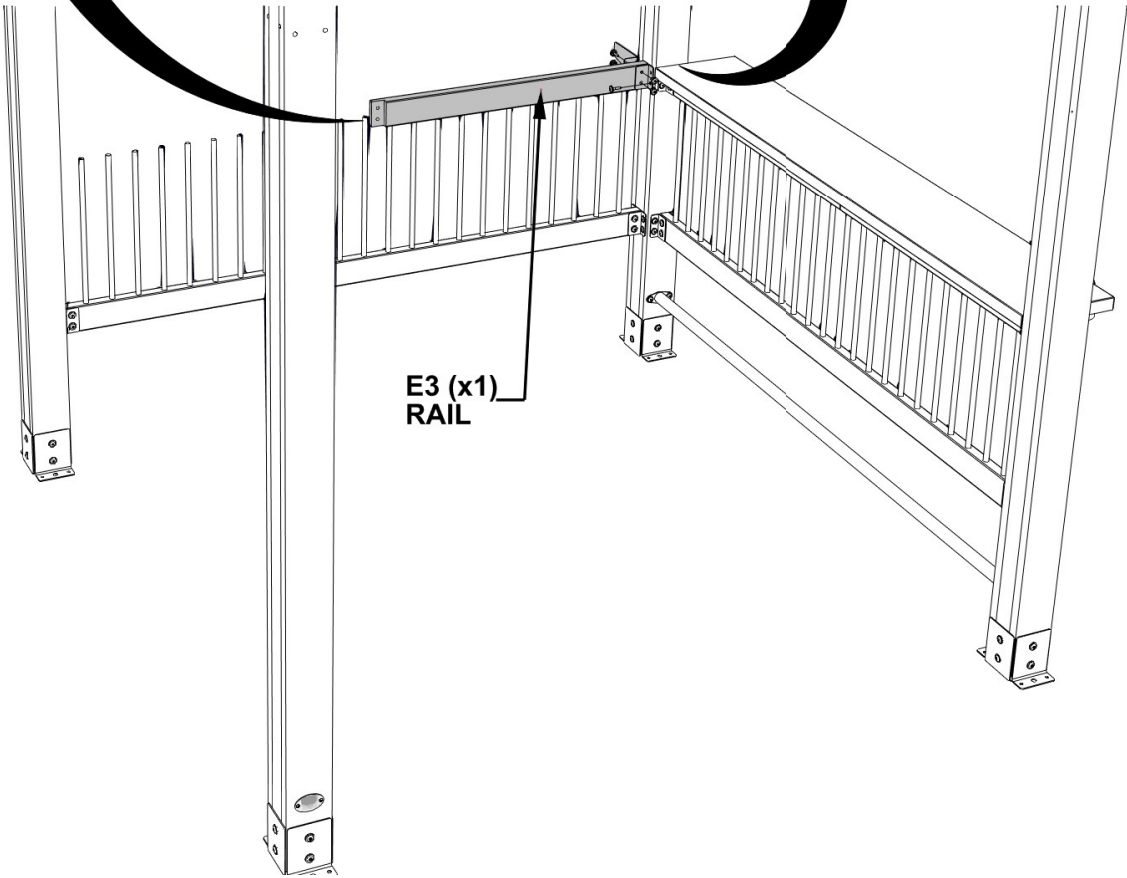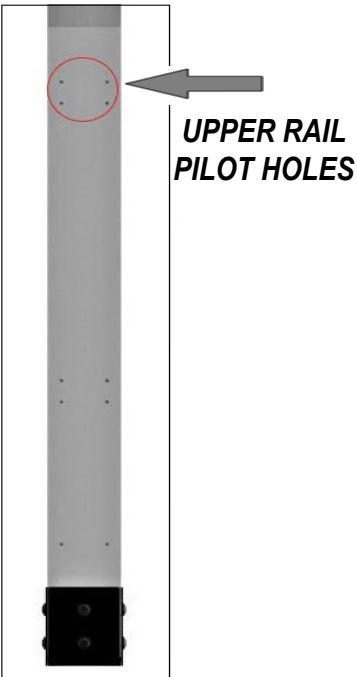

# STEP 14 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)



A4M00855 | L BRACKET  
(x1) | 55x32x82x3.175


A4M01223 | L BRACKET  
(x2)



E2 | RAIL-W4L16363  
(x1) | 1 7/16"x3 3/8"x42 7/16" (36x86x1078)

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100379     | T-NUT 5/16 BLK             |
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100407     | BOLT WH 5/16x1 1/2 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |

PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES FROM  
CONSUMER DRILL TEMPLATE.

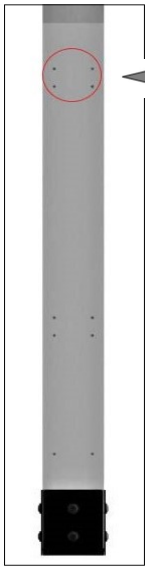

UPPER RAIL  
PILOT HOLES

NOTE:  
FLAT SIDE OF BRACKET UP.

223 (x1)  
L BRACKET

855 (x1)  
L BRACKET  
51x32x82x3.175

459 (x2)  
BOLT - 1 1/4"

NOTE:  
LAP ORIENTATION

223 (x1)  
L BRACKET

407 (x2)  
BOLT - 1 1/2"

469 (x2)  
BARREL NUT - 5/8"


854 (x2)  
LAG SCREW - 1"

HAND TIGHTEN BOTTOM TWO  
LAG SCREWS ONLY. LEAVE LOOSE  
UNTIL TABLE TOP IS INSTALLED.


379 (x2)  
T-NUT - 5/16"

**STEP 15 - GAZEBO ASSEMBLY**

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

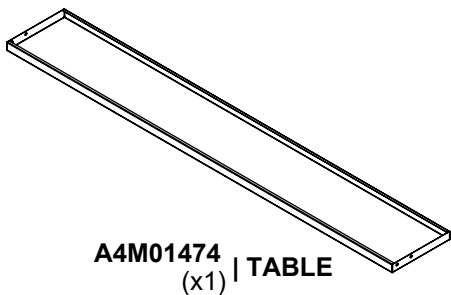

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

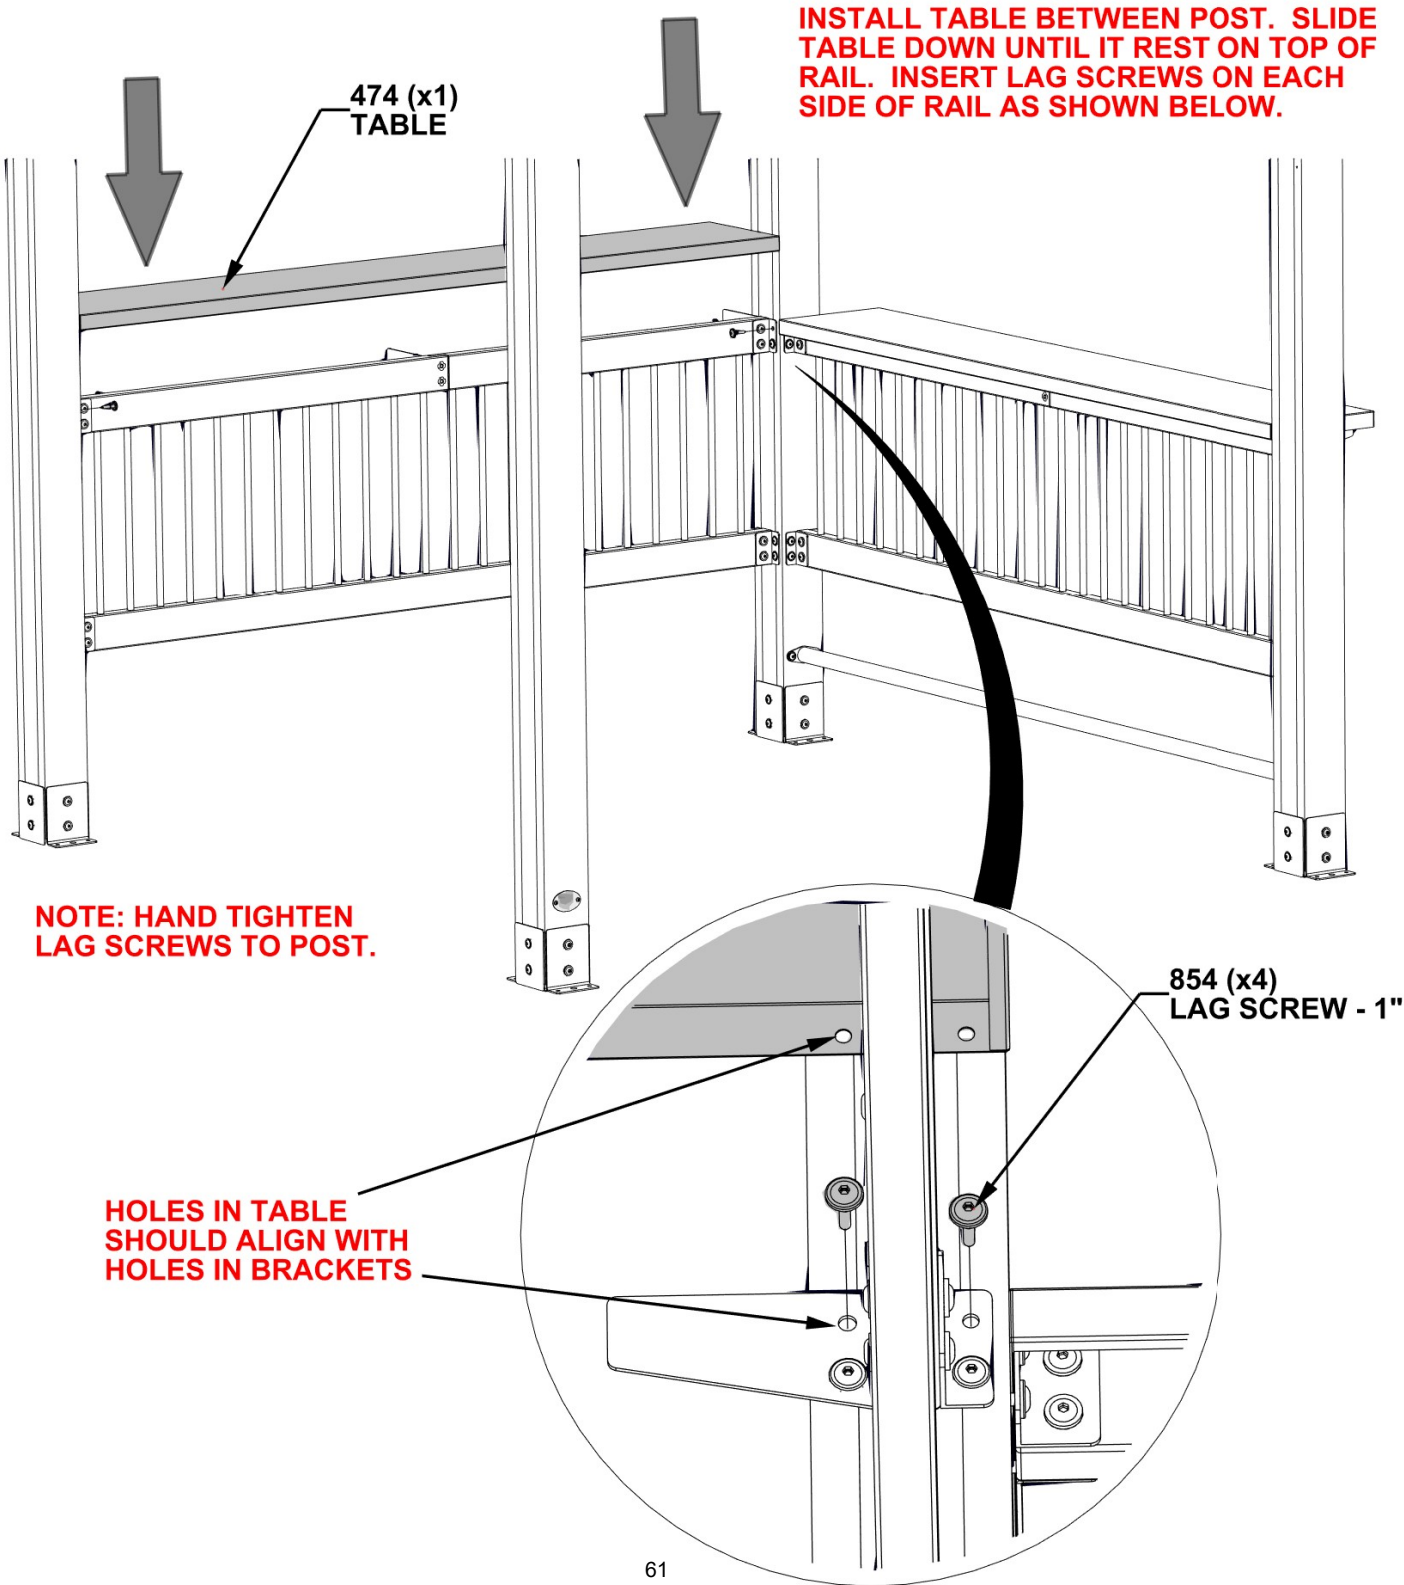





STEP 16 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

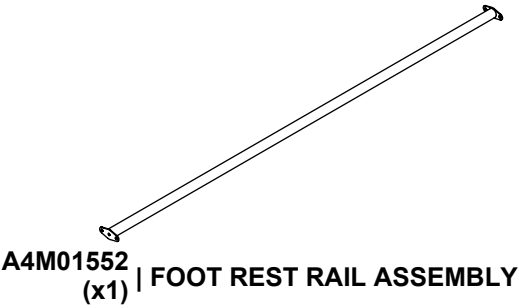


ALIGN FOOT REST RAIL ASSEMBLY WITH BOTTOM  
TWO PILOT HOLES FROM CONSUMER DRILL TEMPLATE.

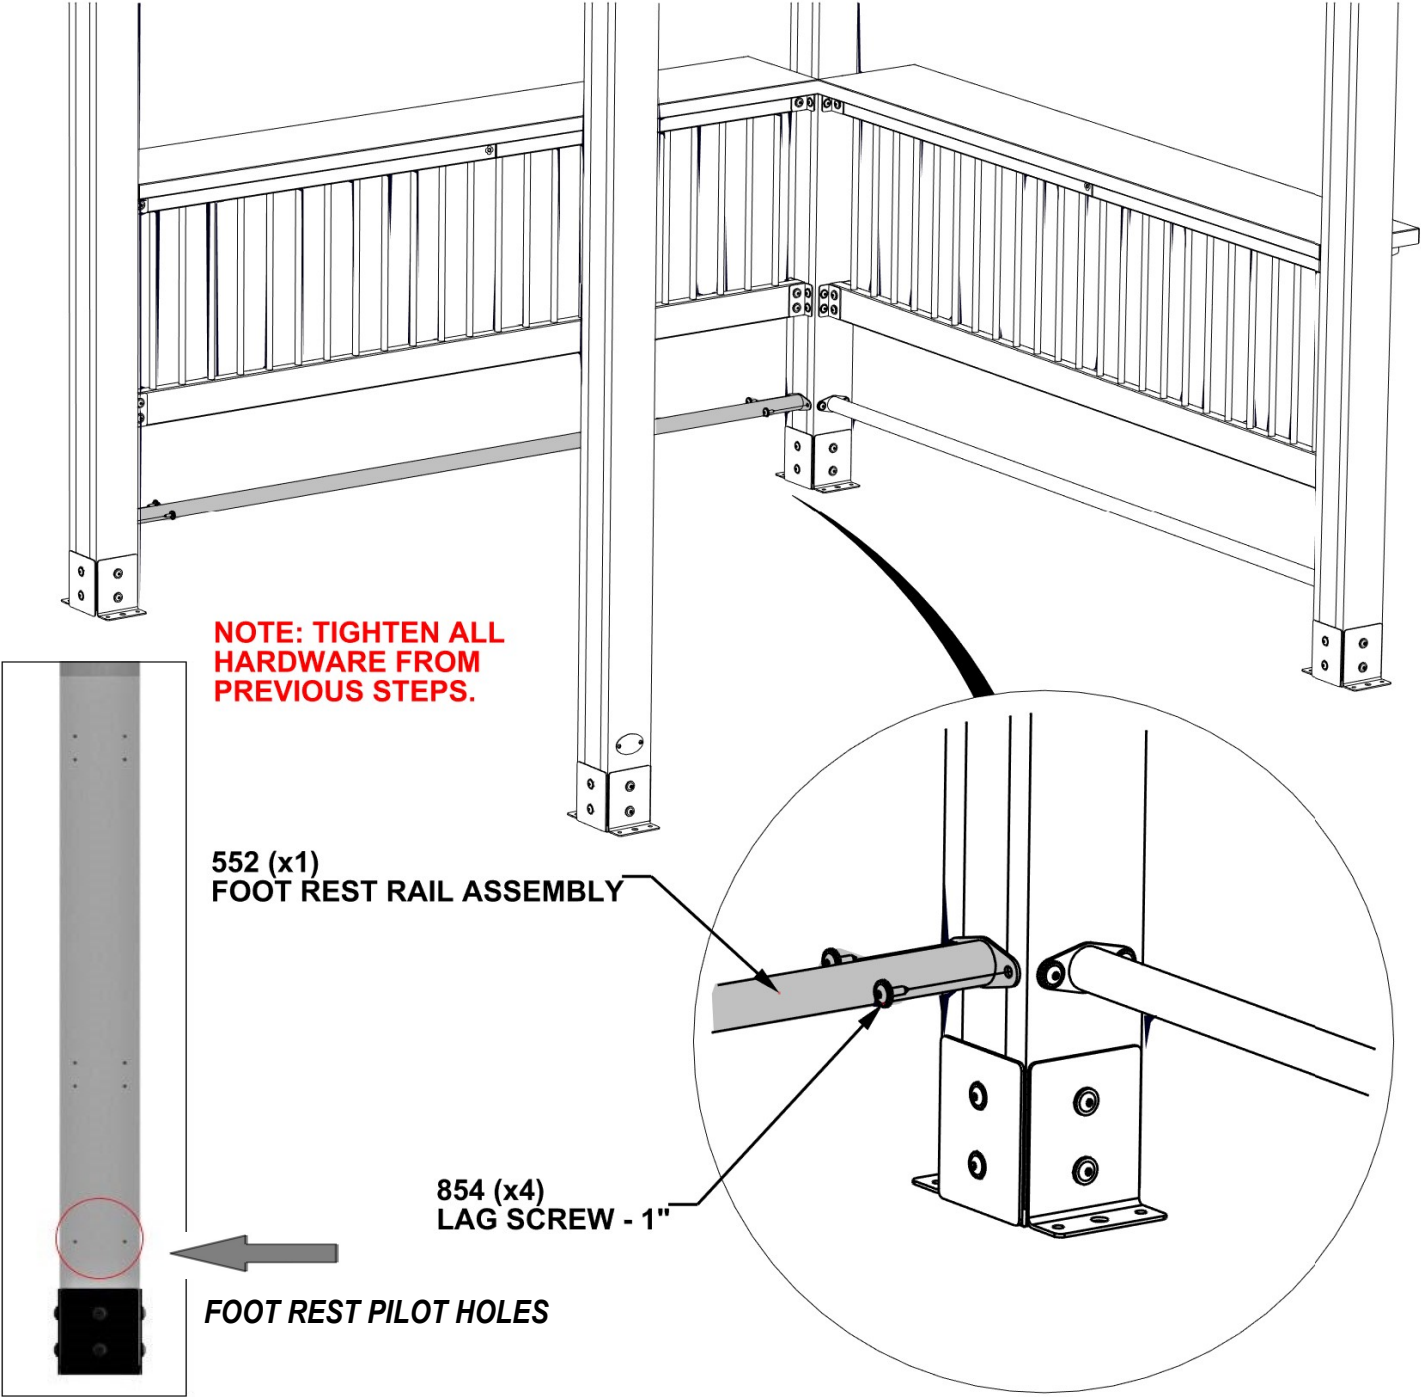



## STEP 17 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

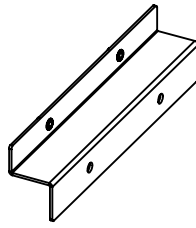

A4M01662 | TABLE BRACKET W/ INSERTS  
(x2) | (ANGLE CONFIGURATION ONLY)

### NOTES:


1. PLACE TABLE BRACKETS IN CORNER, CLOSEST TO POST.
2. USE TABLE BRACKET AS A DRILL TEMPLATE FOR CORNER TABLE.
3. ALIGN TABLE BRACKET, FLUSH WITH BOTTOM OF RAIL.
4. ALIGN SIDE OF TABLE BRACKET AGAINST SIDE OF L BRACKET.
5. DRILL #10 [3/8 in] THRU HOLE, 2 PLACES FOR EACH BRACKET.

662 (x2)  
TABLE BRACKET  
W/ INSERTS

BRACKET AGAINST  
EDGE

BOTTOM OF TABLE BRACKET  
FLUSH WITH BOTTOM OF RAIL

#10 THRU HOLE [3/8 in]  
2 PLACES EACH BRACKET

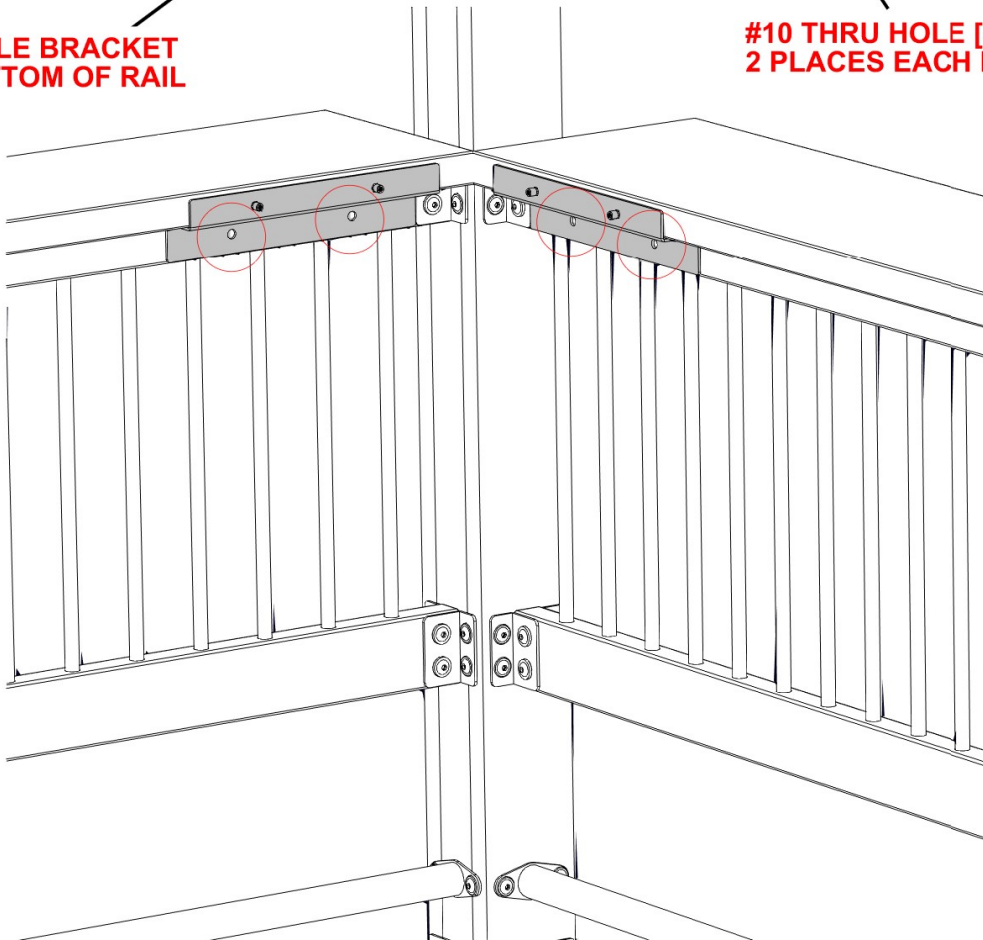


**STEP 18 - GAZEBO ASSEMBLY**

**(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)**


| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 4   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 4   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 4   | H100198     | WASHER LOCK EXT 8x19       |

**INSTALL TABLE BRACKETS AS SHOWN BELOW ALIGNING  
WITH CONSUMER DRILLED HOLES FROM PREVIOUS STEP.**

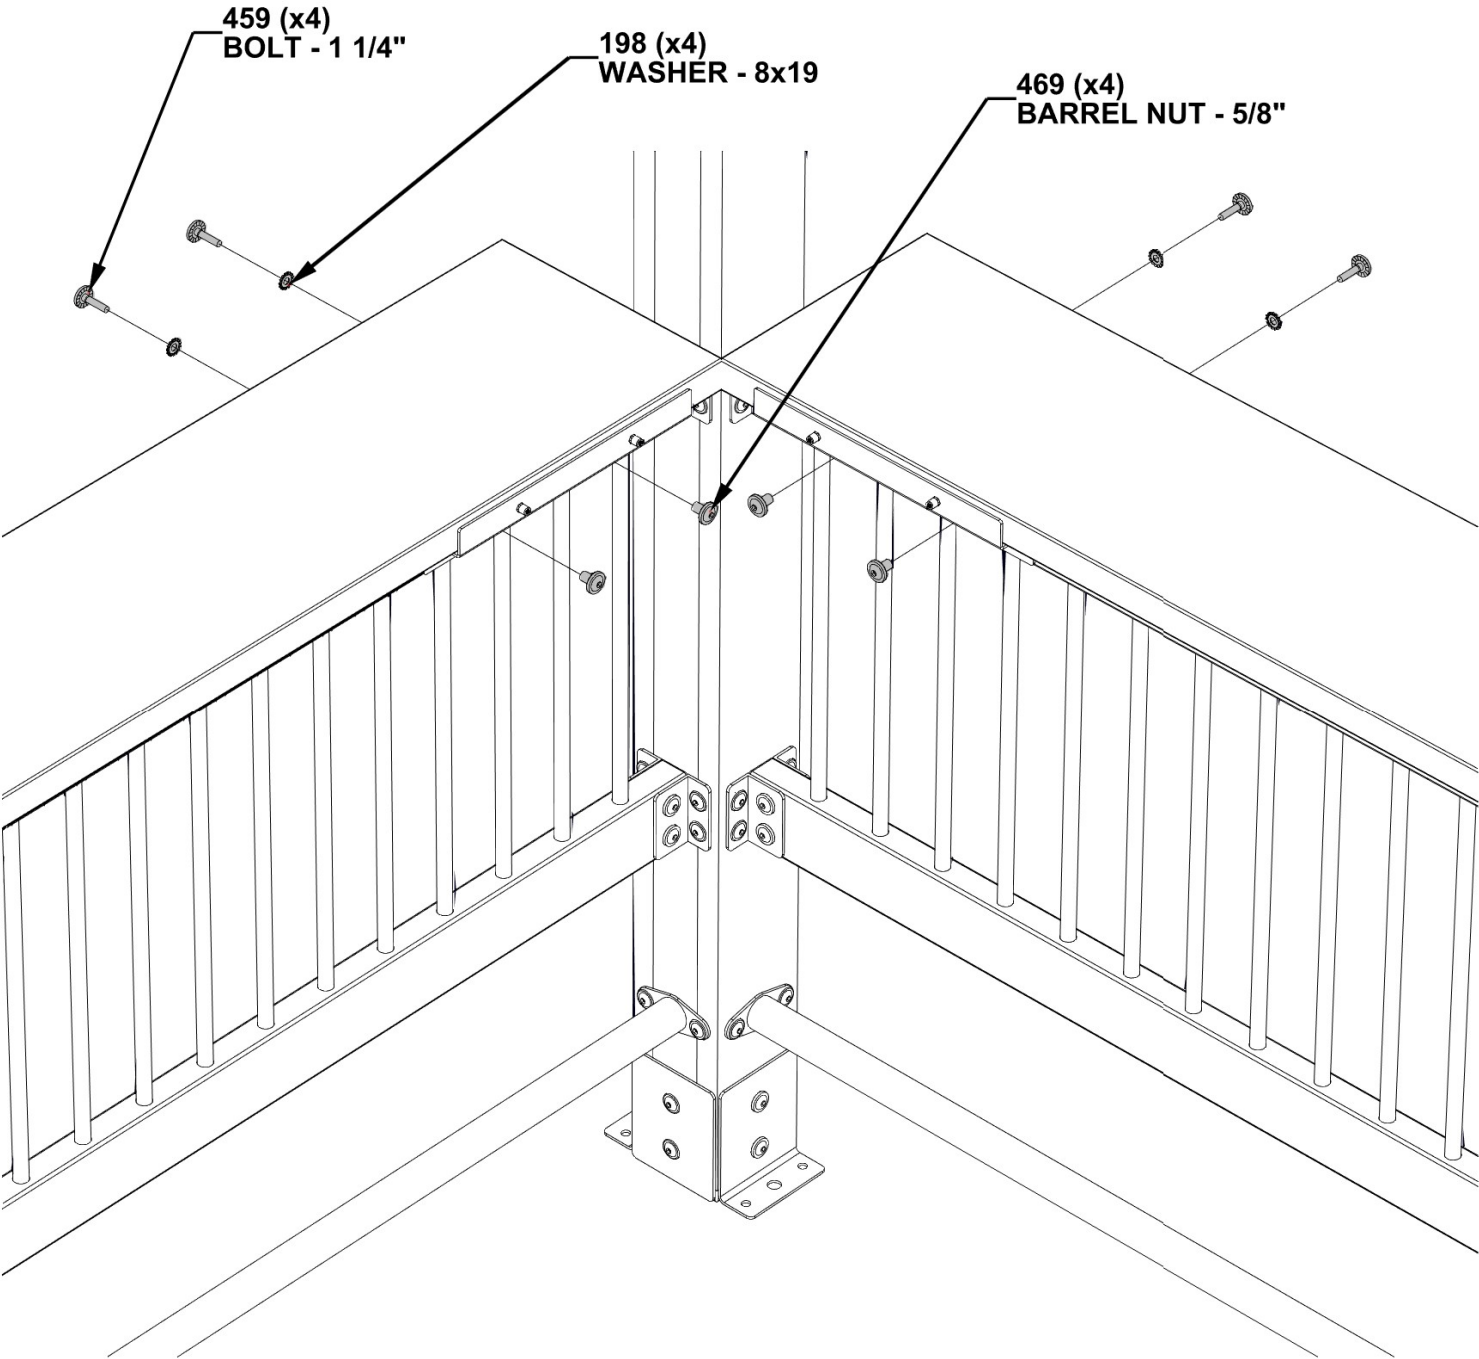

## STEP 19 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

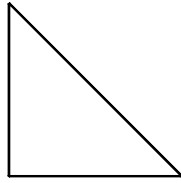

A4M01475 | CORNER TABLE  
(x1) (ANGLE CONFIGURATION ONLY)

CORNER TABLE WILL SLIP INTO  
GAP BETWEEN LARGE TABLES AND  
EDGE OF BRACKET.

475 (x1)  
CORNER TABLE

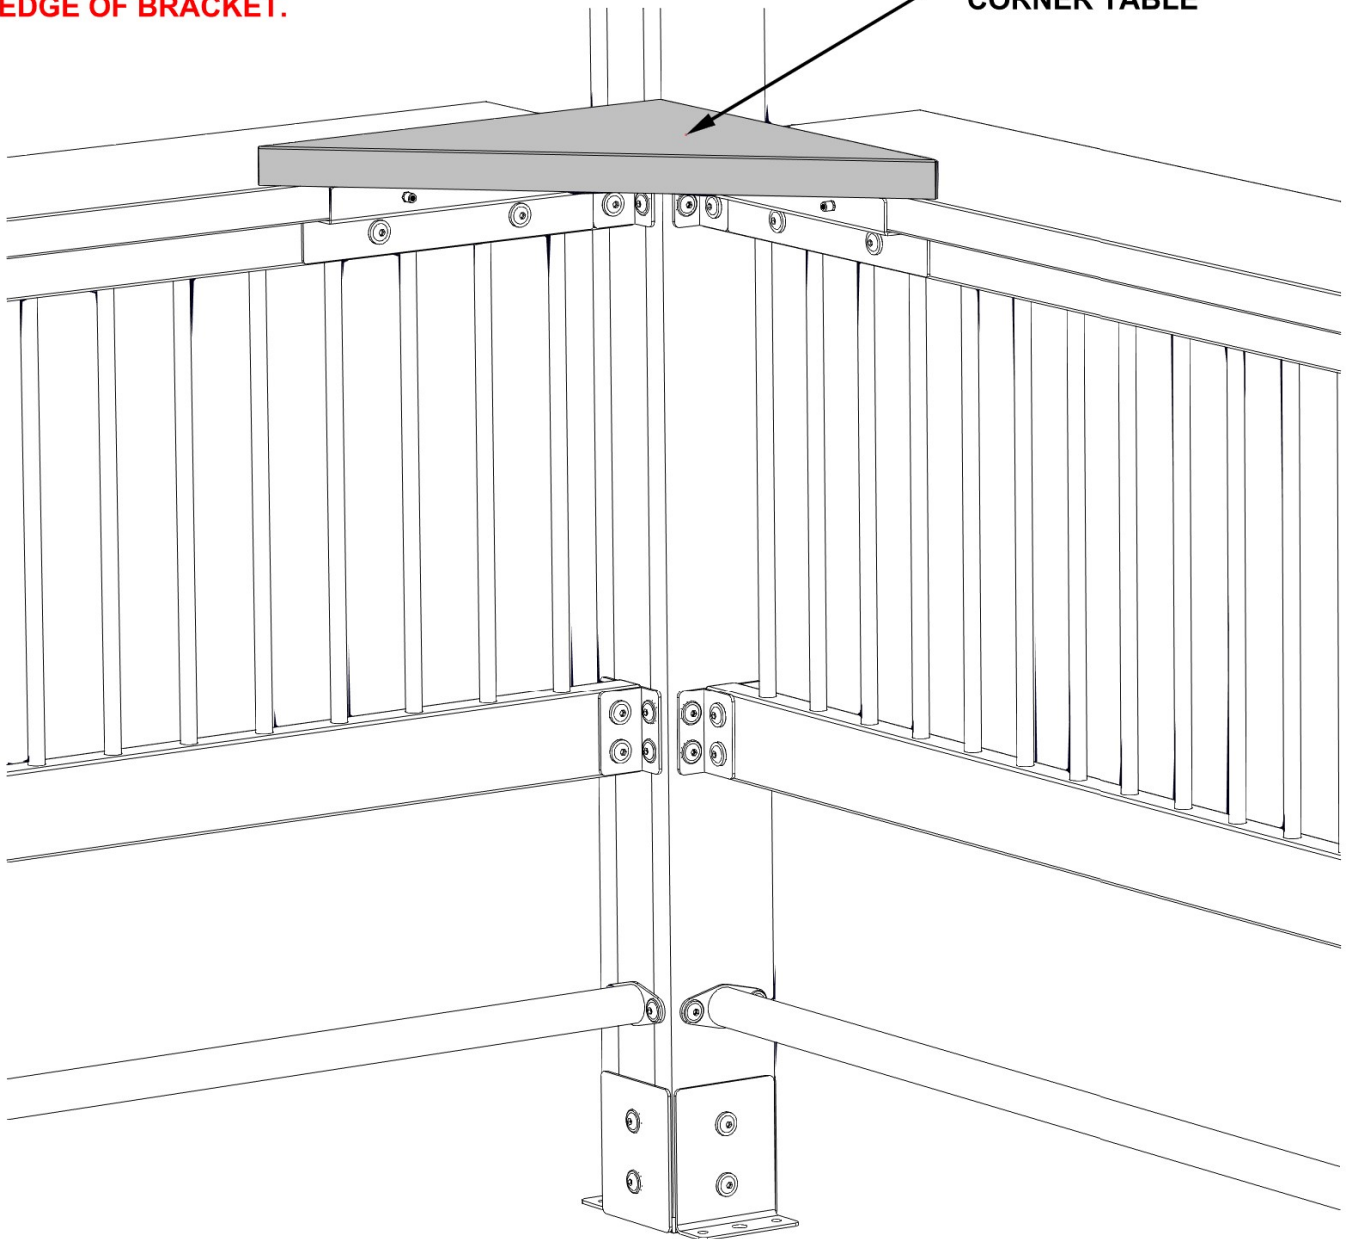


## STEP 20 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 4   | H100171     | BOLT WH 1/4x1 BLK |

**NOTES:**  
WITH TOP SURFACE OF CORNER TABLE LEVEL WITH TWO  
LARGE TABLES, FASTEN BOLTS TO HOLD IN PLACE.  
DO NOT OVERTIGHTEN BOLTS.

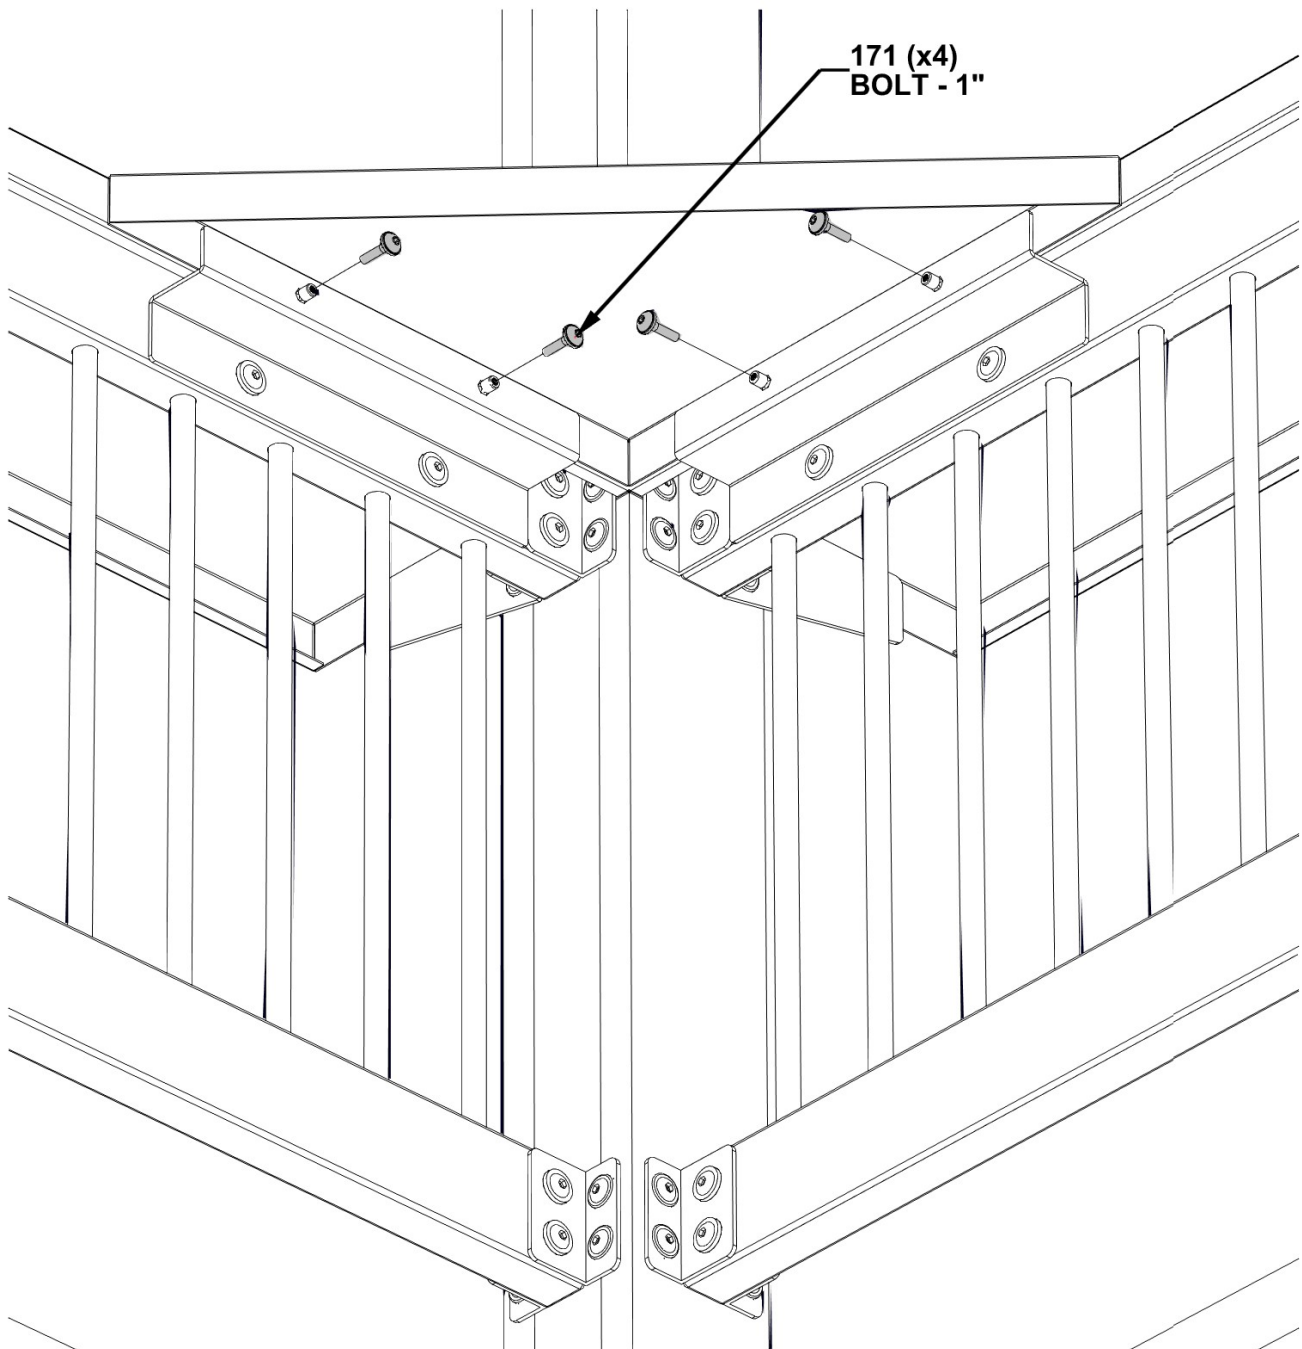



## STEP 21 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS  
ANGLE TABLE CONFIGURATION)

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 16  | H100630     | WASHER FLAT 8x19 BLK  |
| 16  | H100120     | CONCRETE ANCHOR 1/4x2 |


**NOTES:**  
MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE  
SURFACE OR CONCRETE POST PADS. SEE BELOW.

FOR INSTALLATION ON WOOD DECKS, YOU MUST ENSURE THERE  
IS AMPLE STRUCTURAL SUPPORT UNDER DECK.

**NOTES:**  
PRE-DRILL HOLES FOR CONCRETE  
ANCHORS USING A 3/16" CONCRETE  
DRILL BIT.

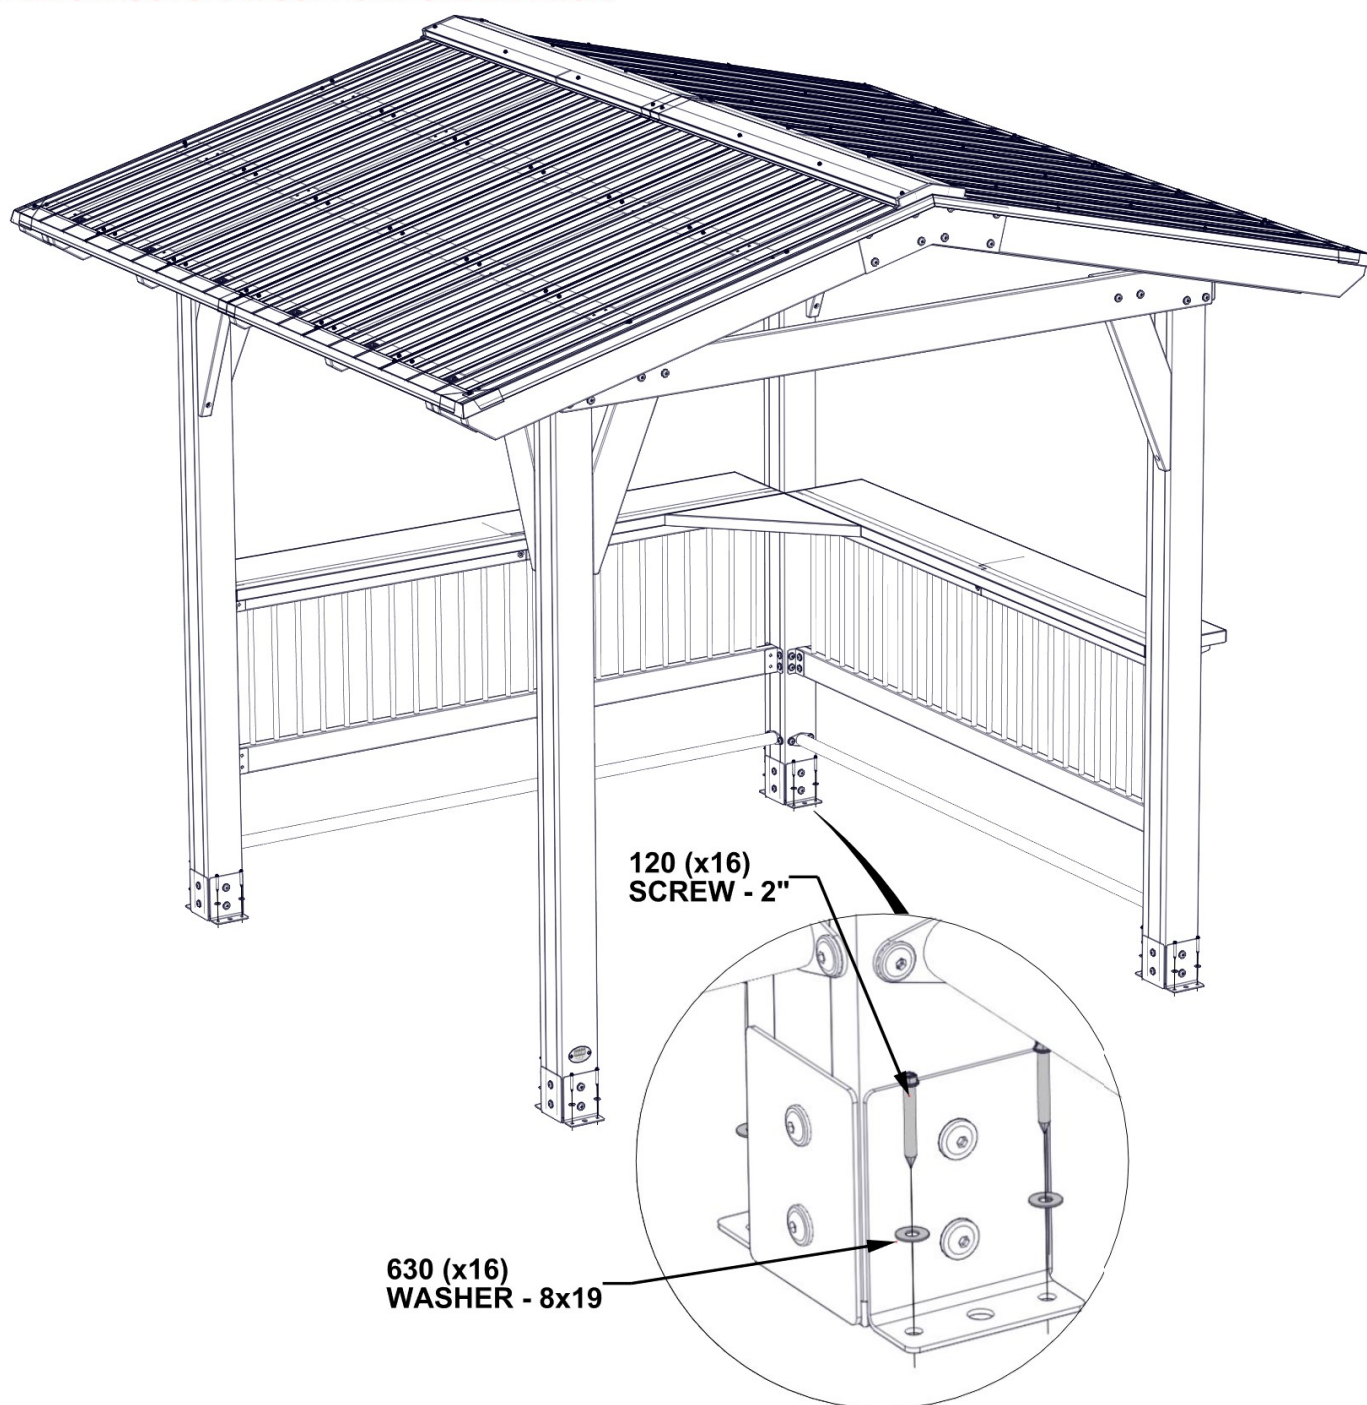

## STEP 22: ELECTRICAL ENCLOSURE

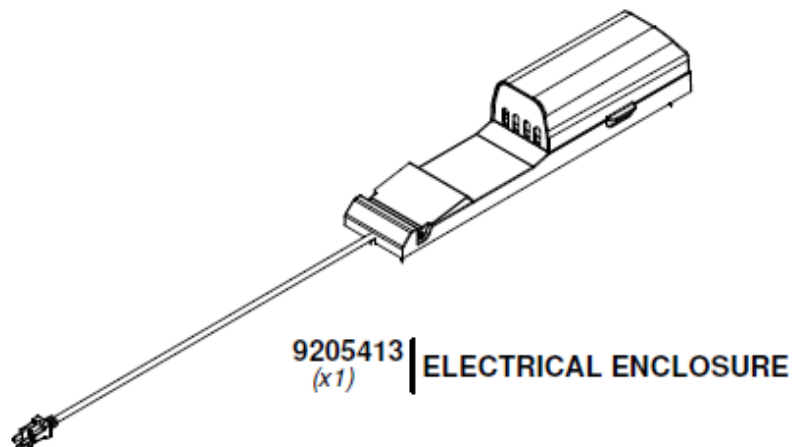

FOR ELECTRICAL ENCLOSURE INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COMES PACKAGED WITH THE ELECTRICAL ENCLOSURE KIT. INSTALL ON ANY POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.

# SPLIT TABLE CONFIGURATION

## COMPLETE STEPS 23-37

NOTE: TABLE RAILS CAN BE ORIENTED OFF ANY POST.



STEP 23 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)




E1 | RAIL-W4L16362  
(x2) | 1 7/16"x3 3/8"x80" (36x86x2032)



A4M00855 | L BRACKET  
(x8) | 55x32x82x3.175

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 8   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 8   | H100459     | BOLT WH 5/16x1 1/4 BLK     |


COMPLETE THIS STEP TWICE

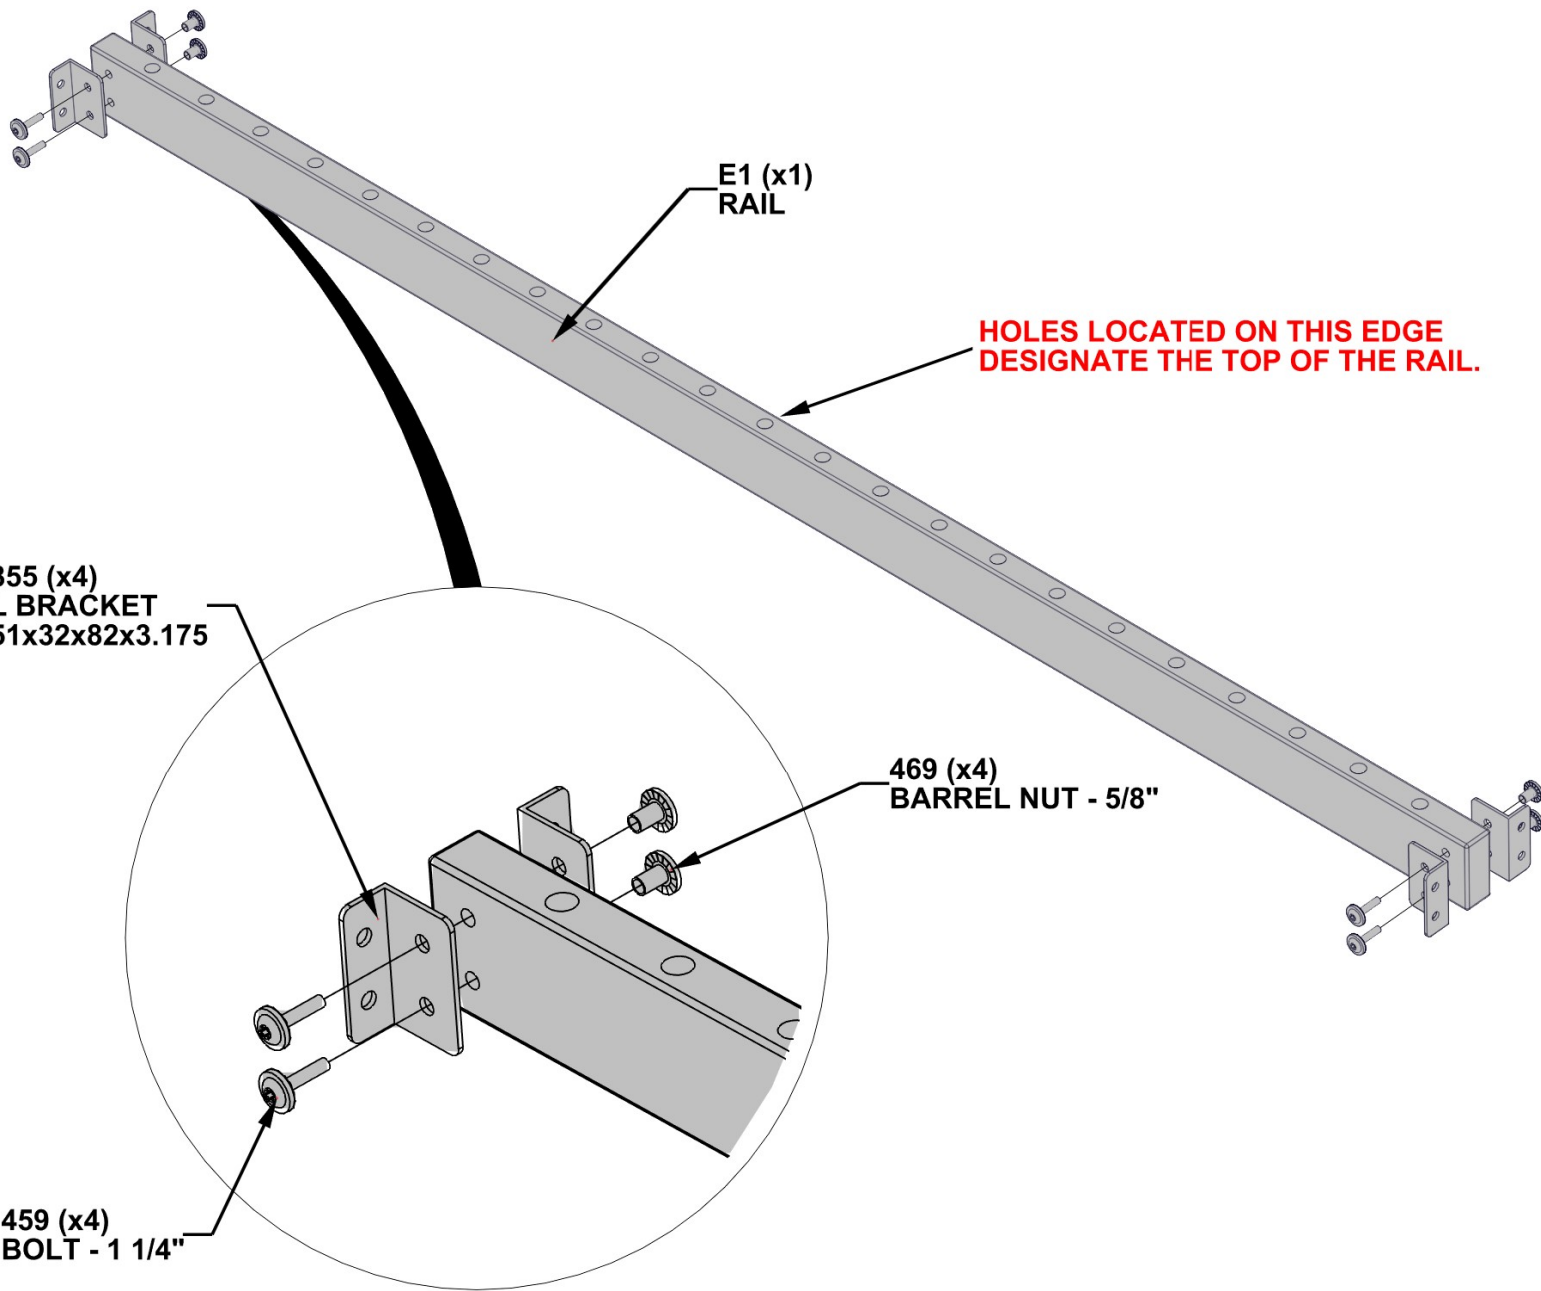




# STEP 24 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS SPLIT TABLE CONFIGURATION)

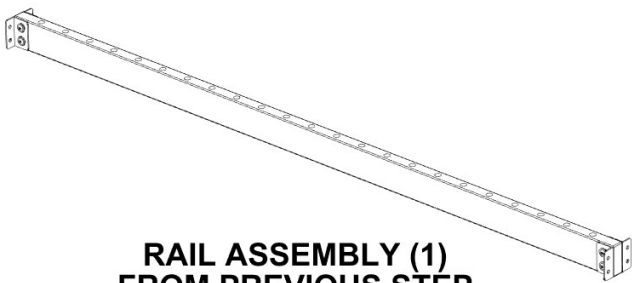


| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 8   | H100854     | LAG SCREW WH 5/16x1 BLK |

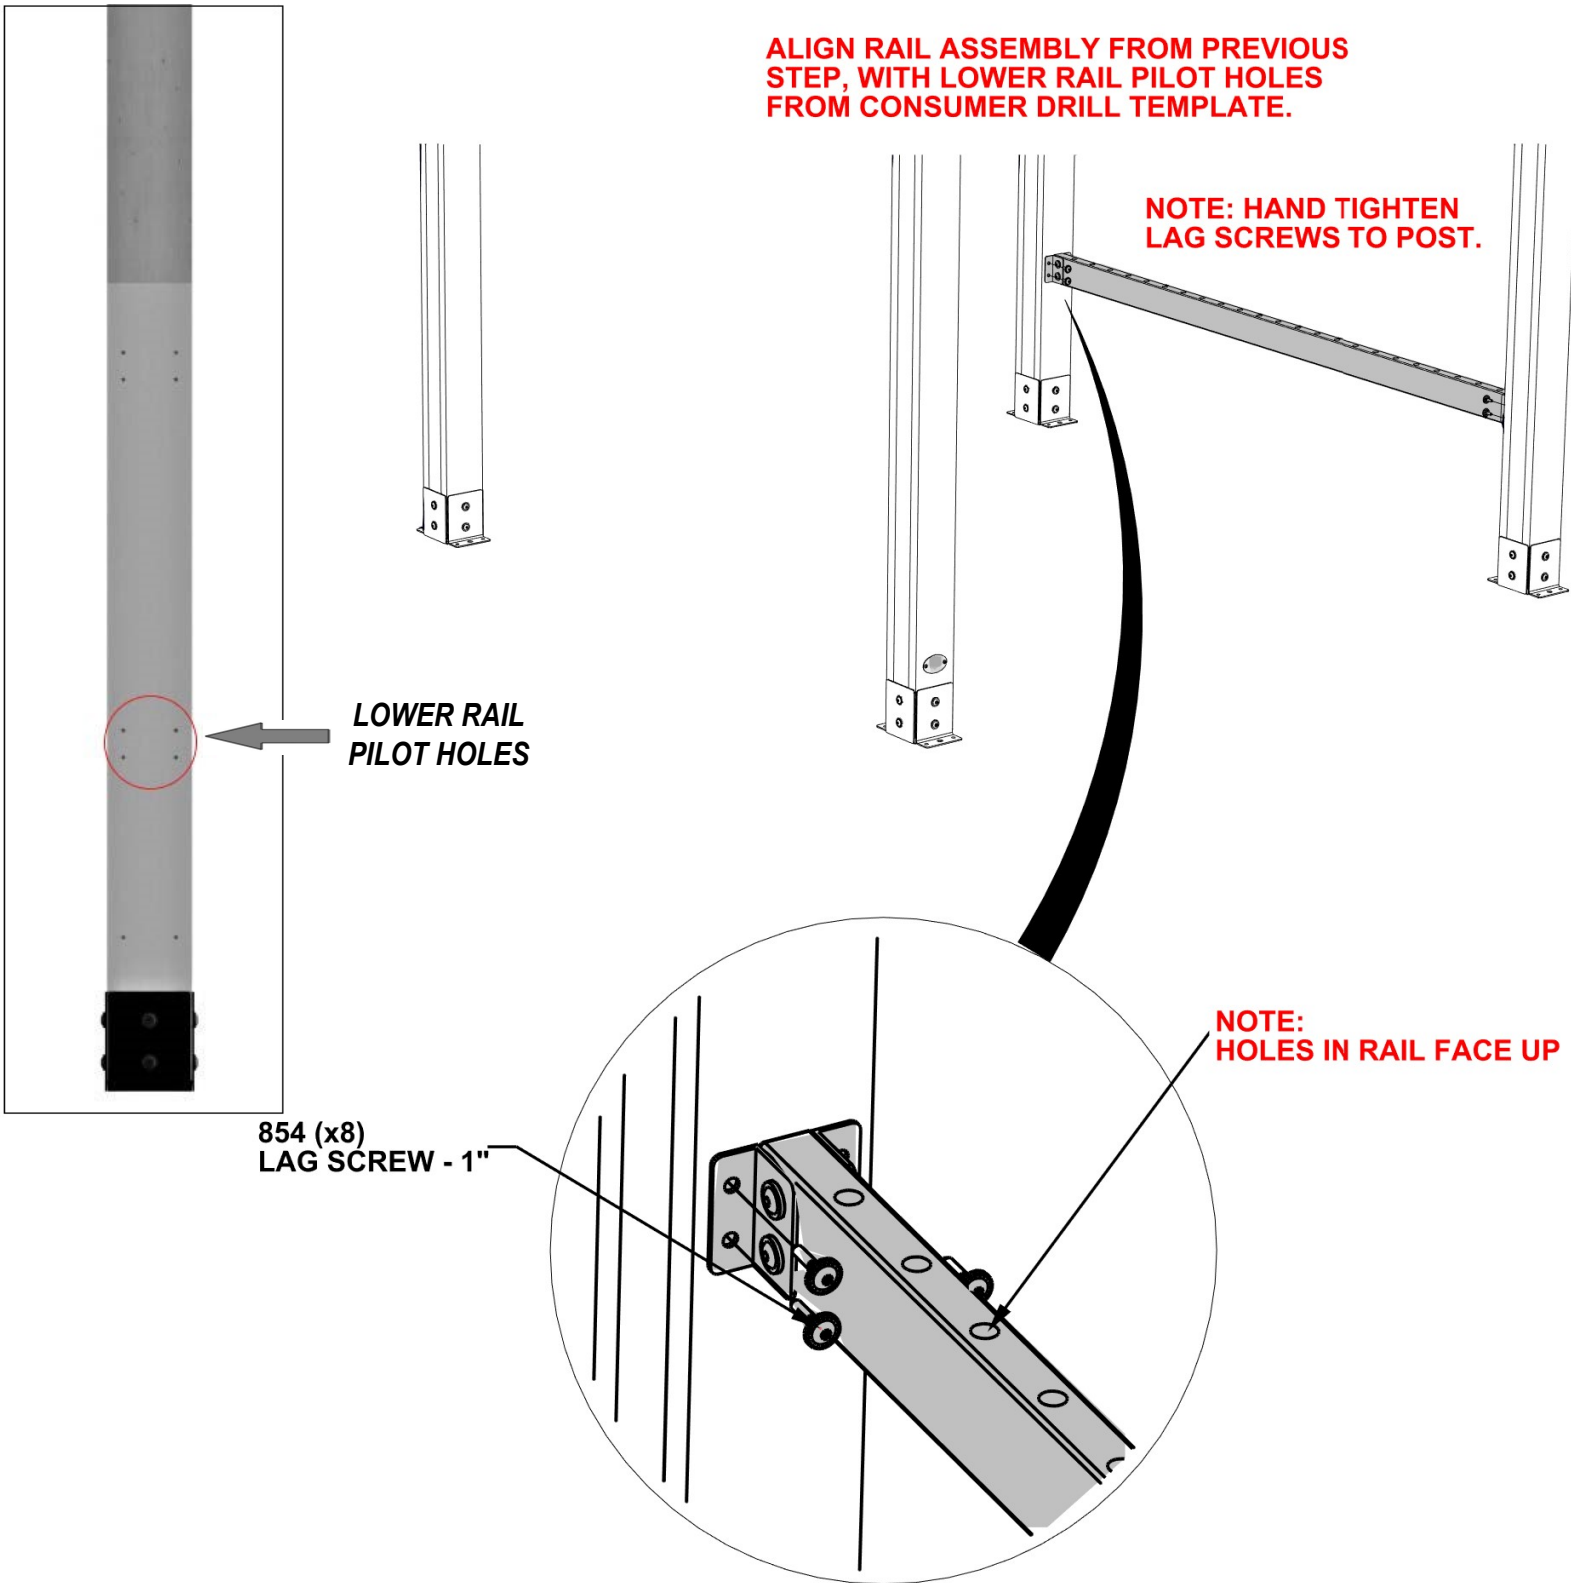


## STEP 25 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)

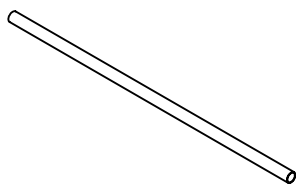


A4M01225  
(x23) | METAL TUBE

PLACE METAL TUBES INTO BOTTOM BOARD OF RAIL ASSEMBLY

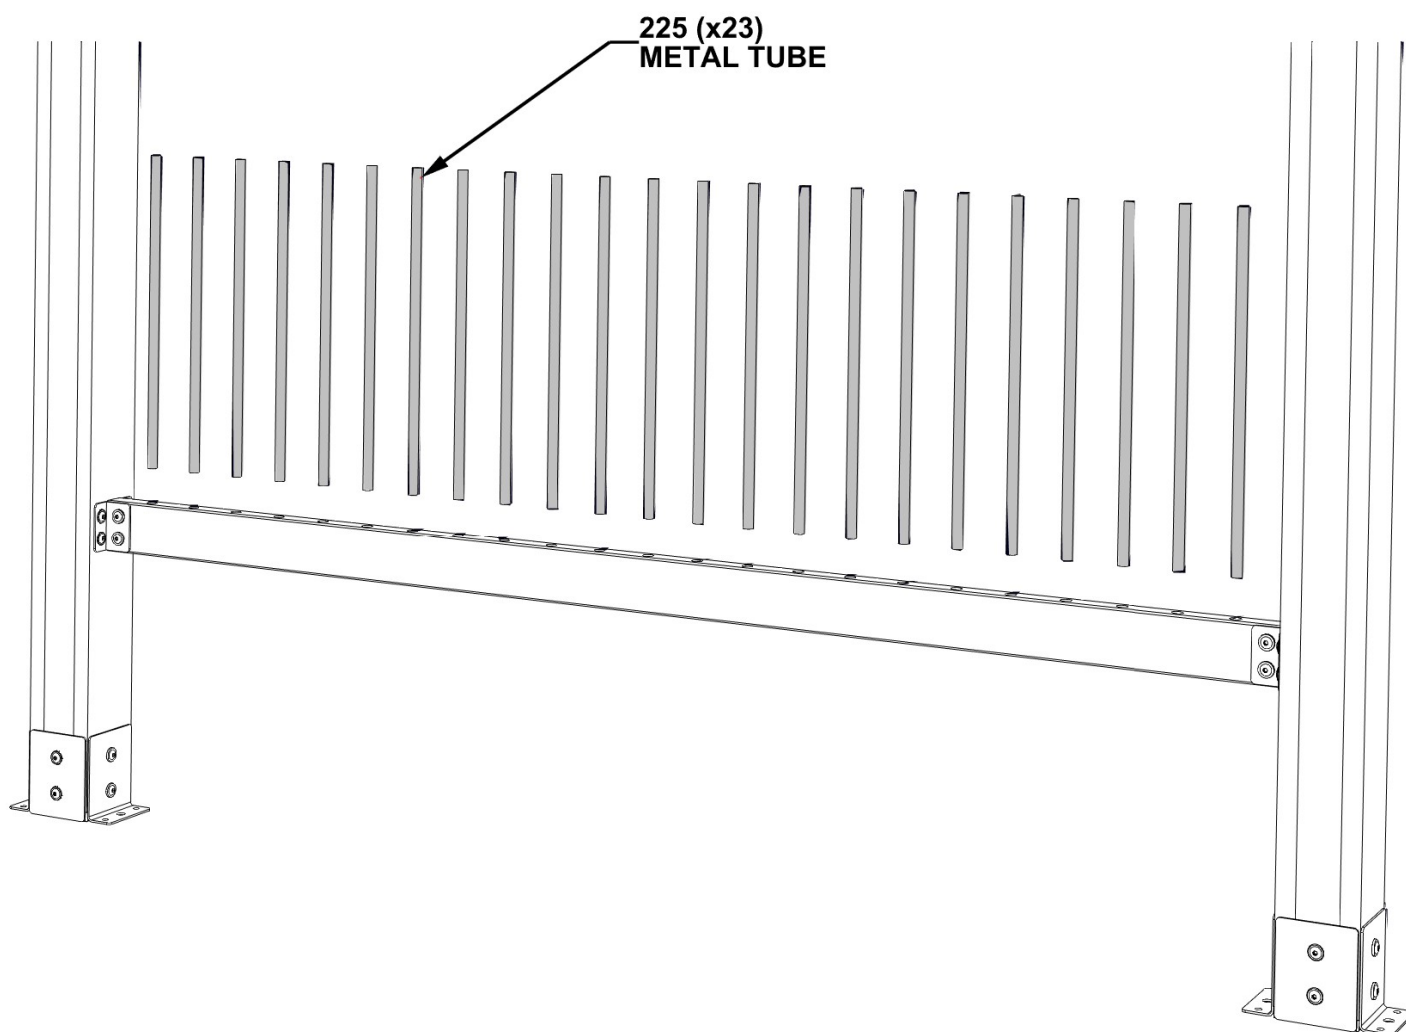

# STEP 26 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS SPLIT TABLE CONFIGURATION)



A4M00855 | L BRACKET  
(x1) | 55x32x82x3.175

A4M01223 | L BRACKET  
(x1)



E2 | RAIL-W4L16363  
(x1) | 1 7/16"x3 3/8"x42 7/16" (36x86x1078)

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |

PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES  
FROM CONSUMER DRILL TEMPLATE.

UPPER RAIL  
PILOT HOLES

E2 (x1)  
RAIL

NOTE:  
FLAT SIDE OF BRACKET UP

469 (x2)  
BARREL NUT - 5/8"

223 (x1)  
L BRACKET

459 (x2)  
BOLT - 1 1/4"

NOTE:  
LAP ORIENTATION

855 (x1)  
L BRACKET  
51x32x82x3.175

854 (x2)  
LAG SCREW - 1"

HAND TIGHTEN BOTTOM TWO  
LAG SCREWS ONLY. LEAVE LOOSE  
UNTIL TABLE TOP IS INSTALLED.

# STEP 27 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS SPLIT TABLE CONFIGURATION)




**E3 | RAIL-W4L16364**  
(x1) | 1 7/16"x3 3/8"x39 1/8" (36x86x993)



**A4M00855 | L BRACKET**  
(x1) | 55x32x82x3.175




**A4M01224**  
(x1) | L BRACKET



**A4M01223**  
(x1) | L BRACKET

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100379     | T-NUT 5/16 BLK             |
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100407     | BOLT WH 5/16x1 1/2 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |


**PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES  
FROM CONSUMER DRILL TEMPLATE.**

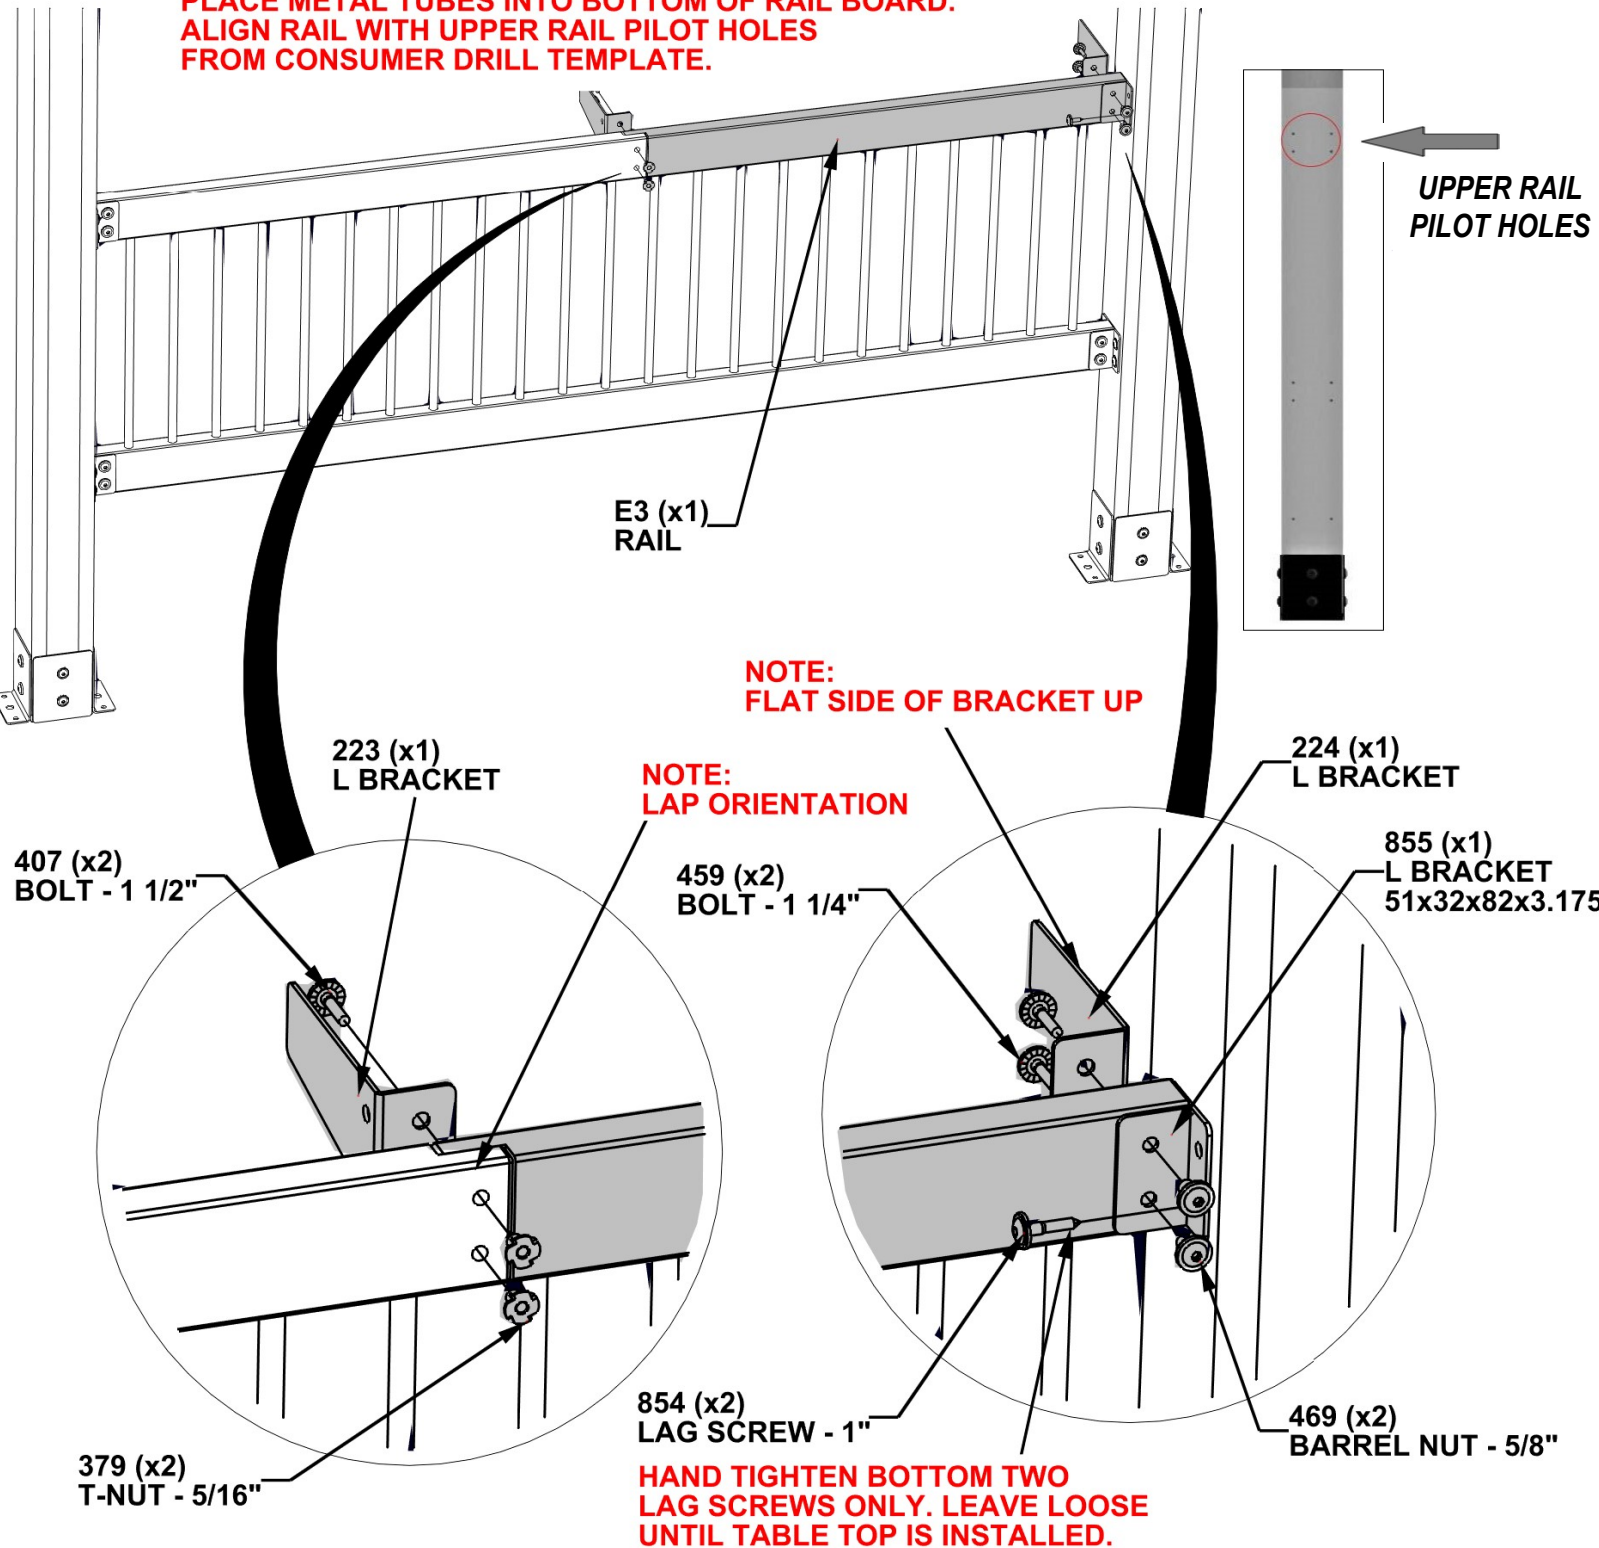




STEP 28 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)

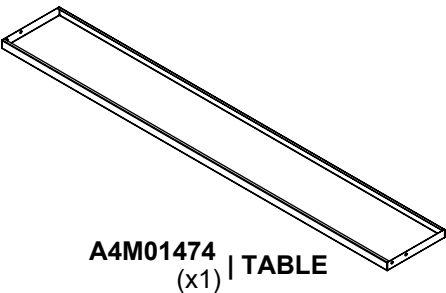

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

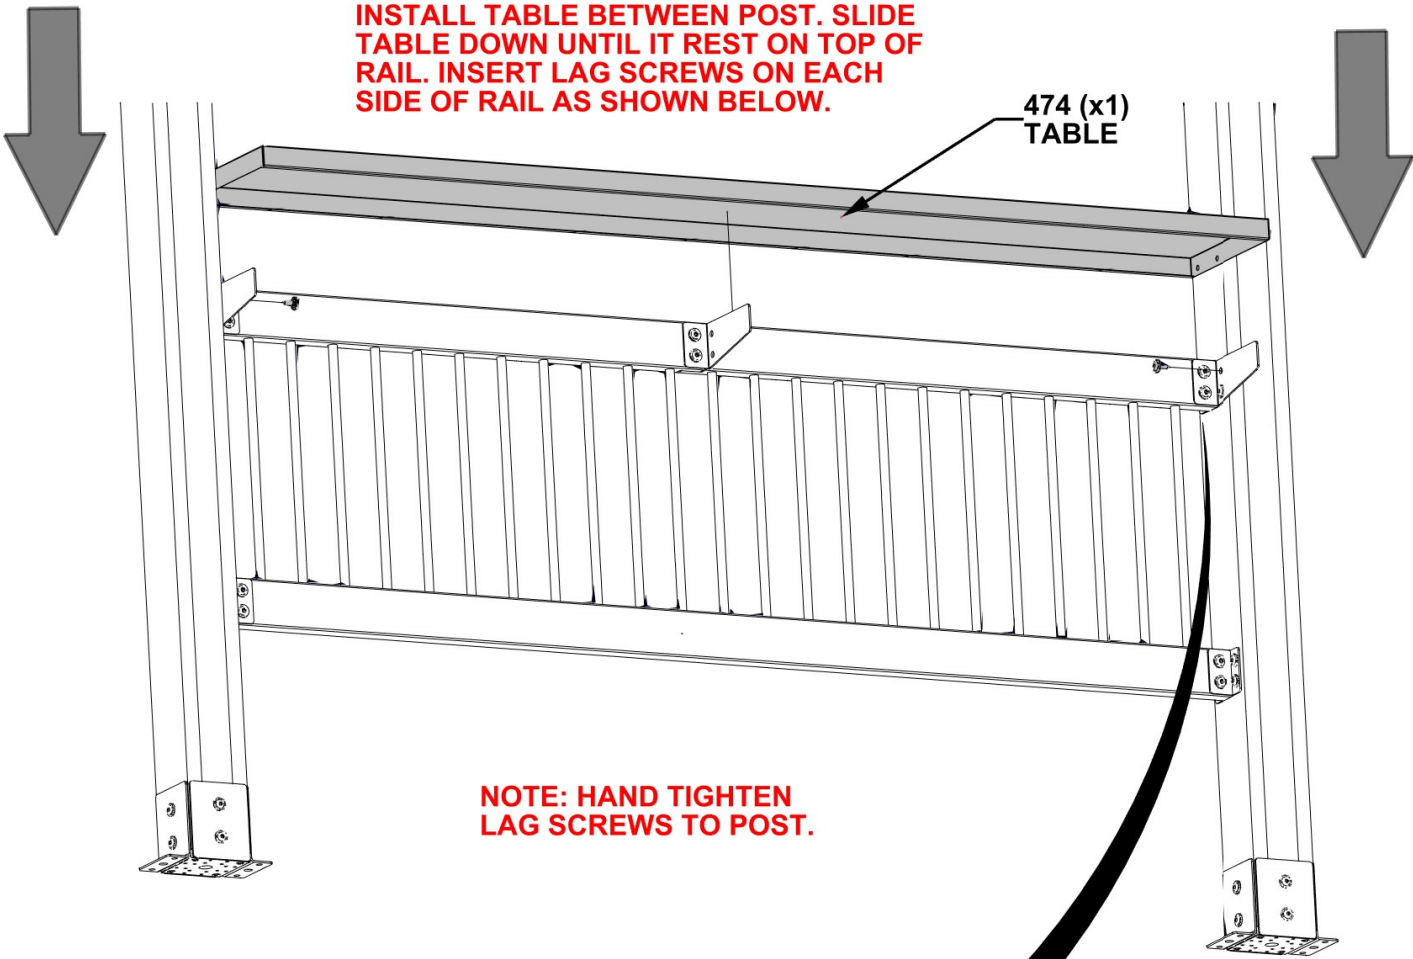

HOLES IN TABLE  
SHOULD ALIGN WITH  
HOLES IN BRACKETS

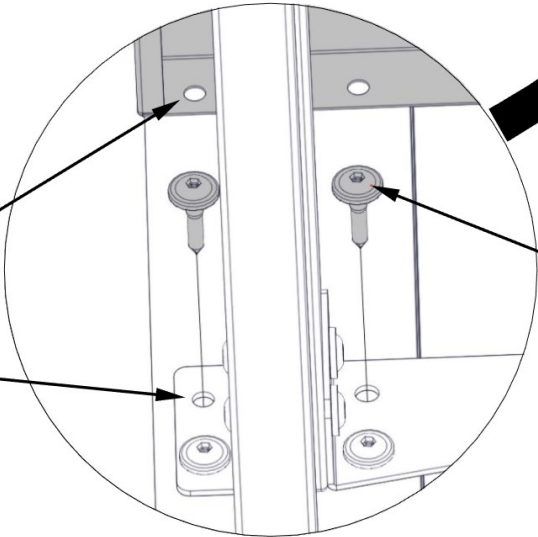


STEP 29 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS SPLIT TABLE CONFIGURATION)

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |


A4M01552  
(x1) | FOOT REST RAIL ASSEMBLY

ALIGN FOOT REST RAIL ASSEMBLY WITH BOTTOM TWO PILOT HOLES FROM CONSUMER DRILL TEMPLATE.

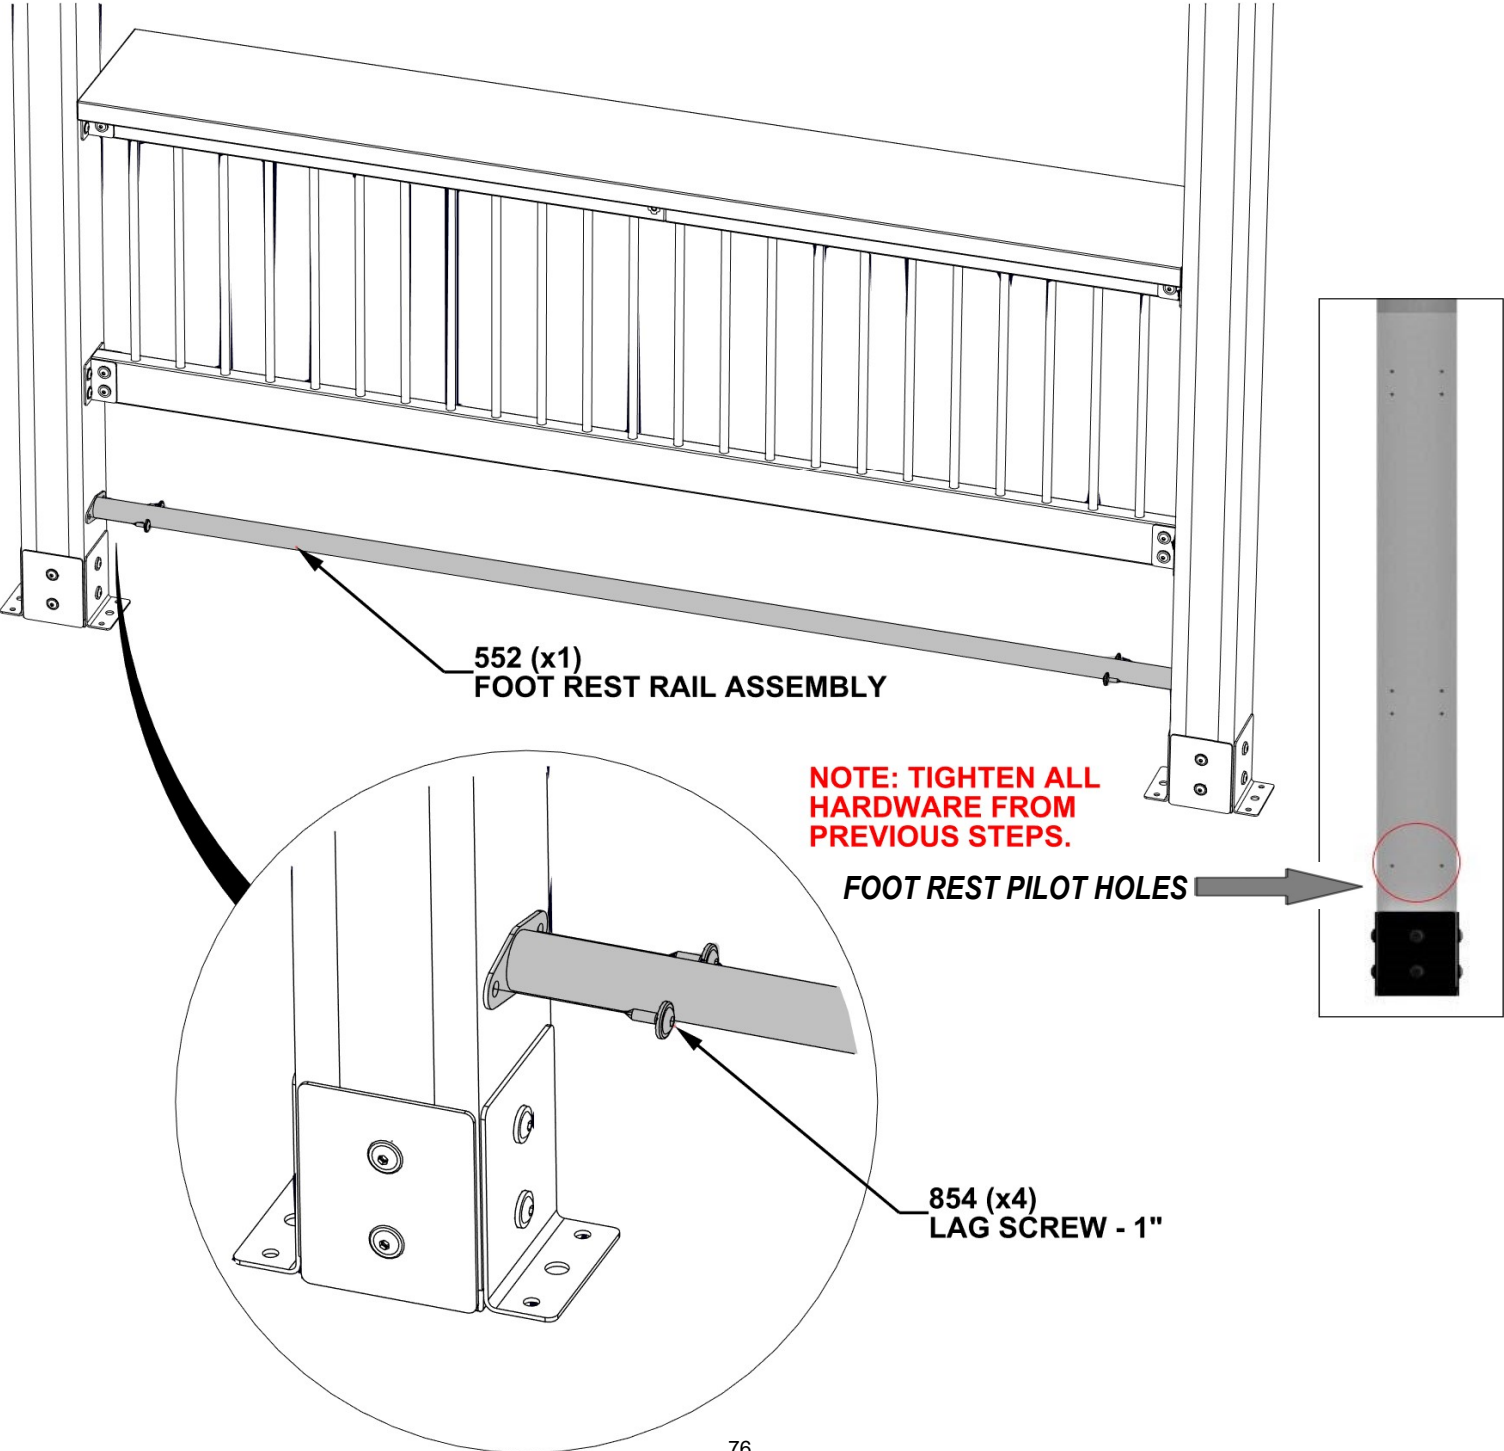


**STEP 30 - GAZEBO ASSEMBLY**

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)


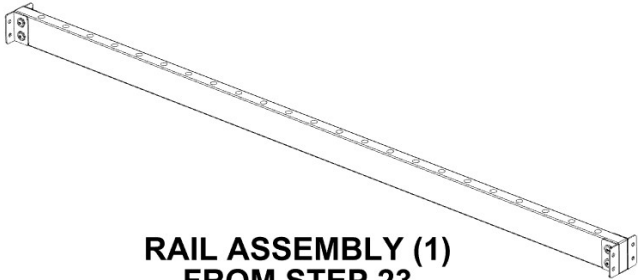


**RAIL ASSEMBLY (1)  
FROM STEP 23**

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 8   | H100854     | LAG SCREW WH 5/16x1 BLK |

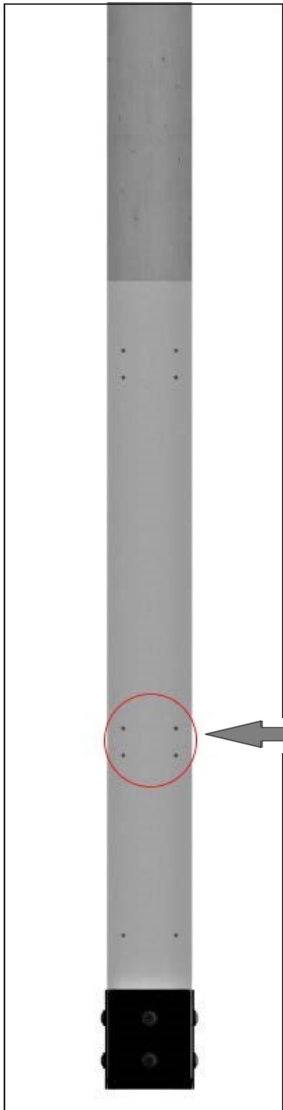

**ALIGN RAIL ASSEMBLY FROM STEP 23, WITH  
LOWER RAIL PILOT HOLES FROM CONSUMER  
DRILL TEMPLATE.**

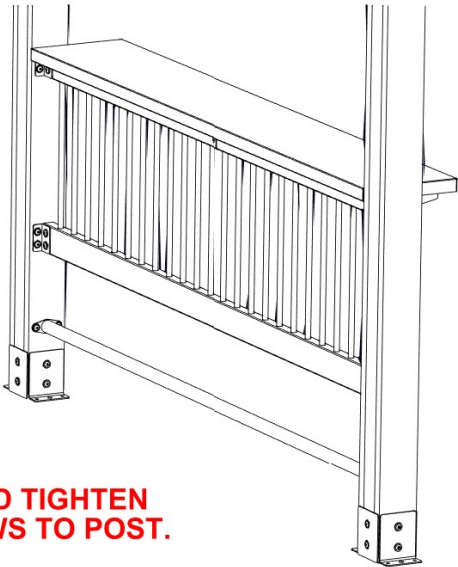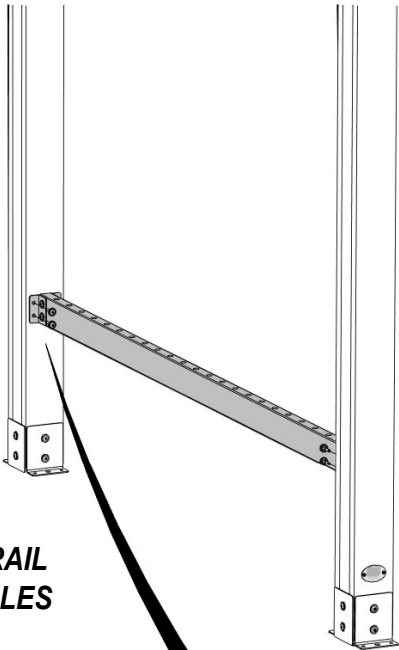


**NOTE: HAND TIGHTEN  
LAG SCREWS TO POST.**

**LOWER RAIL  
PILOT HOLES**


**NOTE:  
HOLES IN RAIL FACE UP**

**854 (x8)  
LAG SCREW - 1"**

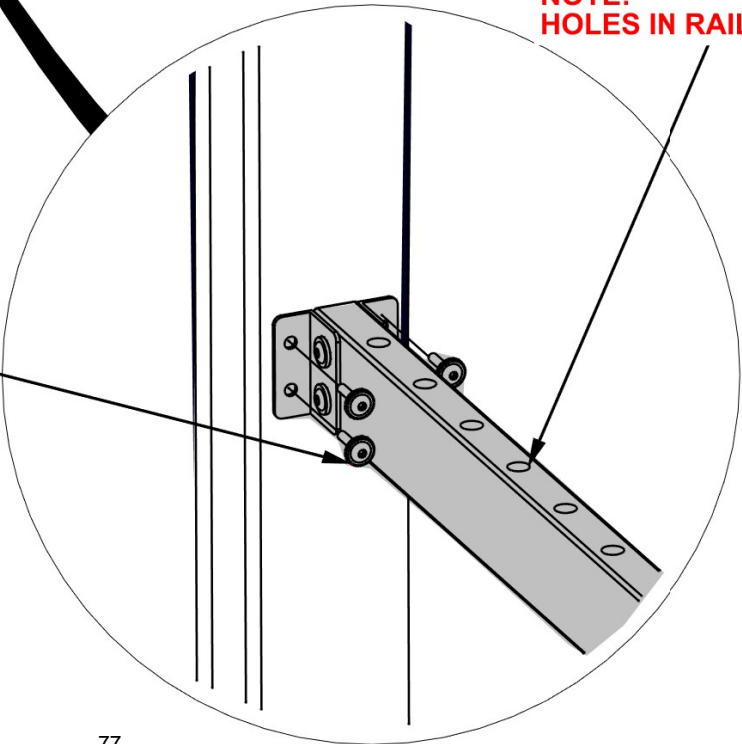



## STEP 31 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)

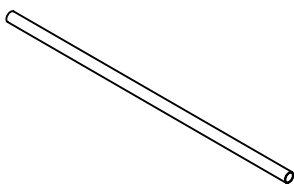

A4M01225  
(x23) | METAL TUBE


PLACE METAL TUBES INTO BOTTOM BOARD OF RAIL ASSEMBLY

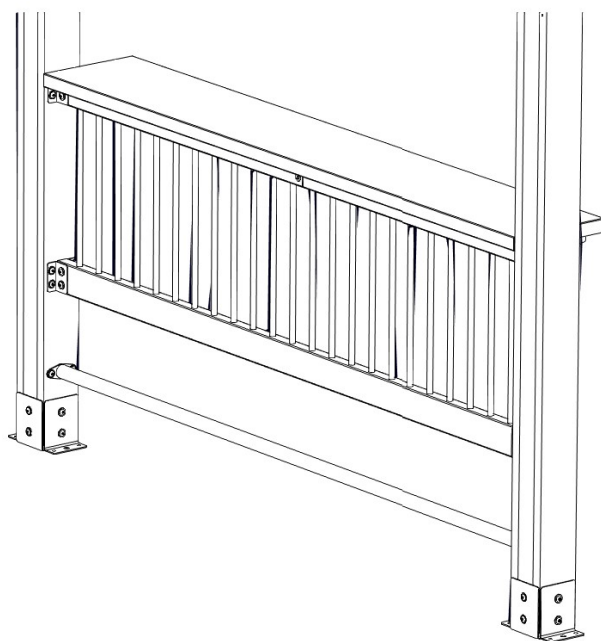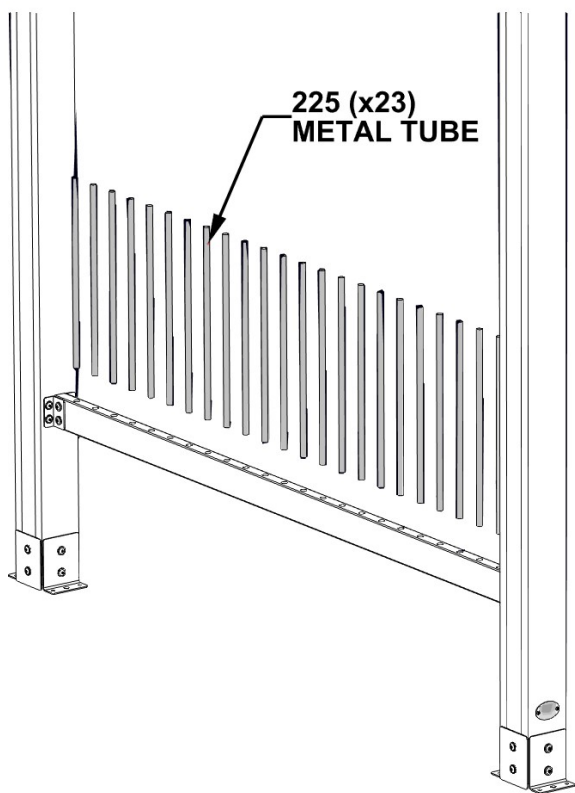



# STEP 32 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS SPLIT TABLE CONFIGURATION)



**E3 | RAIL-W4L16364**  
(x1) | 1 7/16"x3 3/8"x39 1/8" (36x86x993)




**A4M01224 | L BRACKET**  
(x1)



**A4M00855 | L BRACKET**  
(x1) | 55x32x82x3.175


| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |

**PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES FROM  
CONSUMER DRILL TEMPLATE.**

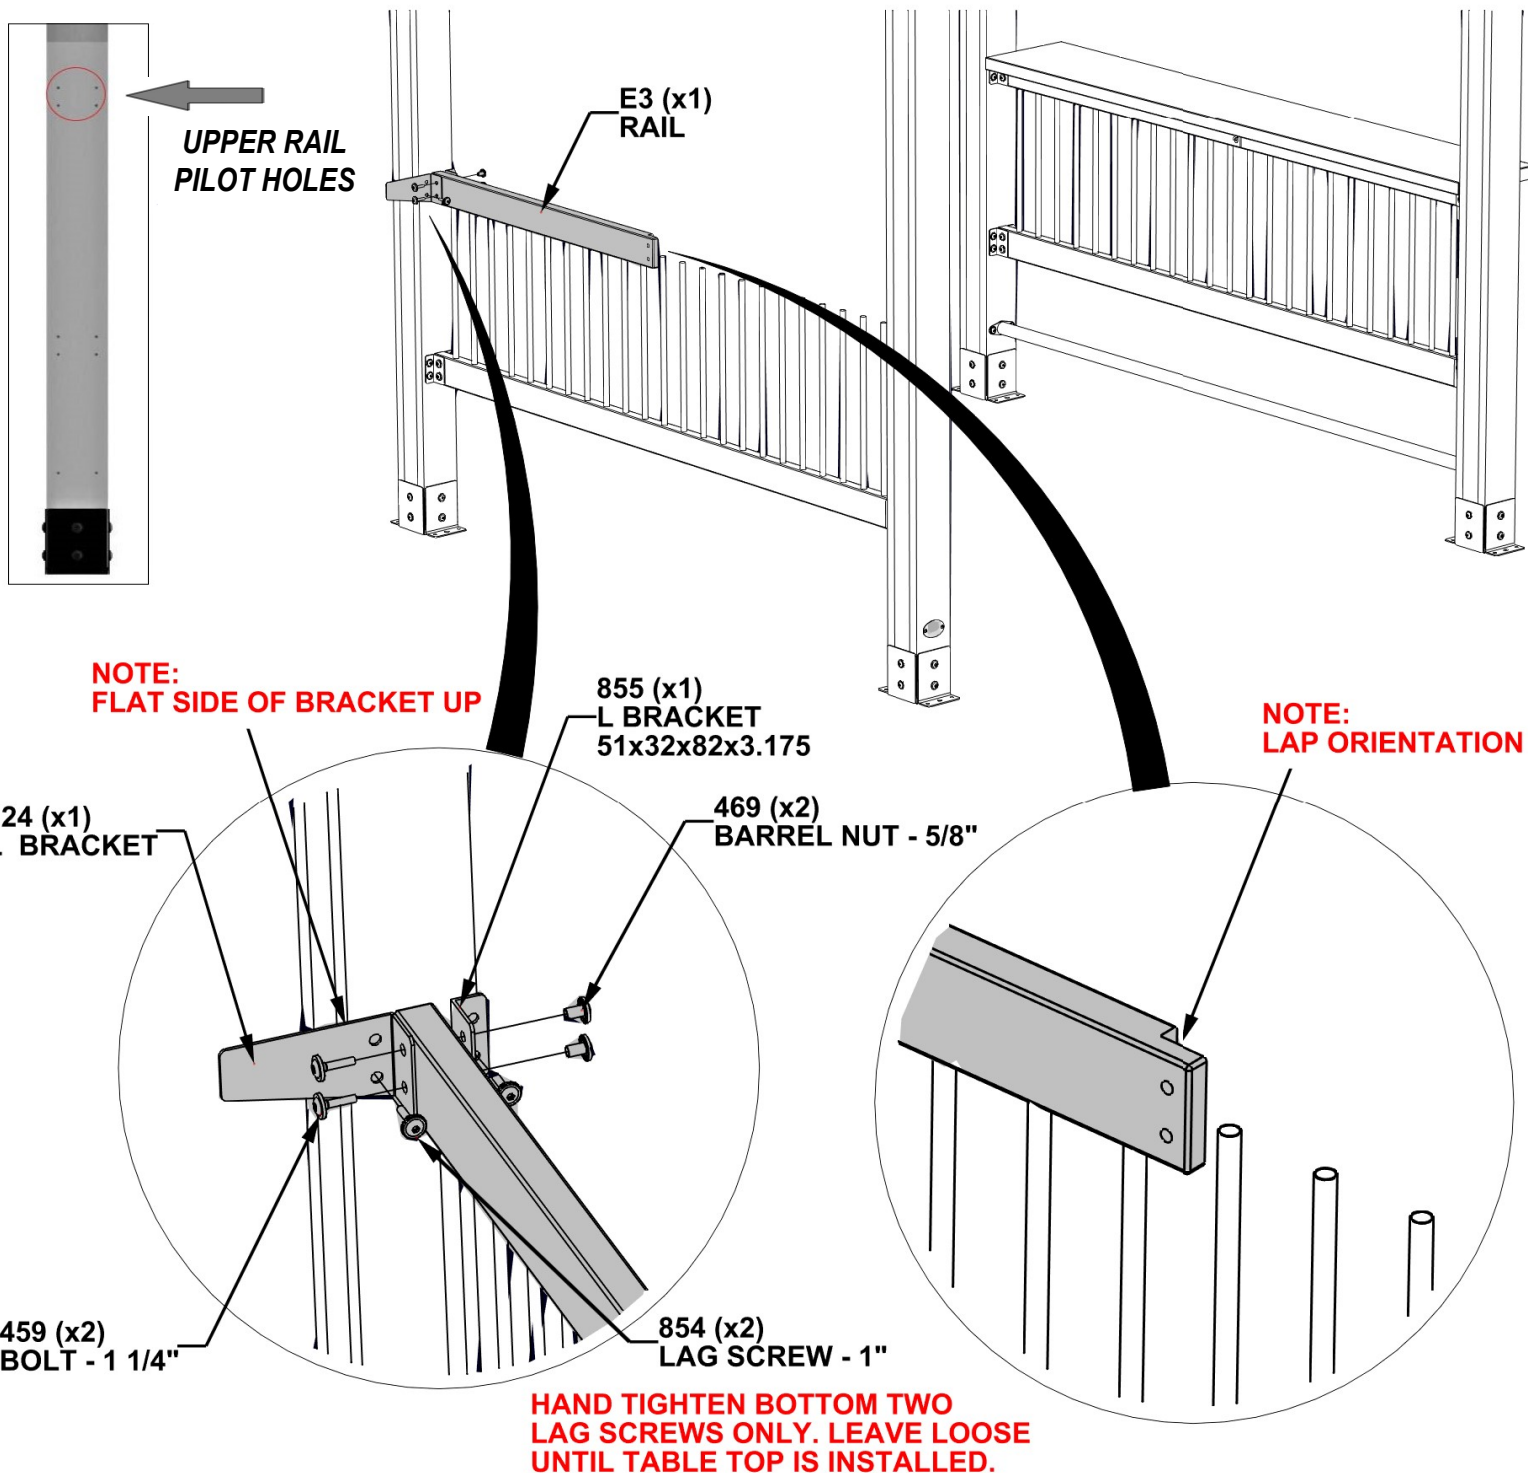

# STEP 33 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS SPLIT TABLE CONFIGURATION)



**E2 | RAIL-W4L16363**  
(x1) | 1 7/16"x3 3/8"x42 7/16" (36x86x1078)




**A4M00855 | L BRACKET**  
(x1) | 55x32x82x3.175




**A4M01223 | L BRACKET**  
(x2)

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 2   | H100459     | BOLT WH 5/16x1 1/4 BLK     |
| 2   | H100379     | T-NUT 5/16 BLK             |
| 2   | H100469     | NUT BARREL WH 5/16X5/8 BLK |
| 2   | H100407     | BOLT WH 5/16x1 1/2 BLK     |
| 2   | H100854     | LAG SCREW WH 5/16x1 BLK    |

**PLACE METAL TUBES INTO BOTTOM OF RAIL BOARD.  
ALIGN RAIL WITH UPPER RAIL PILOT HOLES FROM  
CONSUMER DRILL TEMPLATE.**

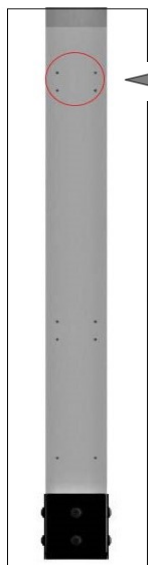

**UPPER RAIL  
PILOT HOLES**

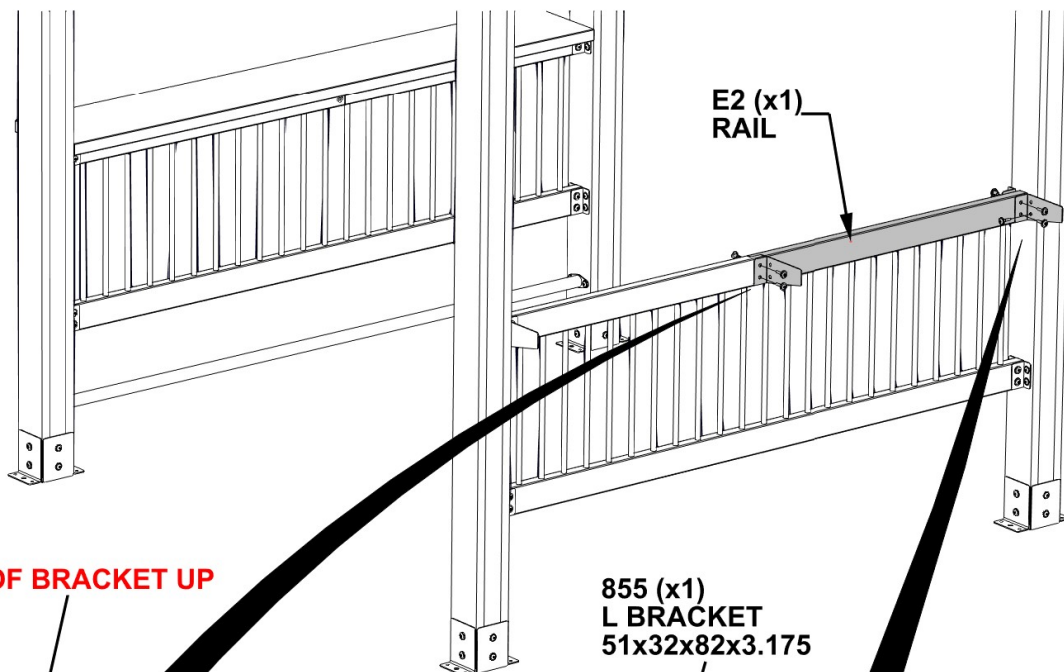

**E2 (x1)  
RAIL**

**NOTE:  
FLAT SIDE OF BRACKET UP**

**NOTE:  
LAP ORIENTATION**

**379 (x2)  
T-NUT - 5/16"**

**469 (x2)  
BARREL NUT - 5/8"**

**855 (x1)  
L BRACKET  
51x32x82x3.175**

**223 (x1)  
L BRACKET**

**223 (x1)  
L BRACKET**

**854 (x2)  
LAG SCREW - 1"**


**407 (x2)  
BOLT - 1 1/2"**

**459 (x2)  
BOLT - 1 1/4"**



**HAND TIGHTEN BOTTOM TWO  
LAG SCREWS ONLY. LEAVE LOOSE  
UNTIL TABLE TOP IS INSTALLED.**

STEP 34 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)

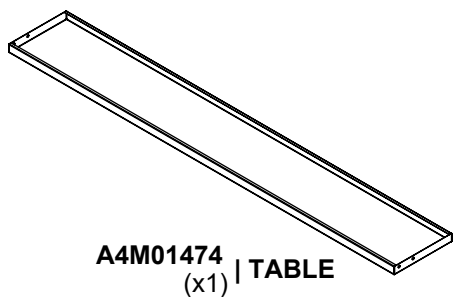

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

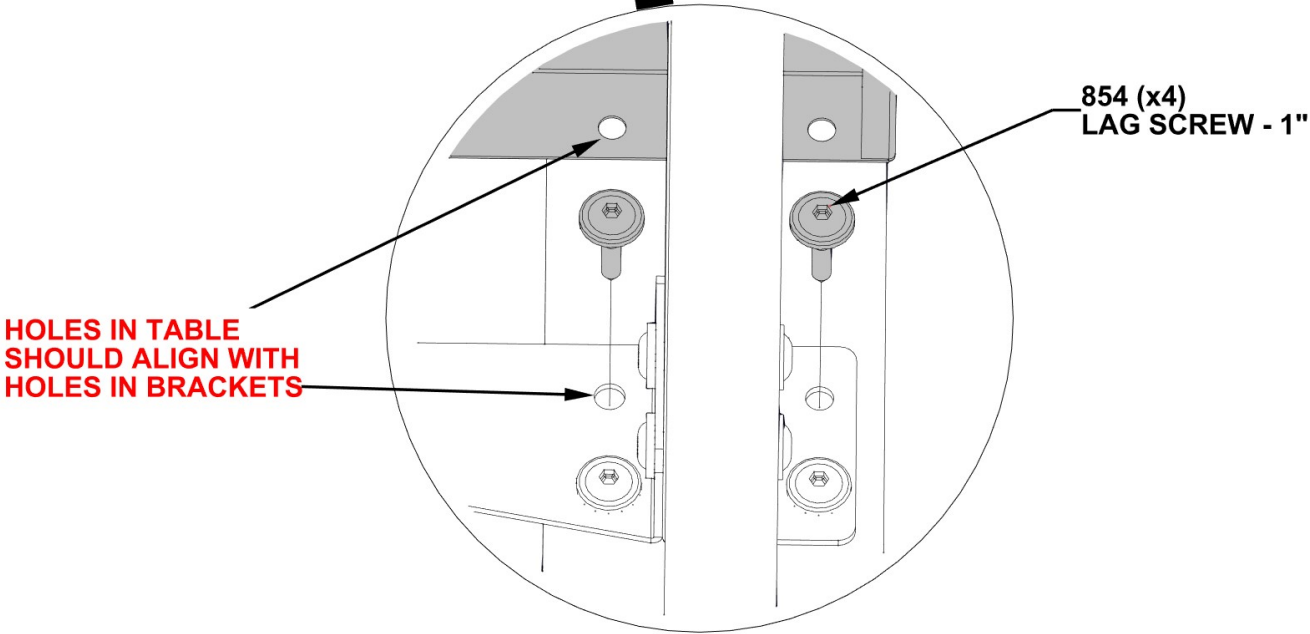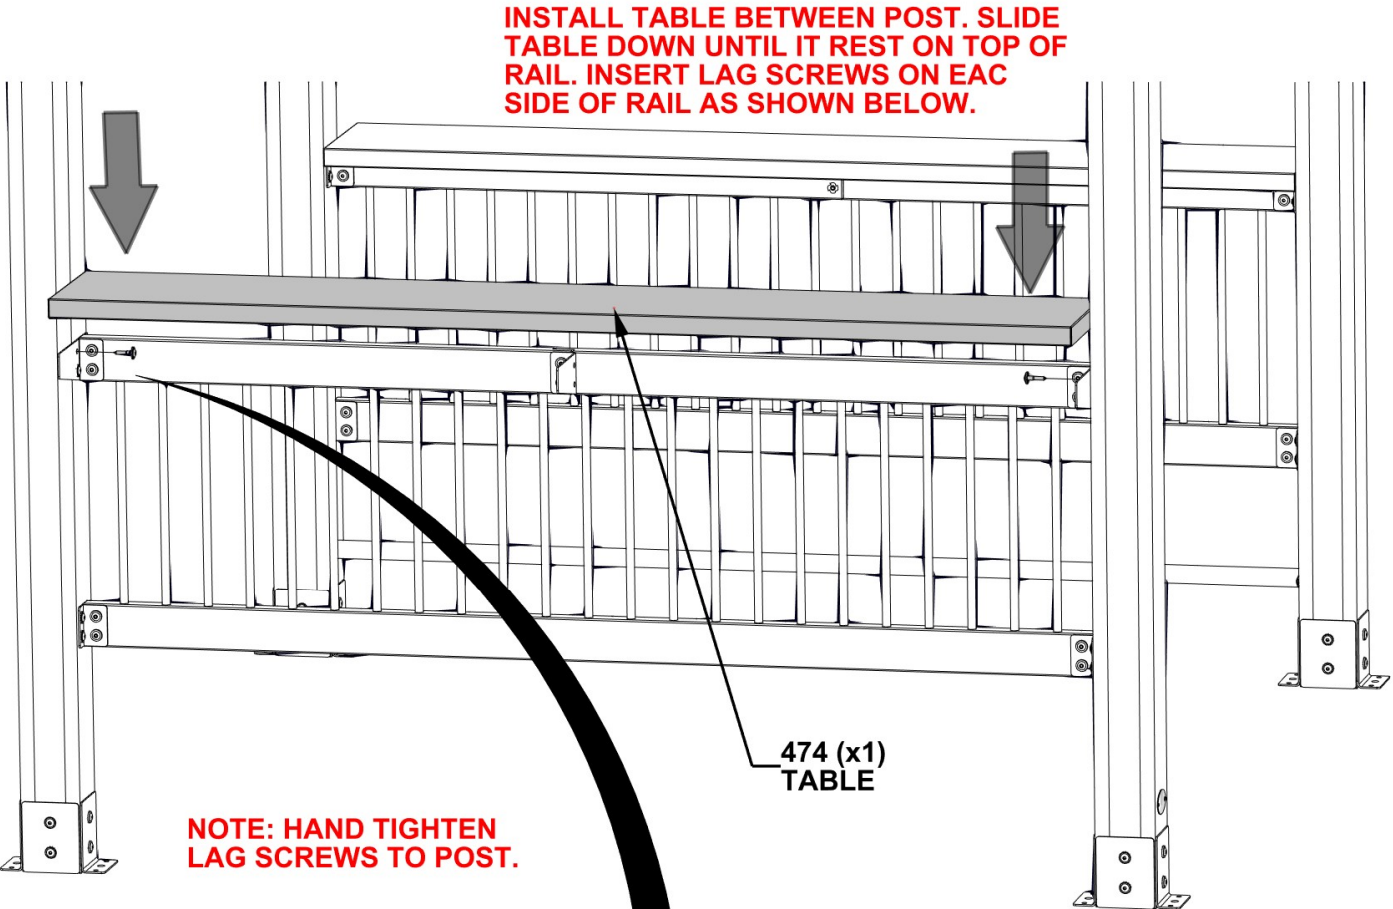





# STEP 35 - GAZEBO ASSEMBLY

(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 4   | H100854     | LAG SCREW WH 5/16x1 BLK |

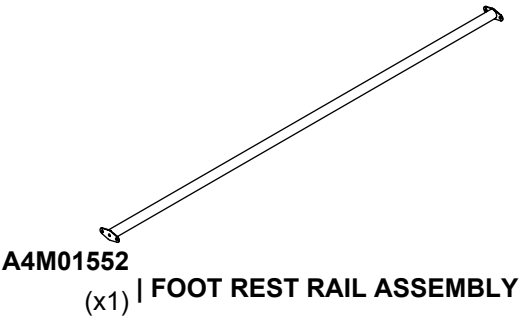

ALIGN FOOT REST RAIL ASSEMBLY WITH BOTTOM  
TWO PILOT HOLES FROM CONSUMER DRILL TEMPLATE.

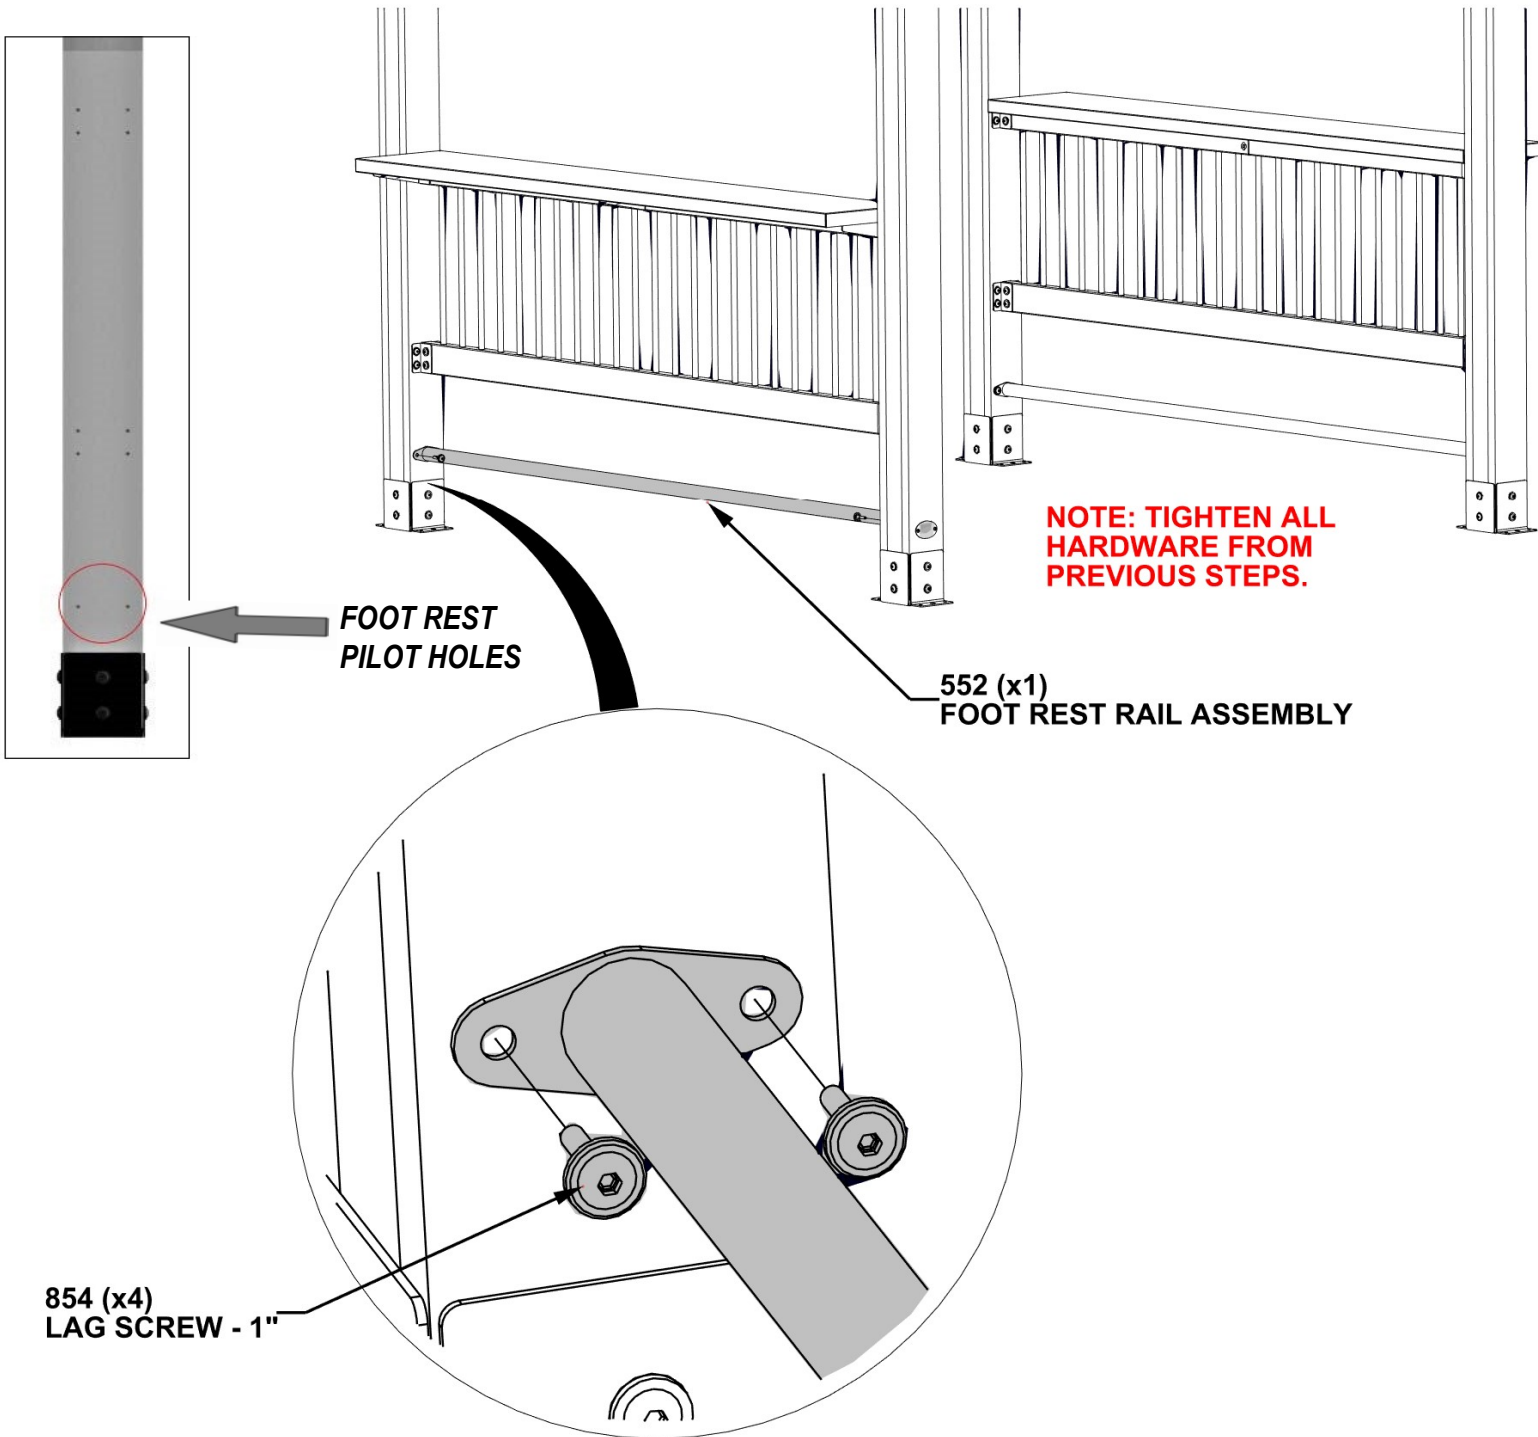



## STEP 36 - GAZEBO ASSEMBLY


(ASSEMBLY INSTRUCTION STEPS DEPICTS  
SPLIT TABLE CONFIGURATION)

| QTY | PART NUMBER | DESCRIPTION            |
|-----|-------------|------------------------|
| 16  | H100630     | WASHER FLAT 8x19 BLK   |
| 16  | H100120     | CONCRETE ANCHOR 1/4x2" |


**NOTES:**  
MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE  
SURFACE OR CONCRETE POST PADS. SEE BELOW.

FOR INSTALLATION ON WOOD DECKS, YOU MUST ENSURE THERE  
IS AMPLE STRUCTURAL SUPPORT UNDER DECK.

**NOTES:**  
PRE-DRILL HOLES FOR CONCRETE  
ANCHORS USING A 3/16" CONCRETE  
DRILL BIT.

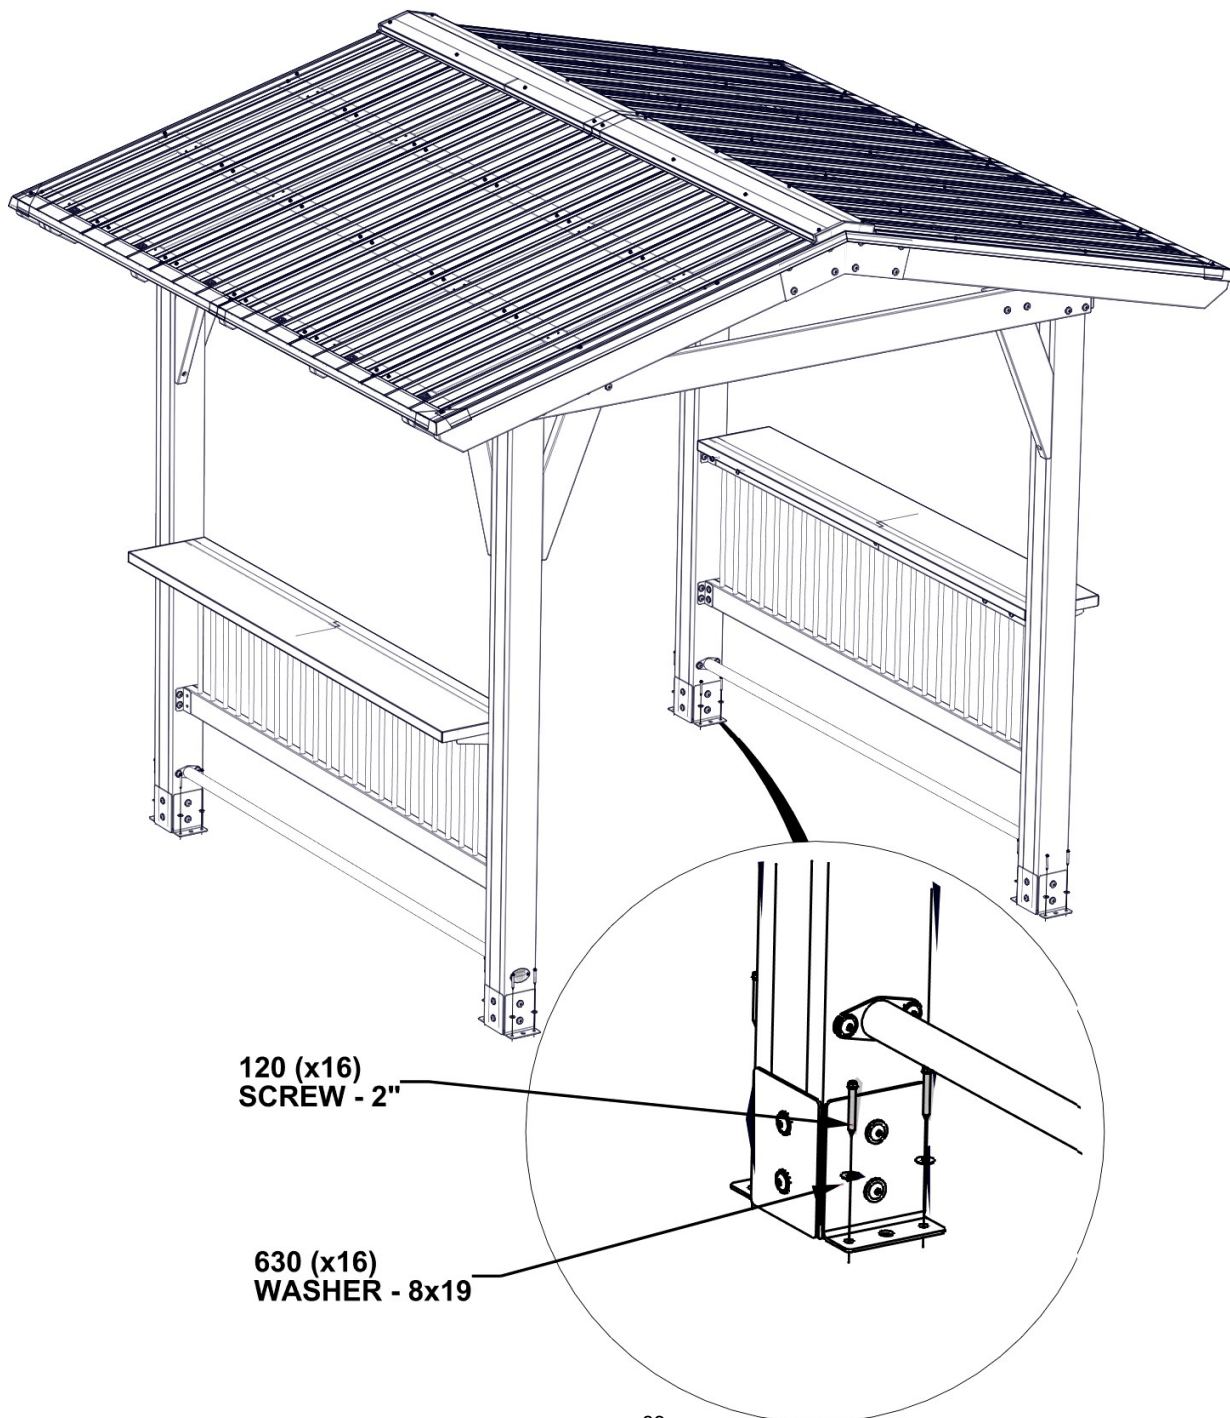

## STEP 37: ELECTRICAL ENCLOSURE

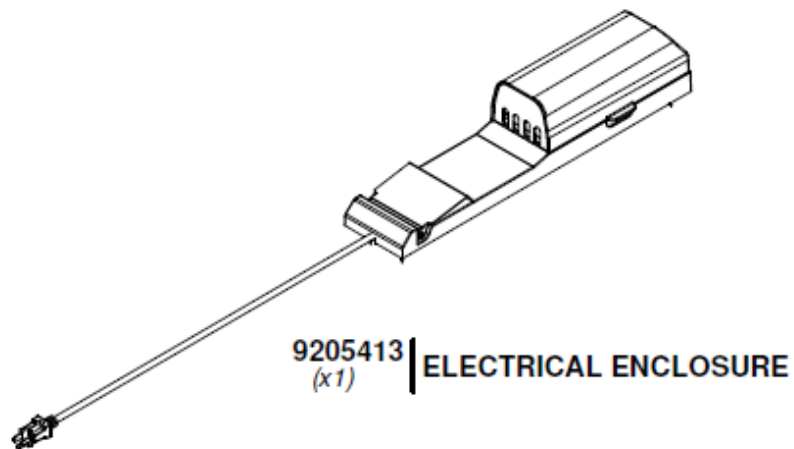

FOR ELECTRICAL ENCLOSURE INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COMES PACKAGED WITH THE ELECTRICAL ENCLOSURE KIT. INSTALL ON ANY POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.