


HEADBOARD ASSEMBLY INSTRUCTION


(FULL/ QN / CK / EK)

P1

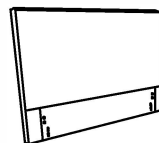


HEADBOARD (HB) 1PC

P2



WOODEN LEG 2PCS

P3

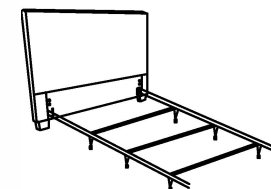

A WRENCH



5/16" 1PC

B WRENCH



1/4" 1PC

C BOLT



5/16"x3.25"
4PCS

D BOLT



1/4"x1"
8PCS

E FLAT
WASHER



5/16" 4PCS

F SPRING
WASHER



5/16" 4PCS

G FLAT
WASHER




1/4" 8PCS

H SPRING
WASHER




1/4" 8PCS


OPTION 1:

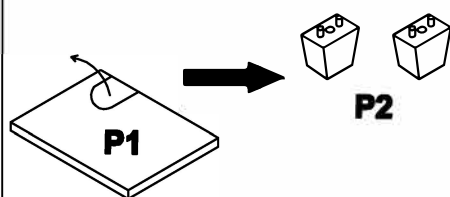

STEP 1: TAKE THE LEGS OUT FROM THE BACK OF HEADBOARD.

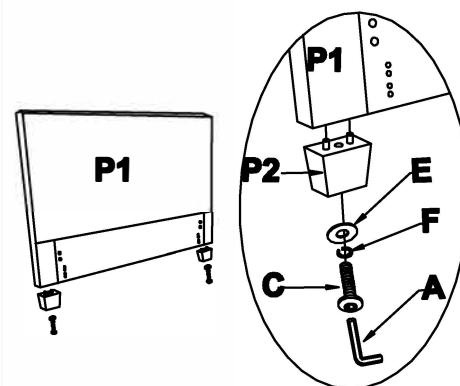


STEP 2: ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF HEADBOARD.

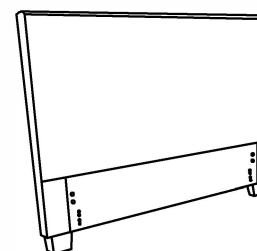


ASSEMBLY COMPLETE.

INSTRUCTIONS FOR ADJUSTING LEVELERS.


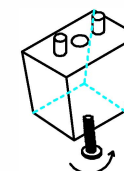


THE LEVELERS ARE LOCATED ON THE UNDERSIDE OF EACH OF THE LEGS (P2). TURN COUNTER-CLOCKWISE TO EXTEND, AND CLOCKWISE TO CONTRACT. ADJUST LEVELERS UNTIL THE LEGS MATCH EACH OTHER IN HEIGHT.

OPTION 2:

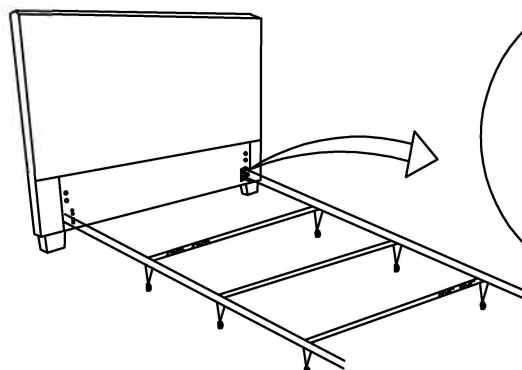

STEP 1: PLACE WASHERS (H&G) THROUGH BOLT (D), AND FASTEN THE METAL BED FRAME TO HEADBOARD.

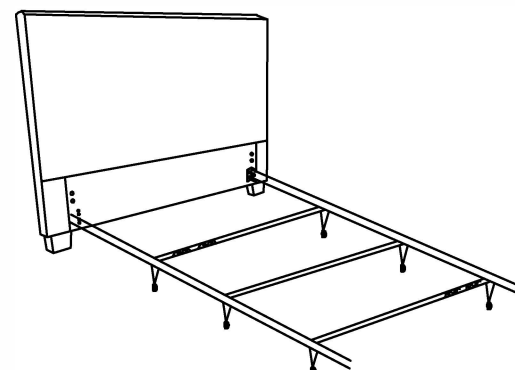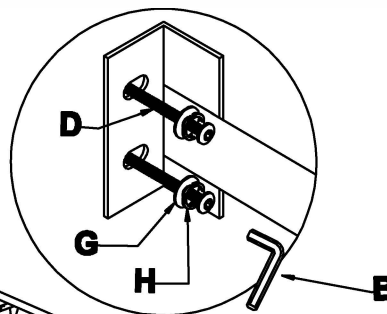

STEP 2: ASSEMBLY IS COMPLETED. SHOWN WITH METAL BED FRAME.