













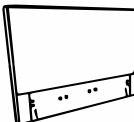


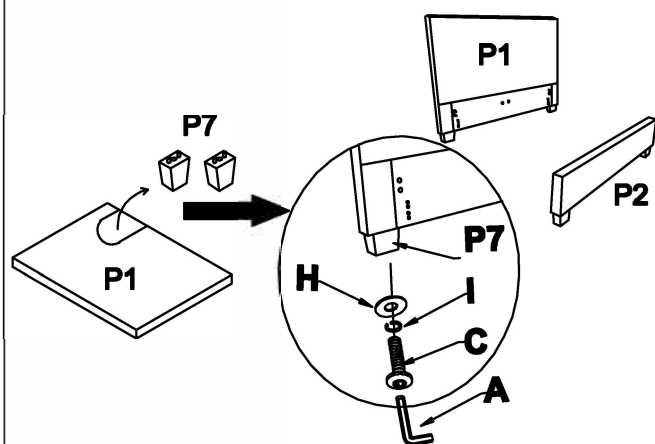



# BED ASSEMBLY INSTRUCTION (CK / EK)

ATTENTION: THERE IS 1 BOX OF HARDWARE  
(INCLUDING BOLTS, WRENCH, SUPPORT LEG) PACKED  
INSIDE BOX OF METAL SUPPORT.


<b>P1</b>  <b>HEADBOARD (HB)</b> 1PC	<b>P2</b>  <b>FOOTBOARD (FB)</b> 1PC	<b>P3</b>  <b>SIDE RAIL 2PCS</b>	<b>P4</b>  <b>METAL TUBE 2PCS</b>	<b>P5</b>  <b>SLAT 38PCS</b>	<b>P6</b>  <b>SUPPORT LEG 4PCS</b>	<b>P7</b>  <b>WOODEN LEG 4PCS</b>			
<b>A</b> <b>WRENCH</b>  <b>5/16" 1PC</b>	<b>B</b> <b>BOLT</b>  <b>5/16" 1" 8PCS</b>	<b>C</b> <b>BOLT</b>  <b>5/16" 3.25" 8PCS</b>	<b>D</b> <b>BOLT</b>  <b>5/16" 2.5" 8PCS</b>	<b>E</b> <b>WRENCH</b>  <b>5/16" 1PC</b>	<b>F</b> <b>PLASTIC CLIPS</b>  <b>26 PCS</b>	<b>G</b> <b>PLASTIC CLIPS</b>  <b>26 PCS</b>	<b>H</b> <b>FLAT WASHER</b>  <b>Ø5/16" 24PCS</b>	<b>I</b> <b>SPRING WASHER</b>  <b>Ø5/16" 24PCS</b>	<b>J</b> <b>NUT</b>  <b>M8*13MM 8 PCS</b>




STEP 1: ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF  
HEADBOARD AND FOOTBOARD.

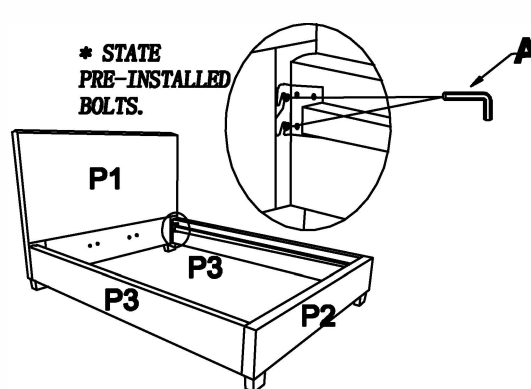


STEP 2: LOOSEN THE BOLTS OF HEADBOARD (P1) & FOOTBOARD (P2).  
CONNECT THE SIDERAIL (P3) WITH HEADBOARD (P1) AND FOOTBOARD  
(P2) BY HOOK, TIGHTEN THE BOLTS BY WRENCH (A).

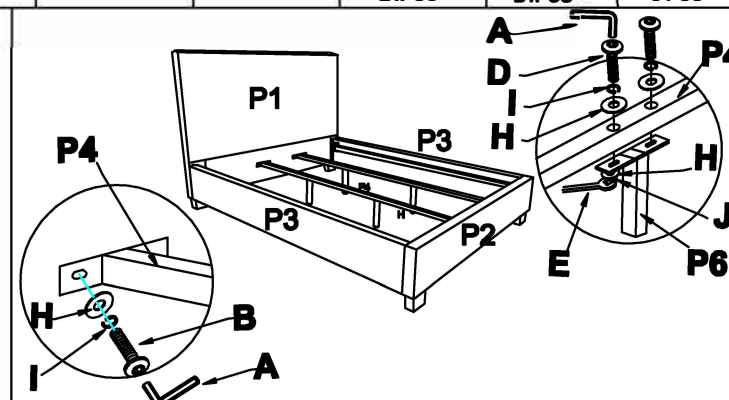


STEP 3: CONNECT THE METAL TUBE TO THE HEADBOARD & FOOTBOARD  
WITH BOLT (B) BY WRENCH (A). ASSEMBLE THE SUPPORT LEG (H) TO  
THE BOTTOM OF TUBE WITH BOLT (D) BY WRENCH (A).

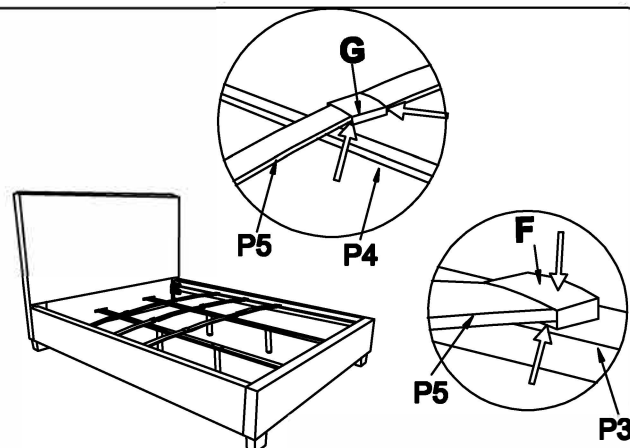

STEP 4: INSERT CLIPS (F) TO SIDE RAILS' TUBE. INSERT SLATS  
(P5) TO THE CLIPS (F), THEN CONNECT THE TWO SIDE'S OF THE SLATS  
TOGETHER BY CLIPS (G).

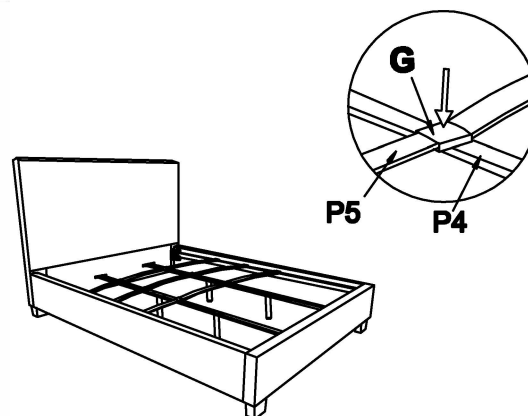

STEP 5: INSERT CLIPS (G) INTO THE MIDDLE TUBES OF THE  
REMAINING SLATS TO THE BED FOUNDATION.

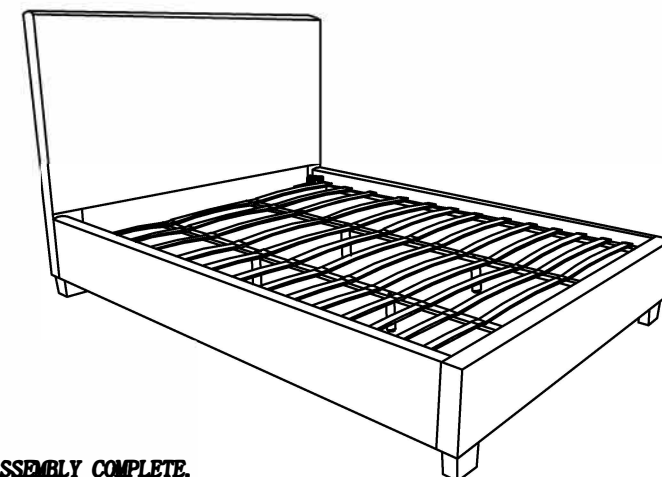

ASSEMBLY COMPLETE.