



# BED ASSEMBLY INSTRUCTION ( FULL / QN )

ATTENTION: THERE IS 1 BOX OF HARDWARE (INCLUDING BOLTS, WRENCH, SUPPORT LEG) PACKED INSIDE BOX OF METAL SUPPORT.


P1	P2	P3	P4	P5	P6	P7
HEADBOARD (HB) 1PC	FOOTBOARD (FB) 1PC	SIDE RAIL 2PCS	METAL TUBE 1PC	SLAT 26PCS	SUPPORT LEG 2 PCS	WOODEN LEG 4PCS
<b>A</b> WRENCH 5/16" 1PC	<b>B</b> BOLT 5/16" 1" 4PCS	<b>C</b> BOLT 5/16"×3.25" 8PCS	<b>D</b> BOLT 5/16"×2.5" 4PCS	<b>E</b> WRENCH 5/16" 1PC	<b>F</b> PLASTIC CLIPS 26 PCS	<b>G</b> PLASTIC CLIPS 13 PCS
<b>H</b> FLAT WASHER Ø5/16" 16 PCS	<b>I</b> SPRING WASHER Ø5/16" 16 PCS	<b>J</b> NUT M8×13MM 4 PCS				

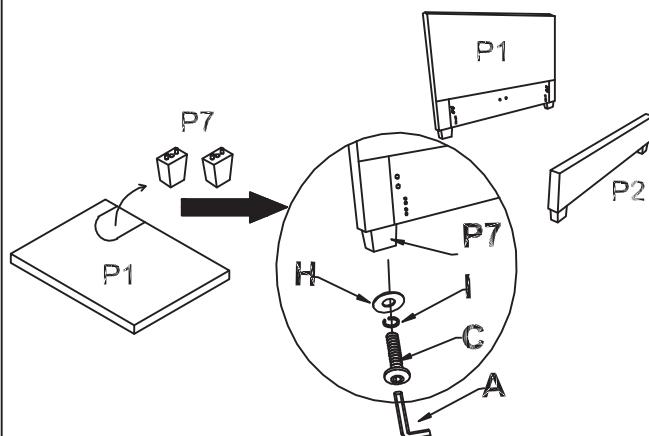


STEP 1: ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF HEADBOARD AND FOOTBOARD.

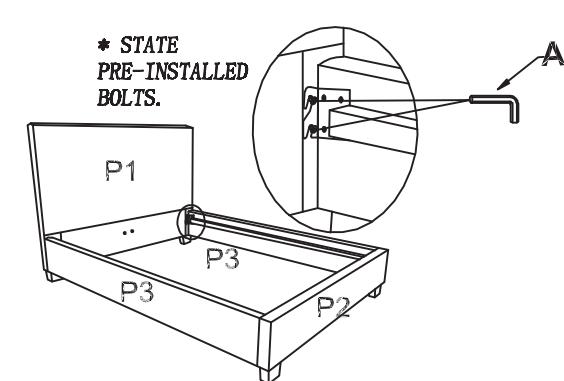


STEP 2: LOOSEN THE BOLTS OF HEADBOARD (P1) & FOOTBOARD (P2). CONNECT THE SIDERAIL (P3) WITH HEADBOARD (P1) AND FOOTBOARD (P2) BY HOOK, TIGHTEN THE PRE-INSTALLED BOLTS BY WRENCH (A).

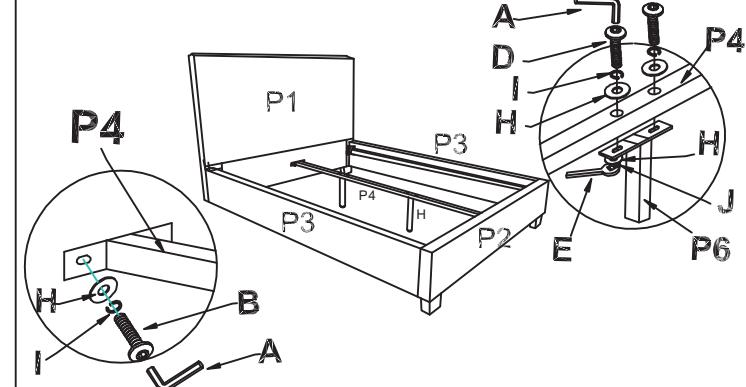


STEP 3: CONNECT THE METAL TUBE TO THE HEADBOARD & FOOTBOARD WITH BOLT (B) BY WRENCH (A). ASSEMBLE THE SUPPORT LEG (H) TO THE BOTTOM OF TUBE WITH BOLT (D) BY WRENCH (A).

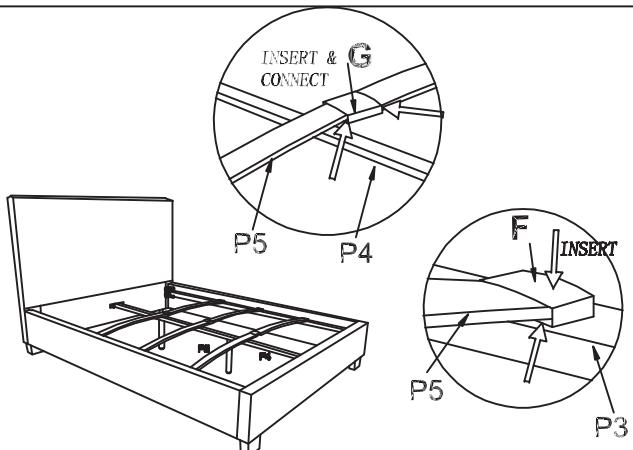

STEP 4: INSERT CLIPS (F) TO SIDE RAILS' TUBE. INSERT SLATS TO THE CLIPS (F), THEN CONNECT THE TWO SIDE'S OF THE SLATS TOGETHER BY CLIPS (G).

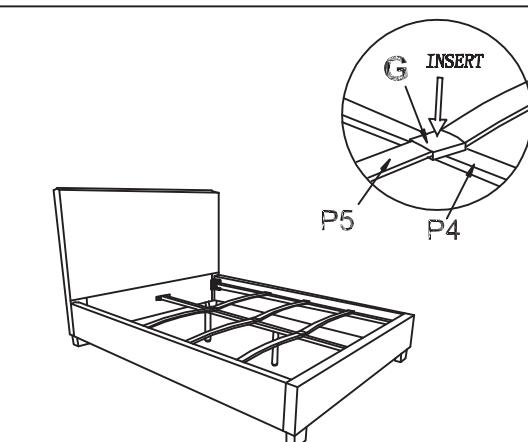

STEP 5: INSERT CLIPS (G) INTO THE MIDDLE TUBE OF THE REMAINING SLATS TO THE BED FOUNDATION.

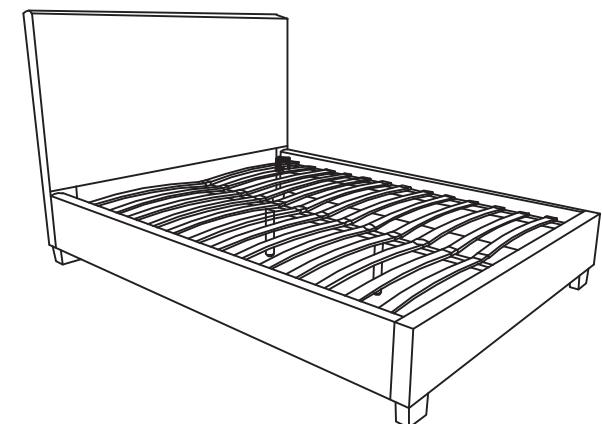

ASSEMBLY COMPLETE.