










CROSLEY

FURNITURE



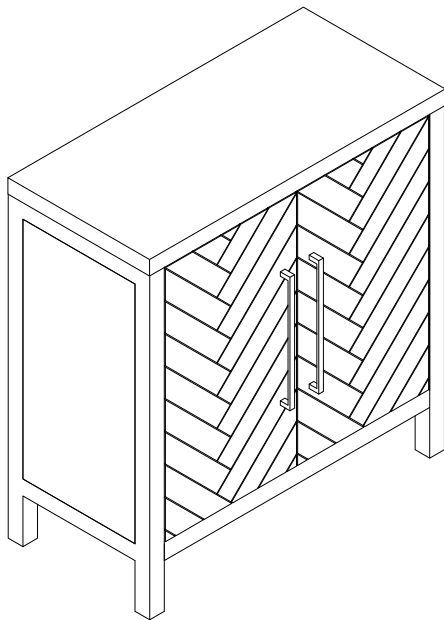







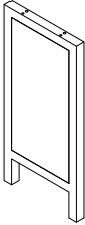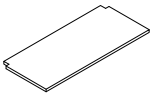




Accent Cabinet CF3124



PART LIST


<div data-bbox="145 136 188 185">A</div> 	<div data-bbox="406 136 450 185">B</div> 	<div data-bbox="668 136 711 185">C</div> 	<div data-bbox="932 136 975 185">D</div> 	<div data-bbox="1193 136 1236 185">E</div> 
<div data-bbox="193 421 343 456">Top Panel</div> <div data-bbox="229 495 306 530">1 PC</div>	<div data-bbox="456 421 606 456">Left Panel</div> <div data-bbox="494 495 571 530">1 PC</div>	<div data-bbox="708 421 874 456">Right Panel</div> <div data-bbox="746 495 823 530">1 PC</div>	<div data-bbox="962 421 1153 456">Bottom Panel</div> <div data-bbox="1023 495 1099 530">1 PC</div>	<div data-bbox="1203 421 1442 456">Adjustable Shelf</div> <div data-bbox="1273 495 1372 530">2 PCS</div>
<div data-bbox="145 535 188 584">F</div> 	<div data-bbox="406 535 450 584">G</div> 	<div data-bbox="668 535 711 584">H</div> 		
<div data-bbox="209 822 346 857">Left Door</div> <div data-bbox="236 896 312 931">1 PC</div>	<div data-bbox="456 822 612 857">Right Door</div> <div data-bbox="499 896 576 931">1 PC</div>	<div data-bbox="719 822 882 857">Back Panel</div> <div data-bbox="762 896 839 931">1 PC</div>		

HARDWARE LIST

#1	#2	#3	#4	#5
				
$\phi 1/4 \times 2"$	$\phi 1/4 \times 1-1/4"$	$\phi 1/4"$	$\phi 1/4 \times 16\text{mm}$	$\phi 8 \times 30\text{mm}$
Long Bolt	Short Bolt	Spring Washer	Flat Washer	Wood Dowel
4 PCS (Extra 1)	4 PCS (Extra 1)	8 PCS	8 PCS	8 PCS (Extra 1)
#6	#7	#8	#9	#10
				
	$\phi 5/32 \times 25\text{mm}$		$\phi 3 \times 14\text{mm}$	
Handle	Round Head Bolt	Double Magnet	Round Head Screw	Shelf Holder
2 PCS	4 PCS	1 PC	2 PCS	8 PCS (Extra 1)
#11	#12	#13	#14	#15
				
$\phi 3 \times 14\text{mm}$		$\phi 3.5 \times 14\text{mm}$		
Screw	Bend Hinge	Long Screw	Allen Wrench	Safety Strap Kit
16 PCS (Extra 1)	4 PCS	24 PCS (Extra 1)	1 PC	1 SET

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach handles (part #6) to doors (parts F & G) using round head bolts (part #7) and phillips head screwdriver. Attach bend hinges (part #12) to doors (parts F & G) using long screws (part #13) and phillips head screwdriver. Attach double magnet (part #8) to top panel (part A) using round head screws (part #9) and phillips head screwdriver.

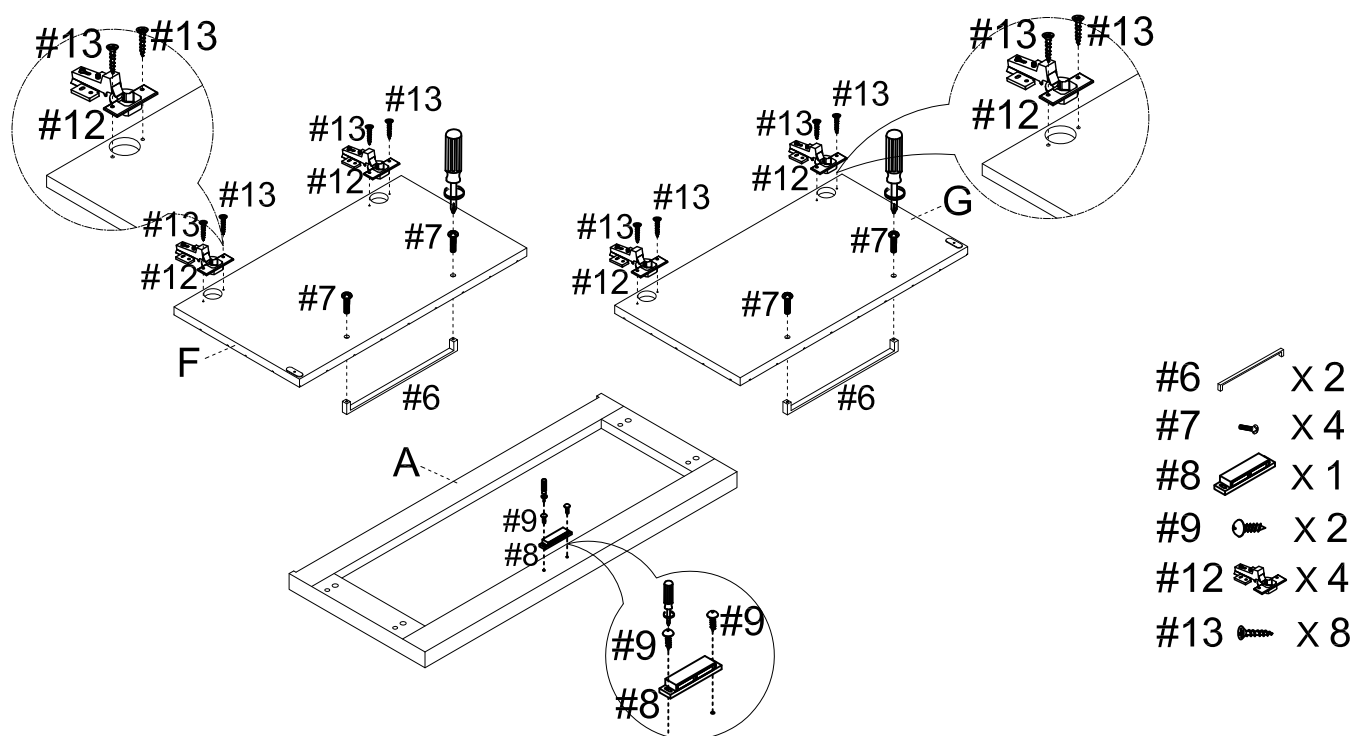


Step 2. Attach panels (parts B & C) to bottom panel (part D) using wood dowels (part #5), short bolts (part #2), spring washers (part #3), flat washers (part #4) and allen wrench (part #14).

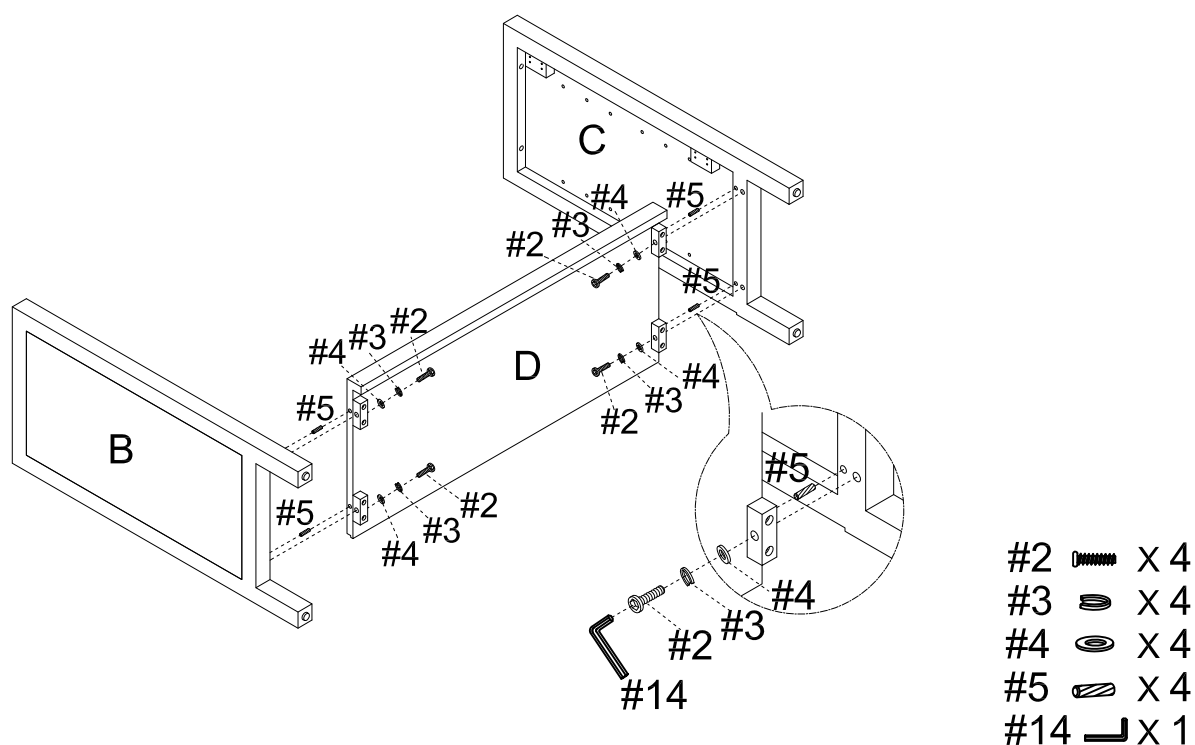


Step 3. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B & C) using wood dowels (part #5), long bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #14).

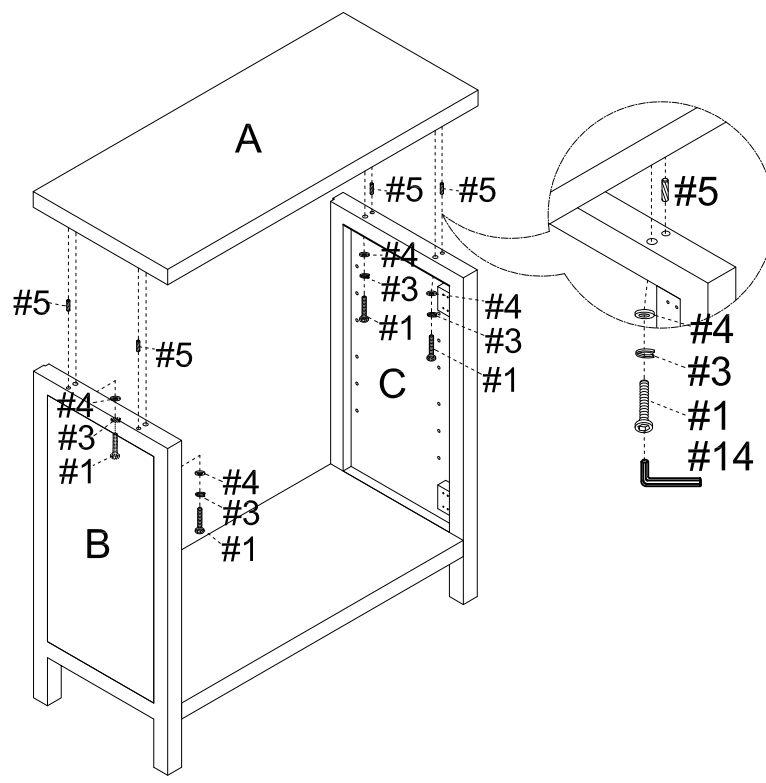

Step 4. Attach back panel (part H) to assembled unit (parts A, B, C & D) using screws (part #11) and phillips head screwdriver.

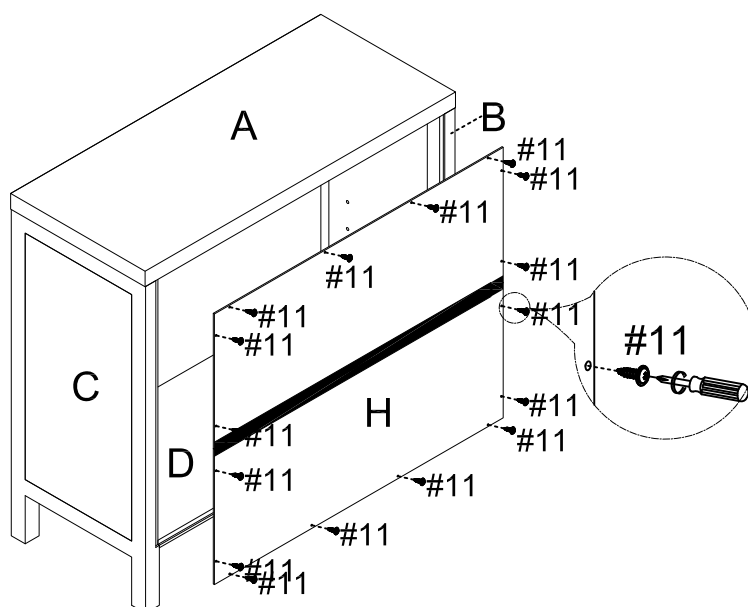


Step 5. Place shelf holders (part #10) into desired position and slide adjustable shelves (part E) into place.

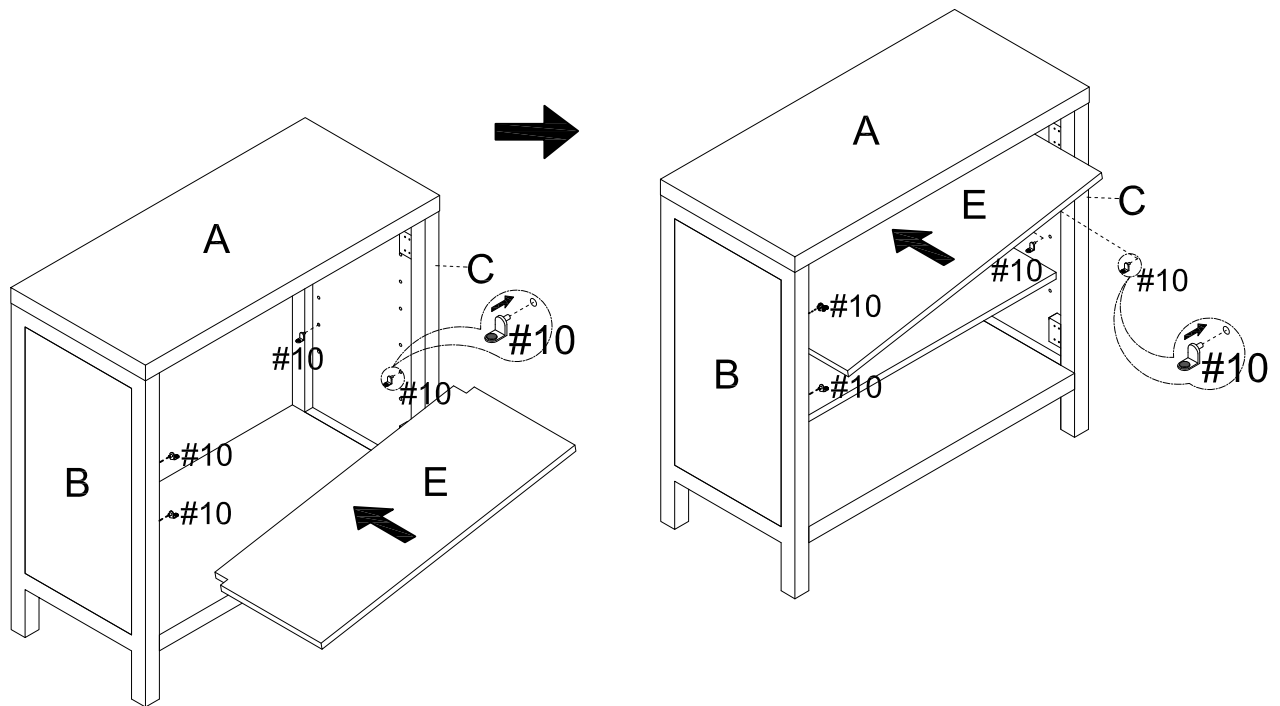

#10  x 8

Step 6. Attach right door (part G) to right panel (part C) using long screws (part #13) and phillips head screwdriver.


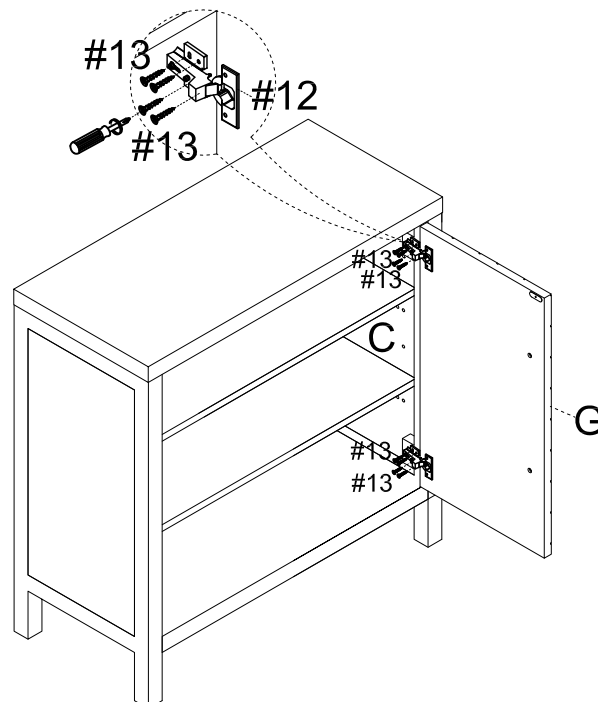








#13  x 8

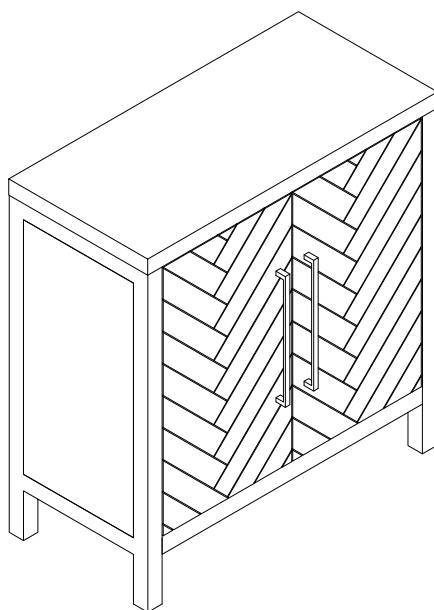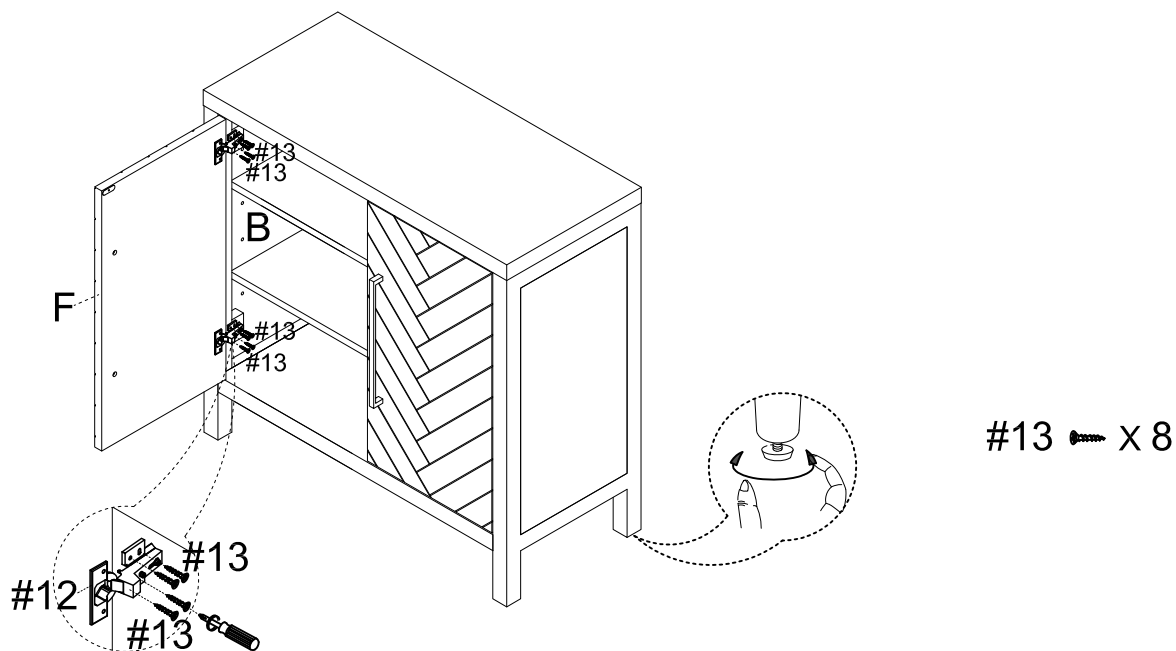Step 7. Attach left door (part F) to left panel (part B) using long screws (part #13) and phillips head screwdriver.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.




#15	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	5/8"x ϕ 3xD8 Short Screw 1 PC	1-1/2"x ϕ 4xD8 Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.


Note: This item is not intended for clothing storage use.

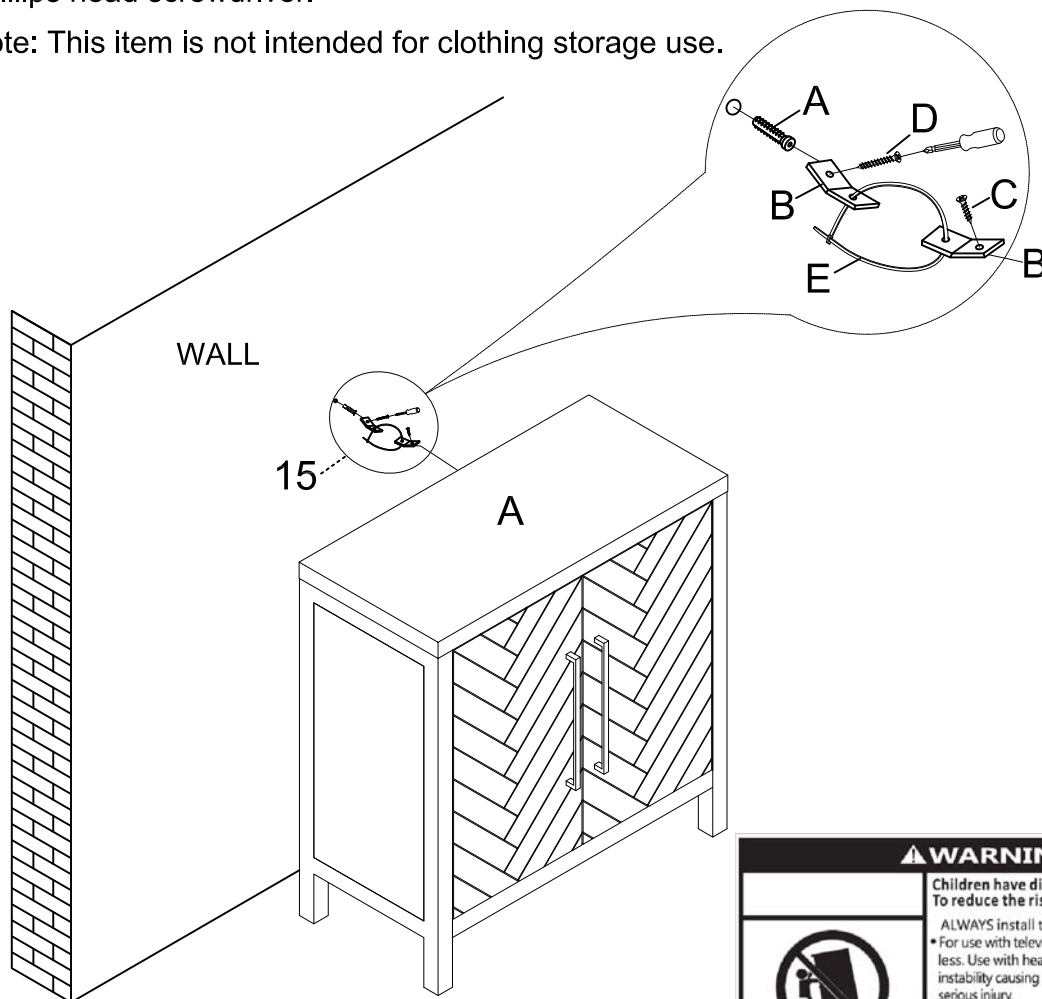

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door

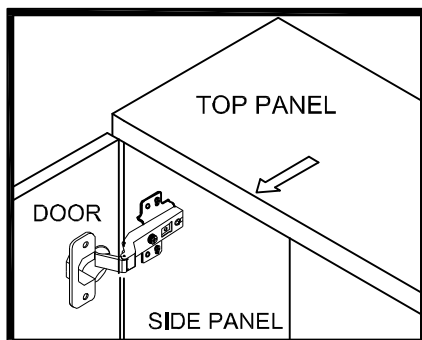


STEP 2

Adjust the gap between door panel and side panel

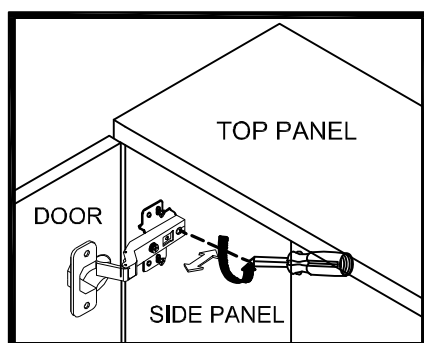


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

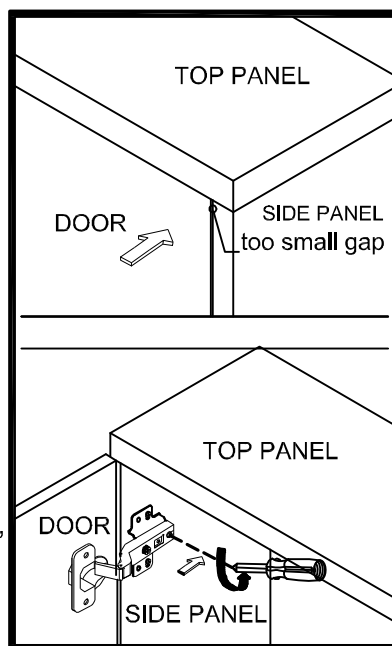

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

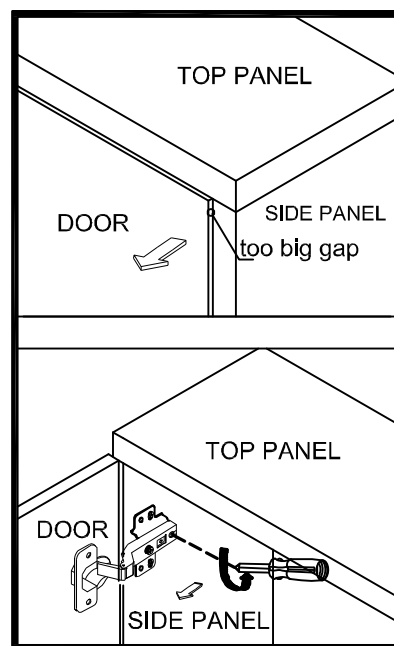

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

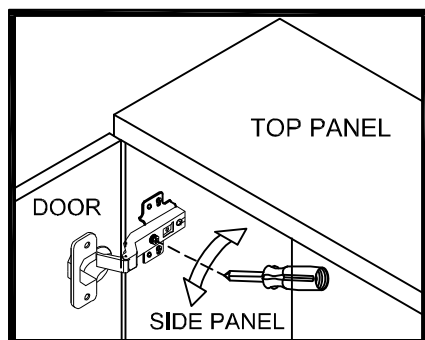


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

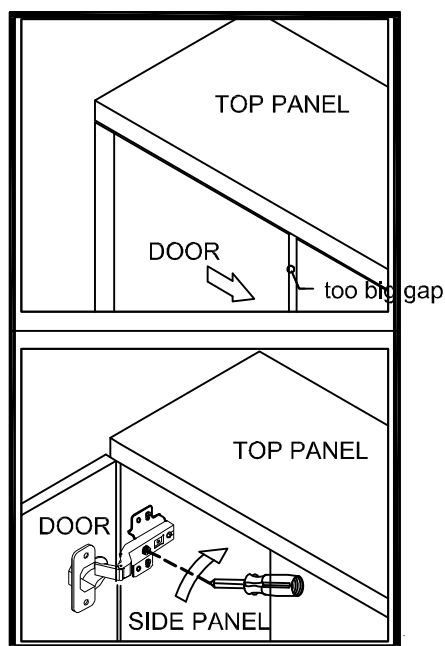

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

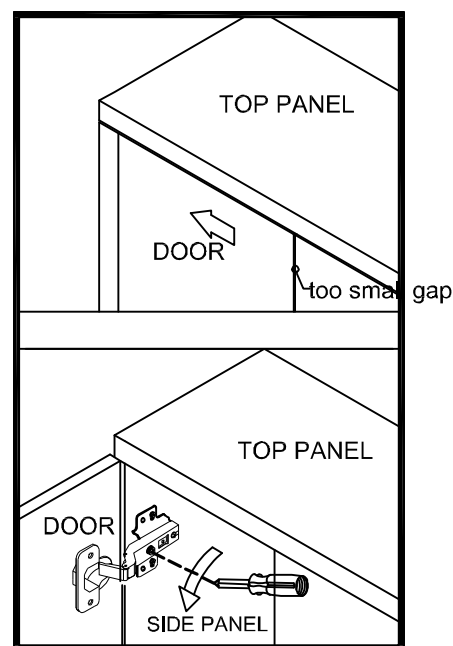

Turn the screw counterclockwise a little as shown to make the gap big.