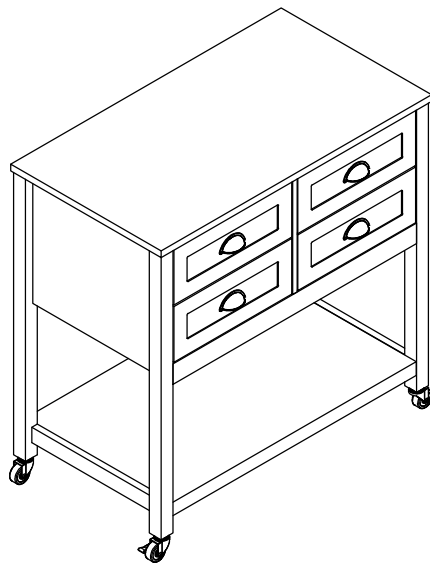














CROSLEY

FURNITURE



Kitchen Island/Cart
CF3036



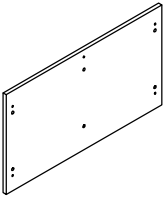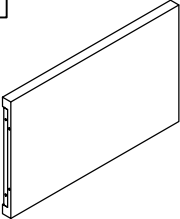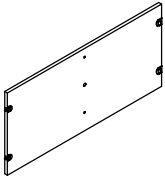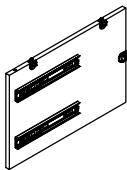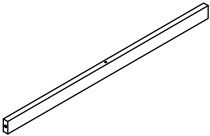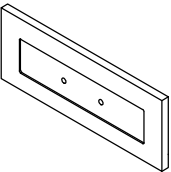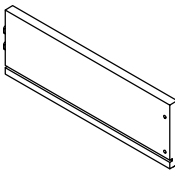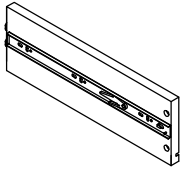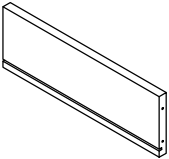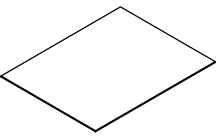PART LIST


A 	B 	C 	D 	E 
Top Panel	Left Panel	Right Panel	Bottom Panel	Back Panel
1 PC	1 PC	1 PC	1 PC	1 PC
F 	G 	H 	I 	J 
Partition Panel	Front Rail	Drawer Front Panel	Drawer Left Panel	Drawer Right Panel
1 PC	1 PC	4 PCS	4 PCS	4 PCS
K 	L 			
Drawer Back Panel	Drawer Bottom Panel			
4 PCS	4 PCS			

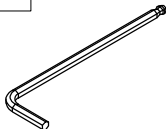HARDWARE LIST

#1		#2		#3		#4		#5	
	Ø3*30mm		Ø5/32"*13mm		Ø1/4"*1-1/4"		Ø8*30mm		84*34*27mm
	Screw		Round Head Bolt		Bolt		Wood Dowel		Handle
	17 PCS (Extra 2)		8 PCS(Extra 1)		4 PCS(Extra 1)		13 PCS (Extra 2)		4 PCS
#6		#7		#8		#9			
					4mm				
	Locking Caster		Caster		Allen Wrench		Wrench		
	2 PCS		2 PCS		1 PC		1 PC		

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

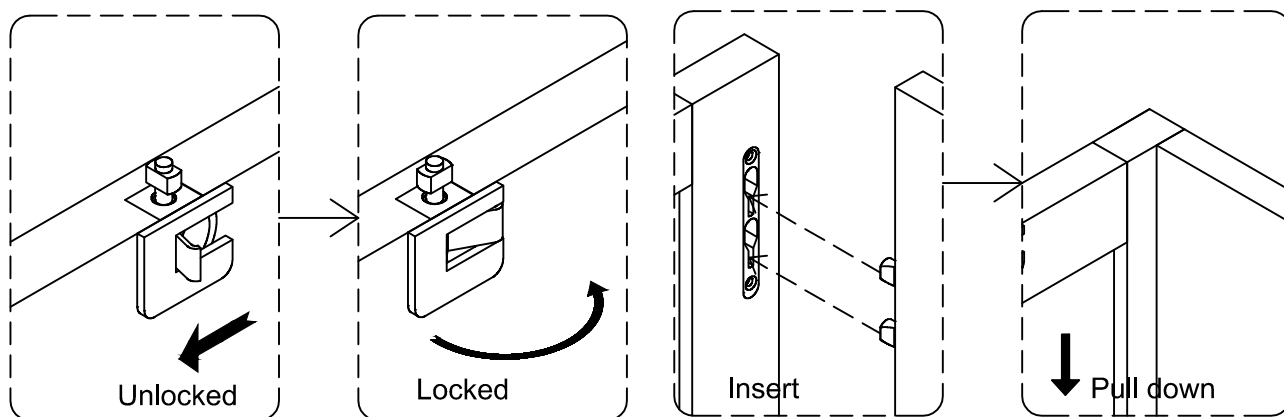
Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware" or "insert hardware and pull down to lock".

Be sure to check all hardware is locked when complete.

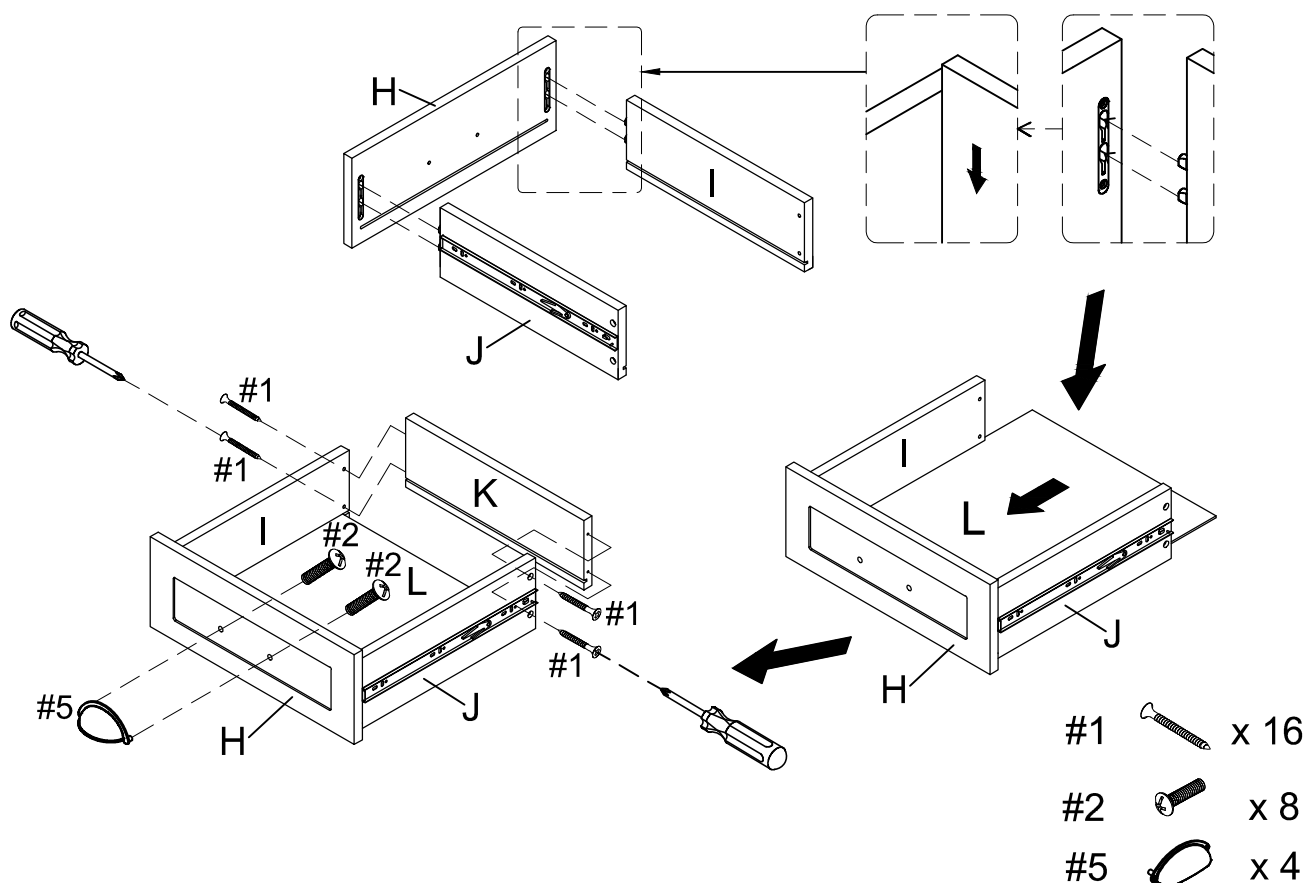Step 1. Insert drawer left panel (part I) and drawer right panel (part J) into drawer front panel (part H) pull down to lock. Slide drawer bottom panel (part L) into grooves of assembled unit (parts H, I & J). Attach drawer back panel (part K) to assembled unit (parts I, J & L) using screws (part #1) and phillips head screwdriver. Attach handle (part #5) to drawer front panel (part H) using round head bolts (part #2) and phillips head screwdriver. Repeat for remaining drawers.




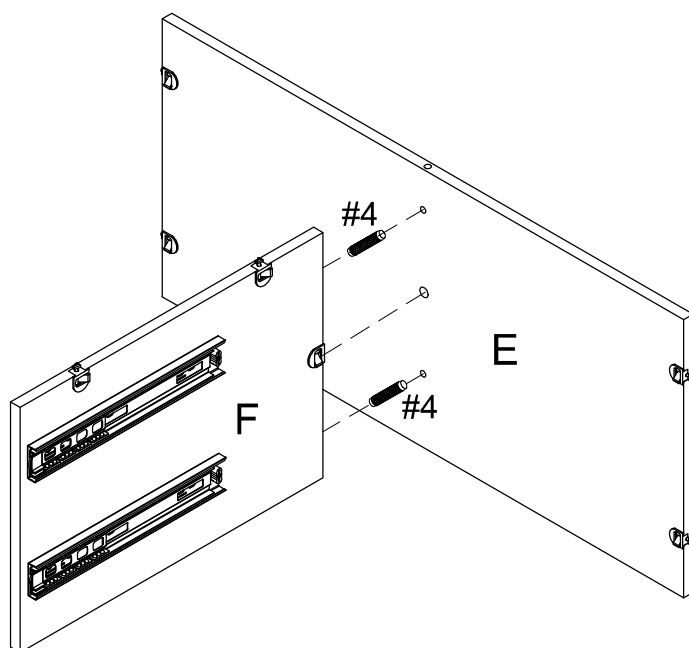Step 2. Attach partition panel (part F) to back panel (part E) using wood dowels (part #4) and lock the hardware.




#4  x 2

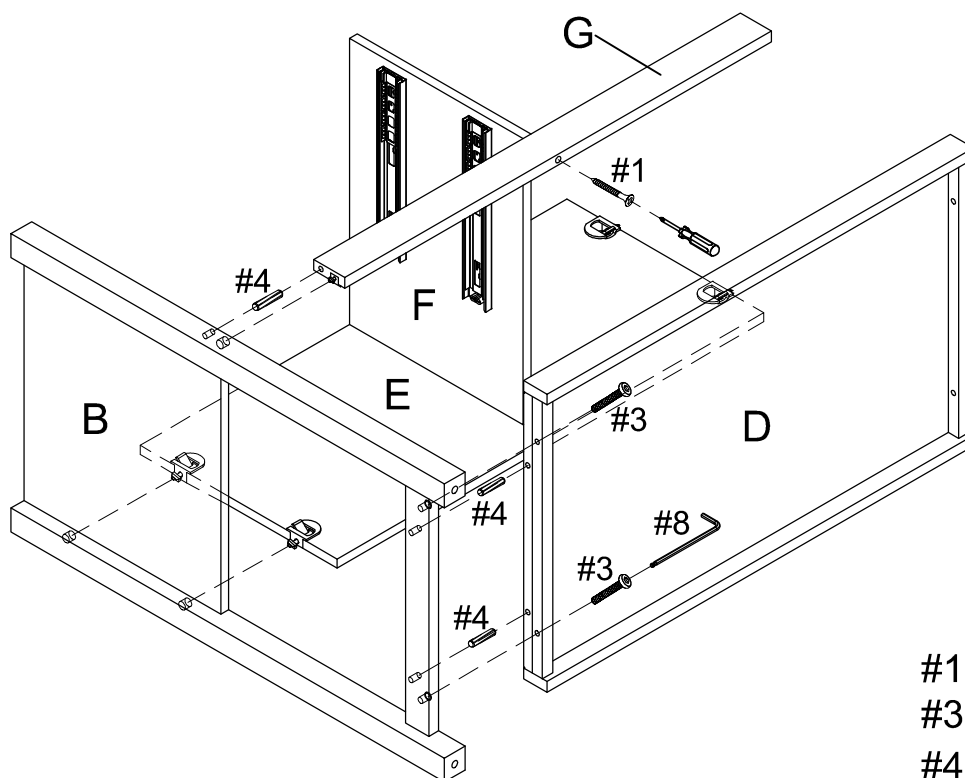Step 3. Attach left panel (part B) and front rail (part G) to bottom panel (part D) and assembled unit (parts E & F) using wood dowels (part #4), screw (part #1), bolts (part #3), allen wrench (part #8), phillips head screwdriver and lock the hardware.




#1  x 1
 #3  x 2
 #4  x 3
 #8  x 1

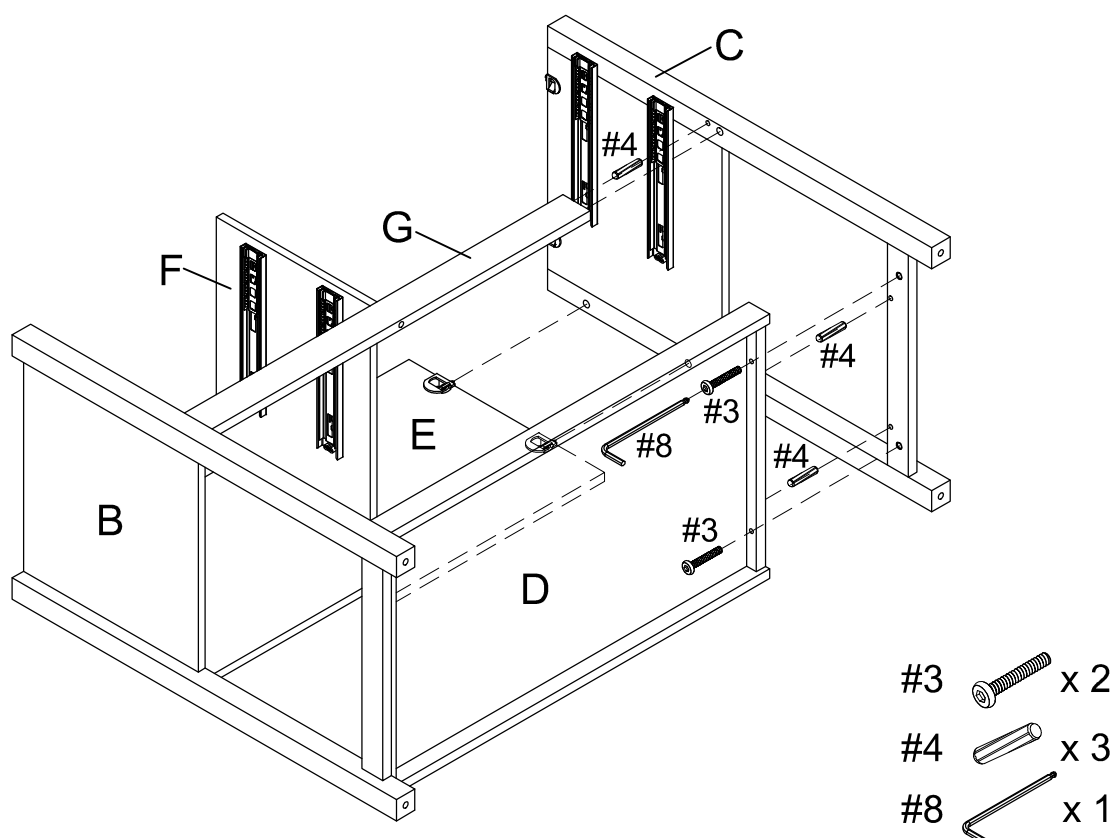
Step 4. Attach right panel (part C) to assembled unit (parts D, E & G) using wood dowels (part #4), bolts (part #3), allen wrench (part #8) and lock the hardware.



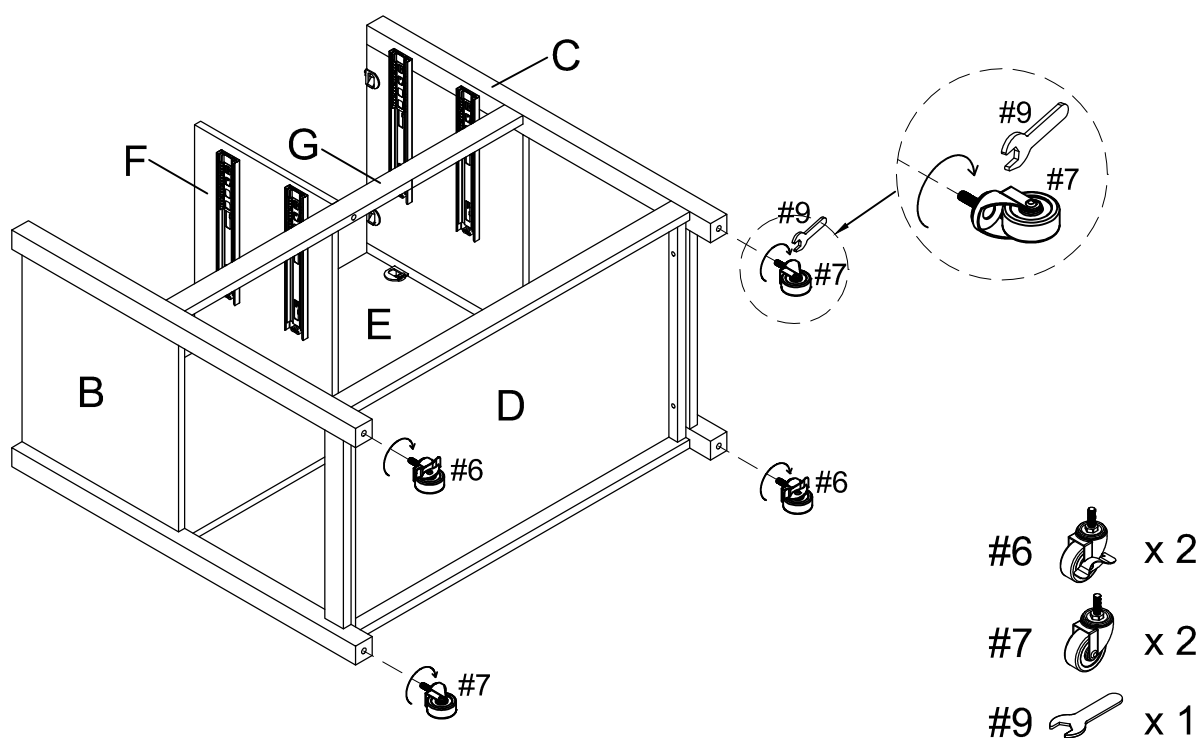Step 5. Attach locking casters (part #6) and casters (part #7) to panels (parts B & C) using wrench (part #9).



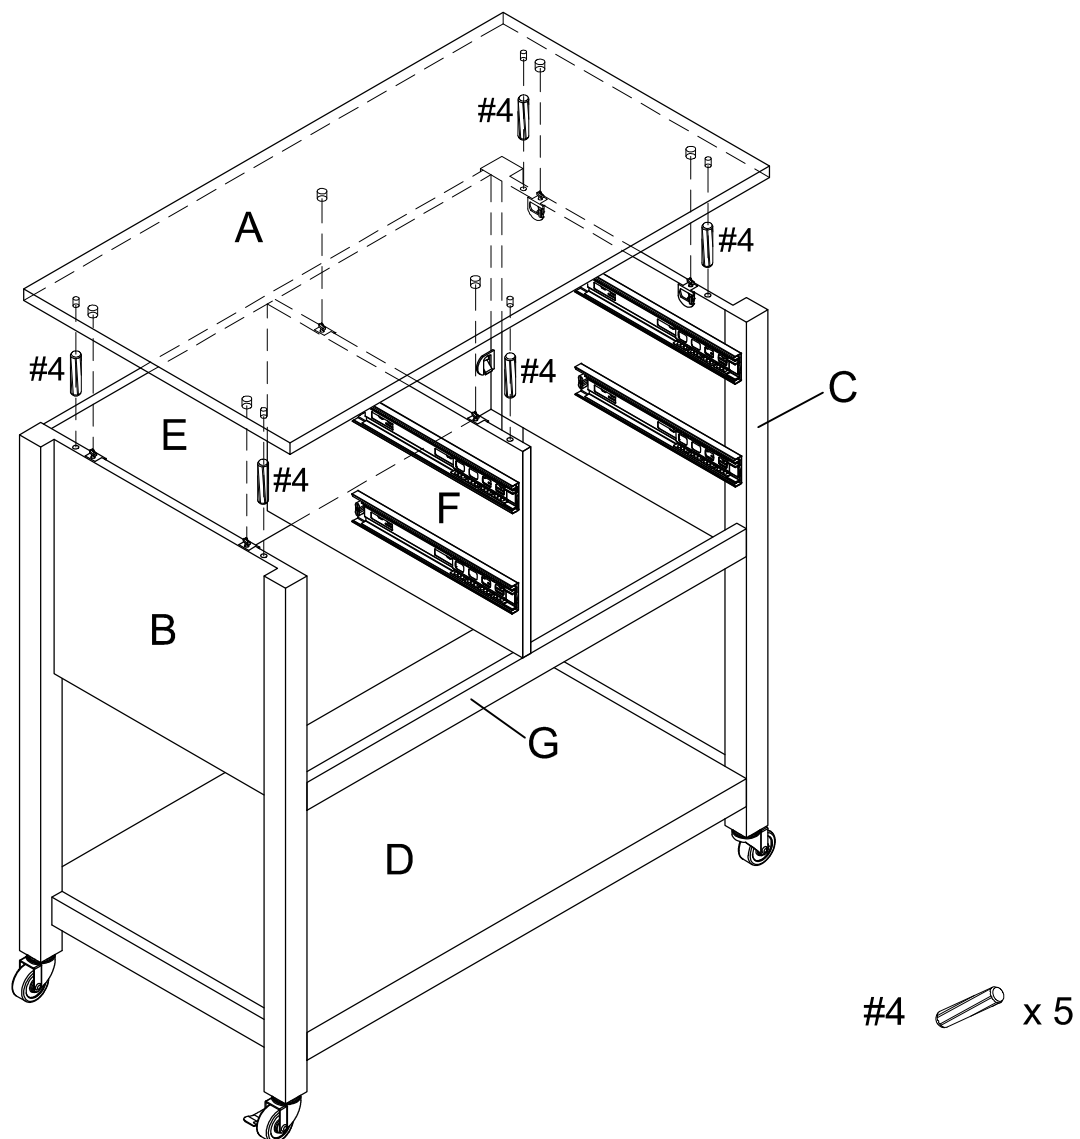Step 6. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B, C & F) using wood dowels (part #4) and lock the hardware.



Step 7. Slide assembled drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.

