



ASSEMBLY INSTRUCTIONS

TWIN CAPTAIN BED

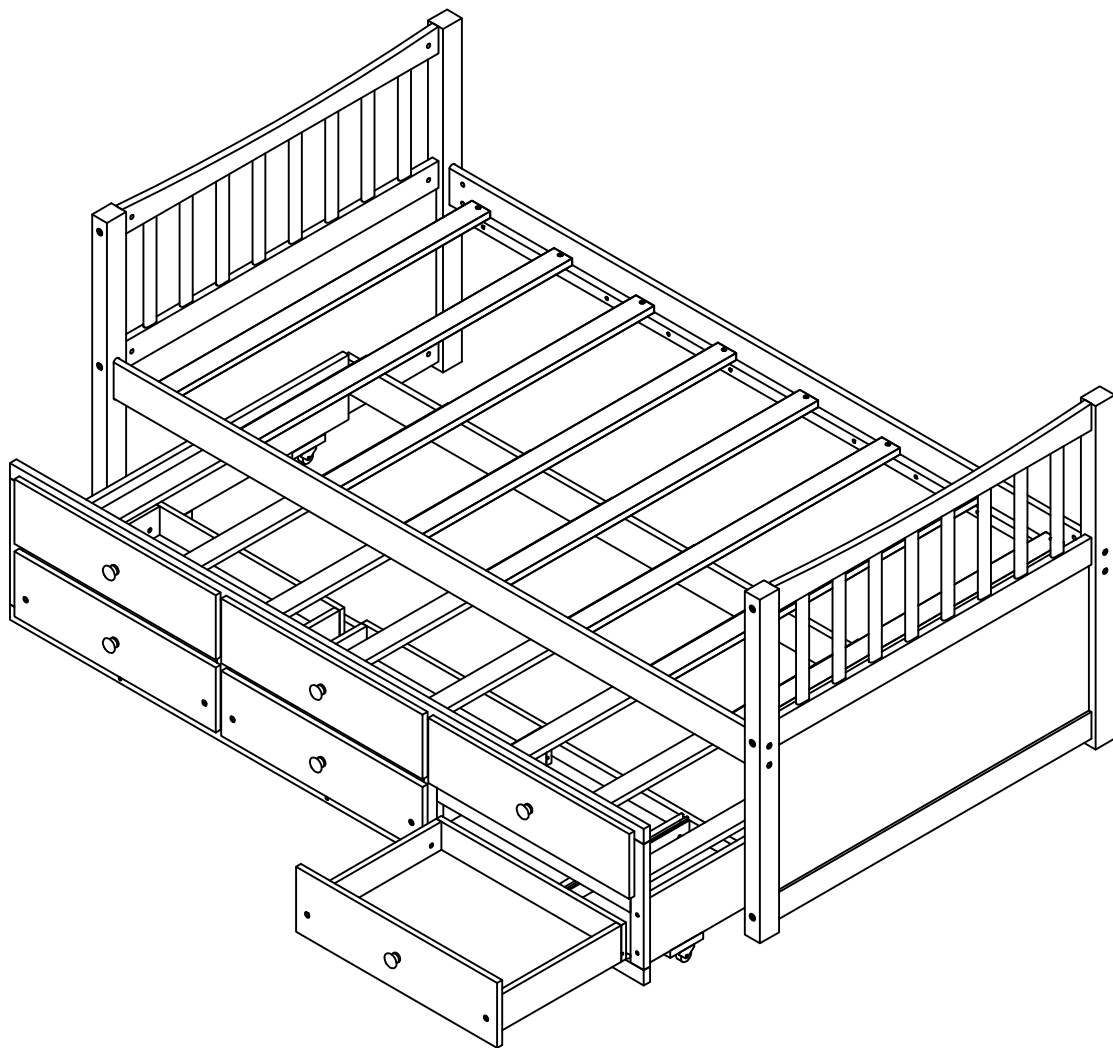









WF290938 / 290939

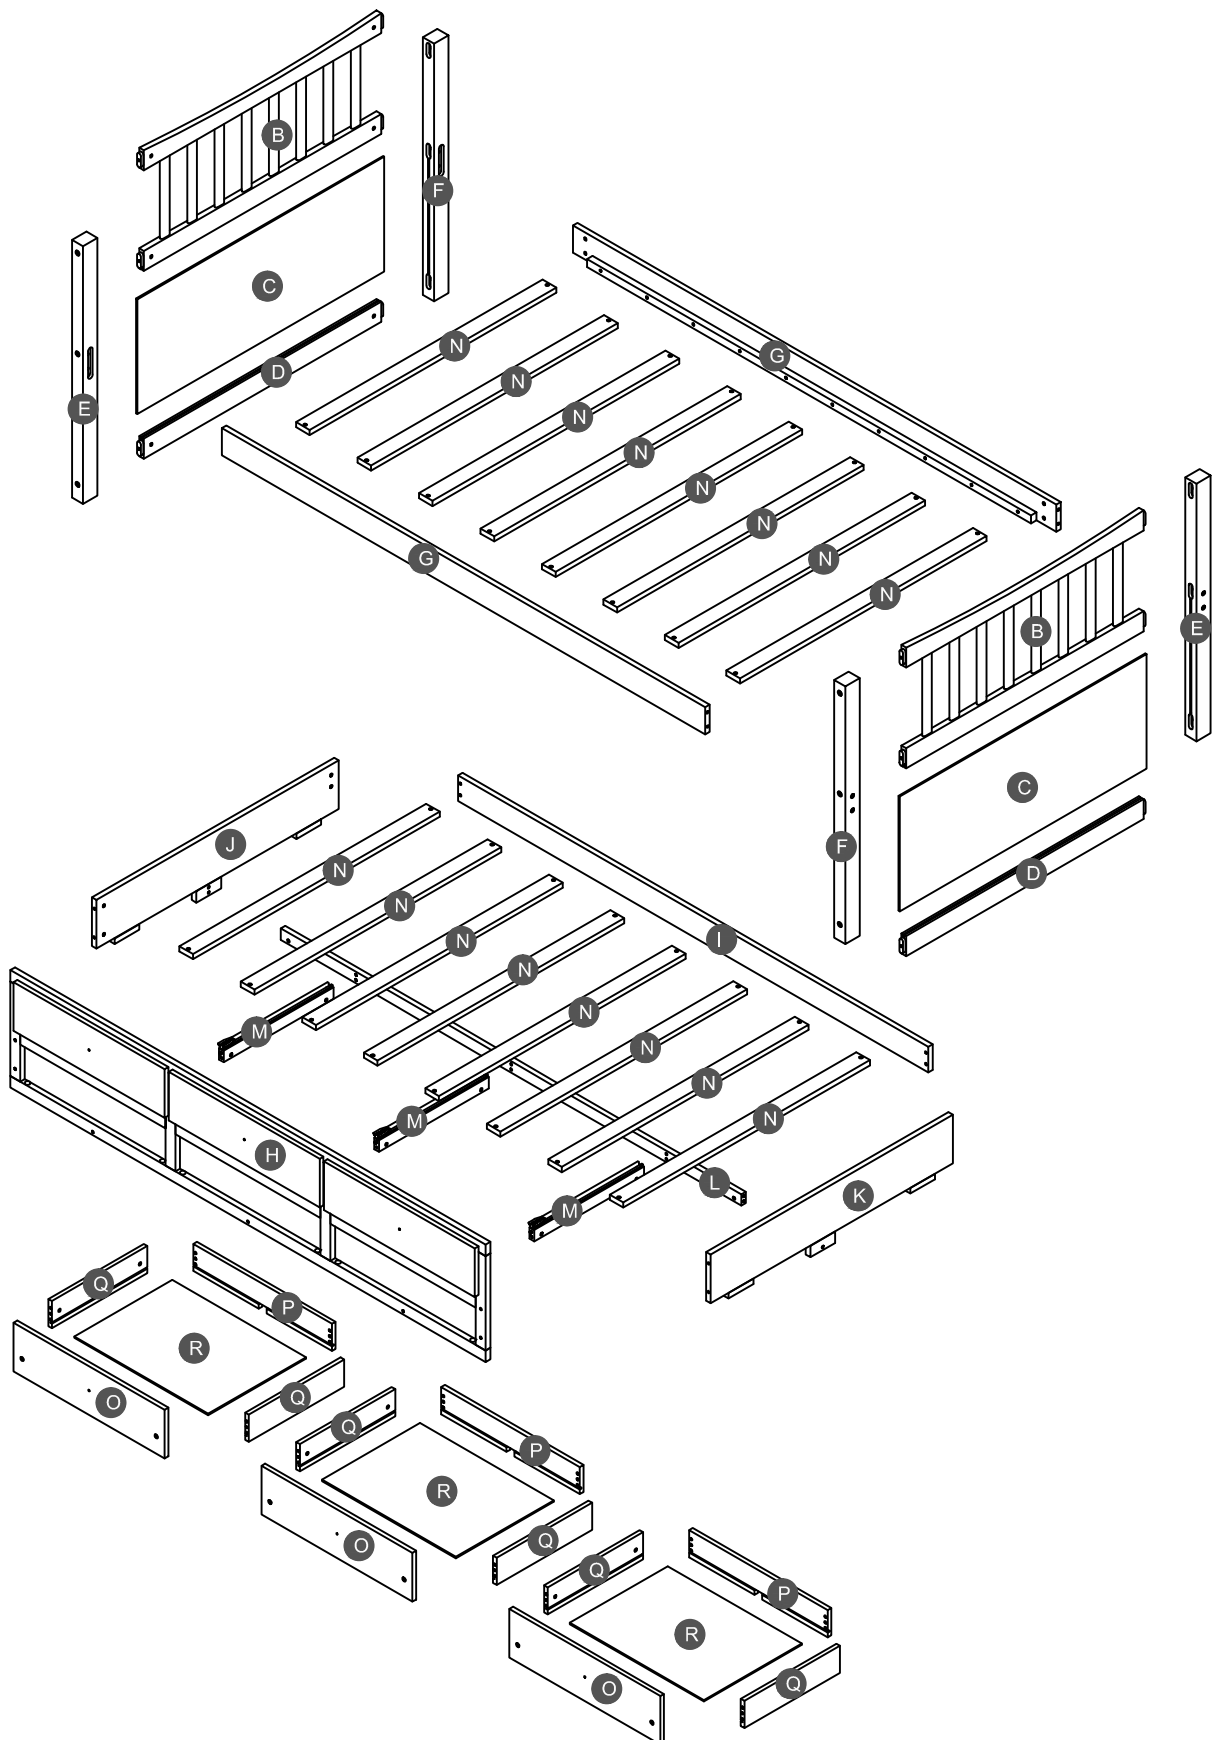Detail View












Part List














WF290938

D  <p>Horizontal bar - 2pcs</p>	G  <p>Side rail - 2pcs</p>	H  <p>Front panel of trundle - 1pc</p>
I  <p>Back panel side rail of trundle -1pc</p>	L  <p>Support rail of trundle -1pc</p>	N  <p>Slats - 16pcs</p>
O  <p>Front drawer panel - 3pcs</p>	P  <p>Back drawer panel - 3pcs</p>	


Hardware List WF290939

B  <p>HB & FB - 2pcs</p>	C  <p>Side panel - 2pcs</p>	E  <p>Leg HB & FB (Left) - 2pcs</p>
F  <p>Leg HB & FB (Right) - 2pcs</p>	J  <p>Left side panel of trundle -1pc</p>	K  <p>Right side panel of trundle -1pc</p>
M  <p>Support drawer -3pcs</p>	Q  <p>Left / right drawer panel - 6pcs</p>	R  <p>Drawer bottom - 3pcs</p>

Hardware List WF290939


1  Ø8*30mm Wood dowel (26pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (28pcs)	5  Ø3.5*12mm Wood screws (9pcs)	6  Ø3.5*19mm Wood screws (8pcs)
7  1/4"*15 (9.5mm) Horizontal-Hole bolts(48pcs)	8  Ø38*31mm Pine Knob (6pcs)	9  3/16"*25mm Ph zinc(Knob) (6pcs)
10  45*20*35mm Caster (4pcs)	11  400*30mm Upper slider drawer (3pcs)	12  (1/4")4.5*58mm Allen key (1pc)
13  Ø4*30mm Wood screws (32pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

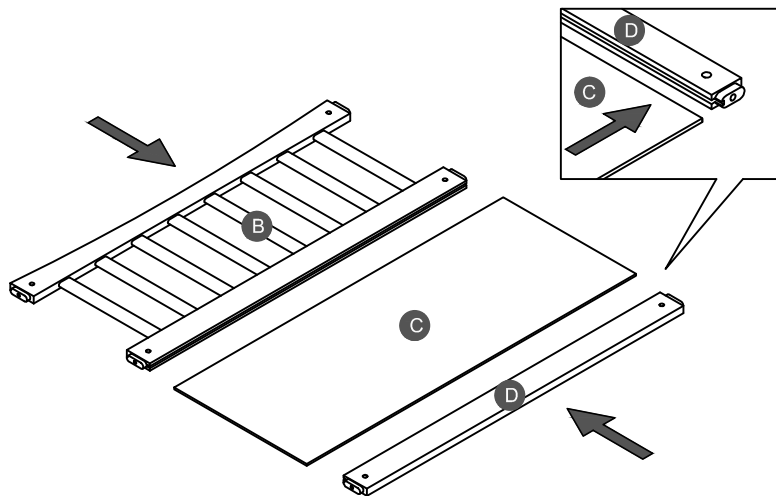

STEP 1:



x 2

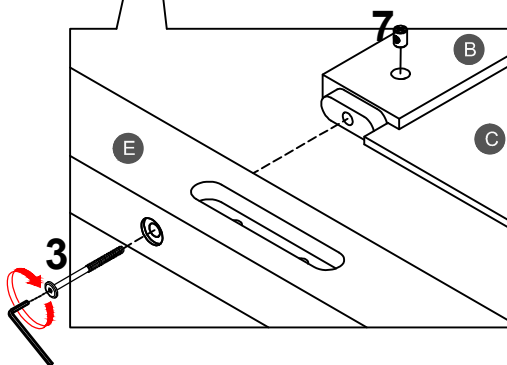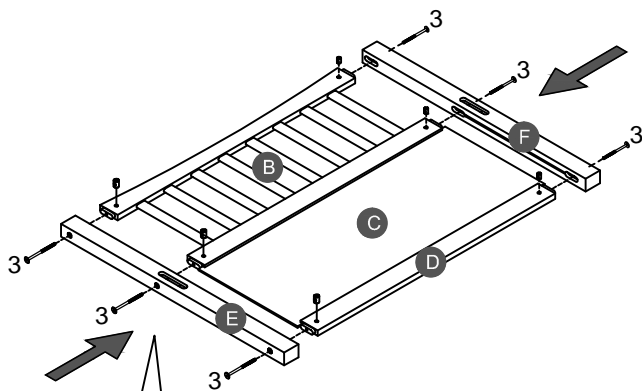
STEP 2:




3		7	
12PCS		12PCS	

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

x 2

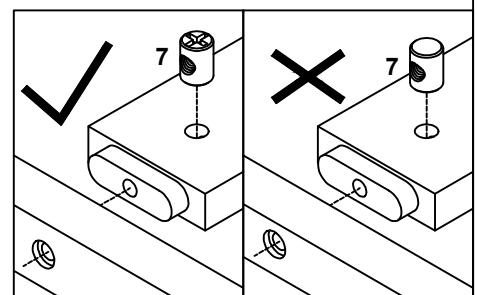


STEP 3:

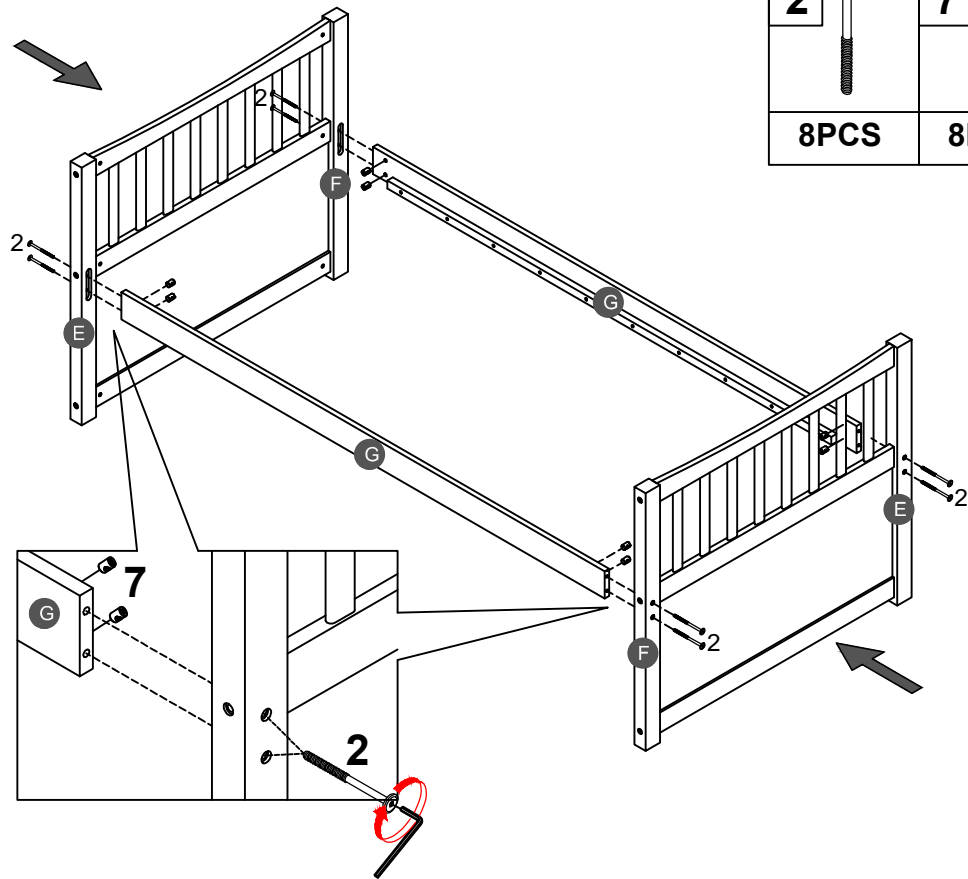

2		7	
8PCS		8PCS	




STEP 4:

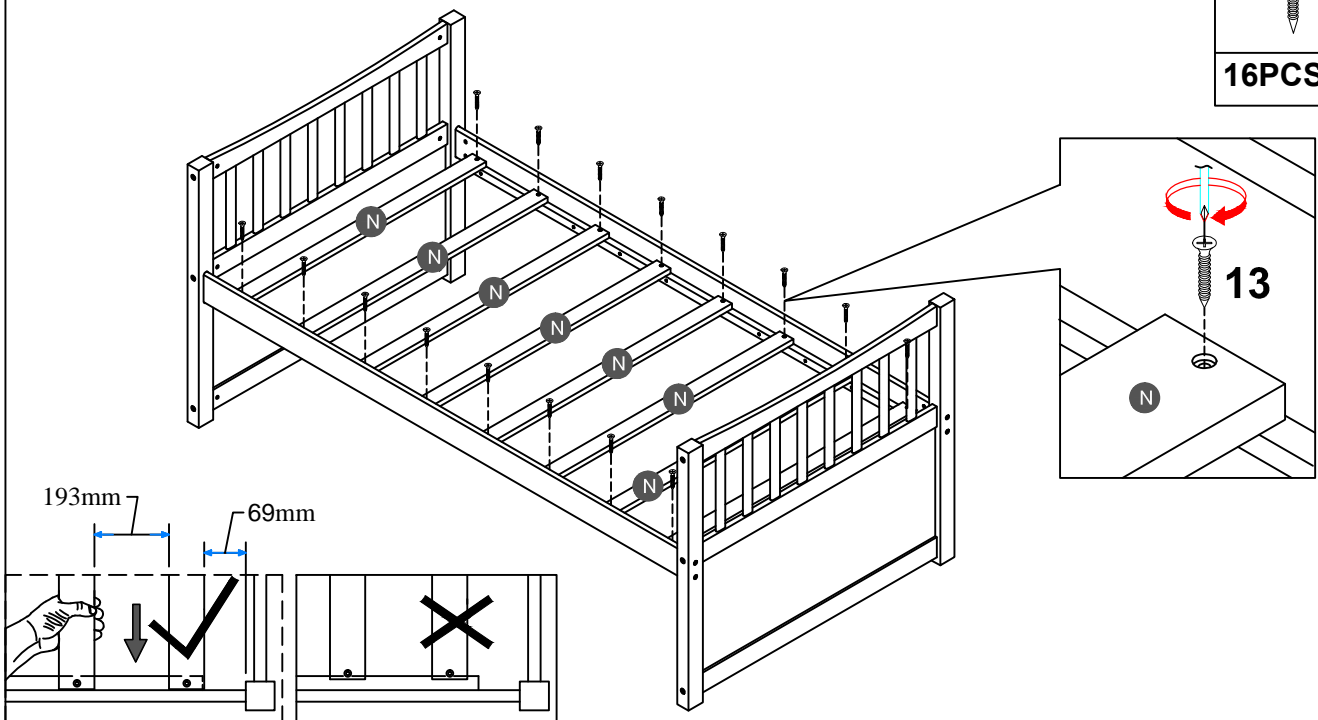



13	
16PCS	



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

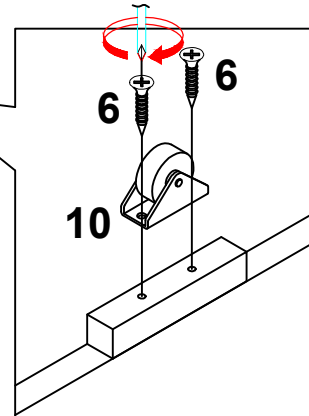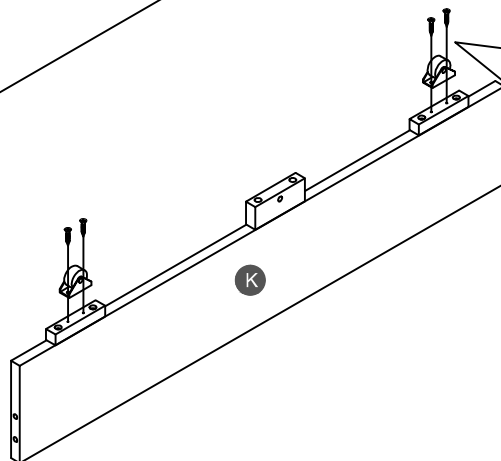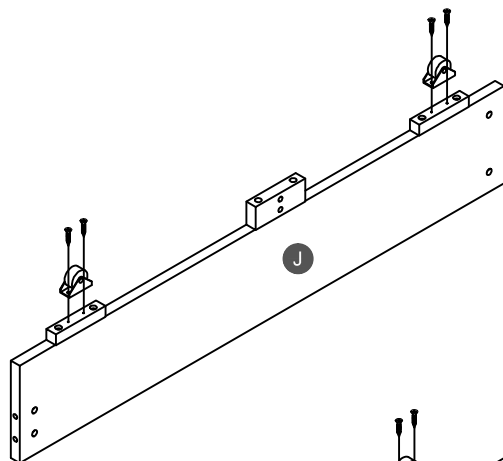


STEP 5:




10	6
	
4PCS	8PCS

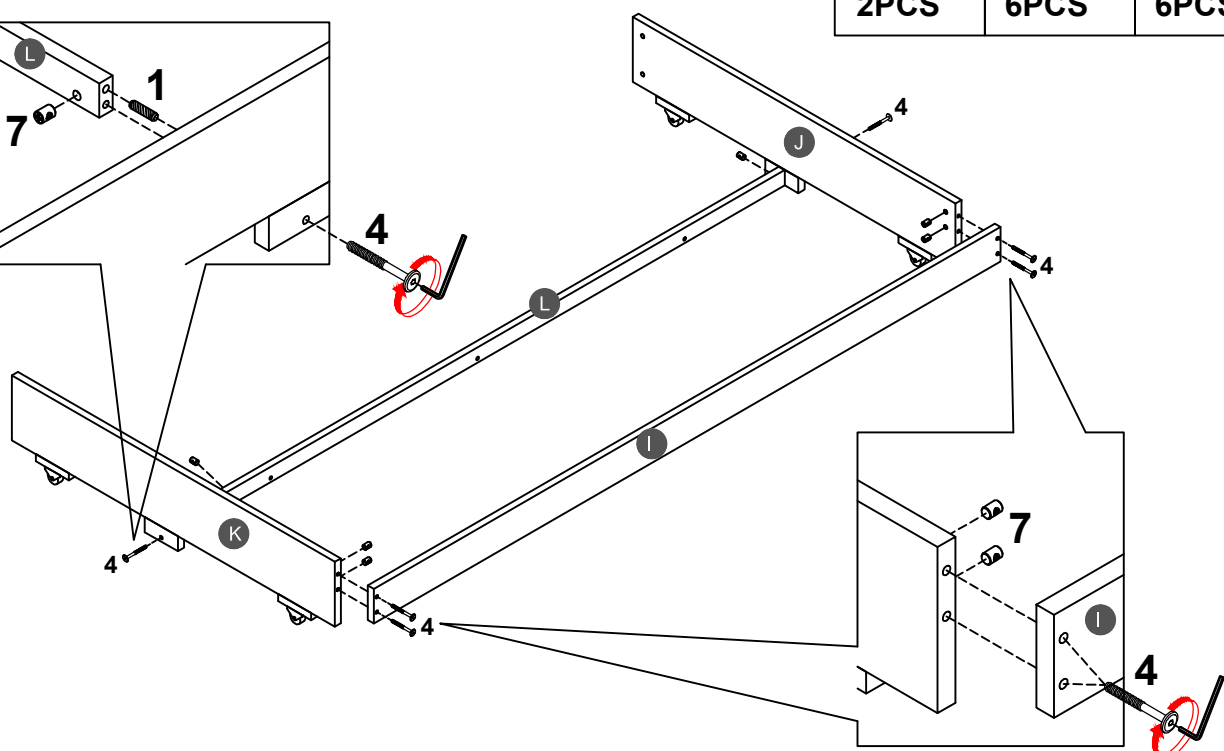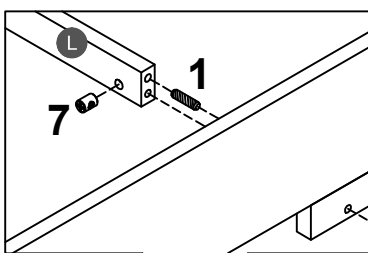STEP 6:




1		4		7	
2PCS	6PCS	6PCS			

STEP 7:

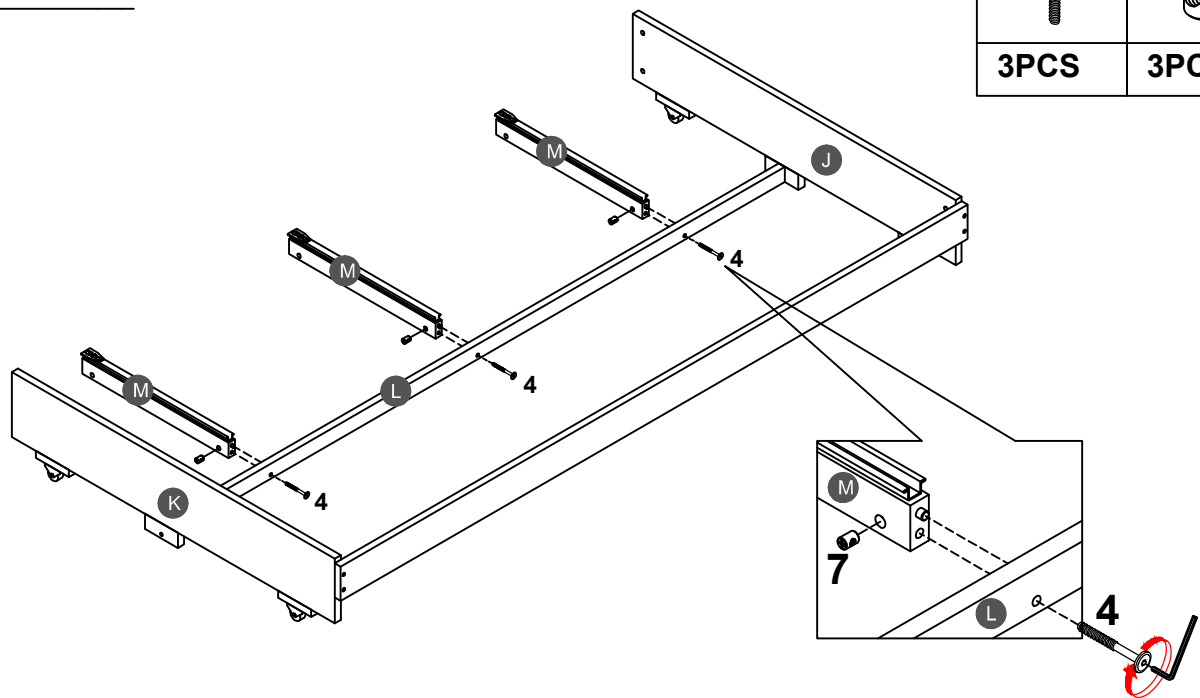

STEP 8:

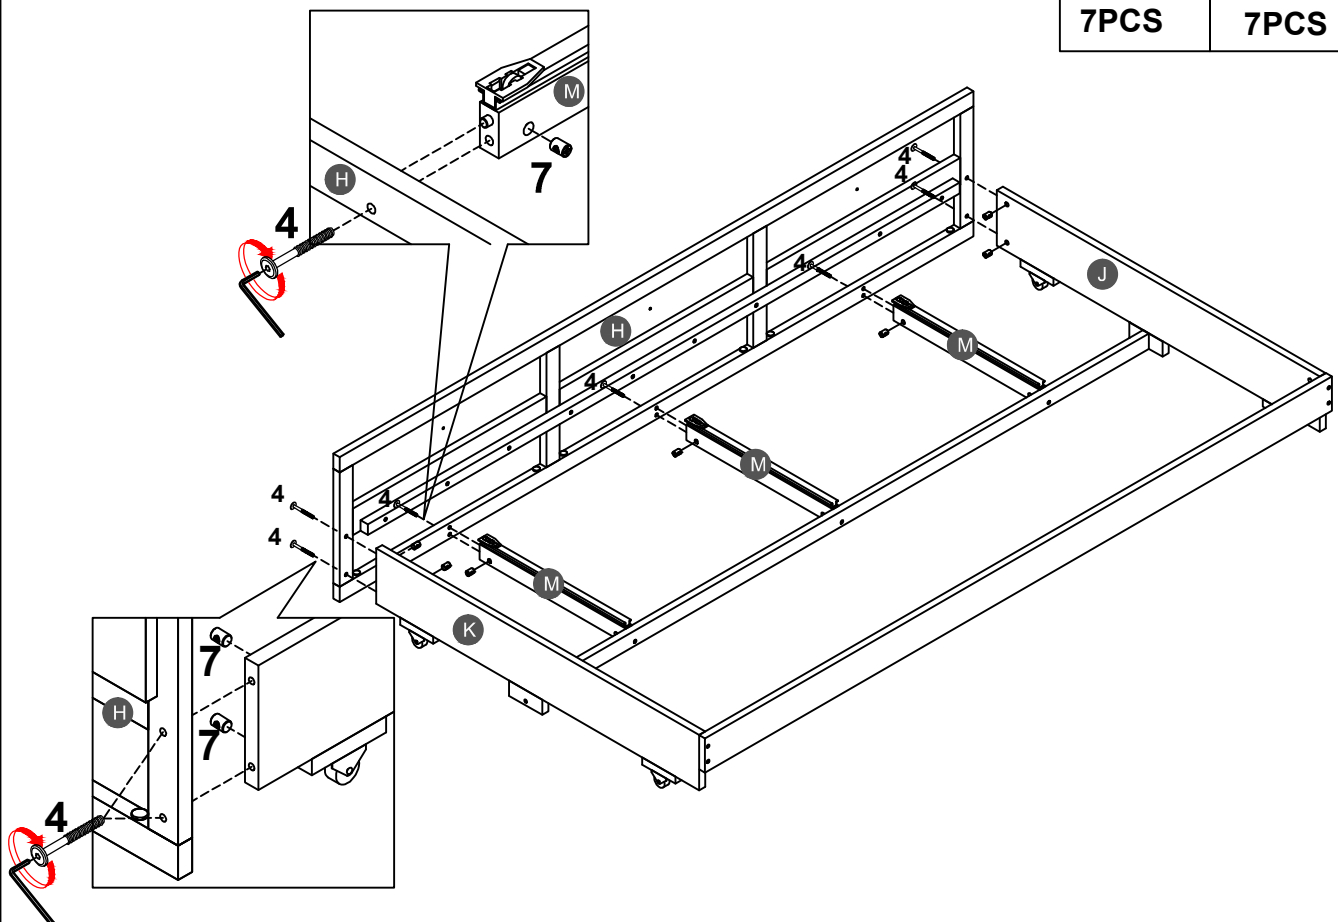


STEP 9:

13



16PCS

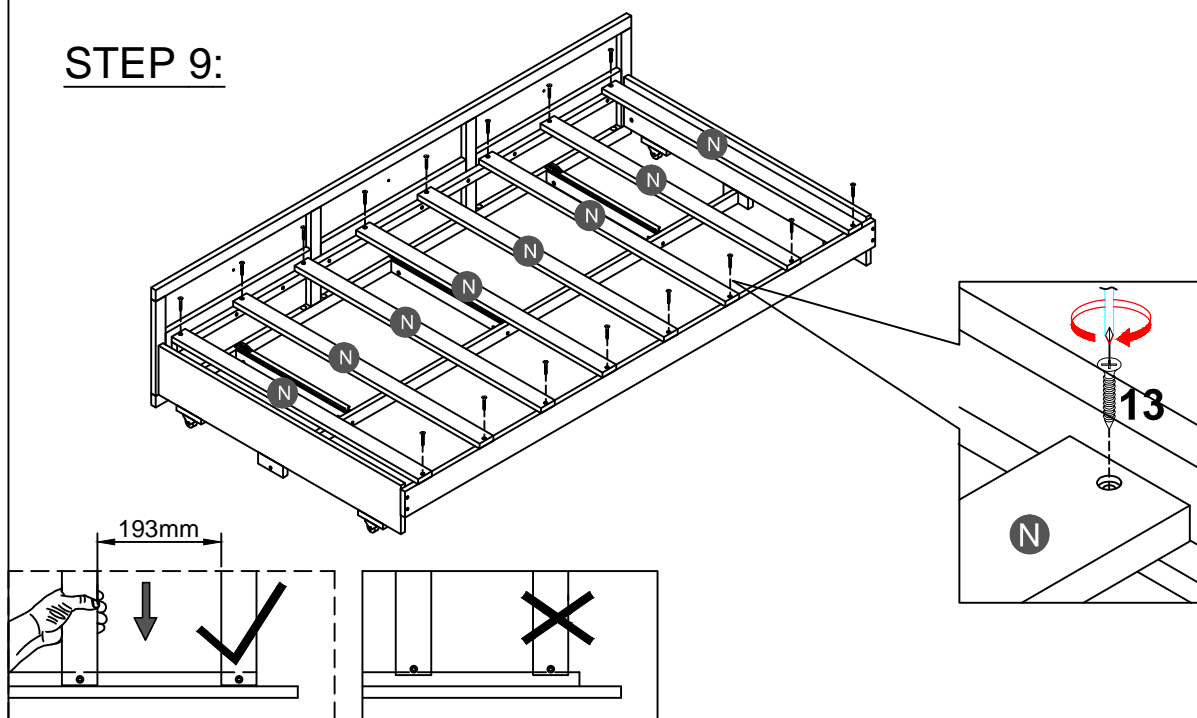

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 10:

1



12PCS

4




6PCS

7



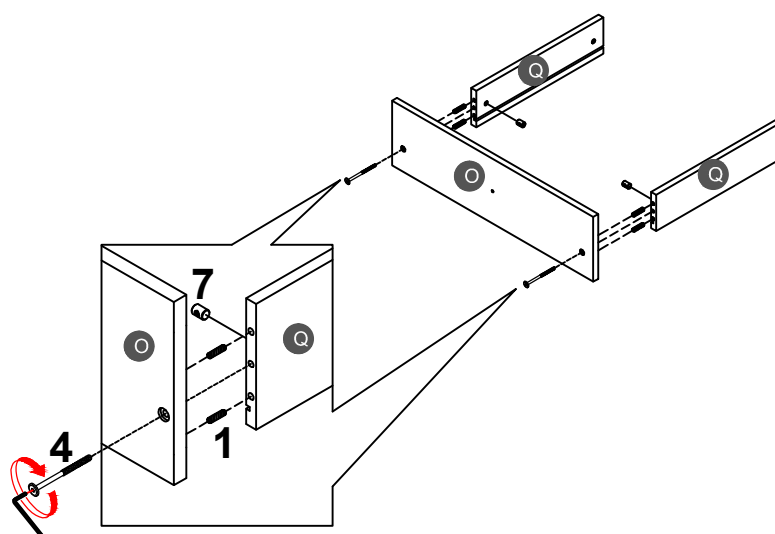


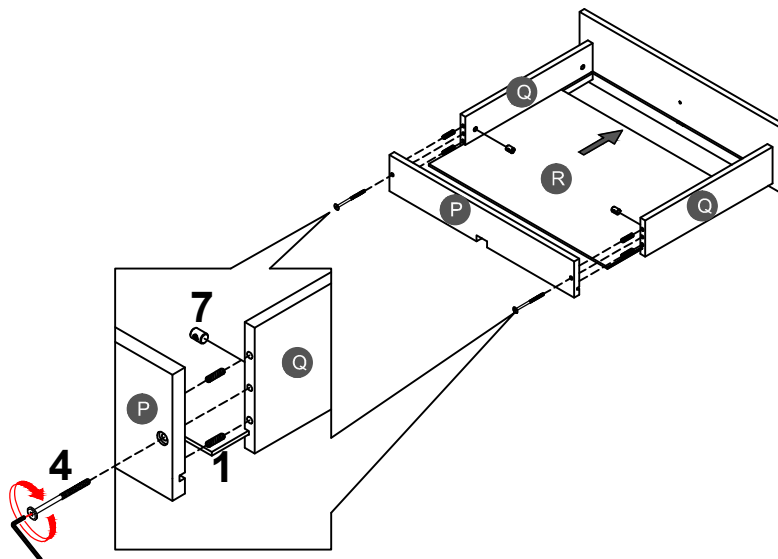
6PCS



x 3



STEP 11:


1		4		7	
12PCS		6PCS		6PCS	



x 3



STEP 12:

11		5	
3PCS		9PCS	

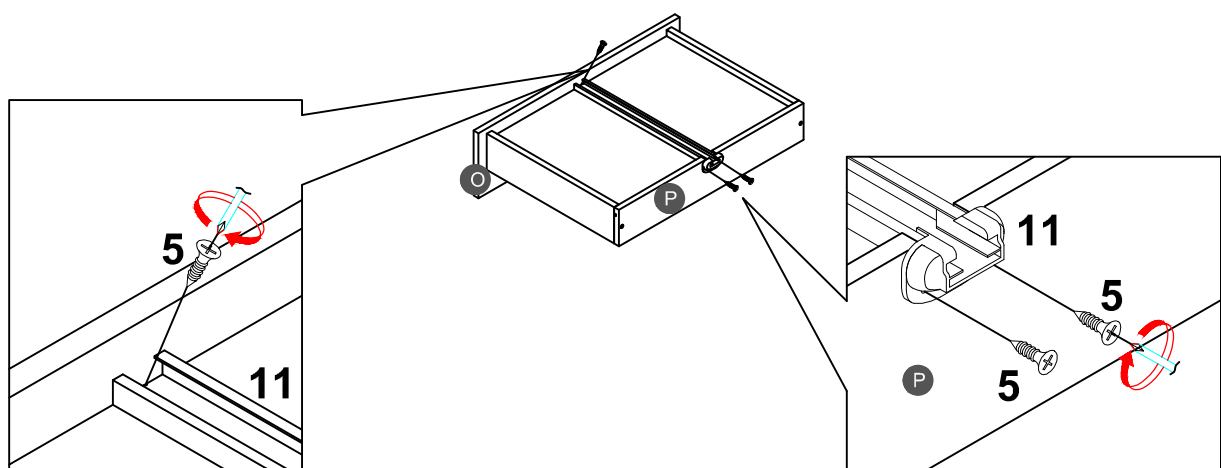



x 3

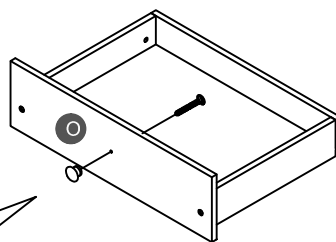
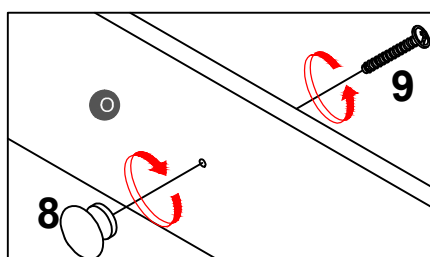
STEP 13:





x 3

8	9
	
3PCS	3PCS

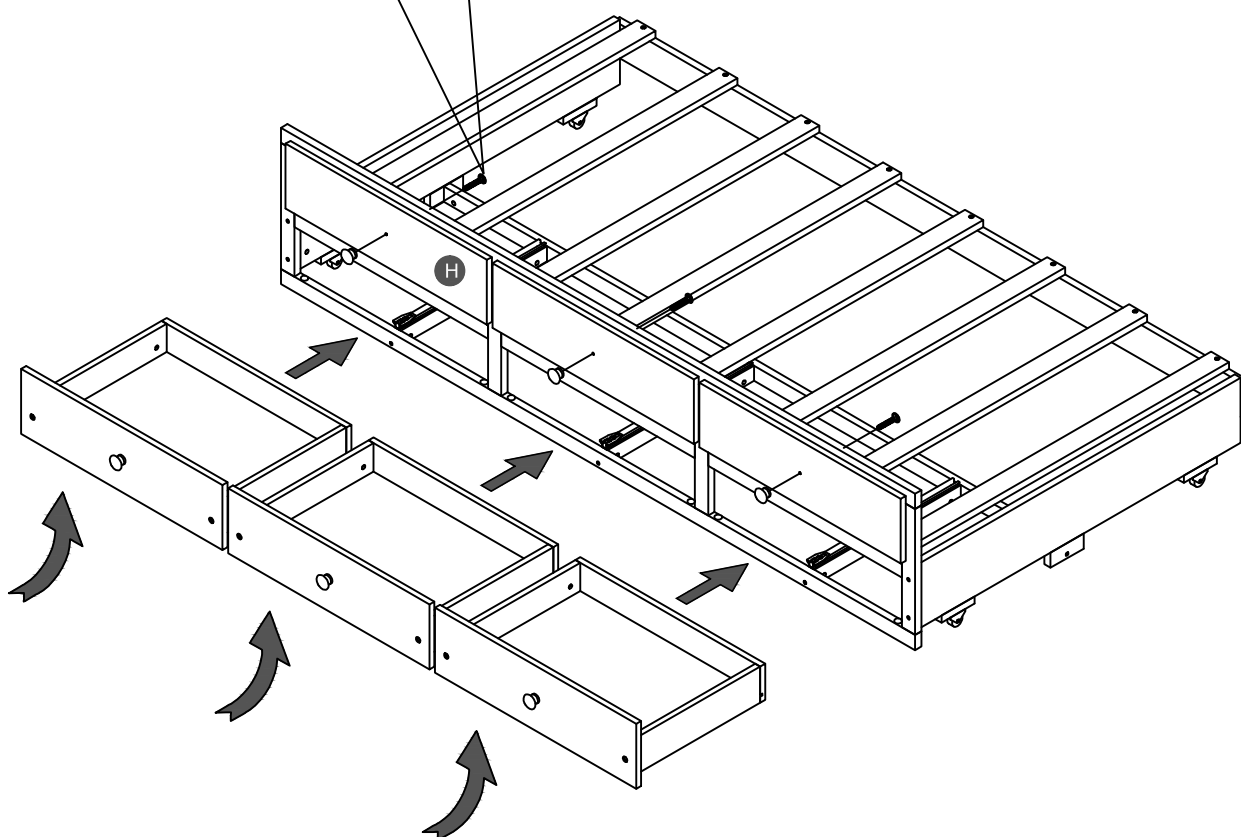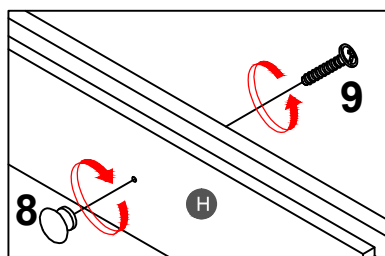
STEP 14:



8	9
	
3PCS	3PCS

Remark: When opening or closing the drawer,
Please lift the drawer slightly before opening or closing it.

STEP 15:

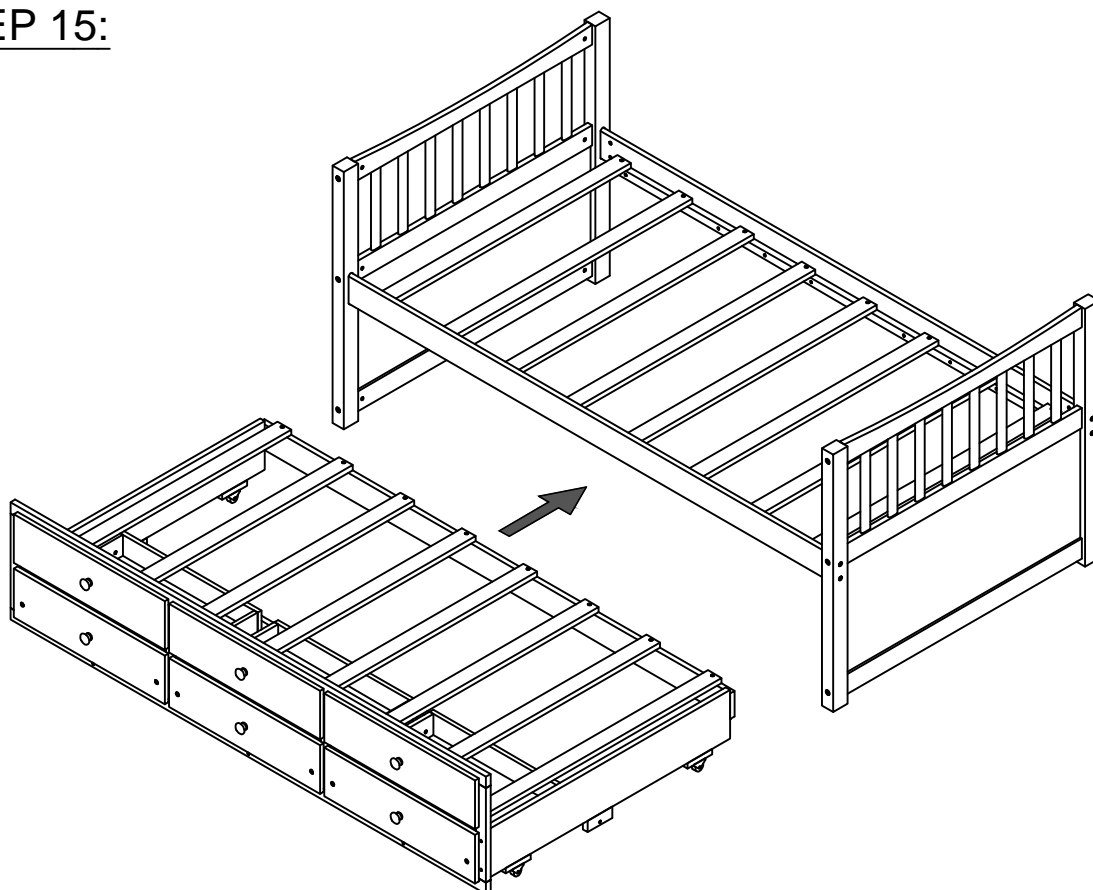

Push Trundle under the bottom of Twin bed.

